

THZ988

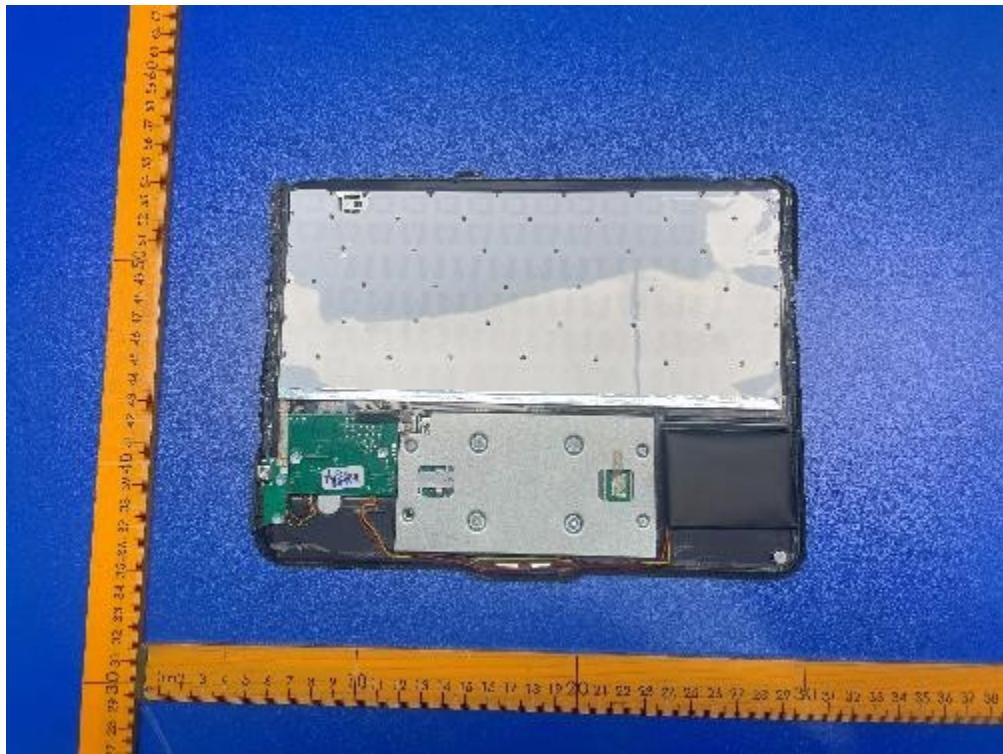


Figure 1: Internal view_1 of EUT



Figure 2: Internal view_2 of EUT

THZ988



Figure 3: Internal view_3 of EUT

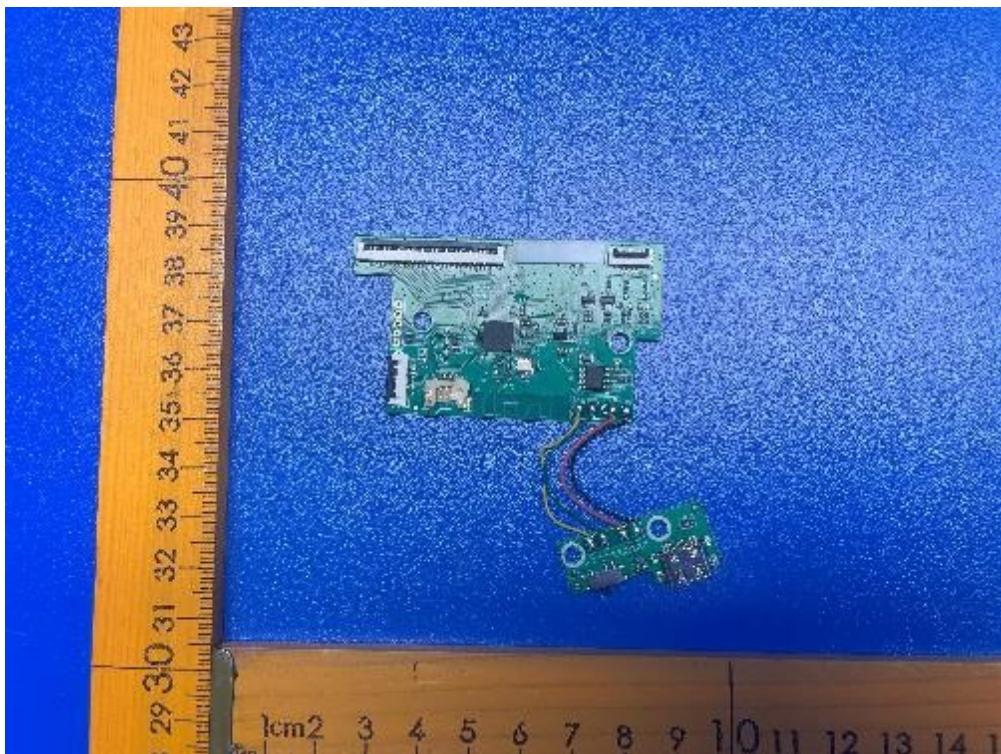


Figure 4: Main board and USB board view_1 of EUT

THZ988

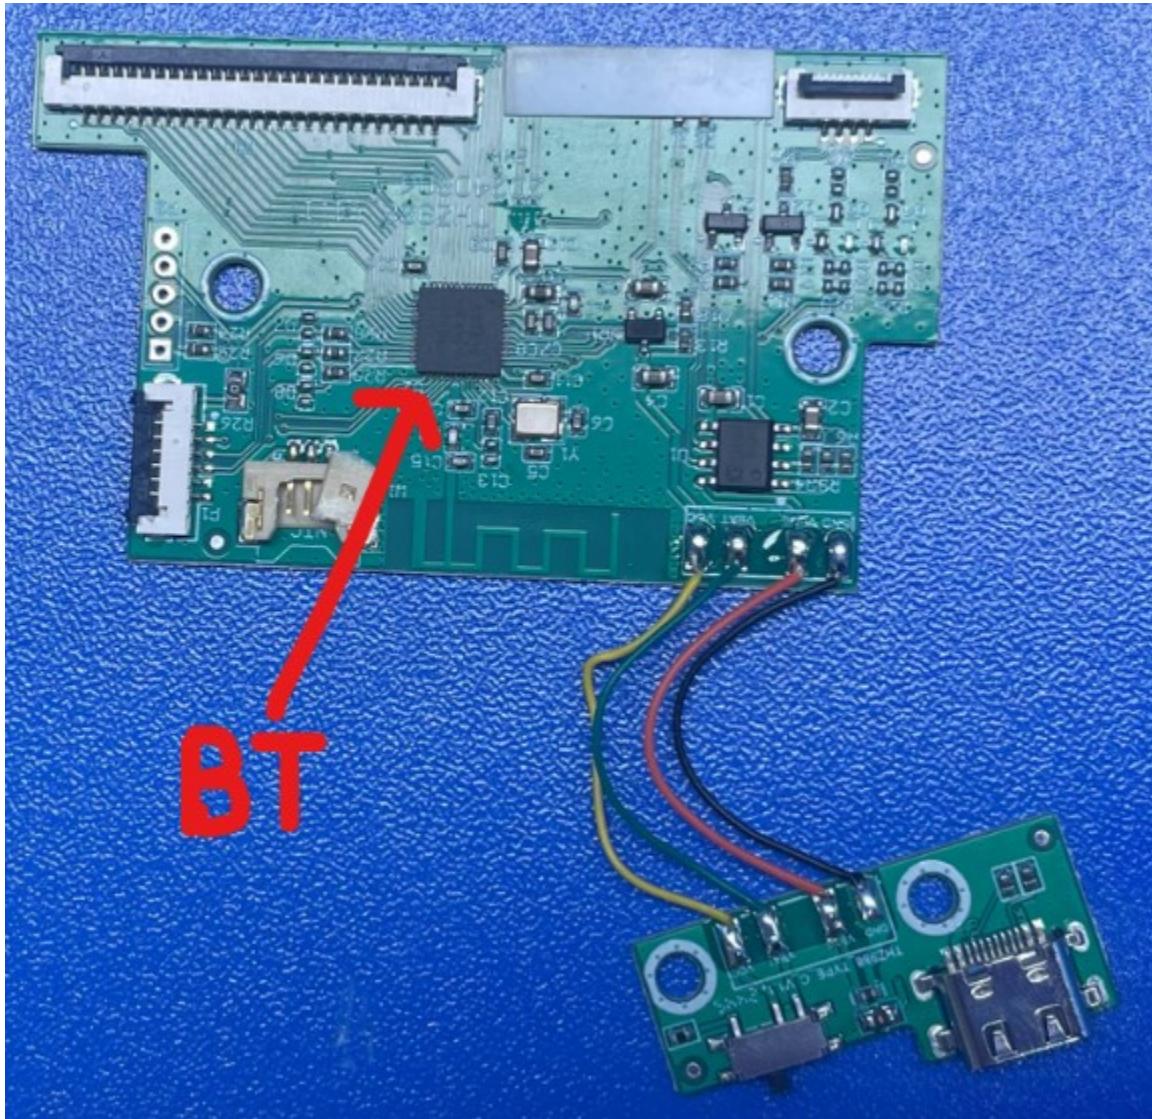


Figure5: Main board and USB board view_2 of EUT with BT module

THZ988

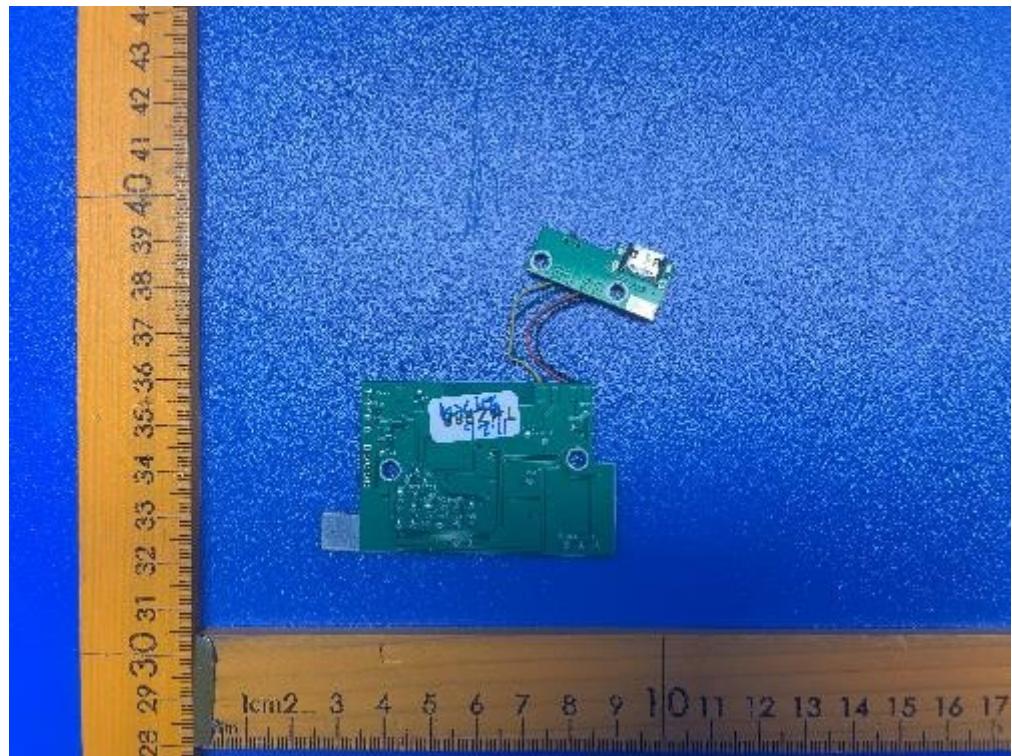


Figure 6: Main board and USB board view_2 of EUT

THZ989



Figure 1: Internal view_1 of EUT

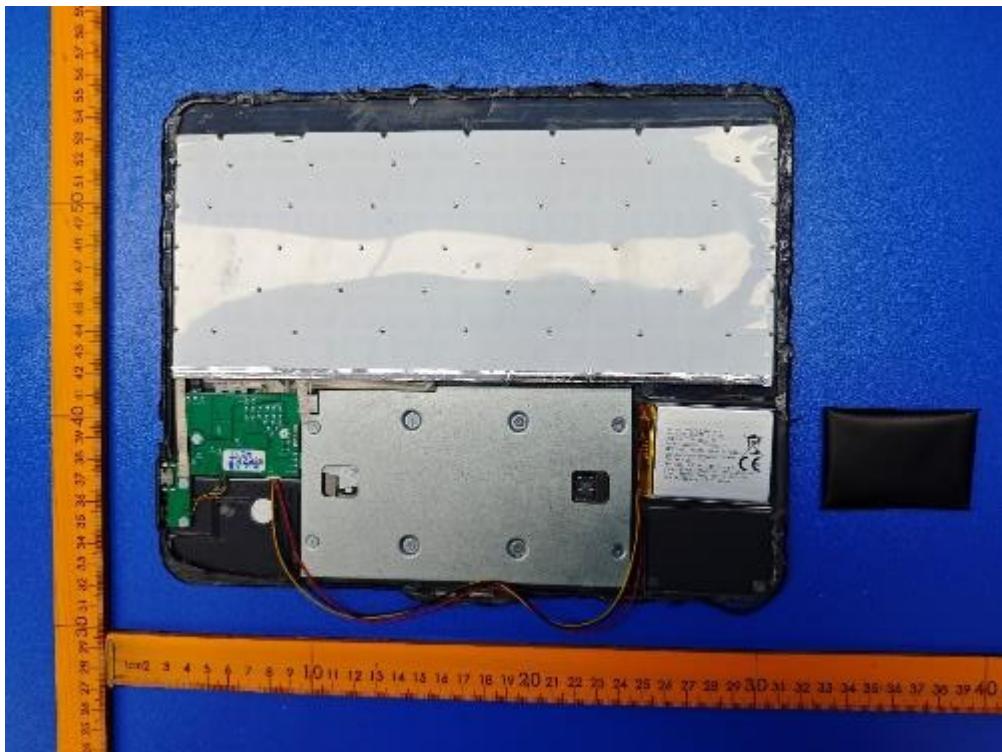


Figure 2: Internal view_2 of EUT

THZ989

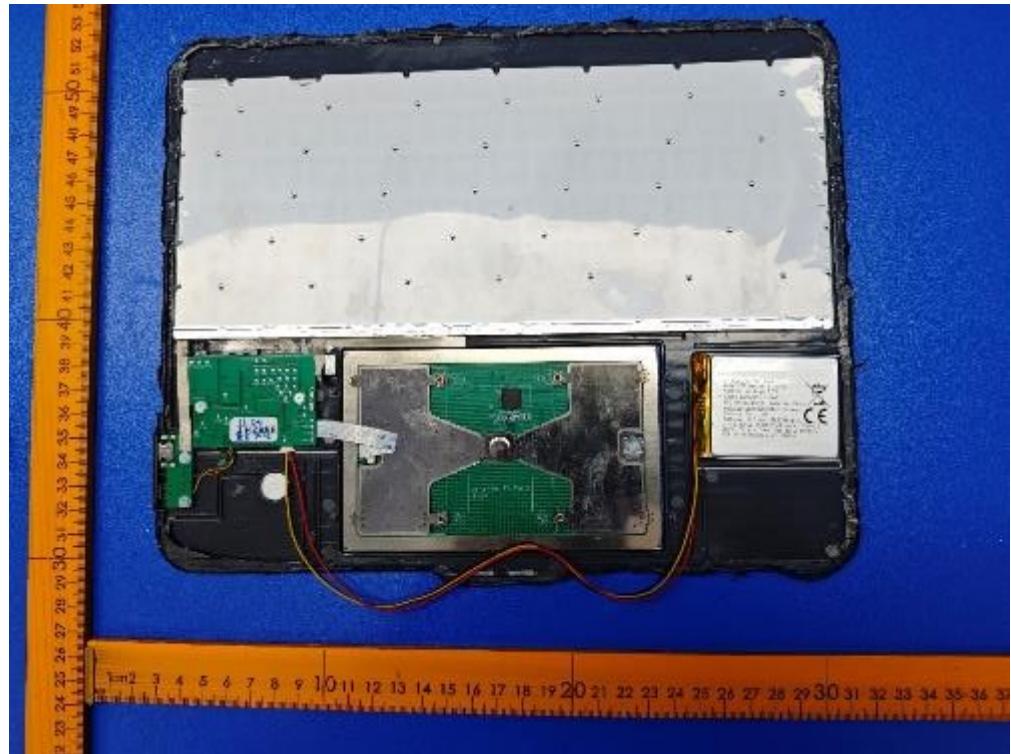


Figure 3: Internal view_3 of EUT



Figure 4: Main board and USB board view_1 of EUT

THZ989

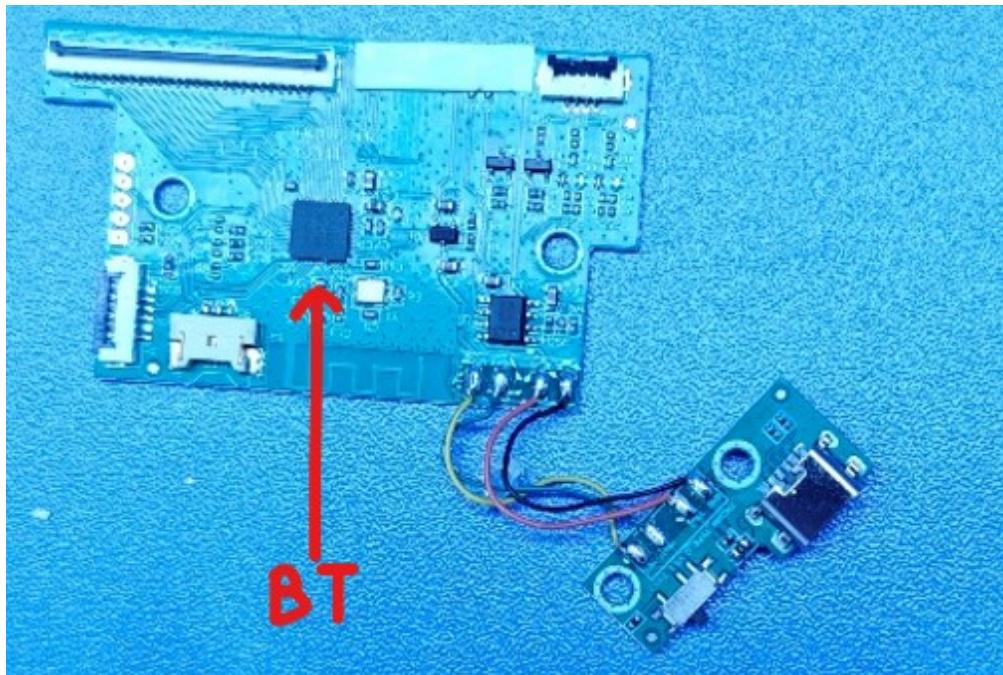


Figure 5: Main board and USB board view_1 of EUT with BT module

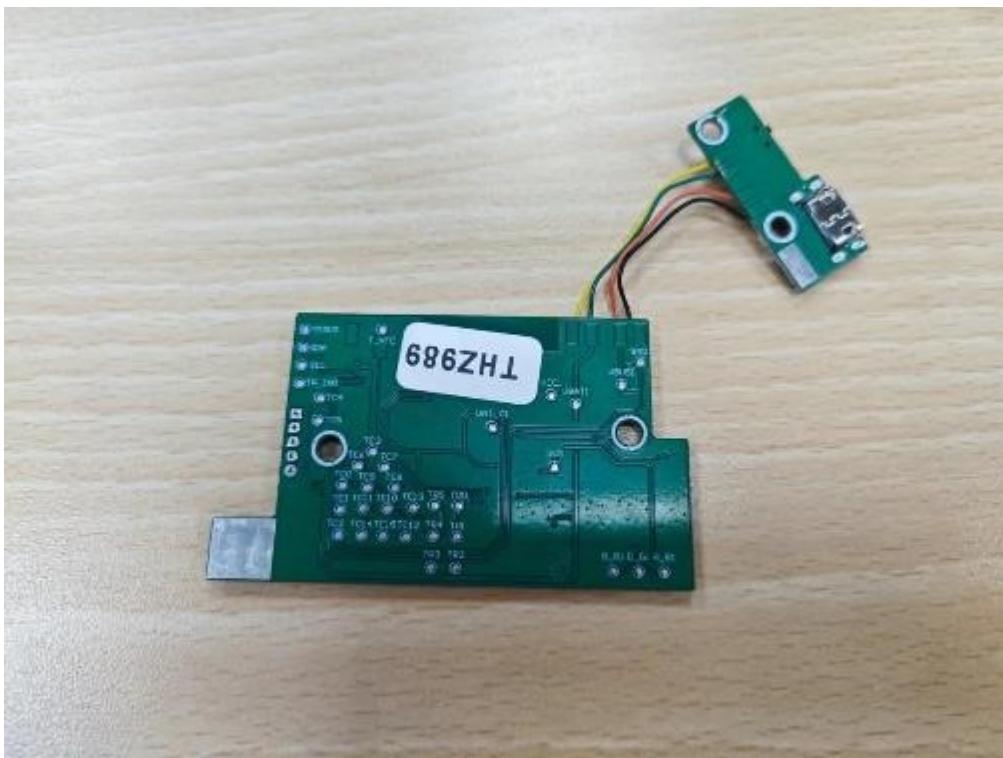


Figure 6: Main board and USB board view_2 of EUT

THZ993



Figure 1: internal view_1 of EUT



Figure 2: internal view_2 of EUT

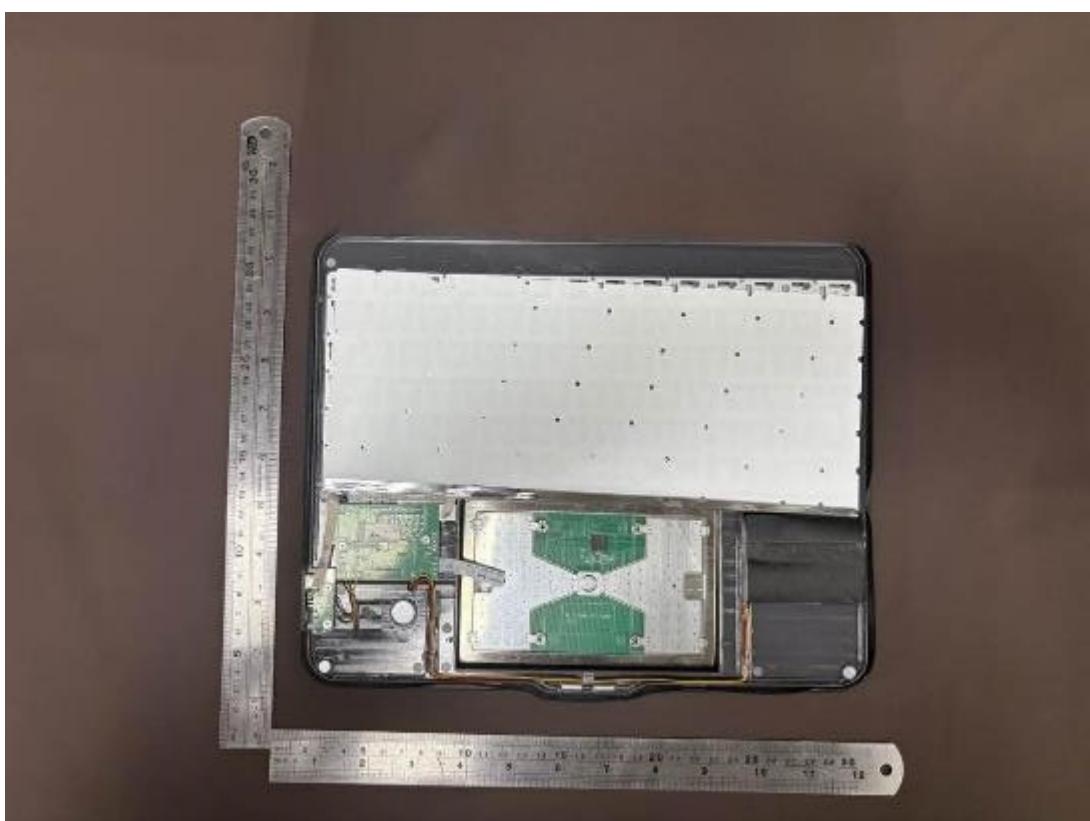


Figure 3: internal view_3 of EUT



Figure 4: Main Board and USB board view_1 of EUT

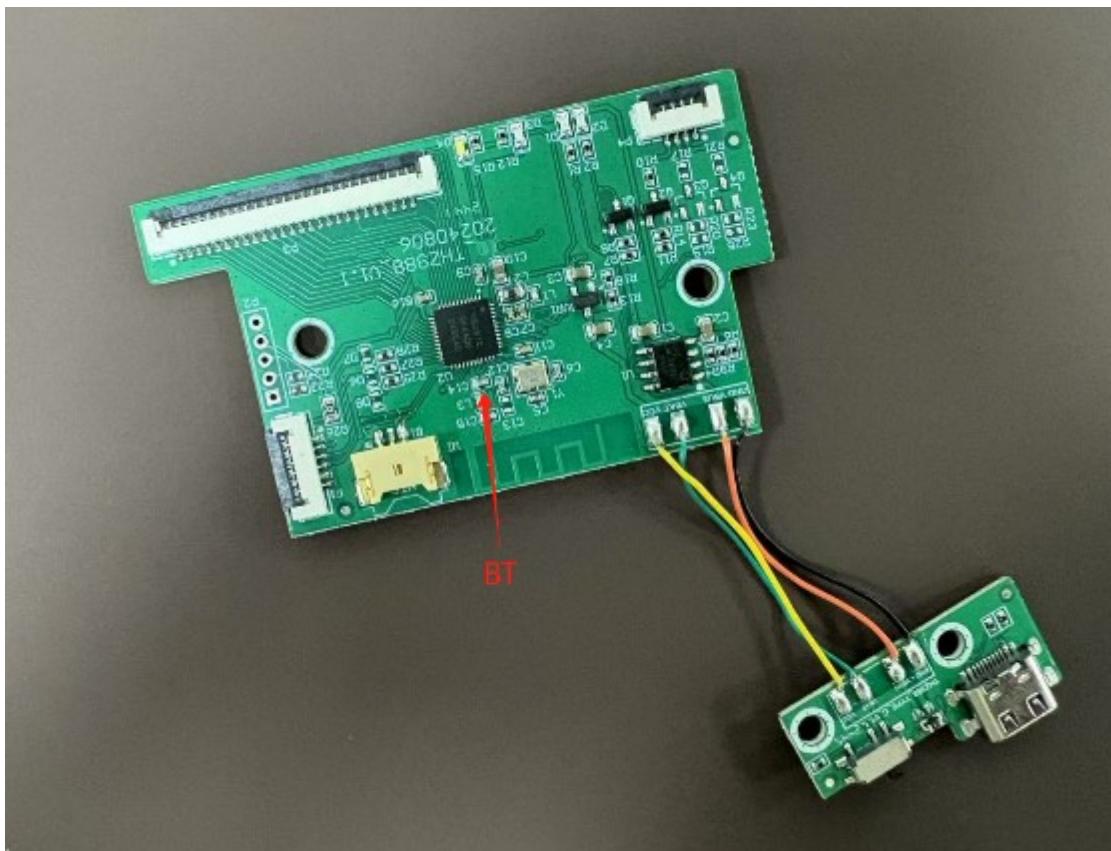


Figure 5: Main Board and USB board view_1 of EUT with BT module

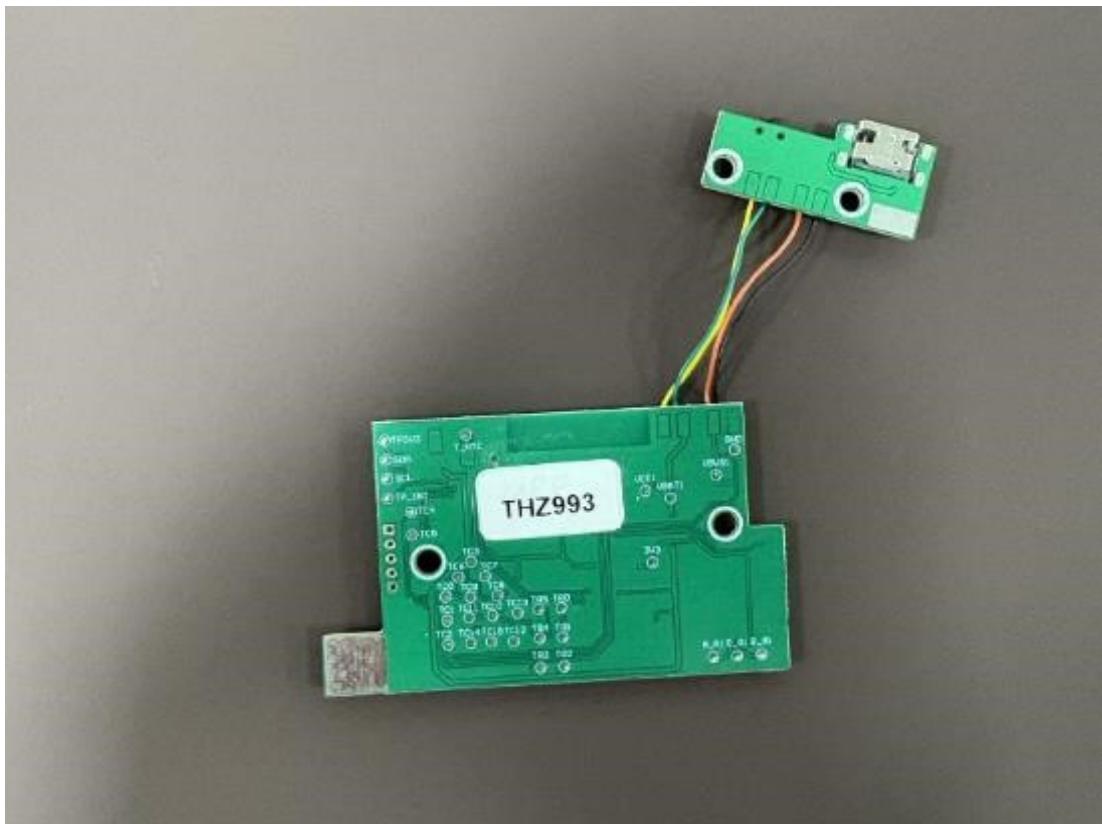


Figure 6: Main Board and USB board view_2 of EUT