

## **QUICK GUIDE**

# **ALCATEL**

### **4073 GS**

MOBILE TELEPHONE

DIGITAL PWT

## Getting to know your Alcatel 4073 GS Smart telephone

### **Navigator:**

Allows you to move through the menus, and to confirm entries:

- [NAVC] Display previous choice.  
Erase last character entered. Erase a complete field (long press).
- [NAV] Display next in list.  
Transfer (long press)
- [OK] Validate entry or initiate a call by name.
- [→] Scroll the display pages.

Earpiece

Integral radio antenna

### **Personal directory**

### **Function keys:**

The function is obtained by a long press on the key (2 beeps).

- [ \* ] Sending DTMF codes (long press).
- [ i ] Customizing your telephone.  
[ 0 ] R: send timed break (long press)
- [ # ] Adjusting your telephone (long press).
- [ 8 ] Activating vibrate mode while deactivating the ringer, or vice-versa (long press).
- [ M ] Message function.  
Forward function (long press)
- [ 1 ] On-Off (long press)
- [ V ] **During a call:** adjusting earpiece sound volume.

Microphone

**Green light indicating:**

Incoming call: flashes with call ringing if ringer and vibrate mode are deactivated.  
Going out of radio coverage: fast flashing.

**Display and corresponding icons:**

Has 2 lines of 16 alphanumeric characters and 1 line of 8 icons.

**Radio reception icon (1):**

Limit of coverage or outside coverage (flashing).

[iRad.1] Poor reception (light on).

[iRad.2] Reception OK (light on)

**Battery icon (1):**

[iBAT1] Battery discharged or defective (flashing).

[iBAT2] Battery on charge (flashing).

[iBAT3] Battery fully charged (light on).

**Option icons (4):**

[iV] Lock/unlock

[iM] Message

[iRenv.] Forward

[iSon.] Ringer disabled

**Call keys:**

[DECR] Lift receiver  
Call  
Redial function (long press)

[RACC] Hang up

## GETTING STARTED

### Installing the battery in the telephone



remove the cover



connect the battery

socket.  
**Check correct polarity:** red wire towards inside of telephone



position the two wires under the battery and slide the battery into position



click the cover into position

### Switching on your telephone:



[ i ]



display comes on


long press



wait a moment  
( $\odot$  3 sec)



battery and radio coverage icons light up

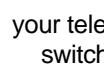

your telephone is switched on

Conversely, if the display does not come on, charge the battery.



If you are outside radio coverage, the radio coverage icon flashes. If "AUTO-INSTALL, System-OK?" is displayed, see paragraph **"Registering your telephone in the system"**.

### Switching off your telephone:



[ i ] long press

## SETTING UP

### Selecting language



[ i ] short press



you have the choice of 4 predefined languages

## Selecting language (cont.)

[NAV]  select language [OK]  
or   or   or  [OK] validate [RACC] return to idle status



## Adjusting the audio functions

When your telephone is in standby, you can customize some of its functions:

 [ # ] long press  [OK] you have the choice of various options\*  1 - Ringer  
2 - Vibrate mode  
3 - Key tone  
4 - Radio beep  
...  
messages related to functions are displayed

\* [NAV] to select the option

For each function, transition between "active" mode and "inactive" mode (and vice-versa) is obtained by:

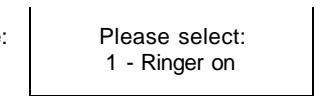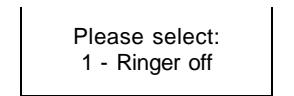 [OK]  
Example:     
 Ringer active  Ringer disabled

When the selection is completed:

 [RACC] and again [RACC] to return to idle status

### Adjusting your ringer

You can select your ringer tune (choice of 7) and adjust the volume (3 levels):



[ i ]

short  
press



the tune number and volume level  
number are displayed

**To play the various ringer tunes proposed:**



several presses

**Adjusting ringer volume:**



several presses

**Validate:**



[OK]

and [RACC] to return  
to idle status

### Selecting your receiver sound volume

during a call



several presses (1 to  
3)

A beep indicates maximum volume selected. The last adjustment entered is retained for the next call.

## USING YOUR TELEPHONE

### Making a call



[DECR]

and



you have a call in  
progress

dial

or



dial directly

**Answering a call:**



[DECR]

or

remove  
telephone  
from charger



[RACC]

Lift  
receiver.

**To terminate a call:**

Hang up.

### Calling your correspondent by name (company directory)



[ A ]      short  
press



correspondent's name is  
displayed

first letters of correspondent's  
name

#### When name found is OK:



[OK]      or      [RACC]

make the call      exit from  
mode

### Calling from your personal directory



[ A ]      [ 0 ]      [OK]



the system  
automatically dials  
the number

long  
press      directory number  
required (0 to 9)

or



[ A ]      [NAV]      [OK]



the system automatically  
dials the number

long press      to select directory

### Calling from the common directory

Your terminal has access to the common directory of short outside numbers:



short number

### Redialling the last number dialled (redial)



[DECR]      [long  
press]



last number dialled is redialled

### Requesting automatic callback

Internal line busy



[ # ]



display acknowledges  
callback

[RACC]

short  
press

## HANDLING SEVERAL CALLS

### Making a second call during a conversation

during a conversation



the first call is placed on hold

dial the second number directly

### Recovering the first call:



[ ☎ ] long press



the first call is recovered


the second call is automatically placed on hold

place the second call on hold

If you make a mistake, hang up [RACC]. Your telephone rings and you recover your first call by pressing [DECR].

### Answering a second call during a conversation

you are in conversation and you hear a repeated beep

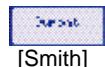

[OK] long press

the first call is placed on hold

caller's name for 3 seconds

### Recovering the first call:



[ ☎ ] long press



identical to previous case

place the second call on hold

### Transferring a call

To transfer your call to another number:

during a conversation



your call is placed on hold

[NAV] long press or [RACC]

destination number

if allowed by your telephone configuration

### Switching between calls (Broker call)

During a call, a second call is on hold. To switch between the two calls:



[ ☎ ]  
long  
press

the other call is placed on hold

### Three-way conference with internal and/or external correspondents (conference)

During a conversation, another call is on hold:

**For a three-way conference:**



[ NAVC ]  
long press

or



“Conference”  
function code

**To hang up all calls:**

[ RACC ]

**Cancelling the conference and recovering your first call:**



[ NAVC ]  
long press

or



the second call is placed on  
hold

“Conference”  
function code

## CUSTOMIZING YOUR TELEPHONE

### Programming your personal directory

Your directory can contain up to 10 numbers, which you can enter through the numeric keypad (keys 0 to 9).



[ A ]  
long  
press

[ i ]

short  
press

[ NAV ]

[ OK ]



~~abc~~

[Name]

select a number,  
0 to 9

the current value is  
displayed (max. 6  
letters per entry)

### Programming your personal directory (cont.)

|                     |                 |          |                  |          |      |        |
|---------------------|-----------------|----------|------------------|----------|------|--------|
| [ A ]               | long press      |          | [OK]             |          | [OK] | [RACC] |
| erase current entry | enter new name* | validate | enter new number | validate | quit |        |

\*Example : \* Enter a name: the keys on the numeric keypad also have letters which can be entered by consecutive presses.

press once for "A",  
press twice for "B",  
press three times for "C".

\*  
[ ]

\* Use the [NAV] keys to go from one letter to another.

### Charging your telephone battery

Connect the charger to a power supply (AC/DC transformer plugged into mains).

Install the telephone in the charging holder and observe the battery icon.

- **Battery charge low (less than 5%):**

- "battery low" icon is displayed [iBAT1]

- **Battery charge at least 50%:**

- "battery half charged" icon is displayed [iBAT2]

and flashes during the charge [iBAT2\*]

- **Battery charge OK:**

- "battery charge OK" icon is displayed [iBAT3]

Install the telephone in its charging holder **regularly**.

### Charging holder

The holder is an integral part of the charger used with this telephone. It is a convenient means of stowing the telephone while simultaneously charging the battery. The telephone can be "On" or "Off".

The holder comprises:

1. a position for the telephone,
2. a mains power connection cable, through an AC/DC transformer.

*The mains power socket used must be close to the charger/holder and easily accessible, so that it can be used as an "on/off" facility.*


The level of charge is shown on the telephone display (battery icon).

## Registering your telephone in the system

To operate correctly, any DECT telephone needs to be registered in at least one system (subscription operation).

When using your 4073 GS Smart telephone for the first time, prepare your system for registration (see Office System installation guide).

When the system is ready:

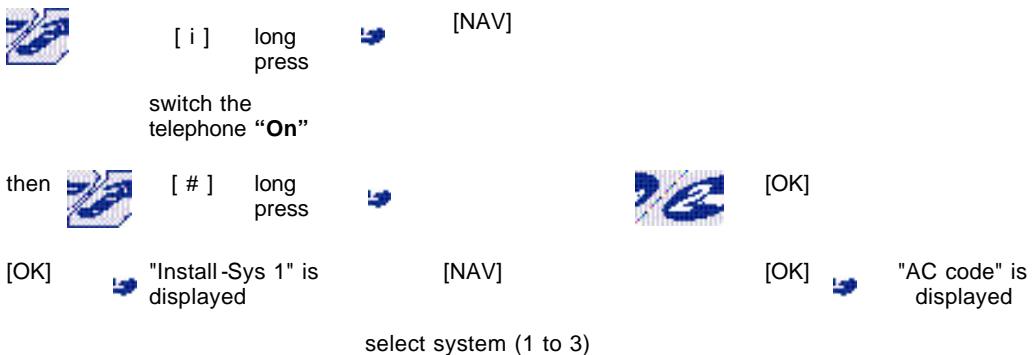

Two possibilities for "AC code"

- if no system code: [OK] "Subscription running ..." is displayed
- if system code:  [OK] "Subscription running ..." is displayed  
enter code

### Subscription accepted:

 "Subscription accepted" and the radio coverage icon are displayed [OK] your telephone is now operational in GAP mode  
max. 2 minutes

### Subscription failure:

"Subscription accepted" is not displayed or "Subscription rejected" is displayed [i] long press and repeat the procedure

This may be because your system has not been prepared for the registration.  
Consult your installation technician.

## ACCESSORIES

### Case

Various models of carrying case are available.

These cases provide effective protection against impact (being dropped), dust and liquids. Carrying cases are strongly recommended in severe environments. For the characteristics of each model, contact your installation technician.

*Remove the belt clip from your telephone to facilitate case insertion and removal.*

**Table of codes provided by Alcatel**

| Services                            | 2-digit default code | 3-digit default code | Your code |
|-------------------------------------|----------------------|----------------------|-----------|
| Answer general bell                 | 15                   |                      |           |
| Answer paging                       | 49                   |                      |           |
| Automatic callback if terminal busy | 19 or #              |                      |           |
| Broker call                         | 2                    |                      |           |
| Cancel all diversions               | 60                   |                      |           |
| Cancel automatic callback           | 19                   |                      |           |
| Common directory numbers            | 7000 to 7399         |                      |           |
| Conference                          | 50                   |                      |           |
| Divert group calls                  | 65                   |                      |           |
| Divert if busy                      | 62                   |                      |           |
| Divert to paging                    | 64                   |                      |           |
| Do not disturb                      | 63                   |                      |           |
| DTMF End to End                     | 69 or D              |                      |           |
| Follow me diversion                 | 68                   |                      |           |
| Group call pick-up                  | 14                   |                      |           |
| Hunting group in                    | 67                   |                      |           |
| Hunting group out                   | 66                   |                      |           |
| Immediate diversion                 | 61                   |                      |           |
| Intrude on a call                   | 7 or A               |                      |           |
| Locking/Unlocking                   | 17                   |                      |           |
| Paging                              | 40                   |                      |           |
| Park / retrieve parked call         | 12                   |                      |           |
| Protect a call                      | 89                   |                      |           |
| Redial last number                  | 40                   |                      |           |
| Selective diversion                 |                      |                      |           |
| Terminal call pick-up               | 13                   |                      |           |
| Text message (call back later)      | 50                   |                      |           |

Your telephone provides access to a number of functions, depending on your system version and configuration. See the installation guide or contact your installation technician.

Alcatel Business Systems, in keeping with its policy of constant product improvement for the customer, reserves the right to modify product specifications without prior notice.

#### INFORMATION FOR PART 15 CLASS A DIGITAL DEVICES

NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device ,pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates ,uses ,and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual , may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to harmful interference in which case the user will be required to correct the interference at his own expense. Change or modification not expressly approved by ALCATEL can void the user's authority to operate the equipment

#### UTAM

Installation of this equipment is subject to notification and coordination with UTAM Inc. Any relocation of this equipment must be coordinated through, and approved by UTAM. UTAM may be contacted at 1-800-429-UTAM.