

CONTENTS


Basic parts	2
Diagram & part name	3
Installment	5
Using direction	6
Care and maintenance	8
Solution to abnormal situation	9
Quality warranty	9

BASIC PARTS

Thank you for purchasing and using our products!
When you purchase a set of TV/FM REMOTE EARPHONE, you will possess the following basic parts:

- TV emitter one set
- Receiver one set
- Earphone one set
- Audio cord one set
- User manual & quality warranty one set

DIAGRAM & PART NAME

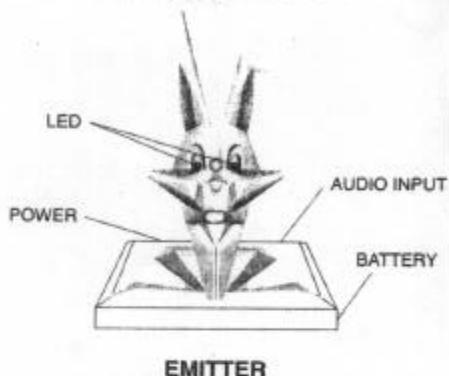


- 1 -

- 2 -

- 3 -

DIAGRAM & PART NAME

INSTALLMENT

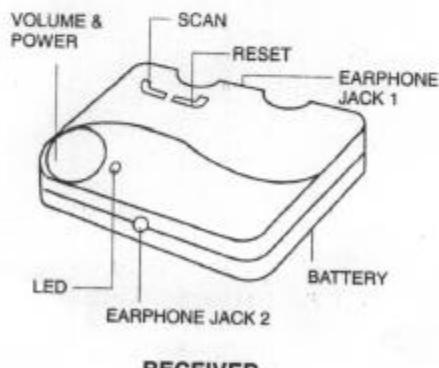

RECEIVER

- 4 -

1. Correctly insert two batteries (size AA) into the battery space of emitter and two batteries (size AAA) into the battery space of receiver.
2. Connect the audio input of emitter and the audio output of TV set (Video-Recorder/VCD) by using the audio cord.
3. Insert earphone plug into the earphone jack of receiver. Two earphones are available.

- 5 -

USING DIRECTION

Receiving TV sound

- Turn on the power switch of emitter, the LED of emitter will be lighted.
- Spin the volume adjustment button and turn on the receiver, the LED of receiver will be lighted. Adjust the volume per your requirement.
- Press the reset button, then press the scan button, the TV sound will be received.
- When TV sound is not used, turn off the power switch of emitter, then the LED will go out.

- 6 -

USING DIRECTION

Receiving FM radio

- When TV sound is not received, the receiver can be used as FM radio.
- Spin the volume adjustment button and turn on the receiver, the LED of receiver will be lighted. Adjust the volume per your requirement.
- Press the reset button, then press the scan button, the receiver will automatically scan and lock the frequency in upward order.
- When both TV sound and FM radio are not used, spin the volume adjustment button of receiver and turn it off.

- 7 -

CARE AND MAINTENANCE

- Keep the TV/FM REMOTE EARPHONE away from high temperature, moisture and direct sunlight.
- Avoid violent shock, strike, fall and etc.
- Avoid putting the emitter on metal.
- Do not pull the earphone cord and plug violently in order to avoid influencing the receiving result.
- Do not use old and new battery together.
- When the LED goes dim, the volume goes down or distorts, please replace the battery in time.
- Please take out the batteries if you do not use for a long period.

- 8 -

SOLUTION TO ABNORMAL SITUATION

- If you hear loud noise or sound at all, please slightly stretch the earphone cord or check if you have put the emitter on metal.
- When you are unable to receive any sound or channel because of violent strike, please press the RESET button and then press the SCAN button, you will get the right channel.

QUALITY WARRANTY

Thank you for purchasing TV/FM REMOTE EARPHONE. If there is any defects in workmanship or raw material, our company guarantees to the exchange of the product within one year of the purchase receipt date. The warranty excludes all other damages caused by man-made factors. Please keep the purchase receipt properly.

- 9 -

TV/FM REMOTE EARPHONE USER MANUAL & QUALITY WARRANTY

