


PARTS IDENTIFICATION

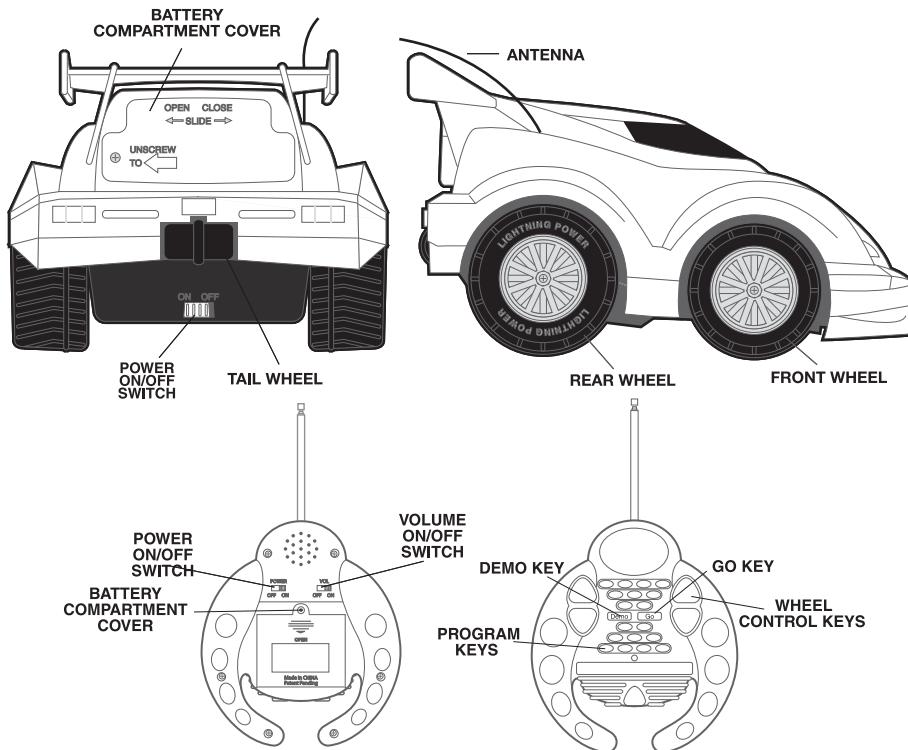

PROGRAM KEYS AND FUNCTIONS

	LEFT 180°
	FORWARD
	REVERSE
	RIGHT 180°
	FORWARD LEFT
	FORWARD RUN
	FORWARD RIGHT
	REVERSE LEFT
	REVERSE RIGHT
	BOUNCE UP AND DOWN
	LEFT 90°
	ROLL FORWARD AND BOUNCE
	SHAKE
	FORWARD AND REVERSE
	SWING 60°
	ZIG ZAG
	PAUSE AND HORN
	ROTATE 720°
Demo	DEMONSTRATION (MANUFACTURER'S PRE-SET PROGRAM)
Go	FUNCTION KEY (EXECUTE ACTION)

BATTERY PRE-CAUTION

- Insert batteries according to the correct polarity.
- Do not short circuit battery contacts.
- Remove batteries in remote control and car if they will not be used for a long period of time.
- Check batteries regularly for leakage.
- Exhausted batteries should be removed immediately and must be recycled or disposed of properly according to state or local government ordinances and regulations.
- Do not dispose batteries in a fire - batteries may leak or explode.

BATTERY WARNING:

- Do not mix alkaline, standard (carbon-zinc) and rechargeable batteries (nickel hydride).
- Do not mix old and new batteries.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the item before being charged (if removable).
- Rechargeable batteries are only to be charged under adult supervision (if removable).
- Exhausted batteries are to be removed.
- The supply terminals are not to be short-circuited.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity (see diagrams below).

KEEP THIS MANUAL FOR REFERENCE AS IT CONTAINS IMPORTANT INFORMATION.

BATTERY REPLACEMENT

