

Product Name: Predator Remote Control

MODEL NO: MW-RC01

Unit working voltage: 3V

Unit working Frequency: 433.92MHz

For use with any Predator Decoy compatible with this Remote Control.

Parts List:

Remote Transmitter

CR2032 battery is preinstalled in the unit

Operation:

There are two keys "ON" and "OFF"

To operate, turn the power switch of the Predator Decoy. Press "ON" to trigger function ON.

Press "OFF" to trigger function OFF. LED lights up when key is pressed.

TROUBLE SHOOTING:

Common problems:

The Predator Decoy doesn't respond to the Remote Transmitter; the remote distance is too shot.

Check List:

1. Make sure the Predator Decoy is power on.
2. Make sure the battery is not too low.
3. Extend the antenna of both the Remote Transmitter and Predator Decoy to maximum.

If those steps do not get it back working, contact Customer Service at the number is 715-381-2935.

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.