

INTRODUCTION

Congratulations...

On your purchase of the Cy-Curity[®] system - The Leader In Bicycle Security[™]

The Cy-Curity[®] system is the latest breakthrough in bicycle security. It is the ONLY completely hidden and remote activated bicycle alarm on the market. The Cy-Curity[®] system is designed for all bicycle riders. Whether you are using your bicycle for recreation, fitness or commuting, the Cy-Curity[®] system can make your bicycling experience a more comfortable one. No longer do you have to be worried if your bicycle is safe, just arm the system and lock it up. It is recommended that you use your Cy-Curity[®] system in conjunction with a Cy-Curity[®] Lock for maximum protection against potential thieves or vandals.

FCC ID: P2WCYBA100 This device complies with FCC rules part 15. Operation is subject to the following two conditions: (1) This device may not cause harmful interference and (2)  This device must accept interference from other devices, including interference that may cause undesired operation. This Class B digital apparatus meets all requirements of the Canadian Interference Causing Equipment Regulations.

INSTALLATION

The Cy-Curity[®] system is installed using a universal mounting method designed to fit most bicycle seats. When mounted properly the system will be completely hidden and out of plain view. If mounting under the seat is not possible, simply place Cy-Curity[®] in a concealed area and firmly secure the system

- Remove screw and open battery compartment (logo side)
 - Install batteries in the proper direction
 - Place battery door back and replace screw
 - Insert unit under seat in a concealed position with the siren facing up
 - Slide mounting strap through appropriate side mounting hole
 - Repeat this step for other side and on top of system
 - Tighten straps to the seat support bars and cut off excess
- Extra straps have been included for various installation methods.

OPERATION

Arming / Disarming

- Press Button 1 one time - one "Chirp" will be emitted = Armed
- Press Button 1 one time - two "Chirps" will be emitted = Disarmed

When arming the system you must allow 6 seconds for the system to fully arm. If system is tampered within this 6 seconds three "Chirps" will be emitted. Simply wait 6 seconds again, the system will be fully armed.

Soft Chirp Mode

- Press Button 2 one time and then Press Button 1 one time unit will emit soft chirp sound when armed or disarmed

Panic Mode

- Press and Hold Button 2 until siren sounds. Press Button 1 to stop siren

Duration

When the system is triggered or placed into panic mode, the siren will sound for 15 seconds. The system will automatically rearm itself after 15 seconds, unless disarmed.

Tamper Report

When disarming the system after returning to the bicycle, the system normally chirps two times. However, if the system sounded in your absence, three chirps will be emitted.

Emergency Disarm

In the event you should happen to lose your remote transmitter or the batteries completely drain, the system can be disarmed by removing and replacing one battery five times leaving it in on the fifth time.