

# FLIPO COLOR MAGIC CAR

## OWNER'S MANUAL

Model No: TOY-COLSCAN

- Ages: For 8 years old and above
- Please read the instructions carefully before beginning to play
- Adult guidance is strongly recommended

### Transmitter

Remote Control Battery Installation.

1. Remove the screw holding the battery compartment door and slide open the battery compartment cover.
2. Insert 2 x AA battery according to the polarity information located in the compartment; make sure the (+) and (-) poles of the battery are positioned correctly.
3. Replace the battery compartment door

### Car Battery Charging

1. Switch the car to "OFF".
2. Connect the round jack of the charger to the charging slot at the bottom of the car.
3. Plug the charger into a wall outlet.
4. Charge the battery for approximately 2-3 hours.
5. After charging, unplug charger from wall outlet and car.
6. The battery pack will feel warm after charging, which is normal.
7. Recharging the battery after about 10-15mins of usage.

### Color Scan Instructions


- 1.) When first turned on, the cars led's will flash through a multi-color sequence. If you take no further action the car will continue to cycle through this multi-color sequence.
- 2.) You can also select a color you wish your car to illuminate. Most colors can be replicated by the car. Dark colors and earth tones, such as black, brown, navy blue, tan, or brick red, cannot be reproduced. A color chart is included with your car for convenience. The chart contains color suggestions that can be used with your Color Scan Car. You may also use other colors of your choice if they are a solid block of color and can be laid out evenly on a flat surface.
- 3.) To select a color: turn your car to the ON position. The car will first cycle through its multi-color flashing sequence. Next, locate both your oval shaped scan window on the rear of the car and the Color Select Button on the side of the car. The color you wish to replicate should be placed on a stable flat surface. Place the Scan Window on the color you would like to reproduce, and then press the Color Select Button one time – your car should now be flashing in the color you have chosen.
- 4.) If the car does not change to the color you have selected is too dark to be reproduced by the Color Scan Car.

### SAFETY RULES

- Not suitable for children under 8 years due to detachable small parts.
- Installation of the battery should **ALWAYS** be done by an adult.
- Keep fingers, hair and loose clothing away from the vehicle's tires and the wheels.
- Don't pick up the vehicle while in motion.
- Don't put your vehicle or transmitter near any source of heat.
- Don't operate your vehicle in dangerous places.
- Do not mix old and new batteries
- Do not mix alkaline, standard(carbon-zinc), or rechargeable(nickel-cadmium) batteries.
- Car battery is rechargeable, no replaceable.




### WARNING

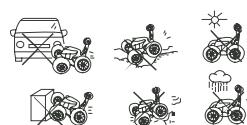

### OPERATION

1. The car can be turned ON by moving the activation switch to "ON" position.
2. Drive the car by operating the sticks of the transmitter. The effective range is approximately up to 26 feet.

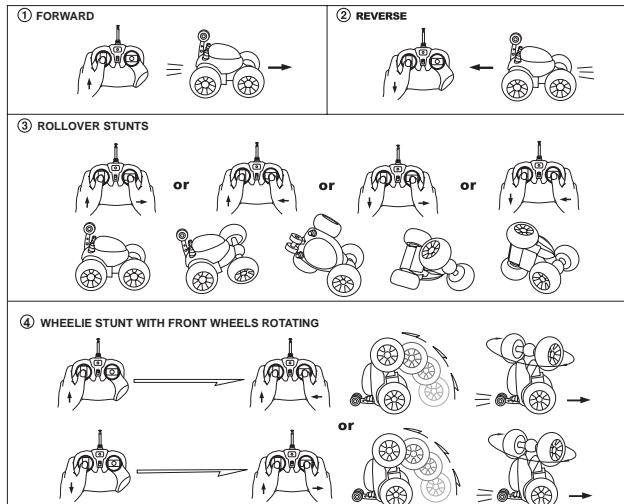

### TROUBLESHOOTING

PROBLEM	PROBABLE CAUSE	CORRECTION
The car does not move	The switch of the car or controller has not been turned on	Switch them on
	The (+) and (-) ends of the battery are positioned in the wrong direction	Take out the batteries and install them again correctly
The car moves slowly or is unable to perform stunts	The batteries in the controller are too weak.	Replace "AA" batteries with new ones
	The batteries of the car are too weak to move the vehicle	Recharge car's batteries
The car cannot be controlled or moves erratically	The batteries in the controller are too weak.	Replace "AA" batteries with new ones
	There is another device using a similar frequency nearby or the car has moved out of range	Change locations or move nearer to the effective range of less than 26 feet.

### 30 DAYS LIMITED WARRANTY

FLIPO GROUP warrants to the original purchaser, when used in North America only, that this product shall be free of defects in material and workmanship. This warranty applies within 30 days of the original purchase with normal home use. This warranty does not apply for commercial use of this product. Use outside of North America is not covered by this warranty.

During the warranty period, we will at our option, repair or replace this product without charge, which shall be the consumer's sole remedy. ALL RETURNS must be accompanied by a Return Authorization Number, which is issued by the Customer Service Department of Flipo Group. Please contact Customer Service BEFORE returning any item. Once you have obtained a Return Authorization Number, the product must be returned with a clear copy of the proof of purchase, showing place and date of purchase, postage and insurance prepaid to:

**Flipo Group**  
613 First Street  
La Salle, IL 61301  
Email: [info@flipo.com](mailto:info@flipo.com)  
Website: [www.flipo.com](http://www.flipo.com)  
Tel: 815-223-9942

This warranty does not cover installation, adjustments in the home, nor damage due to accidents, misuse, abuse, fire or other acts of God, incorrect line voltage, damage to other equipment caused by improper installation, unauthorized or improper modification. This warranty gives you specific legal rights and you may also have other rights that vary from state to state.

If you should have questions about your product's operation, battery installation, trouble shooting or just want to learn some interesting functions, please visit [www.flipoty.com](http://www.flipoty.com). Individual product videos can be found at either the page for your product located in the Toys Department or at the How To page.

\*\*THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS.\*\*

2012 Flipo Group Limited

[www.flipo.com](http://www.flipo.com)

Printed in China

### FCC INFORMATION

This device complies with part 15 of the FCC Rule. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC ID:P3286193

**NOTE:**  
Changes or Modifications not expressly approved by the party responsible could void the user's authority to operate this device.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.