




MTP-710

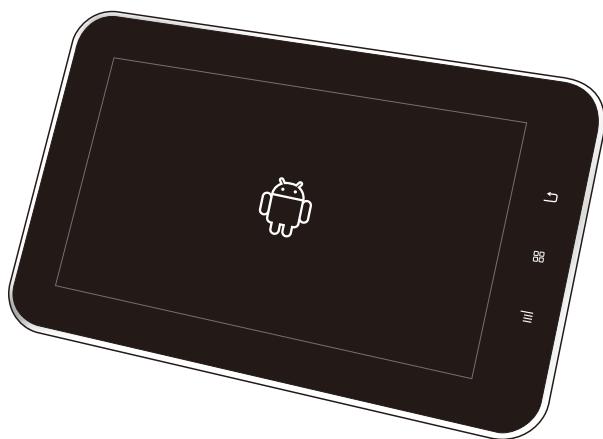

Smart Pad

User Manual



Multi Point Touch



Long Life Time



0.3M Webcam



HDMI
Video Output

High Definition

Contents

Attention	1
1. MTP-710 usage	2
1.1 Touch panel.....	2
1.2 Power Button.....	2
1.3 ESC.....	2
1.4 Menu	2
1.5 Volume +, Volume-.....	2
1.6 Headphone Jack.....	2
1.7 Video output interface.....	2
1.8 TF card slot	2
1.9 Mini USB	2
2. First Use	3
2.1 Battery Management and Charging.....	3
2.2 Connection with PC.....	3
3. Main Interface Operation	4
3.1 Main interface description.....	4
3.2 Status Bar Description.....	6
3.3 Touch Screen Status Bar Use	6
4. Basic Settings	7
4.1 Wi-Fi.....	7
4.2 Data Usage	7
4.3 Sound Menu	8
4.4 Display Menu.....	8
4.5 Storage	9
4.6 Battery	9
4.7 Apps	9
4.8 Account & Sync	9
4.9 Location Services	9
4.10 Security	9
4.11 Language & Input	10
4.12 Backup & Reset.....	10
4.13 Date & Time.....	11
4.14 Accessibility	11
4.15 About Tablet	11
5. How to Install APK (app) Files	12
5.1 App installer.....	13
6. FAQ	14
Hardware Configuration.....	14
FCC Warning.....	15

Attention

This manual contains important security information and the correct use of product information. Please make sure to read this manual carefully before using the MTP-710.

- Avoid leaving the MTP-710 in temperatures below 0°C / 32°F or above 45°C / 113°F. Do not leave it in a vehicle on a hot day.
- Do not expose the MTP-710 to dust, dirt or sand.
- Do not expose the MTP-710 to moisture as it can damage the electronics (the MTP-710 is not waterproof).
- Do not knock, kick, drop or shake the MTP-710. Handling the device roughly can cause damage.
- Do not paint the MTP-710 as it can cause damage.
- Choose the appropriate volume when using headphones as high volume can cause damage to the user's ears.
- The MTP-710 requires charging under the following conditions:
 - The battery power icon shows no power
 - The system automatically shuts off or shuts down soon after startup
 - The buttons have no response
 - The MTP-710 top right corner shows a red icon
- When transferring files between the MTP-710 and your computer, do not disconnect the device as this can cause application error.
- Major League Global Enterprises (MLG) will not be responsible for lost of data from damage, repair or other causes of data loss.
- Do not disassemble the MTP-710.
- Do not use alcohol, thinner or benzene to clean the MTP-710.
- Do not use the MTP-710 in places that prohibit to use of electronic equipment (such as on a plane).
- Please do not use the MTP-710 when driving or walking down the street.
- USB is only used for data transfer.

MLG reserves the right to improve the product, change product specifications and designs whenever it chooses. The information is subject to changes without prior notice.

【Remark】All pictures in this manual is only for your reference. The information is subject to changes without prior notice.

1. MTP-710 usage

1.1 Touch panel

Capacitive touch panel: The touch panel can be used by tapping or dragging your finger across the screen.

1.2 Power Button

Startup: Press and hold the power button until the screen lights up.

Shutdown: Press and hold the power button until the shutdown menu pops up (tap the "OK" screen prompt to shut down the MTP-710). Press and Hold power button for 6 to 7 seconds to force shut down the unit if the unit is not responding.

Lock screen: Press the power button to lock or unlock the screen.

【Remark】 1. When battery has no charge, the system will shut down automatically.

2. Powering off via loss of power or refresh will make the MTP-710 scan and restore the disk upon startup and may take longer to start.

1.3 ESC

Pressing the ESC button will return to the last interface; holding the ESC button will return to the home screen.

1.4 Menu

Pressing the Menu button will take you back to the home screen.

1.5 Volume +, Volume -

Pressing the Volume + button will increase the volume while pressing the Volume – button will decrease the volume.

1.6 Headphone Jack

Standard 3.5 mm headphone jack for external audio equipment (ie. earphones, headphones, stereo system, etc).

1.7 Video output interface

Mini-HDMI output can be used to connect the MTP-710 to various displays like an LCD or Plasma television.

1.8 TF card slot

For additional storage, insert a TF or microSD card (up to 32GB) into this slot.

1.9 Mini USB

Can be connected to a computer for file transfer, used for charging or access external USB flash memory devices.

2. First Use

2.1 Battery Management and Charging

Before first use, please fully charge the battery. The MTP-710 can be charged with the included adapter or with the USB cable plugged into a computer.

The first two charges require 6 hours, after that you only need 4 hours for a full charge.

【Remark 1】 The MTP-710 uses a built-in polymer battery. To charge the battery with a standard adapter, make sure these are the specs:

Input: AC110~240V 50/60Hz

Max: 180MA

Output: DC5.0~5.5V/1.5-2.0A

The MTP-710 can also be charge via the mini USB interface.

While charging, the battery icon will animate.

When finished charging, the battery icon will become green and stop animating.

In order to prolong the service life of the MTP-710, it is best to drain the battery before charging it.

【Remark 2】

1. To help preserve the battery, it is best to charge and use the MTP-710 at least once a month.
2. If the MTP-710 was shut down automatically due to low battery, it will take some time to charge up before the MTP-710 is able to get to the main menu for use.
3. Charging with the screen turned on will take longer than if it was off. If you are charging and not using the MTP-710, it is best to put the tablet into standby mode by pressing the power button.

2.2 Connection with PC

Use the included USB cable to connect device to your PC. The MTP-710 will pop up the USB connection window (Figure 1). Tap the “Turn on USB storage” button to connect to your PC.

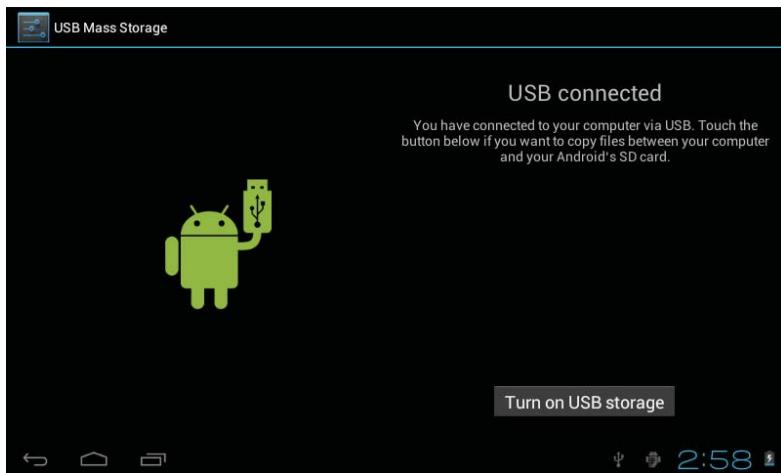


Figure 1

In "USB Mass Storage" mode, you can copy, move and delete files on the MTP-710 and the memory card.

3. Main Interface Operation

3.1 Main interface description.

After startup, you will see this Home Screen. This is the main interface (Figure 2).

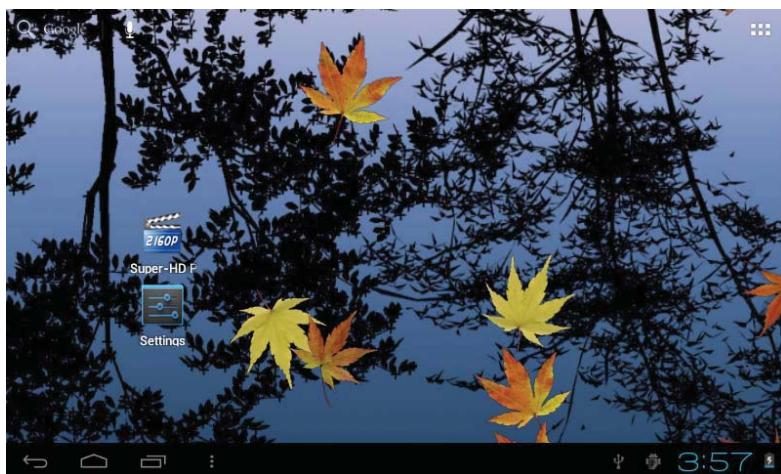


Figure 2

On the Home Screen, you can:

Manage icons: Pressing and holding the icons for 3 seconds will allow you to drag them anywhere on the Home Screen (Figure 3).

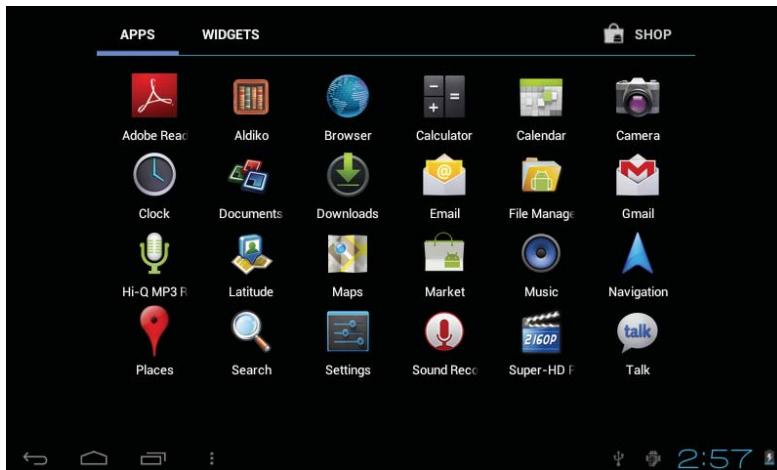


Figure 3

Delete icons: Pressing and holding the icons for 3 seconds will allow you to drag them to the Recycle Bin icon. Once it become red, releasing your touch will delete the icon.

Touching and holding down on the screen for a few seconds will bring up the “Choose wallpaper from” dialog box shown below (Figure 4):

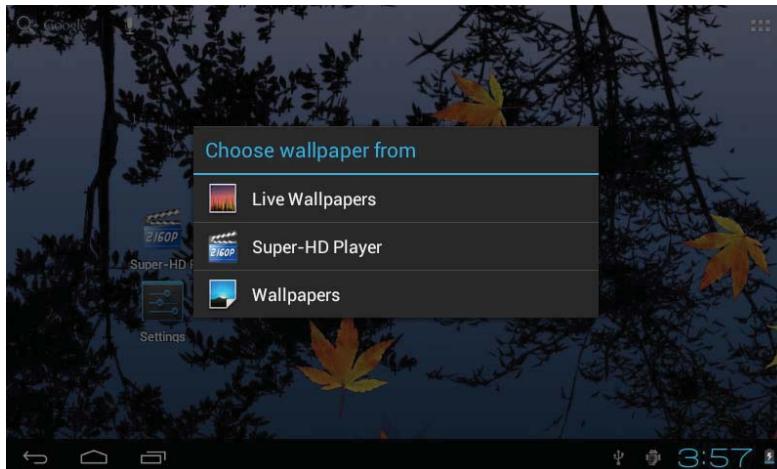


Figure 4

3.2 Status Bar Description

The Status Bar (Figure 5) is located at the bottom of the screen. On the left side, the buttons icons are “Back”, “Home” and “Recent Apps”. On the right side, the icons are USB connection status, TF card info, time, battery status and various other alerts when in use. Tapping the bottom left of the Status Bar will also bring up the “Settings” menu.



Figure 5

3.3 Touch Screen Status Bar Use

The MTP-710 is equipped with a 7" capacitive touch screen. Following describes how to use the Status Bar touch buttons.

No matter which interface you have on the screen, you can go back to the Home Screen by pressing the soft key on the bottom left corner of the touch screen.

【Attention】 The Status Bar soft key functions as the MTP-710 back key

In various applications, tapping the back soft key on the bottom left corner on the touch screen will reverse the application to the previous screen.

In various applications, tapping the menu key on the bottom left corner of touch screen will bring up additional operational settings.

【Remark】 The main screen soft key functions as the MTP-710 menu

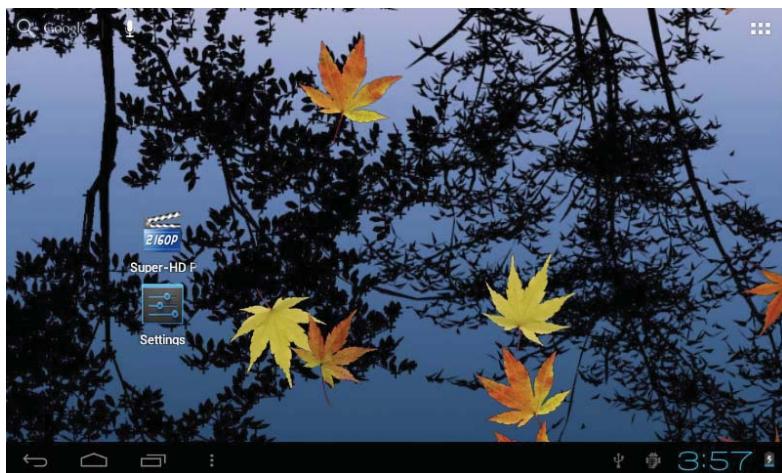


Figure 6

In the Home Screen, touching icons will open the APPs (Figure 6).

In a browser (file, music, video, pictures), touching to drag or shift the scroll bar will enable the list to scroll up or down.

4. Basic Settings

Setting: Tap the setting icons  to enter the Settings menu.

4.1 Wi-Fi

Turn Wi-Fi on or off as well as managing wireless network connections (Figure 7)

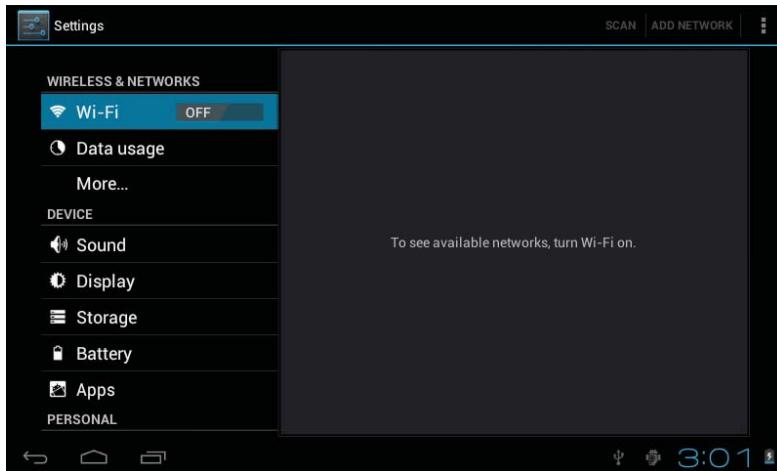


Figure 7

4.2 Data Usage

Lists the use of data and manages data limits (Figure 8).

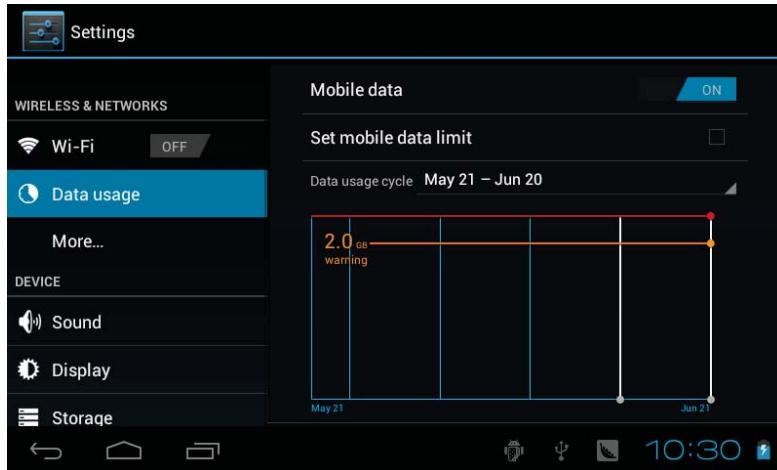


Figure 8

4.3 Sound Menu

Settings for Volume, Silent mode, Notification Ringtone, Audible selection and Screen lock sound (Figure 9).

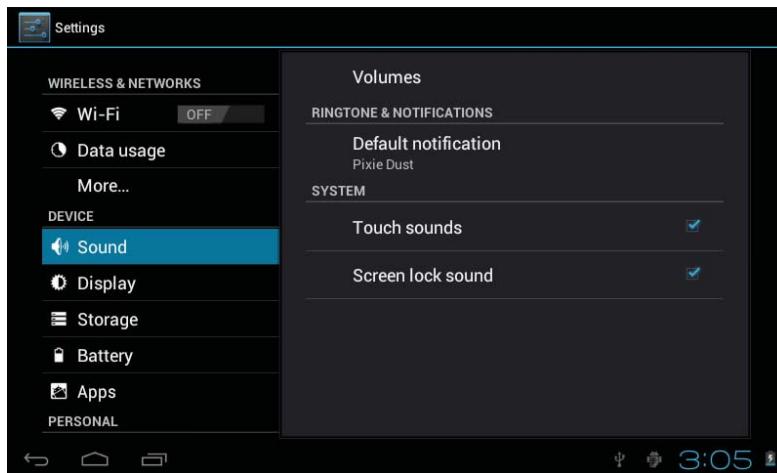


Figure 9

4.4 Display Menu

Settings for Brightness, Wallpaper, Auto-rotate screen, Sleep, Font size, Accelerometer coordinate system and Screen adaptation (Figure 10).

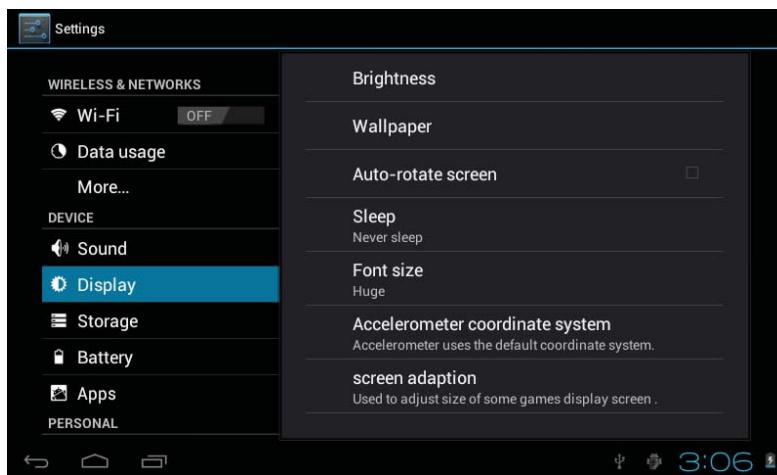


Figure 10

4.5 Storage

Shows the amount of used and free space in the MTP-710's internal storage (Figure 11), TF card (if inserted) and USB memory (if inserted).

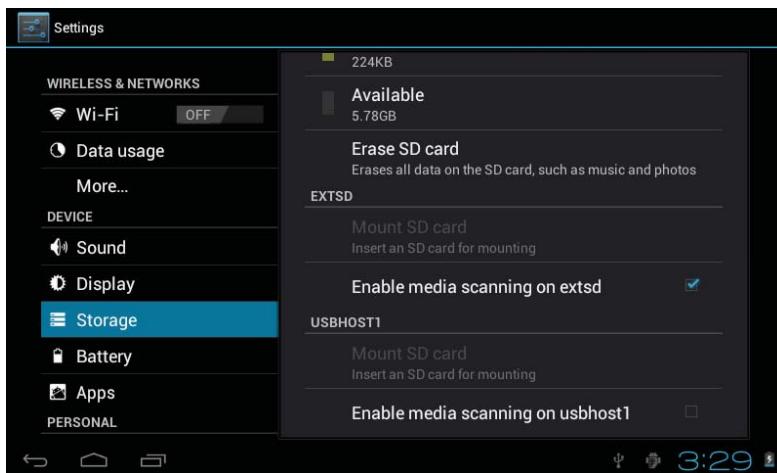


Figure 11

4.6 Battery

Shows battery use information and current battery charge.

4.7 Apps

Lists all apps installed in the MTP-710 and on the TF card.

4.8 Account & Sync

Manage Google accounts and synchronization options.

4.9 Location Services

Manage Google location service options.

4.10 Security

Manage various security options like passwords, lock screens and administrative functions.

4.11 Language & Input

Manage languages, spelling, dictionary and keyboards (Figure 12).

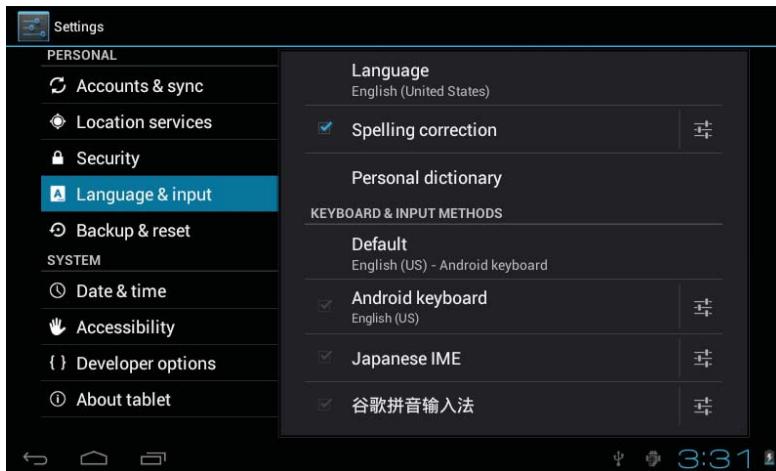


Figure 12

4.12 Backup & Reset

Back up data option and factory reset option (Figure 13).

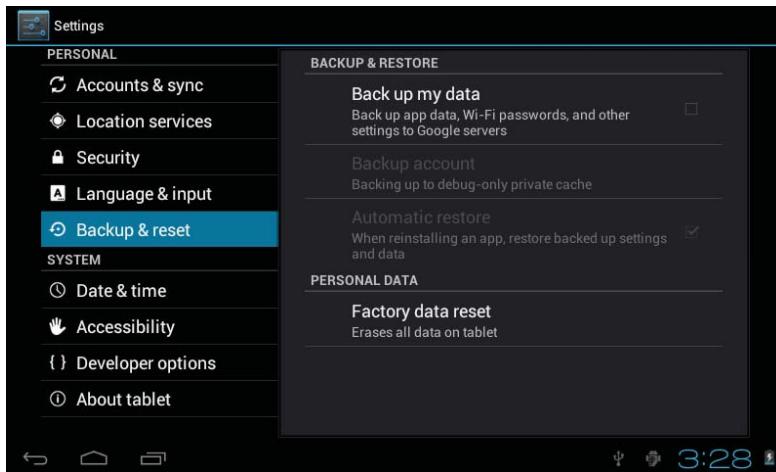


Figure 13

4.13 Date & Time

Adjust date & time options (Figure 14).

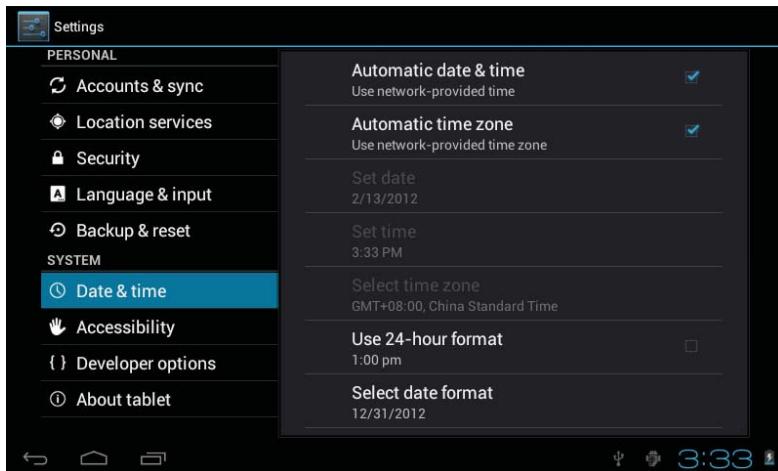


Figure 14

4.14 Accessibility

Adjust accessibility functions like text size, screen rotation and touch delays.

4.15 About Tablet

Look for system updates, model and software information (Figure 15).

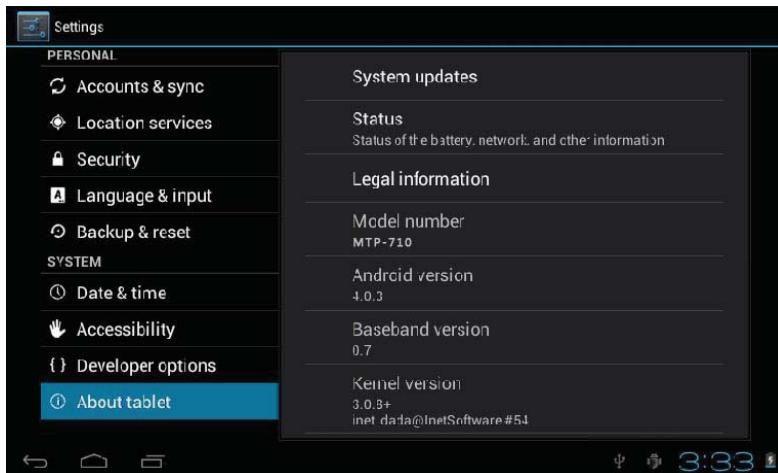


Figure 15

5. How to Install APK (app) Files

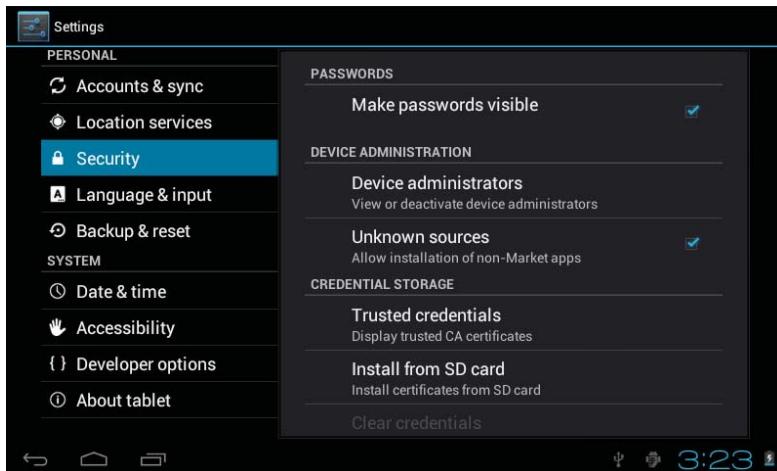


Figure 16

Under the Security menu: Click “Unknown Sources” (Figure 16).

Manage application: manager and uninstall Application.

【Remark】 When doing a firmware upgrade, please disable USB connect mode.

How to Uninstall Apps

1. Enter  “setting”>”Application”>”Manage application”. There will be a list of installed apps.
2. Click on the app you want to uninstall.
3. Click Uninstall to delete the app from the MTP-710 (Figure 17).



Figure 17

【Remark】 Touch “unmount SD card” option to safely remove TF card.

5.1 App installer

The MTP-710 can support Android App by third parties. Most apps can be installed in the from the internal memory or TF card.

Click the AppInstaller icon. There will be the options Install, Manage and Exit.

Install: Click install to enter Apk install interface

Select Internal Memory disk or SD Card disk (depending on where the APK file is stored).

Select the APK you would like to install and click it to install. Going back to main menu will display the installed app you just selected.

【Remark】 1. Some 3rd apps must be install properly onto the TF card.

2. Manage: Click Manage to enter third party interface.

3. Click install icon to enter Action interface.

6. FAQ

Device will not turn on.

1. Check the battery power.
2. Connect adaptor first, then check again.
3. If it cannot start up even after charging, please contact the supplier.

After startup the screen or the opening image has appeared, the MTP-710 shuts down.

1. Not enough battery power. Please charge.

There is no sound.

1. Check the volume setting with the volume buttons.
2. Check the media file to see if it is damaged. Try other media files to test.

Cannot copy file between the MTP-710 and PC.

1. Check the connection between computer and the MTP-710 to ensure it is connected properly.
2. Check the memory storage space to see if it is full.
3. Check the USB cable to ensure it works. Also try another USB cable.

Hardware Configuration

CPU processor speed: 1.2GHz

Memory: 8GB

RAM: 1GB

TF card support: up to 32GB

Display screen: Capacitive multi-touch

Resolution: 800 × 480

HDMI output resolution: up to 3840 × 2160

Battery and capacity: rechargeable Built-in type polymer battery

USB: USB 2.0

G-sensor 3D

Record: built-in microphone

Operation System: Android 4.0 (ICS)

Video: MKV(H.264HP). AVI. RM/BMVB. FLV. MPEG-1/2

Music: MP3. WMA. APE. FLAC. AAC. AC3. WAV

Pictures: JPEG. BMP. GIF. PNG. TIF

FCC Warning

- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
 - (1) this device may not cause harmful interference, and
 - (2) this device must accept any interference received, including interference that may cause undesired operation.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - -- Reorient or relocate the receiving antenna.
 - -- Increase the separation between the equipment and receiver.
 - -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - -- Consult the dealer or an experienced radio/TV technician for help.

Basic Warranty Statement

We warrant this product to the original purchaser ONLY, to be free from defects in materials and workmanship under normal use, for **ninety (90) DAYS** parts and labor and **One (1) YEAR** parts only from the date of original purchase Major League Global agrees at it's option under the warranty period, to replace product if it is determined to be defective at "No Charge." This limited warranty does not cover any loss or damages that occur as a result of:

- Cosmetic damage.
- Shipping or improper installation or maintenance.
- Misuse.
- Neglect.
- Any cause other than ordinary commercial or industrial application.
- Adjustment by non-authorized source or any of the products firmware or hardware that you or any third party have modified or altered
- Improper environment
- Excessive or inadequate heating or air conditioning or electrical power failures, surges, connection to improper voltage supply or settings or other irregularities.
- Accidents, acts of God.

In the United States and Canada contact your dealer or our Customer Service at : 1-888-231-7899 or E-Mail: support@mlglobal.net

***Please note that in order to have your merchandise repaired or replaced by warranty, you must contact our customer service representatives by phone or email, and get RMA number**

Please Note: Mediasonic SmartPad is a Android based system. Mediasonic will update the firmware from time to time. Please visit Mediasonic Forum (<http://forum.mediasonic.ca>) or (<http://www.mediasonic.ca>) for update. Please DO NOT install other version of Android OS software. Warranty will be void if the software is not provided by Mediasonic.

To obtain factory service, the original purchaser **MUST** present the following:

1. A sales receipt/proof of purchase indicating date of purchase.
2. Your Name, Place of Purchase, Address, Unit Model, and Description of Problem.
3. Send the unit pre-paid to the address below in the original packaging or reasonable substitute to prevent damage. **No return will be shipped back to a PO BOX.**
4. All of the accessories that came with the product package must be sent along with the main unit.
5. Please include your check or money order in the amount of \$15.00, payable to Major League Global Enterprises Ltd., to cover handling and return shipping charges. We will not be responsible for delays or unprocessed claims resulting from a purchaser's failure to provide any or all of the necessary information. Send all inquiries or returns to:

Major League Global Enterprises Ltd.
#200 - 2268 No. 5 Road.
Richmond, BC V6X 2T1 Canada