

Portable GPS Navigation

# Lookét N6



## User Guide Manual

**SOC** SysOnChip

(ver1.6)

**Thank you for choosing and purchasing the Looket N6 model as your GPS navigation and welcome to User Guide Manual.**

**The device is very easy to use and it takes you just few steps to understand how it works.**



**- CONTENTS -**

|                                                            |           |
|------------------------------------------------------------|-----------|
| <b>1. Looket N6 Models.....</b>                            | <b>9</b>  |
| <b>2. Before Starting Looket.....</b>                      | <b>9</b>  |
| <b>3. Des ignation .....</b>                               | <b>11</b> |
| <b>4. Main Menu.....</b>                                   | <b>14</b> |
| <b>    4.1. NAVIGATION Menu .....</b>                      | <b>14</b> |
| <b>    4.1.1. First Launch.....</b>                        | <b>14</b> |
| <b>    4.1.2. Des ignation of Navigation Screen .....</b>  | <b>16</b> |
| <b>    4.1.3. U seful Function on Main Menu .....</b>      | <b>17</b> |
| <b>    4.1.4. How to set Home Location .....</b>           | <b>25</b> |
| <b>    4.1.5. How to check or re-set GPS hardware.....</b> | <b>26</b> |
| <b>    4.1.6. How to set TMC .....</b>                     | <b>26</b> |
| <b>    4.1.7. Menu Bar on Navigation Screen .....</b>      | <b>27</b> |
| <b>    4.2. MULTIMEDIA Menu .....</b>                      | <b>30</b> |
| <b>    4.3. Bluetooth Menu .....</b>                       | <b>32</b> |
| <b>    4.3.1. Before you start.....</b>                    | <b>32</b> |
| <b>    4.3.2. Get ting Started.....</b>                    | <b>33</b> |
| <b>    4.3.3. Hands-free Calling .....</b>                 | <b>34</b> |
| <b>    4.4. Video- in Menu .....</b>                       | <b>36</b> |
| <b>    4.5. SETTING Menu .....</b>                         | <b>37</b> |
| <b>    4.5.1. Sys tem.....</b>                             | <b>37</b> |
| <b>    4.5.2. Volume &amp; Backlight .....</b>             | <b>37</b> |
| <b>    4.5.3. Bluetooth.....</b>                           | <b>38</b> |
| <b>5. Extra Function .....</b>                             | <b>41</b> |
| <b>5.1. U SB Connection .....</b>                          | <b>41</b> |
| <b>5.2. Not Installed Software .....</b>                   | <b>42</b> |
| <b>5.3. Sleep Function.....</b>                            | <b>42</b> |
| <b>5.4. Smart Power-off Function .....</b>                 | <b>43</b> |
| <b>5.5. Lower Battery Warning .....</b>                    | <b>44</b> |
| <b>6. Trouble Shooting .....</b>                           | <b>45</b> |
| <b>7. Warranty .....</b>                                   | <b>46</b> |
| <b>8. Package &amp; Accessory .....</b>                    | <b>48</b> |

## **- NOTICE & WARNING -**

**Reset** - To reset a Looket N6, please turn off and on a switch on the top of the device.

### **Installation**

- Before installing a suction cup of a mount, please clean and inside of windshield and remove any dust or grease.
- Avoid placing your device and accessories near or in an air bag deployment area. If not, may cause serious injury when air bags inflate rapidly.
- Do not place unsecured on a dashboard.
- Do not mount where a driver's field of vision is blocked.
- Device is designed and approved for vehicle windshield installation, hand-held only to meet FCC RF exposure compliance requirements, other operating configuration are not approved.

### **GPS (Global Positioning System)**

- If taking long time to get GPS signal and find current location, place it where it has a clear view of the sky. GPS signals can be obstructed by ceilings, trees, nearby tall buildings and the roof of the vehicle.
- Initial GPS fix may take up to 2~10 minutes depending on circumstances.

**Important:** *Some vehicles with a coated or heat reflective windshield may require an external GPS antenna (not included).*

- Fix initial GPS with a full charged battery. It will take longer than before with a low battery.
- The Looket device is supporting a SiRFInstantFixII technology, so it is able to receive signal more quickly from GPS satellites and indicate a current location on the map without waiting for long time.
- If there is no saved GPS satellites information or the saved information is not enough, the SiRFInstantFixII function would not be working normally. Also when receiving GPS signal at first, the location error can be happened depending on operating circumstances. Moreover, in case of not using the device for over 3 days, the SiRFInstantFixII function would not be operated.

#### *\* SiRFInstantFixII technology*

It can reduce warm starts, the typical PND start-up mode, from over half a minute to as little as five seconds, and in urban canyons the difference can be even more significant. It does this while demonstrating excellent positional accuracy, an important attribute for navigation devices. It accomplishes this using sophisticated, patent-pending algorithms that enable the PND to model the behavior of visible GPS satellites during the day and predict their position in the sky for up to three days in the future. It continuously refines its calculations based on the latest data it receives from the satellites being tracked every time the PND is used. It performs these calculations completely autonomously, without ever needing updates of any kind from a network.

## **Battery and Chargers**

- Use only batteries and chargers included in the package provided or officially approved by the manufacturer.
- Risk of explosion if batteries are replaced by an incorrect type.
- Unauthorized batteries or chargers may harm the device and any accidents or damages. This will not be responsible for the manufacturer.
- Dispose of used batteries according to the instructions.
- Never dispose of batteries or devices in a fire or heating devices such as ovens or stoves.
- Never crush or puncture the battery or device. Avoid exposing them to high external pressure, which can lead to an internal short circuit and overheating.
- To protect the device against sudden current, connect a car charger only after the car engine has been started.
- Connect the charger during operation. Low battery may deteriorate GPS performance.

## **Memory Card**

- Do not remove the card while the device is transferring or accessing information, as it could result in loss of data and/or damage to the card or device.
- Protect card from strong shocks, static electricity, and electrical noise from other devices.
- Frequent writing and erasing will shorten the lifespan of memory cards.
- Do not touch gold-colored contacts or terminals with fingers or metal objects. If dirty, wipe the card with a soft cloth.

## Safety Warnings



- Looket N6 has the microphone on the front side and the speaker on the back side. So if talking with the speaker to the ear, the other cannot hear your conversation because the microphone is on the opposite.
- Looket N6 is designed to make or answer a call via Bluetooth connection with the phone after mounted in a car.
- In case of using the unit as a portable device, we do not recommend to use the Bluetooth hands-free function.
- Do not put the speaker to the ear. It is a portable device with high volumes so it can damage your hearing.
- An ear set provided or approved by SysOnChip, Inc. is able to be connected to the ear set port for phone communication.
- Please maintain a minimum of 20 cm between the device and the body to avoid potential interference while being on the unit as a portable device and/or using it in a vehicle although the device has a voice communication function.
- Do not use and/or leave the device in high or low temperature and potentially explosive environments to prevent permanent damage. Specifically, do not leave the device in the vehicle on hot summer days or during cold winter nights.

- In case of not using the device for a long time, off the power switch to protect the unit.
- The suction of the mount may be lost if left overnight, due to condensation and low temperature.
- Wipe or dry the LCD screen of the device using a soft cloth.
- Do not use any liquid cleaners. It is a good idea to use a LCD protection film.
- Do not allow the device to get wet - liquids can cause serious damage. Do not handle the device with wet hands. Water damage to the device can void the warranty.
- Do not expose the device and the memory card to magnetic fields.
- Allow only qualified personnel to service the device. If not, the device can be damaged and will void the warranty.
- The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

# WARNING

## **U.S.FEDERAL COMMUNICATIONS COMMISSION RADIO FREQUENCY INTERFERENCE STATEMENT INFORMATION TO THE USER**

*NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules.*

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures;

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet of a circuit different from that to which the receiver is connected.
- Connect the dealer or an experienced radio/TV technician for assistance.

Changes or modification not expressly approved by the party responsible for Compliance could void the user's authority to operate the equipment.

Connecting of peripherals requires the use of grounded shielded signal cable.

## 1. Loo ket N6 Models

| Features          | Models | N600 N | 630 N | 670 |
|-------------------|--------|--------|-------|-----|
| Navigation        |        | O O O  |       |     |
| Multimedia Player |        | O O O  |       |     |
| Bluetooth Support | X      | O      | O     |     |
| Video-in X        |        | O      | O     |     |
| TMC X             |        | X      | O     |     |

※ Models and features are subject to be changed without notice.

## 2. Before Starting Looket


### ◆ How to insert micro SD card

- Turn off before putting a microSD card.
- Insert the microSD card like a following picture.




- Be careful of the direction when inserting the card.
- Do not remove the card while the device is powered on, doing so may result in the device malfunction. We recommend to turn off the device before removing the card.


## ◆ How to install Windshield Mount

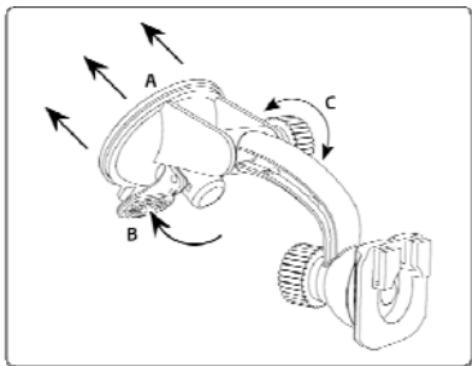

1. Push the suction base (A) against the windshield.
2. Flip the base lever down (B) to the locked position.
3. Adjust the angle of the pedestal arm by tightening the angle adjustment knob (C) at the base to the desired angle.

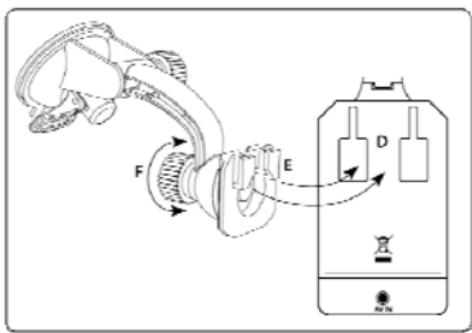

4. Connect the cradle (D) on the dual T-tabs (E) on the pedestal head.
5. Adjust the angle and rotation of the head by tightening the head adjustment knob (F).

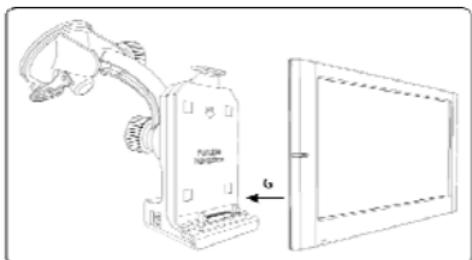

6. Mount the device on the connector (G) of the cradle.
7. Connect them with a snap.

### 3. Designation



#### ① Microphone

When you make and/or answer calls through Bluetooth hands-free function, you can speak into the microphone.

#### ② Power On/Off Button

When switched off and on, the hardware of the device is reset. At this time, saved settings etc. will be deleted. The switch can be used for the hardware reset of the device and to save the power for long time in case of being used as a portable memory device without external power.

#### ③ Menu Button

A menu bar is come out when the button is pushed at the contents supporting the menu in the application program. So the application programs showing on the menu bar are able to be conducted or set.

#### ④ External GPS Antenna Port

An external GPS antenna provided or approved by SysOnChip is able to be connected.

## ⑤ Charging Status Indicator

- Red: An internal battery is charging.
- Blue: An internal battery is fully charged.
- Off: A power connector is disconnected.

## ⑥ mini USB & Power Port

The device can be used as an external portable memory device by connecting with PC via the port. Also, it is able to be charged by an AC Adapter or Car Charger provided or appr oved by SysOnChip.

## ⑦ Mounting Connector Port

The device can be connected with a cradle, and power is supplied from the cradle. Also, the device can receive data from RS232 serial port and Video-in port (optional) on the cradle.

## ⑧ mini SD Card Slot

Be careful of the direction when it is inserted.

## ⑨ Ear-phone Jack & TMC Antenna Port

It is able to enjoy the sound from the device via earphones while the device is using as a portable player.

Also, an external TMC antenna provided or appr oved by SysOnChip is connected to the port to use the TMC (Traffic Messaging Channel) function. If you purchased or possessed the Looket N6 model supporting the TMC function, you will be able to access your own destination faster than before with up-to-date traffic information via the external TMC antenna.

*\* Only Looket N670 is supporting the TMC function. Therefore, you are not able to use the TMC service with other models.*

## ⑩ Speaker

Enjoy sound from the device through the internal speaker.

## ◆ Cradle



### ① Mounting Connector

N6 models are connected to the cradle and able to supply power as well as receive data from RS232 serial and AV-in (optional) through the connector.

### ② Power Port

A Car Charger or AC Home Charger provided or approved by SysOnChip is able to be connected to the port.

### ③ Video-in Port

If a rear camera or external device supporting Video output is connected to the N6 enabling this function through the port, you can enjoy the video on the screen.

\* The N630 & N670 are only able to support this function.

### ④ Mounting Hole


A mount provided or approved by SysOnChip is connected to the cradle.

### ⑤ RS232 Serial Port

An external device is able to be connected through this port.

## 4. Main Menu

After turning on the Looket N6 for the first time, Navigation, Multimedia, Bluetooth, Video-in can be selected (in case of the Looket N630 and N670 models).

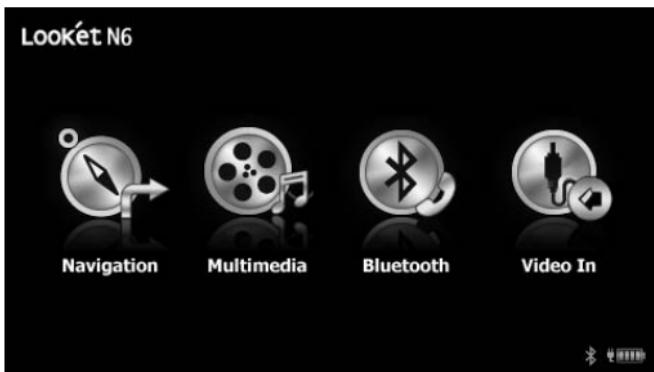

### 4.1. NAVIGATION Menu

This User Guide Manual which is a quite simple manual to follow will take you to understand how it works. For more detail information, please download the manual on our website.

Also, you can consult Quick Guides on the settings menu from the main menu of the navigation in the device.


To enter Quick Guides, please do as follow;

Touch screen → Tap Setting on menu → Quick Guides

#### 4.1.1. First Launch

When you conduct NAVIGATION first time, you should be asked to set language, voice, map, GPS signal etc. All information you set will be saved in a SD card automatically after launch.

1. Tap NA VIGATION on the Main menu. After reading the important message, click I AGREE.

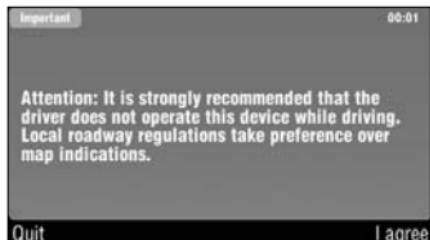


2. Select your language, voice, distance units, keyboard preference and map.
3. After choosing your map, the device is auto-searching for GPS signal, and then its COM port and baud rate which the device is supporting will be set automatically.
4. You would probably see your current valid GPS position on the map after successful launch.
5. If you tap anywhere on the map area, the Main menu of the NAVIGATION is shown. On the bottom of the screen you can see useful information about your current position - street name with numbers.


*\* The process of the first launch is subject to be passed according to countries and maps.*

After successful launch, you would probably see your current valid GPS position on the map. If you see only grey screen after launch, you should probably check your GPS status first and wait for valid GPS signal.

It takes some time to get valid signal from available satellites. First of all, tap on the grey screen to open the Main menu and find a GPS status button.

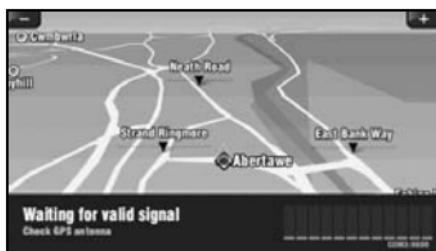


If a 'Closed GPS connection' message is displayed, check if the GPS module is turned on.

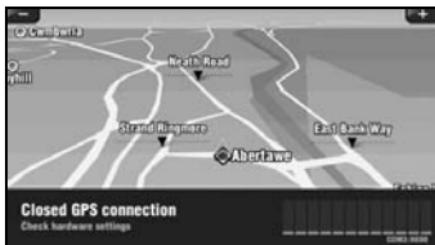

#### 4.1.2. Designation of Navigation Screen

Tap anywhere on the map area to open the Main menu.

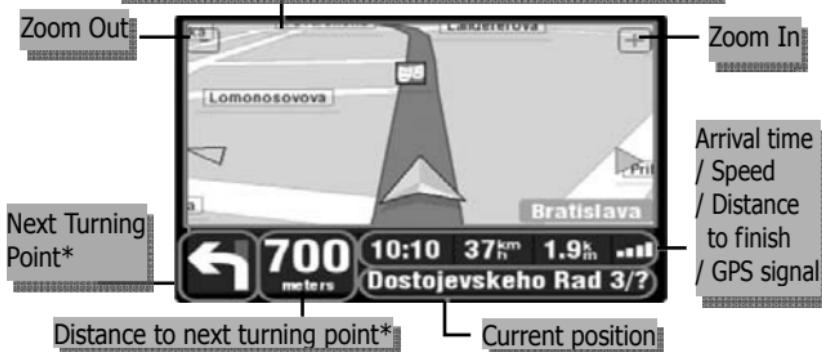

\* These information are shown only if you have already computed a route.

If the navigation pane displaying Arrival Time, Speed, Current Position, etc. is tapped, the following context menu is appeared.


|  |                                                                                                                                                                      |
|--|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | Show Important Places - this option will show your 2 POI categories chosen close to your position.                                                                   |
|  | Avoid Roadblock - set the circle on your map to avoid all street blocked within circle area.                                                                         |
|  | Memorize Position - this option lets you save and memorize your actual position. Position will be automatically saved and you can find it any time later in History. |


### 4.1.3. Useful Function on Main Menu



#### 4.1.3.1. Navigation to

If you click 'Navigation to...' on the Main menu, there are various ways to set your destination and plan your route easily. They will give you great opportunity to choose just the perfect option for you.

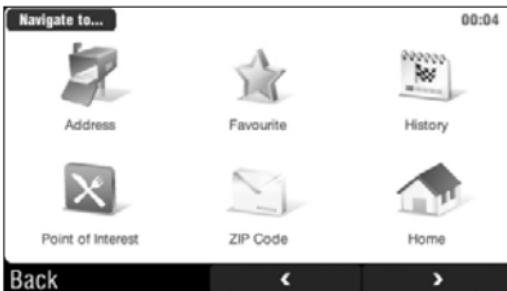

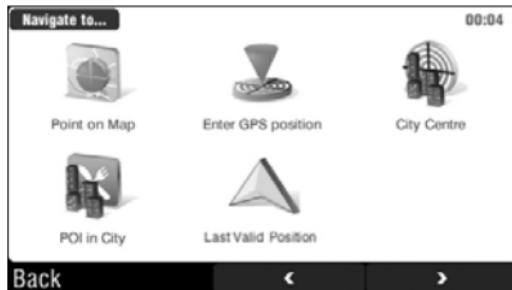

- a) **Address** - standard way of navigating. You can choose in steps Country, City, Street and number.
- b) **Favorite** - this function allows you to navigate to one of your favorite Points of Interest.
- c) **History** - list of your memorized positions. Option to navigate to memorized his tory en tries or d elete t hese en tries i s available.
- d) **Point of Interest** - navigate to Point of Interest: restaurant, hotel, school, wine-room, etc.
- e) **ZIP Code** - instead of name of the city, simply type in the zip code will find the exact address.
- f) **Home** - navigate to Home location saved by you who can set up the home location in: Settings → Set home location.
- g) **Point on Map** - choose your destination straight from the map.
- h) **Enter GPS position** - navigate to exact GPS position entered as longitude and latitude coordinate.
- i) **City Center** - navigate to straight the center of the chosen city. You will be asked to look up the city within the country.
- j) **POI in City** - instead of navigating to address, you can simply select POI of the chosen city and Sygic will find it for you.
- k) **Last Valid Position** - navigate to last GPS position received last time GPS signal was available.

In this guide, we'll show you how to use the Navigation to function using the Address option.

1. Touch Address on the Main menu.
2. Select Country, City, Street and Number step by step.  
Or find them using the keyboard on the screen.
3. Select your departure screen appears.  
You can choose from three options - wait for valid signal, Last valid position or Select from map. (Wait for valid signal and Last valid position work properly when the GPS is turned on.)
4. As soon as the route is calculated, basic information on your route is shown. Ask for more into deep route description by pressing **Details**.
5. Select active item you want to avoid on route. If you click on item, your route will be recalculated without these items.


## \* Management of Favorites

There are two ways how to add the address and/or destination to the Favorites.

- 1) Browse map on Main Menu
  - ① Select the point (where you'd like to add on the Favorites) on the map. Or tap Options - Find - Address and then you can enter the exact address (or other options available).
  - ② Click the Context menu button in the middle of the bottom black title bar where you have several option (navigate there, travel via, etc.).
  - ③ Select Add as POI , then tap Favorites.
- 2) Manage POI on Main Menu
  - ① Click Add POI.
  - ② Choose Address (or other) to insert the place to Favorites.
  - ③ Tap Favorites on 'Select or create a category' menu.

#### 4.1.3.2. Browse map

It is available to browse the entire map and search for your destination or POI. By simple dragging, you will be able to scroll through the map and explore new areas.

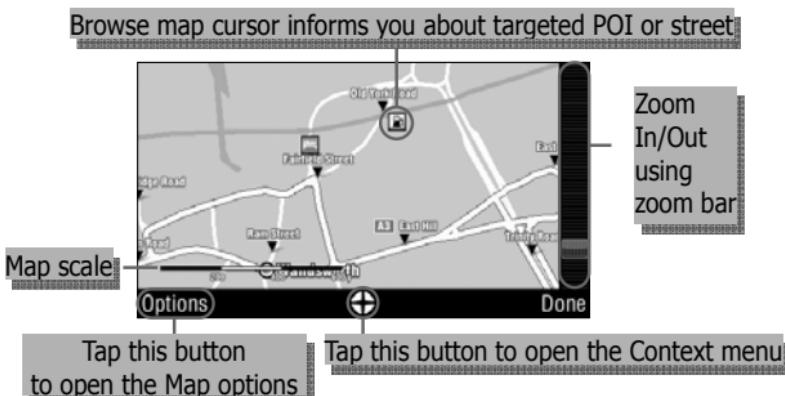

#### < Options >

|  |                                                                                                                                                                                                                                                         |
|--|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | a) <b>Find...</b> - allows you to quickly look up the desired destination. You can choose from the following options: Address, Favorite, History, Point of Interest, Zip Code, Home, Enter GPS position, City Center, POI in City, Last Valid Position. |
|  | b) <b>Show current position</b> - will show your current position on the map. It may be useful if you get lost on the map while browsing it.                                                                                                            |
|  | c) <b>Show entire route</b> - will display the entire route regardless of its size or location on the map. This function is available only if there is already a route calculated.                                                                      |
|  | d) <b>Show city</b> - a selected city will be displayed on the map.                                                                                                                                                                                     |
|  | e) <b>Show/Hide POIs</b> - you can select the POIs that you want/don't want to see on the map.                                                                                                                                                          |

## &lt; Context Menu &gt;

|                                                                                   |                                                                                                                                                             |
|-----------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | a) <b>Navigate there</b> - Offers 3 possibilities; wait for valid signal, last valid position, select from map.                                             |
|  | b) <b>Travel via</b> - you can choose the destination through which you want to travel. This function is available only if you have already computed route. |
|  | c) <b>Continue</b> - information about the route, possibility to modify the route.                                                                          |
|  | d) <b>Avoid</b> - allows you to define the area on the map that you want to avoid.                                                                          |
|  | e) <b>Add as POI</b> - allows you to add the selected position on the map as POI.                                                                           |
|  | f) <b>Find nearby POI</b> - this function will display the selected POIs that are located nearby your position.                                             |

**4.1.3.3. Alternative route**

It is easy to handle and offers several options how to change your complete route plan within a few seconds.

|                                                                                     |                                                                                                                                                                                |
|-------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|    | a) <b>Compute alternative</b> - will recompute the route using routes different from those used for the original compute.                                                      |
|   | b) <b>Avoid next...</b> - set the circle on your map to avoid all street blocked within circle area.                                                                           |
|  | c) <b>Travel via...</b> - allows you to add the waypoints into the computed route.                                                                                             |
|  | d) <b>Reset to original</b> - you will return to the original route. Alternative routes will be cancelled.                                                                     |
|  | e) <b>Avoid traffic delays</b> - allows you to avoid traffic jam or other incidents that may occurs, you can avoid part of the originally computed route (from 500 m to 20km). |

#### 4.1.3.4. Settings

When you tap Settings from the Main menu, you can modify Sygic DRIVE and user's preferences.

The Settings menu includes;

- Set to 2D (flat) view / Set 3D view
- Set night / daylight / automatic colors
- Disable / Enable sounds
- Volume settings
- GPS logs - you can record your GPS position and play back it.
- Advanced settings - U-Turns, Auto zoom, Railway crossing warning, Lane information, Backlight settings, Standby mode, Annotations, Information displayed in the navigation window, Speed limit warning.
- Planning preferences - select the way of route compute (the fastest route or the route without motorways).
- Toll charge settings
- Set vehicle type
- GPS hardware
- Signpost settings - see all directions, preferred direction or disable signpost information.
- Rotate display
- Left / Right handed
- Keyboard settings
- Regional settings - distance unit setting, preferred time format and geographical coordinates.
- Set language
- Set voice
- Switch map - select your map folder.
- Set home location
- Backlight settings
- Quick guides

#### 4.1.3.5. Traffic

The only Looket N670 is supporting this function. These options are available; Switch Off/On Traffic Warnings, Optimize Route, Traffic Options, Show All Incidents on Map, Update Now Current Traffic.

#### 4.1.3.6. Route

You have to first plan your route to get access to route options. If you haven't planned your route, the route button is not available. Here you can find all the further information about your route, you can view the whole route in image slides or even watch the route preview by using the route demonstration option.

|                                                                                     |                                                                                                                                                         |
|-------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------|
|    | a) <b>Show route instructions</b> - show you the most important turning points (whether to turn left or right) on your route and distance between them. |
|    | b) <b>Show route as image</b> - will display the route as images.                                                                                       |
|    | c) <b>Show route summary</b> - information about the route, possibility to modify the route.                                                            |
|    | d) <b>Show route demo</b> - enables the demonstration of the computed route.                                                                            |
|   | e) <b>Show on map</b> - the computed route will be displayed on the map.                                                                                |
|  | f) <b>Cancel route</b> - the route will be cancelled.                                                                                                   |

#### 4.1.3.7. Itinerary

It allows you to plan your business journey, trip and many more directly from the comfort of your living room. Your planned route can be saved, renamed, deleted.


#### 4.1.3.8. Manage POI (Point of Interest)

Various POIs are shown on the map such as air ports, banks, bus stations, hotels, parking garages, shopping centers, etc. You can easily manage them and add your own POIs or there is also a function which warns you when you'll be crossing the nearby POI.

|                                                                                   |                                                                                                                  |
|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------|
|  | a) <b>Add POI</b> - you can add POI and assign the icon.                                                         |
|  | b) <b>Edit POI name</b> - you can rename the POI that you created.                                               |
|  | c) <b>Delete POI</b> - you can delete the POI that you created.                                                  |
|  | d) <b>Delete POI category</b> - you can delete the whole category that you created.                              |
|  | e) <b>Show / Hide POIs</b> - select the POI which should be displayed on the map.                                |
|  | f) <b>Warn when near POI</b> - select the POI, enter the distance from your position, choose the warning signal. |

#### 4.1.3.9. GPS status

Check 'valid satellites' or 'your valid position'.

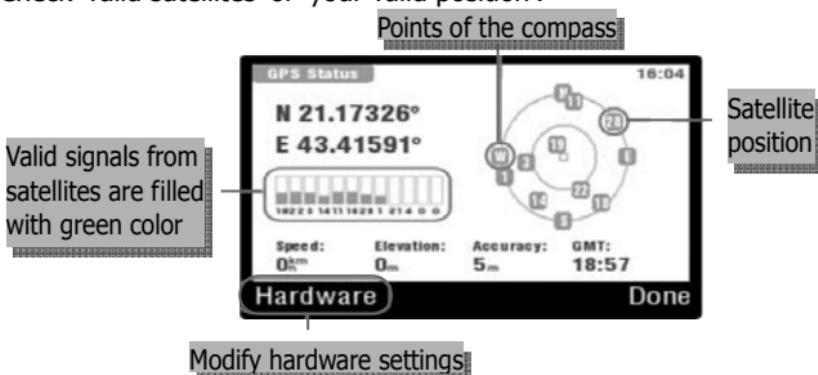

#### 4.1.3.10. Memorize position

Save your current position into History.

#### 4.1.3.11. Extras

Some additional applications (World Clock, Calculator, Unit Convertor, Country Information) that might be useful on the road.

|                                                                                   |                                                                                                                                                                             |
|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | a) <b>World Clock</b> - set up the current time in three world cities. Choose from more than 30 world cities.                                                               |
|  | b) <b>Calculator</b> - simply tap on the calculator available directly.                                                                                                     |
|  | c) <b>Unit Converter</b> - Currency, Length, Area, Volume, Mass, Pressure, Power, Energy, Temperature                                                                       |
|  | e) <b>Country Information</b> - speed limit, country code, currency, etc. When crossing the country border a window with basic country informational automatically pops up. |

#### 4.1.3.12. Exit

Tap the button if you want to close down Navigation.


### 4.1.4. How to set Home Location

1. Tap 'Set home location' on Setting menu.
2. After your home location has been saved, just click Home on Navigation to menu to navigate home in the future.

※ If you don't have a home location saved, the device will prompt you to set your home location when you click Home on Navigation to menu.

#### 4.1.5. How to check or re-set GPS hardware

1. Tap Settings on Main menu and then click GPS hardware.
2. Check Turn GPS module button for activation GPS module.  
(The icon should be same with the following picture.)

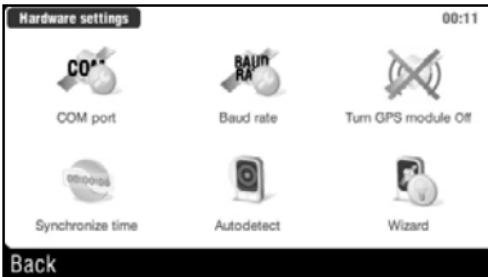

3. Tap 'Autodetect' to search COM port and baud rate automatically and then wait to fix it. Or set following COM port and default baud rate by yourself after tap COM port and Baud rate.

COM port: COM3 / Baud rate: 9600


#### 4.1.6. How to set TMC

The Looket N670 connected with an external TMC antenna is only available for TMC service.

1. Click Settings on Main menu and then tap GPS hardware.
2. Select Wizard and autodetect GPS receiver port.
3. Tap yes when you are asked, "Do you have TMC receiver?".
4. Click GNS and set following COM port and baud rate.  
COM port: COM2 / Baud rate: 38400

#### 4.1.7. Menu Bar on Navigation Screen


If a 'M' (menu) button on the right side of the device is pressed during running the navigation, the Menu bar is come up on the right side of the screen. There are indicators of the Bluetooth, battery status and 4 icons in case of the Looket N630 & N670.

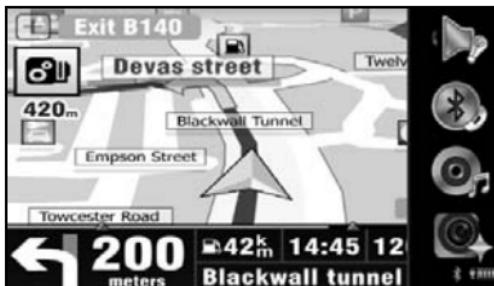

- Volume & Backlight
- Bluetooth Hands-free
- Music Player
- Video-in


##### 4.1.7.1. Volume & Backlight

It is able to control the volume and backlight level by moving the slide bar.

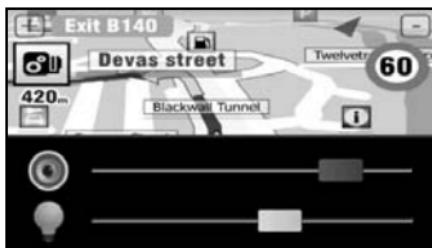

##### 4.1.7.2. Bluetooth Hands-free Button


If it is clicked, the Bluetooth hands-free program is conducted. When it is available, the background color of the icon is blue. And if the background color is white, it means the Bluetooth is disabled to use.

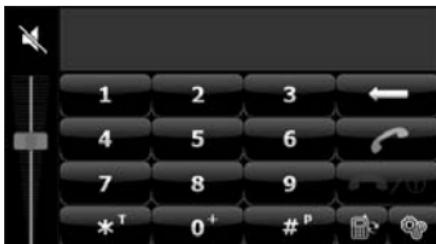

#### 4.1.7.3. BGM (Back Ground Music) Player

The user is able to listen to music with the navigation.

The BGM program plays the music in the 'Music' folder of the inserted microSD card or internal memory in order of precedence. Music files which users would like to play in the BGM program can be added to the Music folder of the microSD card or in internal memory.

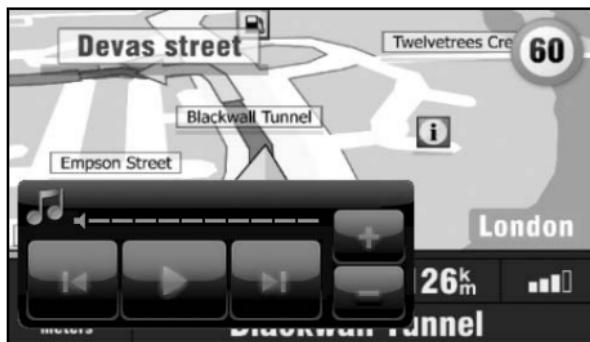

| Icon | Description         |
|------|---------------------|
|      | Play previous music |
|      | Play or Stop music  |
|      | Play next music     |
|      | Volume up           |
|      | Volume down         |

#### 4.1.7.4. Video-in Button

When this button is selected, the video signal from the Video-in port is shown on the screen. If the vehicle has the rear camera, the image from the rear camera is displayed on the screen.

The program is ended when touched the screen, and then the Navigation screen comes up.

In case that the external Video is connected instead of the rear camera, the video is supported but the sound is not provided during the operation of the Navigation.

On the System menu of the Setting menu of the Main menu, it is able to set the video from the rear camera is shown automatically when the video signal is occurred. As soon as the signal is disconnected and the camera view is closed, the Navigation screen is displayed. (The function will be useful in case of connecting the rear camera signal with the reverse gear.)

If the signal is weak or it is not existed, the message, 'No Signal', is shown on the screen.




[ View from Rear Camera ]

## 4.2. MULTIMEDIA Menu

The Looket N6 models have a Multimedia Player. Various video, audio, image files saved in a SD card will be able to be displayed.


- ※ Best resolution: 480 x 272 pixels
- ※ Supporting codec: mpeg, mpg, asf, wmv, avi, jpg

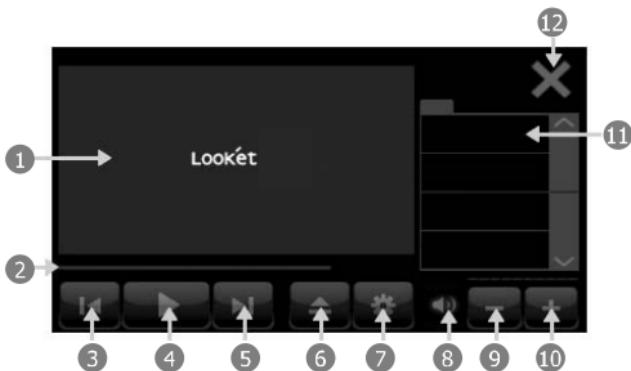

- ① Screen
  - If the screen part is clicked, it is changed to the full screen.
- ② Status Bar
  - The playing part is able to be selected by moving the bar.
- ③ Previous Button: Play the prior file.
- ④ Play / Pause Button
  - Play or stop playing and ready to continue the current file.
- ⑤ Next Button: Play the following file.
- ⑥ Edit: Open the window to edit the file list.
- ⑦ Set-up Button: Show the set-up screen.
- ⑧ Mute On/Off: Sound is on or off.
- ⑨ Volume Down Button
- ⑩ Volume Up Button
- ⑪ Play List
- ⑫ Exit: Close the program.

## ◆ Edit Window of File List

This is the edit window to make the file list which can be played such as music, video, images.

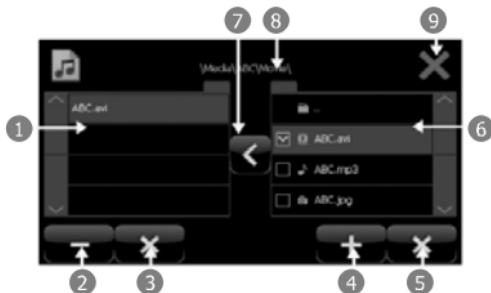

- ① Showing the edited file list
- ② Delete the selected file on the file list
- ③ Delete all files on the file list
- ④ Select all file in the chosen folder of SD card
- ⑤ Cancel the selection of the file in the chosen folder of SD card
- ⑥ Display the file able to be playing in SD card
- ⑦ Add the checked file to the file list
- ⑧ Show the path of the selected folder
- ⑨ Close the file list editing window

## ◆ Setting Window



- ① Screen size setting
  - Fit Best
  - Fill Screen
  - Stretch to Screen
- ② Play mode
  - Repeat All (  )
  - Random (  )
- ③ Exit

## 4.3. Bluetooth Menu

The Looket N6 with Bluetooth function can be connected with other Bluetooth devices to experience wireless conveniences brought by Bluetooth technology.

The Hands-free Profile (HFP), Serial Port Profile (SPP), Audio Advanced Distribute Profile (A2DP) and Audio Video Remote Control Profile (AVRCP) are strongly supported.


### 4.3.1. Before you start

- ◆ Make sure your phone, stereo head sets, or other Bluetooth devices you want to connect with is powered on.
- ◆ The approximate communication range for Bluetooth® wireless technology is up to 30 feet (10 meters).
- ◆ The Looket N6 is based on the Bluetooth® specification, but it is not 100% guaranteed to work with all phones in the markets, so some function buttons will be disable for use if your phone fails to be supported.

- 1) A message box "The Bluetooth device is not licensed. This application will run on evaluation mode with limited functionality" will pop up to inform user that it is evaluation copy and is not authorized.
- 2) The duration for an ongoing call is only three minutes. The call will be automatically hung up when the ongoing call is over three minutes.
- 3) The file can be transferred is 5M at max.
- 4) The A2DP connection only can be kept five minutes at max.

### 4.3.2. Getting Started

Please make the Bluetooth function enabled on the Setting menu, and also set the connection to the mobile phone with a built-in Bluetooth function to use the Bluetooth hands-free.

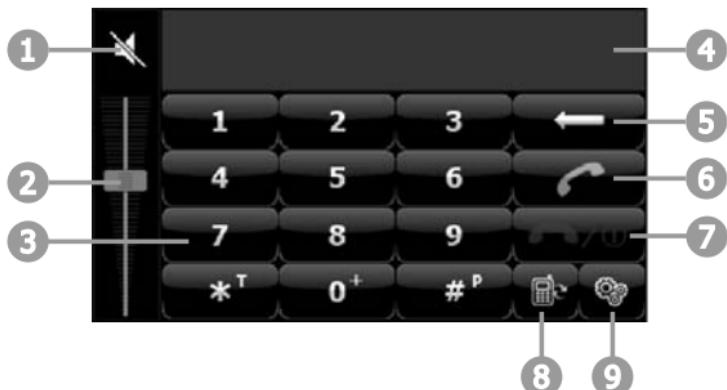

| No | Name                                                                                                                                                                                                                         |
|----|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1  | Mute On/Off                                                                                                                                                                                                                  |
| 2  | Volume Controller                                                                                                                                                                                                            |
| 3  | Dial Pad <ul style="list-style-type: none"> <li>- Tap &amp; hold '*' to insert the T character.</li> <li>- Tap &amp; hold '0' to insert the + character.</li> <li>- Tap &amp; hold '#' to insert the P character.</li> </ul> |
| 4  | Status Indicator                                                                                                                                                                                                             |
| 5  | Delete                                                                                                                                                                                                                       |
| 6  | Call                                                                                                                                                                                                                         |
| 7  | End / Exit                                                                                                                                                                                                                   |
| 8  | Convert to a call to the mobile phone or the hands-free                                                                                                                                                                      |
| 9  | Setup                                                                                                                                                                                                                        |

| Status Indicator | Contents                             |
|------------------|--------------------------------------|
| Bluetooth Off    | Bluetooth is disable.                |
| No Connection    | Bluetooth is not connected.          |
| Wait...          | Wait for the Bluetooth connection.   |
| Last Call        | Make a call to the last call number. |

### ◆ **Bluetooth connection**

Bluetooth connection has to exist between device and mobile phone or other Bluetooth-enabled devices such as laptop, desktop before getting start to use any profiles and features.

When the icon of the Setup in the Bluetooth window is clicked, the Bluetooth Setting is appeared. Please refer to Chapter 4 5.2. Bluetooth to understand how to make the Bluetooth connection.

### **4.3.3. Hands-free Calling**


#### **4.3.3.1. Making a Call**

Type the phone number and then press the Call button.

※ Tapping '\*' over 1 second to input '+'.

### 4.3.3.2. Receiving Calls

When a call comes in after your mobile phone was connected with the Looket N6 via Bluetooth, the following window comes up and a bell rings. To answer the call, the Call button should be clicked. But, if you are under the situation not to be able to answer it, the End/Exit button is able to be selected, and then the window is closed after the call line is off.

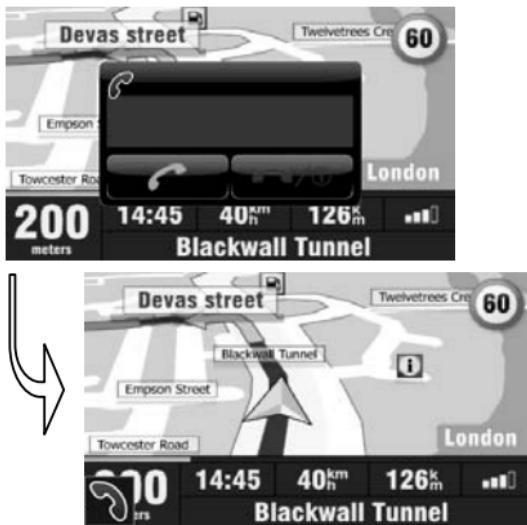

The call is connected and the screen is changed to the following screen.

The telephone icon is displayed on the left-bottom side of the screen while talking over the telephone.

The icon is disappeared automatically as soon as finished the call.

If the icon is clicked to end the call or adjust the volume, the Bluetooth program comes up.

- ◆ While the call is received by the Bluetooth hands-free, all sound from other application programs such as Navigation, Multimedia Player, Video-in etc. is muted for the better conversation on the phone.

## 4.4. Video-in Menu

The Video-in menu is to play video from an external Video input. If a device supporting Video output such as iPOD Video etc. is connected to the cradle of the Looket N6 (excepting the N600), the user can enjoy the video on the screen but without sound.



If a user's vehicle has the rear camera which is connected to a Video-in port on the cradle of the Looket N6, the image from the rear camera is displayed on the screen.

If there is no input signal from outside when Video-in is executed, the screen with 'No Signal' message is displayed. In this case, please check the Video input cable or the device handling Video output.

## 4.5. SETTING Menu



### 4.5.1. System



- 1) OS version Information of Looket N6
- 2) Intrinsic ID Information of SD card
- 3) Language Selection
- 4) Re-Calibration
- 5) Auto Rear Camera Option On/Off

In case of the vehicle with the rear camera, the screen automatically displays the camera image when the signal like the change to the reverse gear is inputted to Video-in.

### 4.5.2. Volume & Backlight

It is able to control the volume and backlight level by moving the slide bar.


### 4.5.3. Bluetooth

It is able to enable or disable to use the Bluetooth function and set the connection to the mobile phone with a built-in Bluetooth function and other wireless devices for exchanging data through the Bluetooth wireless feature.



| Icon | Description                                                 |
|------|-------------------------------------------------------------|
|      | Bluetooth function On (blue) / Off (grey).                  |
|      | Search Bluetooth devices.                                   |
|      | Reset the connection history.                               |
|      | Connected devices. (Mobile Phone / Headset / Serial Device) |
|      | Information of connected device.                            |
|      | Connect / Disconnect the paired device.                     |
|      | Delete the connected device.                                |
|      | Exit button.                                                |

## ◆ How to search & connect Bluetooth devices

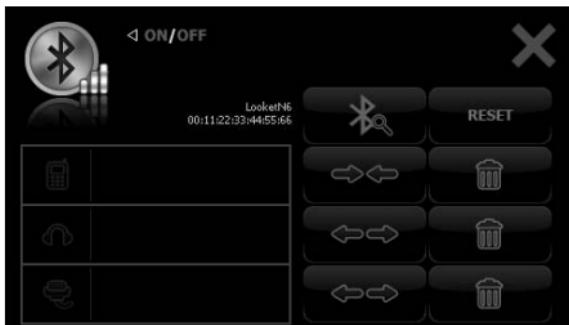

1) Click  to enable a Bluetooth function.

2) Click  to search pages.



3) Click  to search Bluetooth devices.

4) Listed the devices that can be connected.

5) Select one icon among Mobile Phone, Headset, Serial icons to make the Bluetooth connection (pairing with the selected device).

- 6) Input '0000' (4 zero) at the paired device if the pin code is needed during the process.
- 7) If it is connected, the information of the paired device is listed on the Bluetooth setting screen.

- 8) Click to  connect the service.
- 9) The icon  is changed if its service is enabled to use.

- ◆ Please refer to the manual of the mobile phone about how to connect the phone with the Bluetooth function for more detail information.
- ◆ Generally, the mobile phone supporting the Bluetooth Hands-free profile can be connected to the Looket N6. But, some particular mobile phones are not able to be compatible with the device.

## 5. Extra Function

### 5.1. USB Connection



When a mini -USB cable is connected to a device, a left screen is appeared. During the connection, the device is recognized as a portable storage device in a PC, but other functions are not working.

As soon as being disconnected, the device is re-booting and reset to the Main screen.

In PC, the device is shown as following portable storage devices;

- Portable disk 1: the internal flash memory of the device
- Portable disk 2: saved logging files in the tracking device
- Portable disk 3: microSD card if it is inserted

**\* Notice:**

- *To protect data, do not execute Navigation or Multimedia Player before connecting the USB cable.*
- *Each disk name can be changed depending on the system.*
- *When disconnecting the USB connection, recommend turning off the device and remove the cable to protect the PC.*
- *Disconnect the device from the cradle before connecting the USB cable between the device and PC.*

## 5.2. Not Installed Software

This message is displayed when the navigation software is not installed in the internal flash memory or the microSD card.

**\* Notice:**

*If the navigation software is installed in the microSD card, please try to extract and re-insert it, then it will be able to be working again.*

Please contact authorized distributors in your country if the message has never disappeared.



## 5.3. Sleep Function



To operate power efficiently, the device is converted to the sleep (suspended or power saving) mode in case of following situation.

- When the Menu button is pushing over 2 seconds...
- When disconnected the external power...
- When the Smart Power-off mode is conducted...
- Efficient power management and such.

The device is waked up from the sleep mode;

- As soon as the Menu button is clicked.
- When the external power is connected.

#### 5.4. Smart Power-off Function



A following screen is appeared when power is not supplying.

If there is not any input on the screen for 5 seconds, the device goes to the sleep mode.

In case of tapping a Cancel button, the Smart Power-off function is closed.

## 5.5. Lower Battery Warning

When the battery level is low, a following warning message is shown.



As soon as it is appeared, please connect the charger such as the car cigarette charger or the AC home charger to charge the device. Then, the device will be able to be working again.

In case of not supplying power, the device goes to the sleep mode a few second later from the warning message.

To run the device normally, we recommend to use the AC home charger at all times.

## 6. Trouble Shooting

| Trouble                                          | Solution                                                                                                                                                                                                                                                                                                                                               |
|--------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The device is frozen or locked up.               | Please re set the device by the Power On/ Off switch on the bottom side of the device.                                                                                                                                                                                                                                                                 |
| Power does not turn on when using battery power. | <p>The remaining battery power may be too low to run the device.</p> <p>Connect an AC adapter (or a car charger) to the device and external AC power.</p>                                                                                                                                                                                              |
|                                                  | Check the Power On/Off switch on the bottom side.                                                                                                                                                                                                                                                                                                      |
| Something wrong in the LCD screen.               | If it's dark, this can be from excessive temperature. (Oper. temp.: -10 ~ +60 °C )                                                                                                                                                                                                                                                                     |
|                                                  | If it's hard to read, please check the back light level.                                                                                                                                                                                                                                                                                               |
|                                                  | If the screen freezes, please reset the device.                                                                                                                                                                                                                                                                                                        |
| GPS signal is not good.                          | Make sure that the GPS receiver is adjusted to the horizontal position and it has a clear view of the sky.                                                                                                                                                                                                                                             |
|                                                  | <p>GPS reception can be affected by below circumstance.</p> <ul style="list-style-type: none"> <li>- Bad weather</li> <li>- Dense overhead obstacles (e.g. trees and tall buildings)</li> <li>- Other wireless device in the car</li> <li>- Metallic windshield coating</li> </ul> <p>Looket optional external antenna will boost the performance.</p> |

If you have some problems using Looket N6, which you are not able to solve them by yourself, we are always welcome to contact us.

## **7. Warranty**

### **\* Limited Warranty**

SysOnChip, Inc. warrants Looket N6 against defects in material and workmanship, under normal use and service, for one (1) year from the date of purchase only with the proof of purchase. And the warranty period might vary depending on the region, dealer, retailer or sales contract.

The warranty period of a rechargeable battery and consumables are six (6) months from the date of purchase.

Incompatibility is not a defect covered by SysOnChip's warranty. If the product is found to be defective in material or workmanship during this period, SysOnChip or one of its authorized distributors will, at its option, repair or replace the defective product without charge when furnished with proof of retail purchase. If you ship the product to SysOnChip or one of authorized distributors, you must use the original container or equivalent and the shipping charges is your responsibility. SysOnChip or distributors will bear shipping charges for returning the product.

This warranty does not apply to any product which has been subjected to alteration, unauthorized assembly and detached warranty or serial number label at any case.

SysOnChip is not responsible for incidental or consequential damages resulting from breach of any express or implied warranty, including damage to property and, to the extent permitted by law, damages for personal injury. This warranty is in lieu of all other warranties including implied warranties of merchantability and fitness for a particular purpose.

## **\* LCD Warranty**

Looket N6 is a portable dev ice, therefore the free warranty cannot apply to LCD when it damaged from misusing or abuse.

## **\* Power supplies and cables**

Any damages from using power supplies or cables which are not provided or officially appr oved by t he manuf acturer c annot be included in the warranty and are not responsible for SysOnChip.

## **\* Looket Service Center**

If t he devi ce is found to be def ective, please r ead t he warranty term firstly and contact retailers or us to be repaired or replaced.

E-mail, call or fax to the following service center for help with your Looket device.

- E-mail: sales@sysonchip.co.kr
- Phone: +82-42-864-4665
- Fax: +82-42-864-4664
- Service hours: 9:00 to 18:00 (GMT+9:00)  
Monday to Friday
- Location:  
4<sup>th</sup> floor, Singwan Building, KT Bukdaejeon Br.,  
138 Gajeong-dong, Yuseng-gu, Daejeon,  
305-350, The Rep. of Korea (South Korea)

## 8. Package & Accessory

### ◆ Basic Unit Package



Looket N6



 
Cradle



Car Mount



Car Charger



USB Cable




User Guide Manual

### ◆ Optional Accessory



Video-in Cable

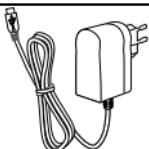

AC Adapter



External GPS Antenna

\* Package contents might vary depending on countries without notice.



THIS DEVICE COMPLIES WITH  
PART 15 OF THE FCC RULES

\* Specification and features are subjected to be changed without notice.

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum 20 cm between the radiator and your body. This transmitter must not be collocated or operating in conjunction with any other antenna or transmitter unless authorized to do so by the FCC.



4F., Singwan Bldg., KT Bukdaejeon Brach Office,  
138 Gajeong-dong, Yuseong-gu,  
Daejeon, 305-350, The Rep. of Korea  
Tel: +82.42.864.4665  
Fax: +82.42.864.4664  
E-mail: sales@sysonchip.co.kr  
Web-site: www.looket.com  
www.sysonchip.co.kr/eng

Copyright © SysOnChip, Inc. 2010

All rights reserved. Reproduction, transfer, distribution or storage of parts or all of the contents in this document in any form without the prior written permission of SysOnChip, Inc. is prohibited. Other product and company names mentioned herein may be trademarks or trade names of their respective owners.