

MCT247

2.4GHz MODULAR TRANSCEIVER

OEM INSTALLATION AND OPERATION MANUAL

NOTE: THIS MODULE IS LIMITED TO OEM INSTALLATION ONLY

July 27, 2020
HK/TH

MCT247 TRANSCEIVER

INDEX

DESCRIPTION.....	2
OPERATION	3
INSTALLATION	4
BEFORE APPLYING POWER!.....	6
TROUBLESHOOTING	6
TRANSCEIVER PICTORIAL	6
SPECIFICATIONS.....	8
INSTRUCTION TO THE USER.....	9
INDUSTRY CANADA STATEMENTS.....	10

MCT247 TRANSCEIVER

DESCRIPTION

The MCT247 is a frequency hopping spread spectrum transceiver module designed to be compatible with US (FCC CFR 47 Part 15 C (15.247)), Canadian (RSS-210), EU(RSS-247 Issue 2/RSS-GEN Issue 5/ANSI C63.10:2013, IEC 62368-1:2014 (Second Edition)) and Australian() regulations for license free use in the 2.4 GHz ISM band from 2.407GHz to 2.470GHz. The MCT247 is designed for mobile and portable applications in accordance to Part 2.1091(b).

The MCT247 complies with ISED Limit per RSS-102 Issue 5 for the uncontrolled RF Exposure of portable device.

The MCT247 transceiver is only integrated into Kar-Tech remote

control products by Kar-Tech, at Kar-Tech. There are no user serviceable parts on the MCT247 transceiver. The MCT247 is not for sale by itself.

The MCT247 is not designed for multiple antenna applications and should not be used to transmit simultaneously with any other transmitter.

The MCT247 is only certified to use the integrated wire antenna.

If the OEM or other user requires further compliance beyond those listed above, the OEM or User is responsible for attaining such additional certifications.

OPERATION

The MCT247 is a radio transceiver module for the 2.4 GHz ISM bands. The transceiver microcontroller includes a CPU, GPIO, a fully integrated frequency synthesizer, a power amplifier, a modulator and a receiver unit. The MCT247 microcontroller serial port is connected to the host via protection circuits. The data is sent through a serial port to RF processor and then to RF circuit to the antenna and the data received from antenna is sent to the serial port and to the host. The microcontroller is responsible for the control of the entire communication. The MCT247 transceiver contains a DC regulator which generates a constant 1.8 VDC for the digital circuitry. The RF section runs on the 3.3V supply.

The MCT247 uses Frequency Hopping Spread Spectrum, that uses 16 channels, between 2.407GHZ and 2.470GHZ with a 1MHz resolution.

The receivers are matched to the transmitters to use the same channels and sequence as the transmitter's signals.

There are no test modes built in to the MCT247. Host code is to be used to ensure compliance.

MCT247 TRANSCEIVER

INSTALLATION

- 1) Solder the MCT247 transceiver directly to the host's compatible connector.
- 2) Print and attach the label as shown below:



- 3) Place a label on the outside of the host enclosure in a visible area. On the label, include the following:
"Contains FCC ID: P4U-MCT247" and "Contains IC: 4534A-MCT247"
- 4) Connect the appropriate antenna. A 1/4 wavelength wire antenna.
- 5) Once integrated into a final product, use a spectrum analyzer to make sure the

product still complies. Look for:

- a. Peak Power < 20dBm
- b. Other peaks above 1GHz should be < 74dBuV/m. Below 1GHz, they should be < 40dBuV/m.

Application Requirements:

A) Power the MCT247 Transceiver with 3.3VDC nominal voltage, with peak current draw of 150mA.

B) Do not remove the shield on the MCT247.

C) If you use something other than the wire antenna, the unit needs separate approval.

D) The MCT247 can be installed in mobile or portable applications. See Part 2.1091 for definitions of mobile, portable and fixed applications.

E) Do not operate the MCT247 without an antenna.

F) Documentations: In the host's User Manual include the following:

- That there are no user serviceable parts in the radio modules. They should not remove or install radio modules.
- The "Instructions To The User" section.
- The "Industry Canada Statement".
- Include in the manual, "This device is granted for use in Mobile and Portable configurations, with no restrictions on antenna placement for exposure purposes."

BEFORE APPLYING POWER!

- Check power and ground for proper polarity.
- Read the rest of this manual.

TROUBLESHOOTING

There are no user serviceable parts in the MCT247 Transceiver. Contact your KAR-TECH representative for further instructions or servicing.

PARTS LIST


PART NUMBER	DESCRIPTION
021535C	MCT247 RADIO TRANSCEIVER – WIRE ANTENNA

There are no user-serviceable parts inside the transmitter or the receiver. Return the units for service.

The information, specifications, and illustrations in this manual are those in effect at the time of printing. We reserve the right to change specifications or design at any time without notice.

TRANSCEIVER PICTORIAL

MCT247 TRANSCEIVER

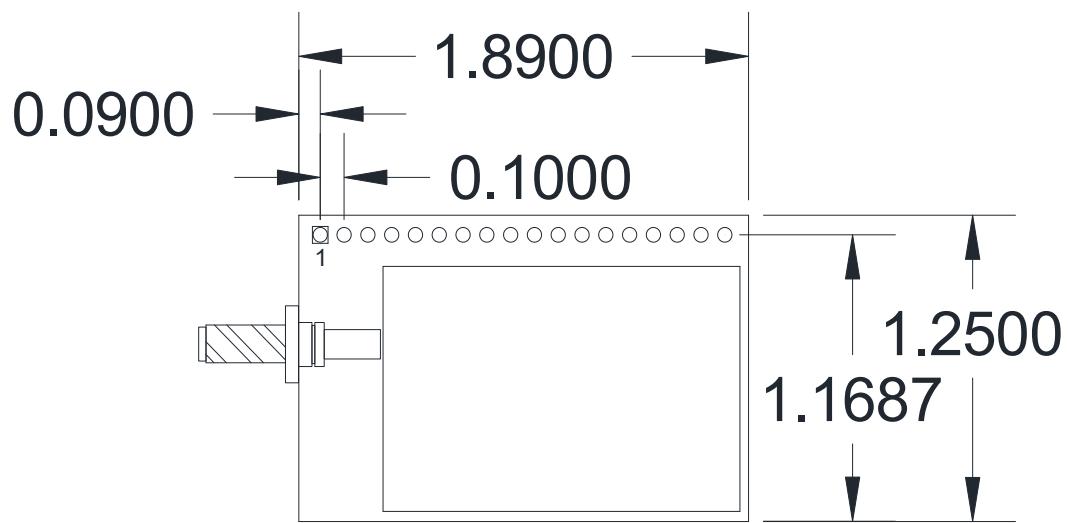

MCT247 TRANSCEIVER

Pinout

Pin	Function	Pin	Function	Pin	Function
1	GND	7	NC	13	NC
2	Not Used	8	Not Used	14	NC
3	GND	9	Not Used	15	NC
4	Not Used	10	NC	16	NC
5	Not Used	11	RXD	17	VIN 3.3V
6	NC	12	TXD	18	GND

SPECIFICATIONS

Equipment Class Part 15 Spread Spectrum Transmitter
FCC ID P4U-MCT247
ICC (Industry Canada Certification) ID 4534A-MCT247

TRANSCEIVER

Power supply 3.3VDC
Operating Current 48mA
Operating temperature - Radio -40 °C to +85 °C
Storage temperature -40 °C to +100 °C
RF Frequency 2.4-2.48 GHz
RF Transmit power (EIRP) 100 mW
RF Receive Sensitivity -126 dBm

INSTRUCTION TO THE USER

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- * Reorient or relocate the receiving antenna.
- * Increase the separation between the equipment and receiver.
- * Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- * Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC CAUTION: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

INDUSTRY CANADA STATEMENTS

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée quivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante.

EUROPE

CE NOTICE

This device has been tested and certified for use in the European Union. See the Declaration of Conformity (DOC) for specifics.

If this device is used in a product, the OEM has the responsibility to verify compliance of the final product to the EU standards. A declaration of Conformity must be issued and kept on file as described in the Radio and Telecommunications Terminal Equipment (R&TTE) Directive.

The 'CE' mark must be placed on the OEM product per the labeling requirements on the Directive.

Declaration of Conformity (DOC)

This DOC can be downloaded from the www.kar-tech.com.

2.2 List of applicable FCC rules

CFR 47 FCC PART 15 SUBPART C has been investigated. It is applicable to the modular transmitter

2.3 Specific operational use conditions

This module is stand-alone modular. If the end product will involve the Multiple simultaneously transmitting condition or different operational conditions for a stand-alone modular transmitter in a host, host manufacturer have to consult with module manufacturer for the installation method in end system.

2.4 Limited module procedures

This module is single modular with shielding.

2.5 Trace antenna designs

Not applicable

2.6 RF exposure considerations

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 3.6cm between the radiator & your body.

2.7 Antennas

The following antenna will be used with the MCT247 module and integrated into Kar-Tech products, The MCT247 is not designed for multiple antenna applications and should not be used to transmit simultaneously with any other transmitter.

The MCT247 is only certified to use the integrated wire antenna. Antenna Description: WIP Monopole antenna,

1.1dBi(Max.)

2.8 Label and compliance information

The final end product must be labeled in a visible area with the following " Contains FCC ID:P4U-MCT247.

2.9 Information on test modes and additional testing requirements

Host manufacturer which install this modular with limit modular approval should perform the test of radiated emission and spurious emission according to FCC part 15C:15.247 and 15.209 requirement, only if the test result comply with FCC part 15.247 and 15.209 requirement, then the host can be sold legally.

2.10 Additional testing, Part 15 Subpart B disclaimer

Host manufacturer is responsible for compliance of the host system with module installed with all other applicable requirements for the system such as Part 15 B.