



CONTROL FEATURES

1. Antenna
2. Headphone Jack / Ext. Microphone Jack
3. Volume Control
4. LCD Display
5. Channel Select Down Button
6. Power On / Off Switch
7. Time Set Button
8. Mode Select Button
9. Call Function Button
10. Microphone
11. Speaker
12. Power Indicator
13. Clock & Channel Display Select Button
14. Back Light Button
15. Talk Function Button
16. Channel Select Up Button
17. Belt Clip
18. Battery Door
19. Battery Door Clip

INTRODUCTION

We welcome you to the Family Radio Service (FRS) 2-way “transceiver” (meaning “transmitter and receiver”) radio, designed for family and friends to keep in touch without the need for a license, or radio knowledge. It provides safety and convenience almost anywhere, indoors or outdoors.

The FCC has established the license free, short range two way radio service for family and individual recreational use anywhere in the United States & other areas listed by the FCC.

The FRS radio has 14 channels. The optimal range for this 2-way radio is approximately 2 miles in open areas, less in buildings, dense foliage, and mountains.

BEFORE YOU CAN TALK

Before you operate the radio, read this instruction manual carefully to know how to properly operate the radio.

BATTERIES

Radio operate with 4”AAA” alkaline batteries providing approximately 30 hours of use. That’s about 3 hours of talk and 27 hours of standby time.

To Install

1. Firmly pull battery door clip (radio Back) down and remove the battery door.
2. Insert 4”AAA” batteries.
3. Replace the battery door and push up the battery door clip .

Low Battery

When batteries are low, the Battery Meter, located on the LCD Display, is divided into two bars. Each bar represents half of the battery life. As power is used, the bars will disappear. The Meter will only work accurately with alkaline batteries.

BELT CLIP

Radios come standard with a belt clip.

1. Locate the top opening on the radio back.
2. Insert the belt clip and push down until it clicks into place.
3. To remove, carefully, but firmly, pull the belt clip out of radio.

TURN THE RADIO

1. When you insert the batteries, the radio is already to turn on. But just for the clock only.
2. Push the Power On Button for channel select and send or receive messages.

SET TIME

1. Press Mode Select Button and select the function
2. Used the Time Set Button to set the clock.
3. Press Mode Select Button to confirm.

SET ALARM

1. Press the mode Select Button and set “ON” on the LCD Display by Time Set Button
2. Used the Time Set Button to set up the clock alarm.

SET THE CHANNEL CODE

1. Push down the Power On/Off Switch, then the current channel on the LCD Display.
2. Press the Channel Select Down/up Button to select the current channel.

ADJUST THE VOLUME

1. Rotate dial clockwise to increase and counter clockwise to decrease volume.