


SPC5161 RGB Alarm Clock

Thank for your purchase of this quality clock. The utmost care has gone into the design and manufacture of your clock. Please read these instructions and store them in a safe place for future reference.

Controls

1. AM/PM Indicator	9. DC 5V Jack
2. ALARM 1 Indicator	10. SLEEP Indicator
3. ALARM 2 Indicator	11. SLEEP SOUNDS Indicator
4. TIME Button	12. RGB Light
5. UP Button	13. DOWN Button
6. MUSIC Button	14. RGB LIGHT Button
7. ALARM 1 Button	15. ALARM 2 Button
8. SNOOZE/DIMMER/SLEEP Button	

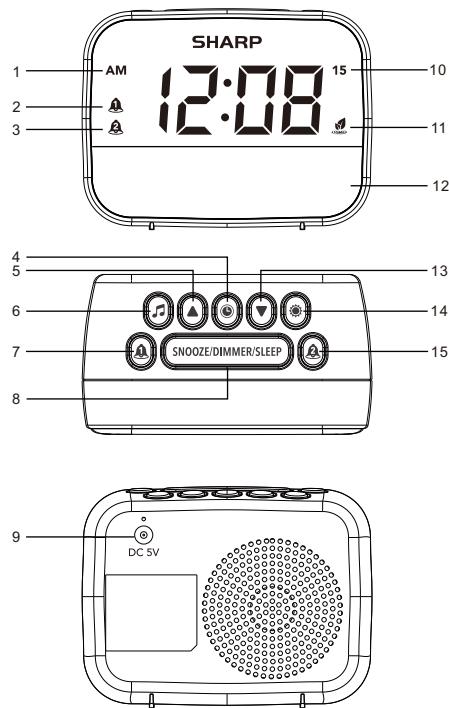

Getting Started

Connect the power cord into the back of the clock, and the other end into a USB power outlet, or a standard electrical outlet using the included power adapter. The display will turn on. Your clock is now ready to be set.

Important: Use ONLY 5V 1A or 5V 2A power adapter or USB power sources.

Setting the TIME

- Press and hold the **TIME** button down for two seconds to activate time setting, the hour digit will blink.
- Press the **UP** or **DOWN** button to advance to the correct hour.
- Press the **UP** or **DOWN** button to advance to the correct minute and press the **TIME** button to confirm, the time is now set.

Setting the ALARM

- Press and hold the **ALARM 1/2** button down for two seconds to activate **ALARM 1/2** setting, hour digit will blink.
- Press the **UP** or **DOWN** button to advance to the correct hour.
- Press the **UP** or **DOWN** button to advance to the correct minute and press the **ALARM 1/2** button to confirm, the alarm time is now set.

Using the ALARM

- Press the **ALARM 1/2** button to activate the alarm and the alarm indicator will light up.
- The **BEEP** will come on at the set time.
- To stop the alarm, press the **ALARM 1/2** button. The alarm will sound again the next day.
- To turn the alarm off completely, press the **ALARM 1/2** button until the alarm indicator is no longer visible.

BLUETOOTH Function

- Press the **MUSIC** button to enter Bluetooth mode, using the native controls on your Bluetooth device and select "SPC5161" in your Bluetooth settings to pair.
- When successfully paired and connected, the alarm clock will sound "CONNECTED" and you can use the connected Bluetooth device to select a track.
- To play, skip or pause the selected track, use the native controls on the connected Bluetooth device.
- To adjust the volume, press the **UP** or **DOWN** button on the alarm clock.
- To turn off the music, press and hold the **MUSIC** button.

SLEEP SOUNDS Function

- Press the **MUSIC** button to enter **MUSIC** mode, press again the **MUSIC** button to select different sleep sounds (rain, thunderstorm, water, frogs, bird, ocean waves).
- To adjust the volume, press the **UP** or **DOWN** button on the alarm clock.
- To turn off the music, press and hold the **MUSIC** button.

RGB Light Function

- Press and hold the **RGB LIGHT** button to turn on the RGB light.
- Press the **RGB LIGHT** button to change light (RGB, warm white, red, blue, green, cyan, purple, teal, yellow).
- To turn it off, press and hold the **RGB LIGHT** button.

SNOOZE, DIMMER & SLEEP Function

SNOOZE

- When the alarm sounds, press the **SNOOZE** button to pause the alarm, the alarm indicator will flash & sound again in 9 minutes.

DIMMER

- To adjust the display brightness, press the **DIMMER** button to select between HIGH, MEDIUM or OFF.

Note: The default is HIGH display brightness.

SLEEP

- When the alarm clock is in **BLUETOOTH** or **MUSIC** mode, press the **SLEEP** button repeatedly to select the duration: 15, 30, 60 minutes.
- At the end of the set time, the music will turn off automatically.
- To cancel the sleep function before the end of the set time, press the **SLEEP** button until the sleep indicator no longer visible.

Battery Precautions

- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- The supply terminals are not to be short-circuited.
- Do not dispose of batteries in fire. Batteries may explode or leak.

FCC Information

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



This lightning flash and arrowhead within the triangle is a warning sign alerting you of "dangerous voltage" inside the product.

CAUTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (ON BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The exclamation point within the triangle is a warning sign alerting you of important instructions accompanying the product.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

CAUTION: TO PREVENT ELECTRIC SHOCK DO NOT USE THIS (POLARIZED) PLUG WITH AN EXTENSION CORD, RECEPTACLE, OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.

Please read this before operating your unit.

Important Safety Instructions

1. Read these instructions - All the safety and operating instructions should be read before this product is operated.
2. Keep these instructions - The safety and operating instructions should be retained for future reference.
3. Heed all warnings - All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow all instructions - All operating and use instructions should be followed.
5. Do not use this apparatus near water - The appliance should not be used near water or moisture - for example, in a wet basement or near a swimming pool, and the like.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and at the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.

12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip - over.



13. Unplug the apparatus during lightning storms or when unused for long periods of time.

14. Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

15. Please keep the unit in a good ventilation environment.

16. CAUTION: These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.

WARNING: The mains plug is used as disconnect device, the disconnect device shall remain readily operable. This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth. Do not install this equipment in a confined or building-in space such as a book case or similar unit, and remain a well ventilation conditions. The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc.

WARNING: All above markings were located on the external enclosure of the apparatus, except for label of Date Code was pasted inside the battery compartment. The apparatus shall not be exposed to dripping or splashing and that objects filled with liquids, such as vases, shall not be placed on apparatus.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

WARNING: The battery shall not be exposed to excessive heat such as sunshine, fire or the like.

If customer service is needed, please email custserv_clocks@mzb.com or call toll free at 1-800-221-0131 and ask for Customer Service. Monday-Friday 9:00AM - 4:00 PM EST

One Year Limited Warranty

M.Z. Berger & Company warrants the original consumer purchaser of this product that it shall be free of defects in materials and workmanship for one year from the purchase date of this product. Defects caused by tampering, improper use, unauthorized modifications or repairs, immersion in water or abuse are not covered by this warranty. If a defect covered by this warranty occurs during the warranty period, wrap your clock carefully and send it to the following address:

M.Z. Berger & Co., Inc.
353 Lexington Ave - 14th Fl.
New York, NY 10016

You must include a Proof of Purchase, either the original receipt or a photocopy and a check or money order for USD \$6.00 to cover the cost of handling. Also include your return address inside the package. M.Z. Berger will repair or replace the clock and return it to you. M.Z. Berger will not be liable for any loss or damage, including incidental or consequential damages of any kind; from any breach of warranty either expressed or implied relating to the product. Since some states do not allow the exclusion or limitation of incidental or consequential damages, this limitation may not apply to you.

Printed in China

Model: SPC5161

SHARP, registered in the U.S. Patent and Trademark Office.