




ANYWHERE™
WIRELESS SPEAKERPHONE SYSTEM

INSTRUCTIONS

Package Contains:

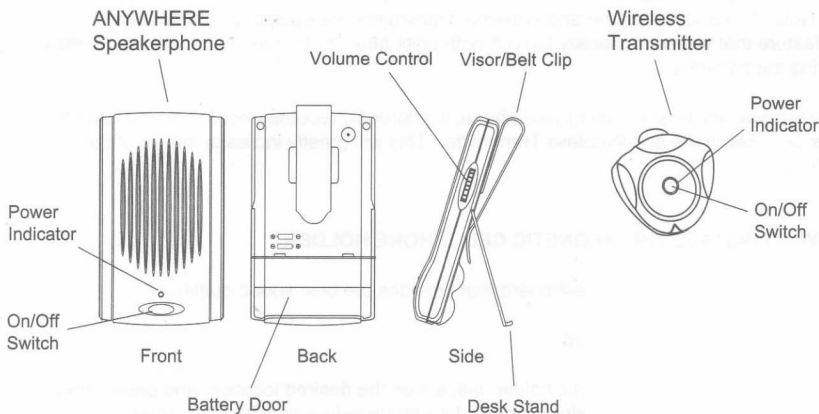


HOW TO SET UP

1. **Speakerphone:** Install two alkaline AA batteries (not included) by opening the battery door on the back of the ANYWHERE Speakerphone. Insert the batteries in the orientation shown and close the battery door.
2. **Wireless Transmitter:** Install an alkaline AAA battery (not included) by pushing up on the release tab in the rear of the fonefree Wireless Transmitter and sliding the clip to the right. Insert the battery in the orientation shown and restore the clip and release tab to their original positions.

HOW TO USE IN VEHICLE

1. Clip the Speakerphone onto the visor in your vehicle.
2. Clip the Wireless Transmitter over the earpiece of any cell phone and place on your dashboard using the enclosed universal cell phone holder (see installation instructions below). Make sure the rubber cup under the clip rests directly over the speaker holes in the cell phone.

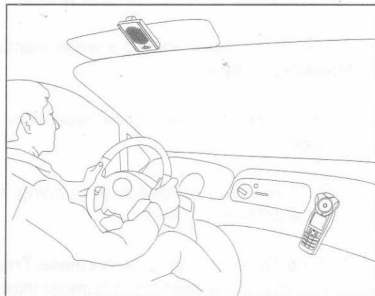

3. Push the silver buttons on the Speakerphone and Wireless Transmitter to turn them on. **Note:** The Speakerphone and Wireless Transmitter are equipped with an auto shut-off feature that will automatically turn off both units after 30-45 minutes of silence, thereby saving the batteries.
4. When you are finished using your phone, it is strongly recommended that you turn off your Speakerphone and Wireless Transmitter. This will greatly increase the life of the batteries.

HOW TO USE IN OFFICE OR HOME

1. Pull out the desk stand and place on a flat surface.
2. Clip the Wireless Transmitter over the earpiece of any cell phone and place within three feet of the Speakerphone. Make sure the rubber cup under the clip rests directly over the speaker holes in the cell phone.
3. Push the silver buttons on the Speakerphone and Wireless Transmitter to turn them on. Note: The Speakerphone and Wireless Transmitter are equipped with an auto shut-off feature that will automatically turn off both units after 30-45 minutes of silence, thereby saving the batteries.
4. When you are finished using your phone, it is strongly recommended that you turn off your Speakerphone and Wireless Transmitter. This will greatly increase the life of the batteries.

HOW TO INSTALL THE MAGNETIC CELL PHONE HOLDER

1. Find the location on your dashboard that provides the best sound quality.
2. Clean and dry the dashboard.
3. Peel backing off the magnetic holder, place it on the desired location, and press firmly. For best results, allow the holder to dry for four hours before attaching the phone.
4. Clean and dry the back of your phone. Peel away backing from the metal phone mount, and attach it to the back of your phone. (Note: This unit contains two mounts - one for your phone and one for an additional phone.)
5. The magnetic cell phone holder is now ready for use.

TROUBLESHOOTING

1. If you or the person you are calling hear an echo or feedback, turn down the volume of the Speakerphone or your cell phone.
2. If you are experiencing a weak transmission signal or poor reception, try one of the following solutions:
 - a. Check your cell phone reception. It could be that you are not receiving a strong signal.
 - b. If you hear feedback or buzzing, try lowering the volume or moving your cell phone to a different location.
3. If the Speakerphone or Wireless Transmitter power lights do not come on when the "on" buttons are pushed, it is most likely the result of low or "dead" batteries.
4. Replace batteries as needed.

During the radiated interference, the product will be malfunction after that, the function will return to normal operation.

When it was loss of function by electrostatic shock, please press any button or replace the batteries for restoring the function.

FCC STATEMENT:

“Modifications not authorized by the manufacturer may void users authority to operate this device”

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC ID Label:

FCC ID: P68AFC30802F68

MADE IN CHINA

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.