

Circuit Description

Fuse: When input is shorted, it performs input shorted protect function.

A-1 ,A-6: Work together with to performs EMI function.

A2 ,A3 ,A4 ,A5: Performs rectification function.

A-14 ,A-15 ,A-18: Performs Oscillating function, let low frequency switch high frequency.

A-21 ,A20: When switching power, the A-21 and A20 take place series resonance startup the lamp, then A-21 restricting current.