

Model name : USD-01

Features

- ° Capacities : 16MB/32MB/64MB/128MB/256MB/512MB
- ° Simply Plug & Play via USB port on PC (Drivers required when Windows 98/SE)
- ° Supports USB 1.1
- ° 1 color illumination to indicate data transferring status (Green : data transferring)
- ° Power supply : USB powered (4.5V to 5.5V)
- ° Supports OS : Windows98/SE, ME, 2000, XP, Linux kernel 2.4.0 or higher, Mac8.6 or higher
- ° Accessories : Extention cable, Windows98/SE USB Device Driver CD, User manual
- ° Dimension : 12.5 x 85 x 11mm
- ° Weight : 16g

User Manual


1. Driver Installation for Windows 98/SE

1-1 Insert the supplied CD to "CD-ROM Drive" in PC, and plug the USB Storage Device into PC's USB port.


The following dialog box "Add New Hardware Wizard" will show up onto your screen.
Then click "Next" button.



1-2 Check "Search for the best driver" and click "Next" button.

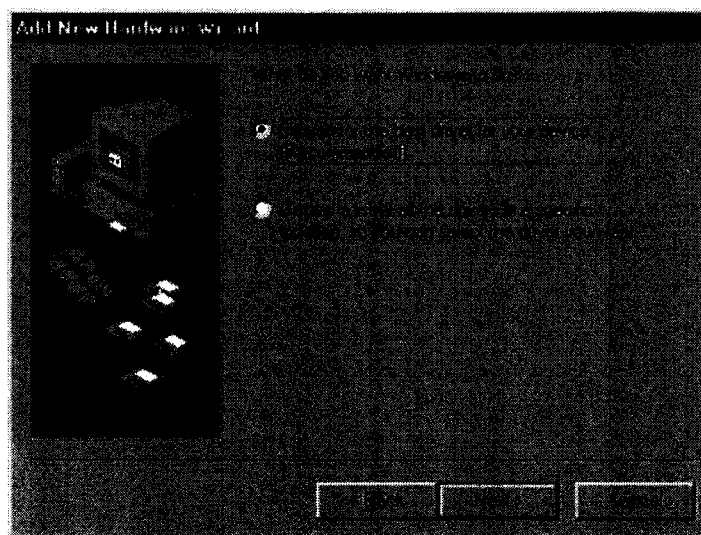

1-3 Check "CD-ROM drive" and click "Next" button.

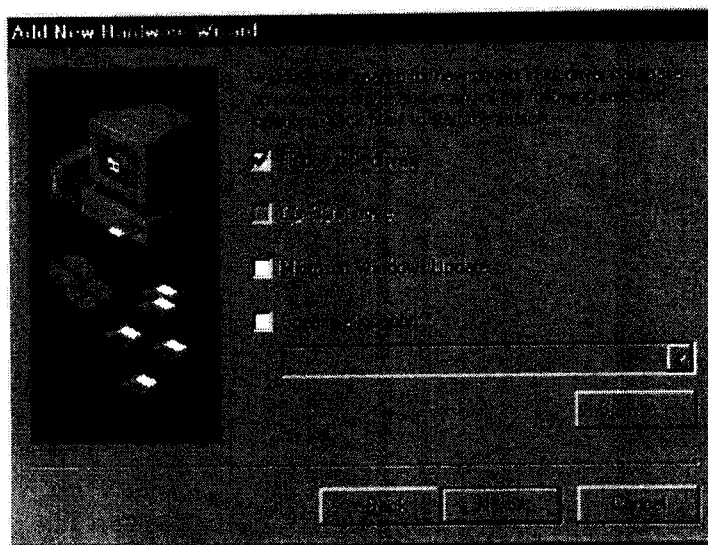

1-4 Dialog box shows that the driver locate in drive "D". And then click "Next" button.



1-5 The following dialog box shows that the driver installation has finished. Then click "Finish" button.



1-6 The following dialog box will show up onto your screen. Then click "Next" button.



1-7 Check the item and click "Next" button as same step as above 1-2, 1-3.

1-8 Dialog box shows that the controller locate in drive "D". And then click "Next" button.




1-9 The following dialog box shows that the controller installation has finished. Then click "Finish" button.



Now all driver and controller has been installed into your system.

2. How to use the USB Storage Device

- ° When you insert the USB Storage Device into PC's USB port, then the "Removable Disk" icon will appear in the "My Computer" folder.

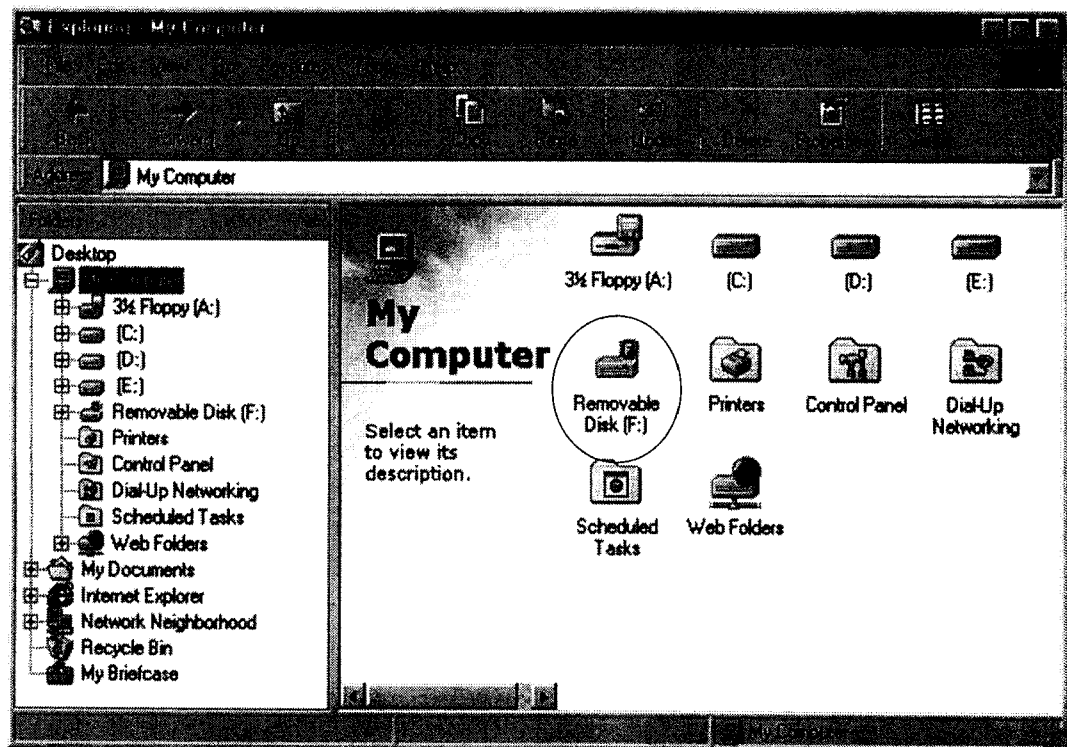

- ° You can use the USB Storage Device the same way as a Floppy disk or a Hard disk drive
- ° When you pull out the USB Storage Device from PC's USB port, then the "Removable Disk" icon will disappear in the "My Computer" folder.

3. How to format the USB Storage Device

- ° Select the "Removable Disk", and then click the Mouse's right button.
The dialog box will show up, then press the "format" button and "start" button.

Note

- ° When you remove the USB Storage Device from the USB port, make sure that the Green illumination on the USB Storage Device is not flashing. This is to ensure that data will not be lost, even if the dialog box on your computer shows that the data transfer is finished.
- ° In Windows 2000, ME, and XP, the safe procedure will be to double click on the icon(5) located at the bottom right corner of your screen and follow instructions before removing.