



TABLET PC
User Manual
Model:

User Manual

Attention:	3
1. Appearance and Button:	4
1.1 Touch Panel	4
1.2 Power	4
1.3 ESC	4
1.4 Menu	4
1.5 Volume +, Volume-	4
1.6 Earphone Jack	5
1.7 TF Card	5
1.8 Mini USB	5
1.9 Reset.....	5
2. First Use.....	5
2.1 Battery Management and Charge.....	5
2.2 Connect to PC	6
3. Equipment Operation Interface.....	6
3.1 Main Interface Describe	6
3.2 Status Bar Describe.....	8
3.3 Use Touch Panel.....	8
4. Equipment Basic Set.....	9
4.1 Sounds, Notification Display and Brightness Setting	10
4.2 Application	11
4.3 Privacy	12
4.4 Storage	12
4.5 Language & Keyboard	13
4.6 Date & Time Setting	13
4.7 Touch Calibration.....	14
4.8 USB Mode Select.....	14
4.9 About Device.....	14
5. Apps Install and Manage.....	15
5.1 App Installer.....	15
6. Problem Solution	15
7. Basic Function.....	16
8.Important Safety Precautions	16

Attention:

This handbook contains important security measures and the correct use of the product information, in order to avoid accidents. Please make sure to reading the manual carefully before use the device.


- Please don't be in high temperature, moisture or very dust place
- Please don't be in high temperature, especially in summer don't put the device in the car when Windows closed.
- Avoid fall or Violent collision of the device, don't make the TFT display screen were violent tremor, this could cause TFT display screen abnormal or damage.
- Please choose the appropriate volume, Use headphones should not be too big volume, If feel tinnitus, Lower the volume or stop using it
- Please charge In the following condition,
 - A. The battery power ICONS shows have no power
 - B. The system automatically shut off, startup after power off soon
 - C. Operation buttons no response
 - D. The machine that the top right corner show red icons
- When the device in the format or ongoing upload and download file, please don't suddenly disconnect, this could cause application error.
- For those who because of damage to the product, repair, or other causes of erased the memory, the company shall not be liable for any responsibility, please follow the user manual for the standardized operation to use the device.
- Do not disassemble the product, don't use alcohol、Thinner or benzene to scrubbing products
- Don't use the device one of the place of prohibit to use electronic equipment in regional (such as the plane)
- Please don't using the Tablet PC when you in driving or walking down the street,
- USB just only be used for data transmission

The company reserves the right to improve product, products specification and design have any change, The information is subject to changes without prior notice.

(This tablet is no waterproof function)

【Attention】 All pictures in this manual is just for your reference. Products specification and design have any change; the information is subject to changes without prior notice.

1. Appearance and Button:

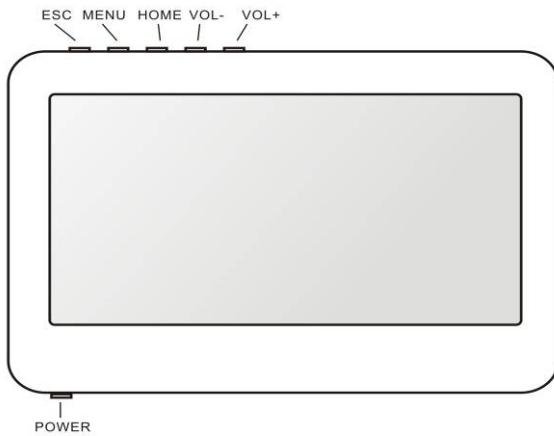

1.1 Touch Panel

4.3" (Capacitive) Resistive touch panel: you can click, dragging on the icons in the touch panel

1.2 Power

Startup: Long Press and hold the power button, the system will enter the main interface

Shutdown: In the main menu interface, Press the power button about 5 second to shutdown, The system can hint "power off" option, Click "ok". you can safely shut down.

Screen Lock: short press the home button to lock or unlock the screen

【Attention】 : 1. When low battery, the system will automatically shut down;

2. When it illegal to shutdown, restart will scan and repair the disk, the interface may be a long time at the progress bar screen

1.3 ESC

Short Press ESC button will return the last interface; long Press ESC button will return the main interface

1.4 Menu

The Tablet under normal operating conditions, press M button, the screen will appear the operation setting.

1.5 Volume +, Volume-

The buttons on top Volume +, Volume-achieve changes in the volume.

1.6 Earphone Jack

3.5 mm standard earphone jack

1.7 TF Card

TF-CARD slot: external T-FLASH card

1.8 Mini USB

Mini USB jack: you can use it to connect the computer for data transmission, charging and external connection USB flash drive

1.9 Reset

When the Tablet under the condition of the crash, use the small objects to short press RESET button, Tablet will force to shut down.

【Attention】 : Unless unable to shutdown, otherwise don't use the reset, suggest you to shut down by normal, if no will easy to damage the machine system.

2. First Use

2.1 Battery Management and Charge

Before first use, please set the device's battery is fully charged

Just need to connect the adaptor or USB interface, then you can charge

The first two times charging please keep about 6 hours, after that you just need 4 hours to charge.

【Attention】 : This tablet using Built-in type polymer battery, Charge must be to choose standard adaptor (Input: AC110~240V 50/60Hz Max: 180MA.. Output: DC5.0~5.5V/1.5A), this device without supply DC charging, USB interface can charge, Choose USB interface to charger

During the charging, the battery icon will scroll

When finished charging, battery icon will become green and stop rolling

In order to prolong the service life of the machine, in the first twice use, recommend to use all the last power before further charge

【Attention】 : 1. If you long time don't use this Tablet, To avoid battery damage caused by excessive consumption, be sure to complete the first charge and discharge for this machine within one month, to prevent battery depletion;


2. Low-power shutdown, plug in the charger, tip the machine power is too low, charging, wait for some time, and so full of electricity to the machine need it will enter the main interface will automatically;

3. Recharge the machine need to backlight the whole dark, that is, standby charge

To achieve the normal charging time, for the consumption of the machine and display under normal use, charging time will take long

2.2 Connect to PC

Use the supplied USB cable to connect PC and the machine, prompts USB connected dialog box, select loading the USB data transfer can be realized, If you choose "no load" is a state of charge

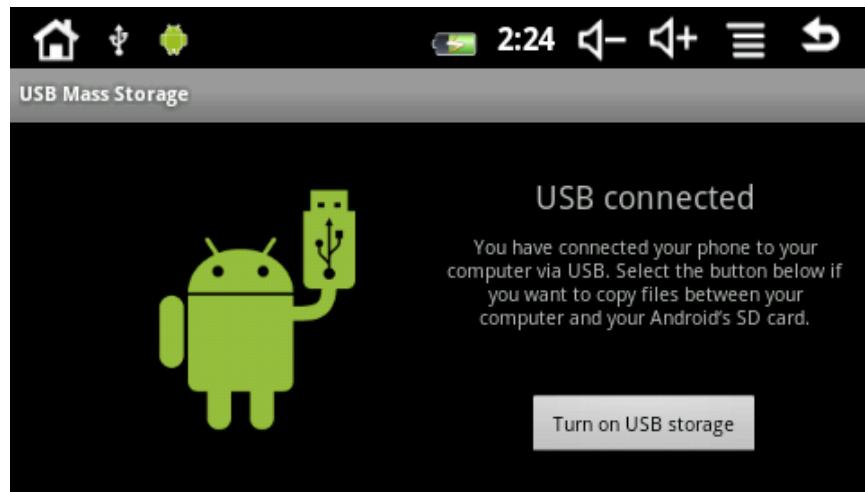


Into the load mode, you can copy, delete the file into the device and the file on the memory card.

3. Equipment Operation Interface


3.1 Main Interface Describe

After startup will enter the main interface

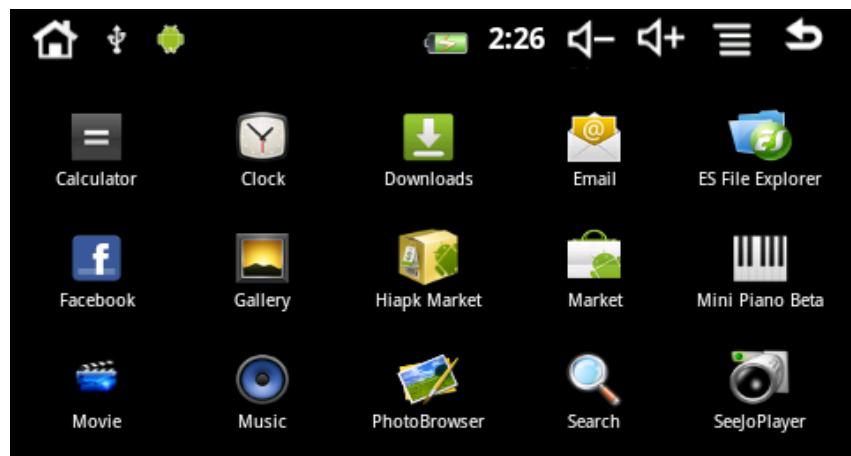


In the main interface, you can:

Management main interface software ICONS: long press the icons 3 second, after the icons will bigger, then you can drag anywhere in the interface.

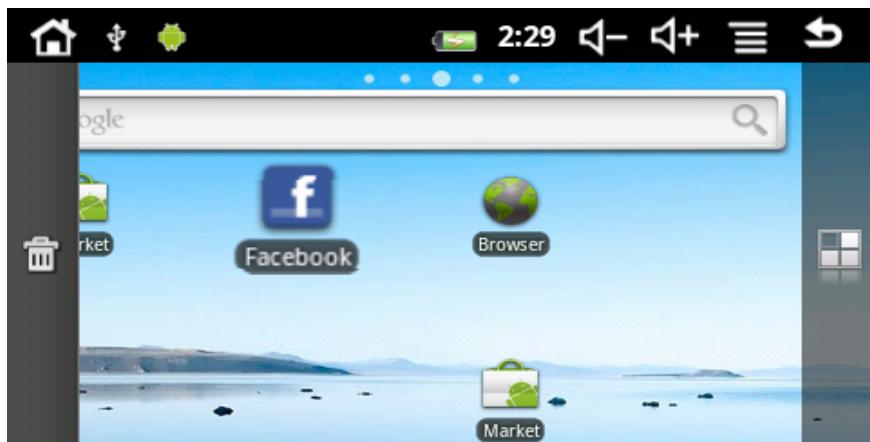

Delete icons: long press the icons 3 second, drag the icons to the Recycle Bin icon, once it become red, Loosen your hand, after that you can delete icon

You touch the screen keep a time; appear the dialog box "Add to Home screen" as shown below:

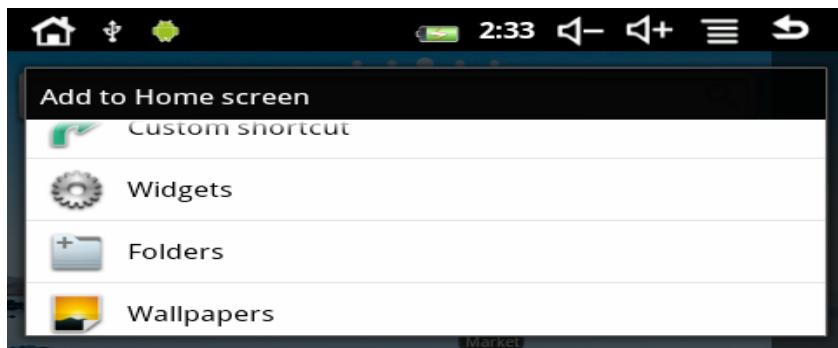

3.2 Status Bar Describe



- The status bar above of the screen

Top left display main interface software, T-Flash card, USB connection status and so on

Top right display the battery, battery charge icons, current time, set time, Settings Menu, ESC button.

3.3 Use Touch Panel

Device equipped with a 4.3 " touch screen. Following the main touch screen area is described, and describes some of the tips for how to use the touch screen.


No matter which interface you are on the screen, can go back to main screen through pressing the soft key  on the upper left corner of the main screen.

【Attention】 The main screen soft key  functions as the machine back key 

In different applications, by tapping the back soft key  on the upper right corner on the touch screen, you can return to its interface on the up floor.

In different applications, by tapping the menu key  on the upper right corner of touch screen, the screen will appear the operation setting interface as follows,

【Attention】 : The main screen soft key  functions as the machine menu 

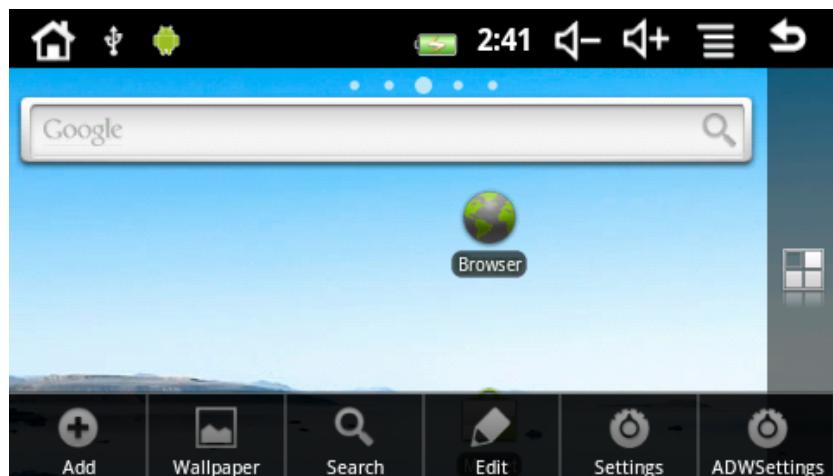


In the main interface, you can touch the icon to open the APPs

In different browser (file, music, video, pictures), you shift and drag the scroll bar, so that the file list can up or down to roll.

4. Equipment Basic Set

Setting: Click setting icon , enter setting interface

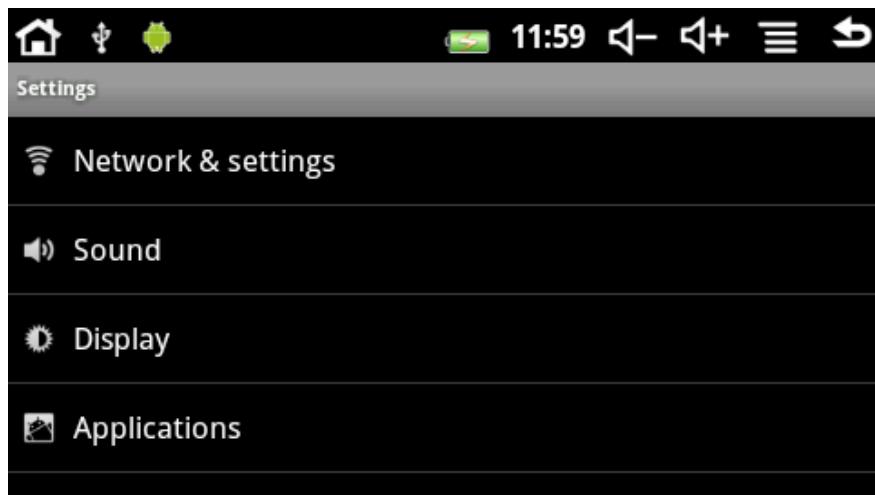



4.1 Sounds, Notification Display and Brightness Setting


Sound settings: Adjust media playback volume, and change the feedback sounds.

Auto-rotate screen: When this option be selected, the screen will rollover with you holding direction, horizontal to Vertical, 4 side direction.

Animation: Open or close the windows animation.


Brightness: Adjust the Screen brightness. You can draw the button left to lower and right to higher.

Screen timeout: Automatic shut off the display to saving the power. Choose one number for how long enter saving mode.

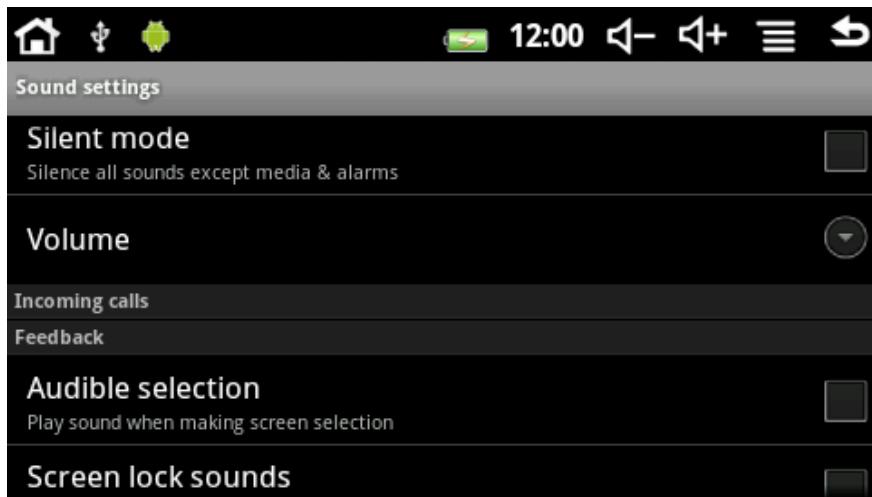

4.2 Application

Manage application

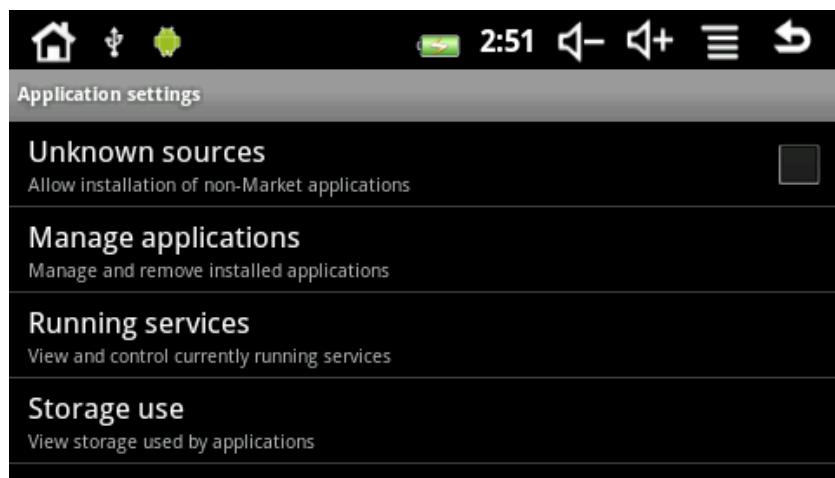


Unknown sources: Click “Unknown Sources”, then click “OK”

Manage application: manager and uninstall Application

【Attention】: When you Firmware Upgrade, please close the USB connect


How to uninstall the applications?

1. enter “setting”>“Application”>“Manage application” And then there will be installed the program list
2. Click you the icons want to uninstall, will enter the following interface
3. Click Uninstall, then you can delete the application

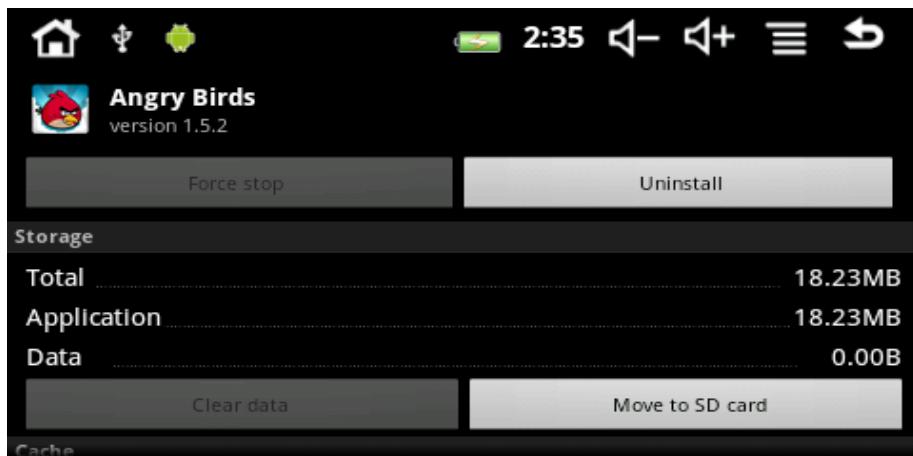


4.3 Privacy

Factory data reset

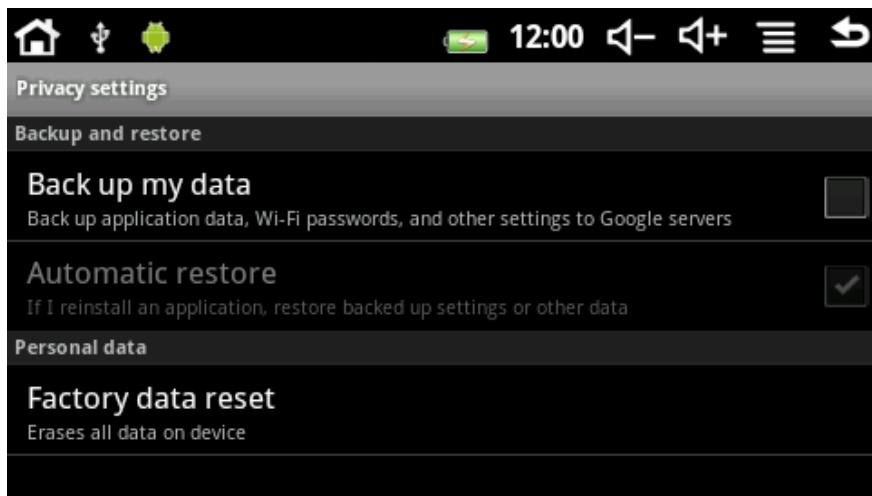

4.4 Storage


Remove TF card, can view of the available storage space

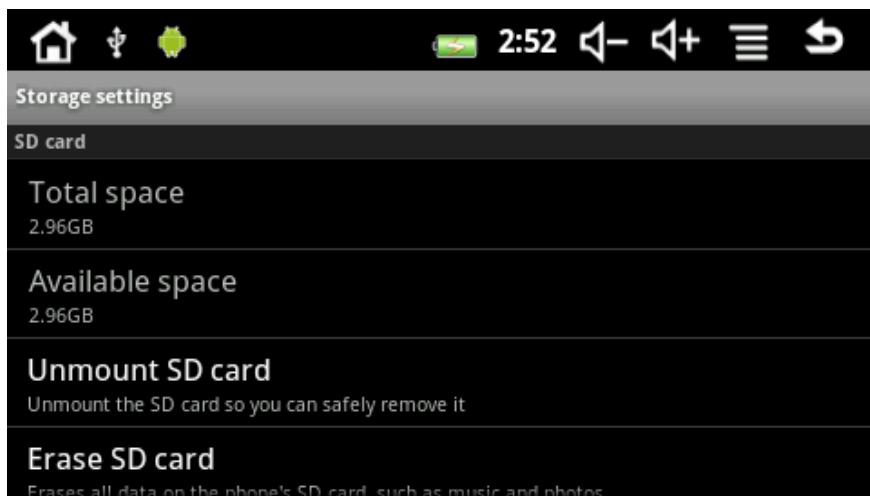

【Attention】 : Please touch option "delete SD card", so that can safety to Remove SD card

4.5 Language & Keyboard

Setting: (Language), text input and automatic error correction options;

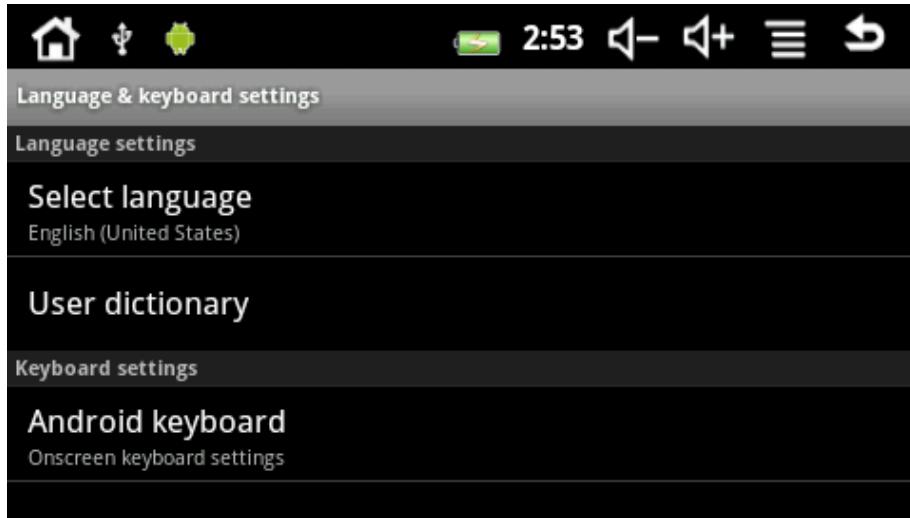

Select Language: 14 kind of national languages are available

Remark: Android system can support 54 kind of language, now menu interface just support 14 kinds of language,

Android keyboard: Android keyboard setting

Sound on Key-press


Auto- calibration

Show suggestions: Display suggested words while typing


Auto-complete: Spacebar and punctuation automatically insert highlighted word

4.6 Date & Time Setting

Set date, set time, Select time zone and select date format

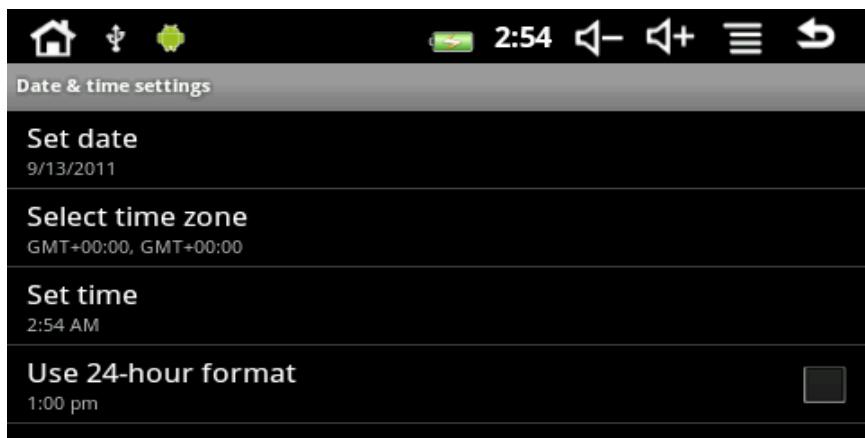

4.7 Touch Calibration

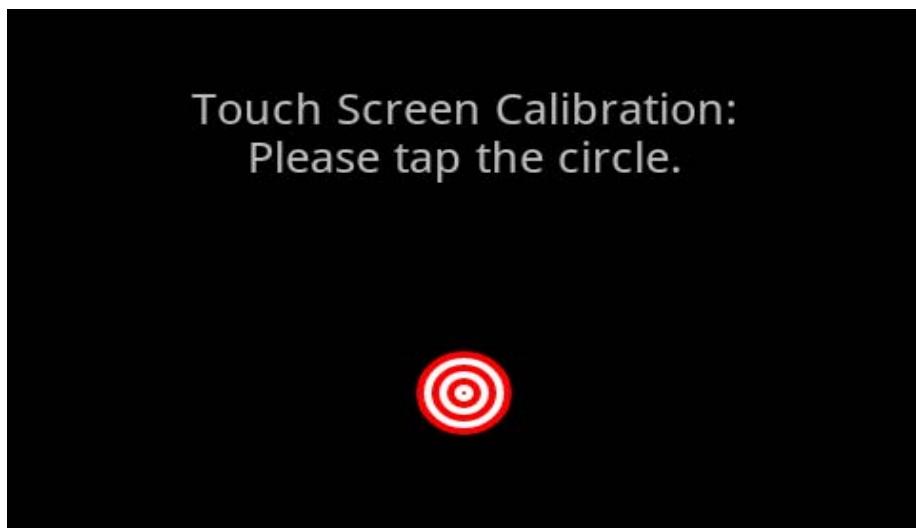

Please one by one to click the middle point in the red round point on the touch screen to finish touch screen calibration.

4.8 USB Mode Select

Choose USB work pattern: OTG/HOST/SLAVE.....

4.9 About Device



5. Apps Install and Manage

5.1 App Installer

This Tablet can support Android APP in market by third party, most Apps can install in the network, can copy to NAND FLASH or SD card.

Click App installer icon, will appear Install, manage, Exit options.

Install: Click install, enter APK install interface

Manage: click manage, enter third party interface

Uninstall: Click the installed APK to remove.

6. Problem Solution

Device can't to open

1. Check the battery power
2. Connect adaptor first, then check again
3. After charging then can't to open, please contact with the supplier

After startup the screen or the opening picture has been appear, the device appear shutdown

1. Power is not enough, please charge

Headset can't hear the voice

1. Please check the volume whether set to 0
2. Check the music file whether damaged. Try playing other music, if the file have damaged may lead to serious noise or hop sounds.

Can copy file or play music and so on

1. Please check between computer and device is correct connection
2. check the memory storage space is already full
3. check the USB cable is good or not
4. USB connection is disconnected

7. Basic Function

Hardware

Size: (length* wide*thick) 112*76*12.8mm

CPU processor speed: 500MHZ

Memory: 4G-16G

RAM: 256 MB

TF card: 128M-16G

Display screen: 4.3"(Capacitive multi-touch) TFT resistive touch

Resolution: 480*272

Battery and capacity: rechargeable Built-in type polymer battery, **1200mAh**

USB: USB 2.0 OTG

G-sensor: 3D

Record: built-in microphone

Operation System: Android 2.3

Video: MKV (H.264HP). AVI. RM RMVB. FLV. MPEG-1/2

Music: MP3.WMA.APE.FLAC.AAC.AC3.WAV

Pictures: JPEG. BMP. PNG.TIF

8. Important Safety Precautions

Read these safety instructions before using your device and store them for possible future reference. Always follow these basic safety precautions when using your Tablet. This reduces the risk of fire, electric shock, and injury.

- Do not expose this product to rain or moisture.

- Keep the device out of direct sunlight and heat sources.
- Protect the power cord. Route power cords so that they are not likely to be walked on or pinched by items placed on or against them. Pay particular attention to the point where the cord attaches to the device.
- Only use the AC adapter included with the device. Using any other power adapter voids your warranty.
- Do not remove the cover. There are no user-serviceable parts inside.
- If the charger cord is damaged, have it repaired by the manufacturer, its service or a similarly qualified person in order to avoid any hazard.
- The charger is not intended for use by persons (including children) with reduced physical, sensory or mental capacity. Persons who have not read the manual, unless they have received explanations by a person responsible for their safety and supervision should not use this unit.
- Children should be monitored to ensure that they do not play with the charger.
- The charger should always be readily accessible.
- The device should not be exposed to dripping or splashing water.
- No objects filled with liquids such as vases shall be placed on the device.
- Always leave a minimum distance of 10 cm around the unit to ensure sufficient ventilation.
- Naked flame sources, such as candles, should not be placed on top of the device.
- The device is intended for use only in a temperate climate.
- CAUTION: Danger of explosion if battery is incorrectly replaced or not replaced by the same type or equivalent.
- The battery should not be exposed to excessive heat such as sunshine, fire or similar.
- Different types of batteries, new and used batteries should not be mixed.
- The battery must be installed according to the polarity.
- If the battery is worn, it must be removed from the product.
- The battery must be disposed of safely. Always use the collection bins provided (check with your dealer) to protect the environment.

Clean Your Device

Treat the screen gently. To clean fingerprints or dust from the screen, we recommend using a soft, non-abrasive cloth such as a camera lens cloth.

SWITCH OFF IN RESTRICTED AREAS

Turn off the power when the use of the tablet is not authorized or when it may cause interference or danger, for example; on board an aircraft, near medical equipment, fuel, chemicals or blasting sites.

ROAD SAFETY COMES FIRST

Check the current laws and regulations in the area where you drive, regarding the use of mobile devices such as this tablet.

- Do not hold this mobile device while driving

- Concentrate fully on the driving
- Radio Frequency (RF) can affect certain electronic systems in your car, such as the audio-stereo system or security equipment.
- An airbag inflates with great force. Do not store the tablet or any of its accessories in the area above the bag or in its deployment area.

INTERFERENCE

All wireless devices are susceptible to interference which can affect their performance.

AUTHORISED PERSONNEL

Only qualified personnel are authorized to install or repair this product

ACCESSORIES

Only use batteries, chargers and other accessories which are compatible for this device. Do not connect incompatible products.

KEEP YOUR DEVICE DRY

Your device is not water proof. Keep it dry.

CHILDREN

Keep the tablet in a safe place out of the reach of young children. Your tablet contains small pieces which can present a choking hazard.

Precautions for use

Vehicles : Telephone radio- frequency emissions can affect a motor vehicle's electronic systems. With regards to your vehicle, check with the manufacturer or dealer.

Medical Implants :

To avoid any interference with the medical device, manufacturers of medical devices recommend a minimum distance of 15cm between wireless equipment and a medical implant such as a pacemaker or defibrillator. The following is recommended to people who have such devices :

- Always keep the wireless device at a distance of over 15cm from the medical device.
- Do not carry the wireless device in a breast pocket.
- Hold the wireless device at the ear opposite the medical device
- Turn off the wireless device if there is any suspicion of interference occurring.
- Follow the instructions provided by the manufacturer of the medical implant.

If you are fitted with a medical implant and have any questions regarding the use of wireless equipment, consult your doctor.

Hearing :

Warning : If you use headphones there is a risk of not being able to hear outside sounds clearly. Do not use headphones if there is a risk of endangering your safety. Some wireless devices can interfere with the proper functioning of hearing aids.

Other medical devices :

Radio transmitting equipment, including wireless devices such as this tablet, can interfere with the operation of inadequately protected medical equipment. Consult a doctor or the manufacturer of the medical equipment to see if the equipment is adequately protected from external Radio Frequency energy. Turn your device off in places where regulations apply, especially in hospitals.

Health Facilities :

Hospitals and health facilities may be using equipment that is particularly sensitive to external radio-frequency emissions. Turn your tablet off when staff or signs tell you to.

Blasting sites and identified areas :

Switch off your equipment in zones where the atmosphere is potentially explosive. Follow all official instructions. Sparks in such areas could cause an explosion or fire, resulting in serious bodily injury or death. Switch off your device in gas stations, especially near the gas pumps. Carefully observe instructions on use in fuel depots, storage and distribution areas, at chemical plants or in areas where explosives are used.

Areas with a potentially explosive atmosphere are often, but not always clearly marked. These include areas where it is normally advisable to switch off engines, the area below deck on boats, facilities where chemicals are transferred or stored and areas where the air contains chemicals or particles such as grain, dust or metallic powder. Check with the manufacturers of vehicles that use LPG (such as butane or propane) if the device can be used safely in their vicinity.

All our tablets conform to international standards and regulations, and where appropriate national recognition, to limit the exposure of users to electro magnetic fields. These standards and regulations were adopted after extensive scientific research. This research does not link the use of mobile phones with any adverse effects on health if the equipment is used in accordance to standards and regulations.

However, if you want to reduce the levels of exposure to radio frequency radiation you can limit your time using the tablet in wireless mode because the length of time is a contributing factor to the exposure received by a person. Similarly, keeping the tablet away from the body is another factor, as exposure levels lessen dramatically with distance.

Disposal of old electrical appliances

THE DISPOSAL OF ELECTRICAL AND ELECTRONIC EQUIPMENT WASTE PRODUCTS ON THE PART OF FINAL USERS IN THE EUROPEAN UNION

This symbol on the product or on the container indicates that this product cannot be eliminated with the general waste. The user is responsible for eliminating this kind of waste by throwing them away at a “recycling point” specifically for electrical and electronic waste. Selective collection and electrical equipment recycling contribute to preserve

natural resources and warrant waste recycling to protect environment and health. In order to receive further information about electrical and electronic waste collecting and recycling, contact your Local Council, the service of household waste or the establishment where the product was acquired.

Disposal of old electrical appliances

The European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal unsorted municipal waste stream. Old appliances must be collected separately in order to optimize the recovery and recycling of the materials they contain, and reduce the impact on human health and the environment.

The crossed out “wheeled bin” symbol on the product reminds you of your obligation, that when you dispose of the appliance, it must be separately collected.

Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.