


User Manual

Home screen

On the Home screen, you can place app shortcuts and widgets.

Home screen (left)
Polaroid Media widget

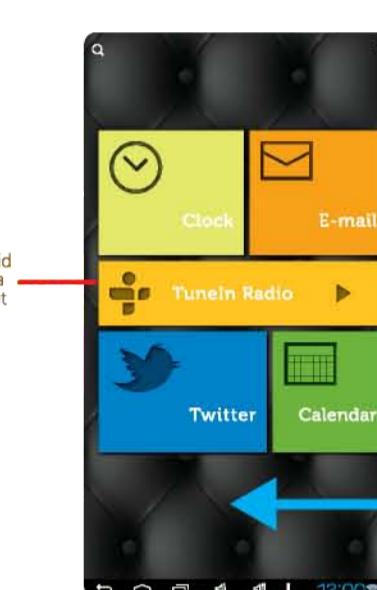

Home screen (center)
Polaroid Home widget



Home screen (right)
Polaroid Settings widget



① Access apps & widgets screen

Press to access the Apps & widgets screens.



Press the to return to the Home screen.

Swipe the Apps & Widgets screen left or right to access more apps and widgets.

Placing apps & widgets on the Home screen

Press & hold an app or widget to place it on one of the Home screens.



Removing shortcuts or widgets


Press and hold the app or widget and slide it as shown below.



Widgets screen

② Status Bar

The Status Bar is available on all screens and apps of the tablet.

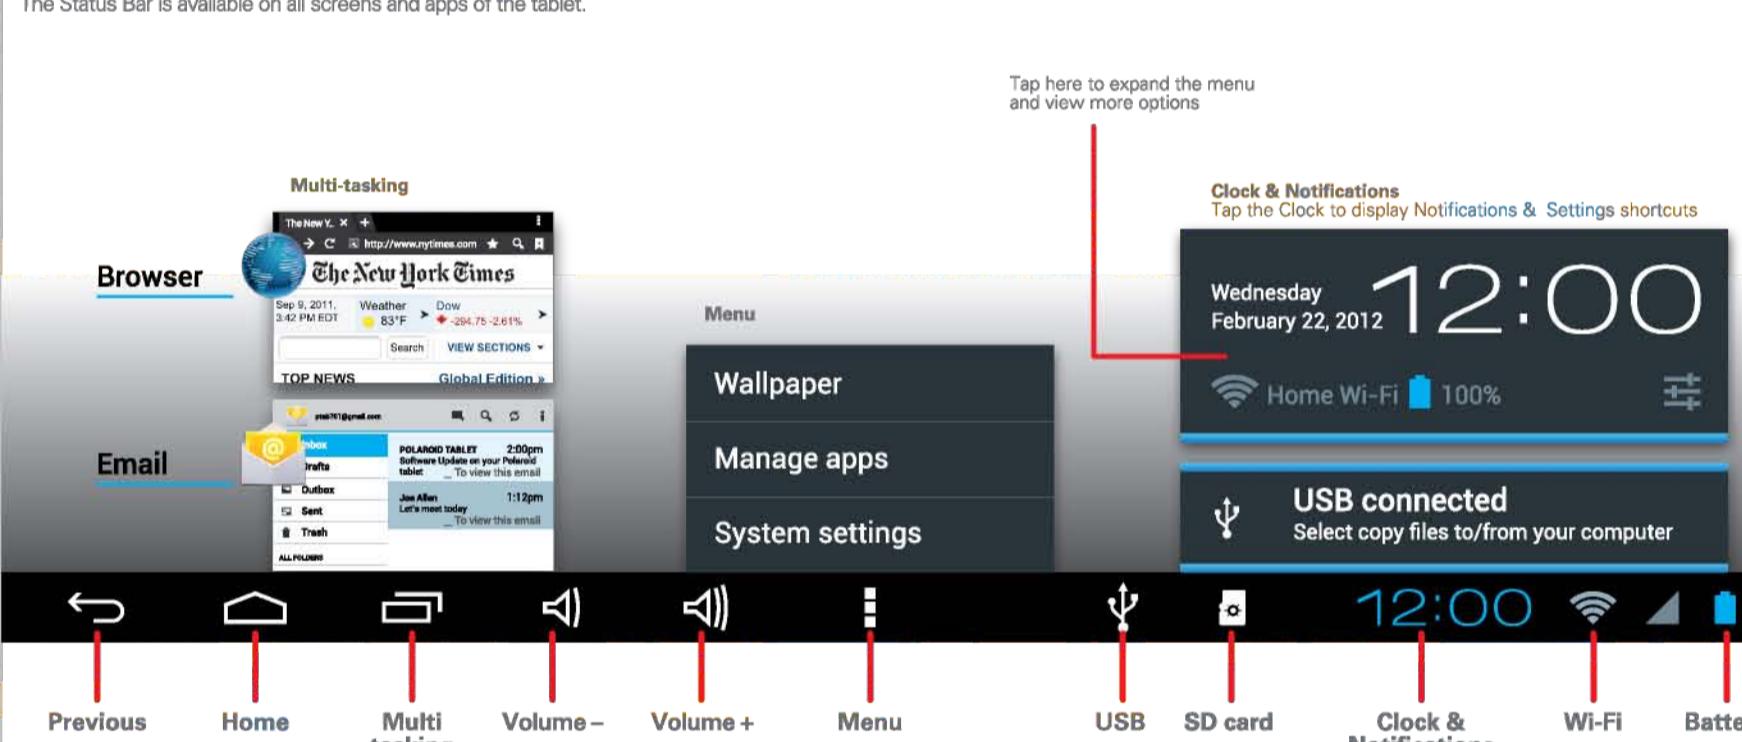


Connecting to Wi-Fi & downloading apps

Setting up Wi-Fi


To browse web sites, use e-mail and download apps, you must first connect the tablet to the internet.

To set up Wi-Fi, use the "Polaroid Settings" widget on the Home screen.

1. Swipe the Home screen to the left to access the Polaroid Settings widget.
2. Select "Wi-Fi Setup".

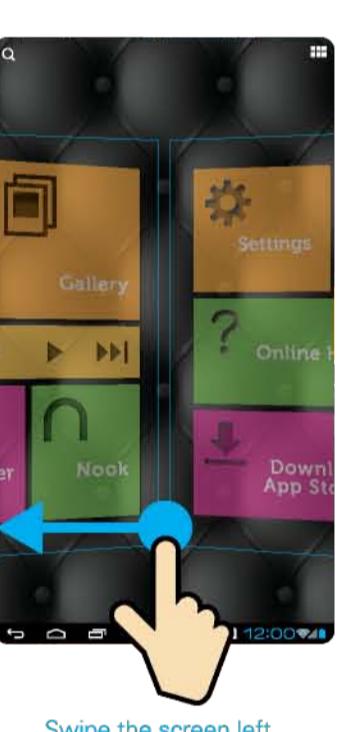

3. Select a network.

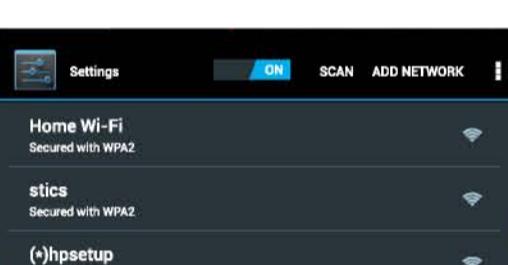

4. If required, enter the correct password and select "Connect".



5. When the tablet is connected to a network, the Wi-Fi icon will appear on the Status Bar and "Connected" will appear under the selected network.



To conserve battery life, turn off Wi-Fi when not connected to a network.


Downloading an App Store

To access a large library of free/paid apps and games, you need to download an app store. We have provided links to several app stores that can be easily accessed by selecting the "Download App Stores" option on the Settings widget.


1. After successfully connecting the tablet to Wi-Fi, select "Download App Stores" on the Polaroid Settings widget.



2. Select an app store, and follow the instructions to download and install it on the tablet.

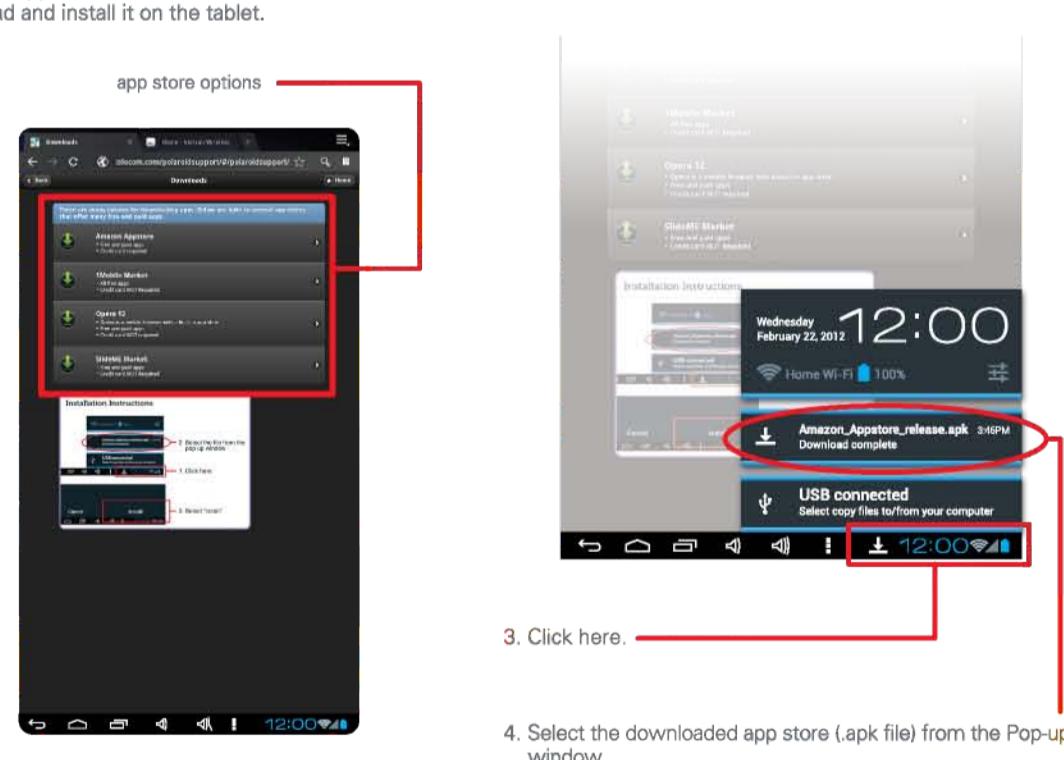

5. Select "Install" to install the app.


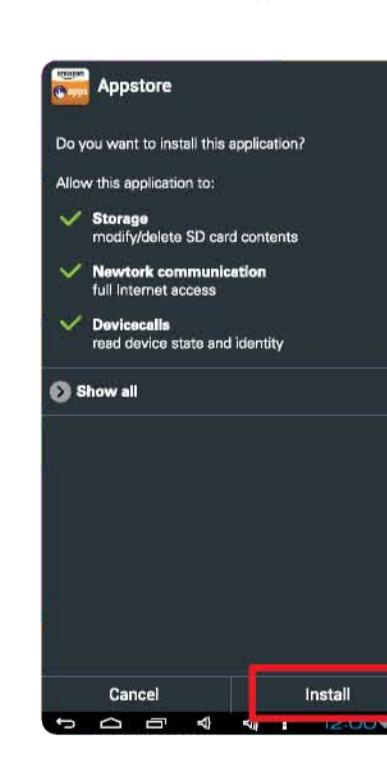


6. The app store appears on the Apps screen.




Downloading and installing apps

After downloading the selected app store, it is possible to download and install apps directly to the tablet - these apps will appear on the Apps screen.

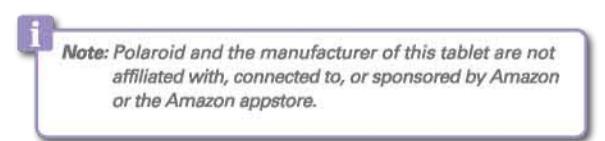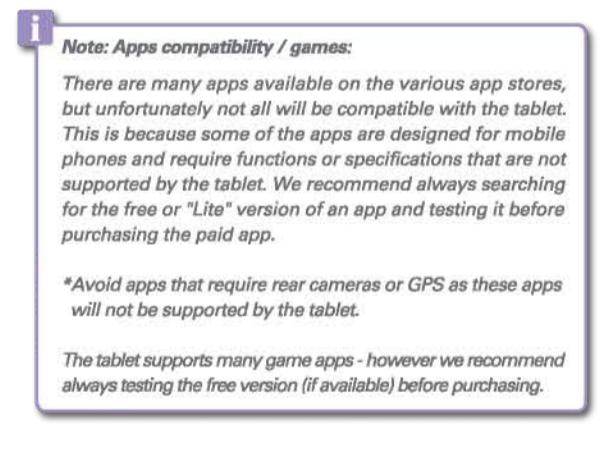



Games
Sometimes, while playing games, the g-sensor on the tablet may not function correctly. This results in games not being controllable. To correct this problem, follow the steps below:

1. Open "Settings".
2. Select "Display".
3. Select "Accelerometer Coordinate System".
4. The default setting is "Default Coordinate System." This setting should work for most games.
5. In case your game is not functioning properly, select "Special coordinate system" to support some other games".

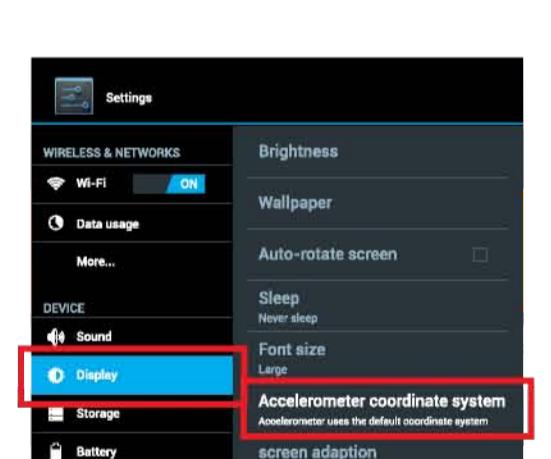


Camera and video chat

Front facing camera
Select on the apps screen to go to camera mode. It is possible to take pictures or videos with the built-in, front facing camera.

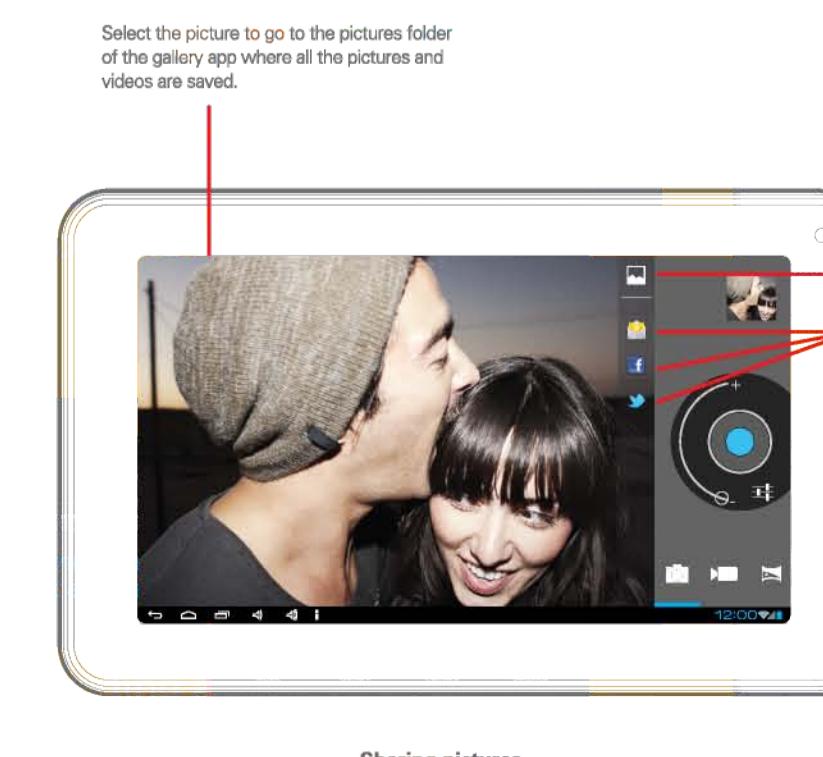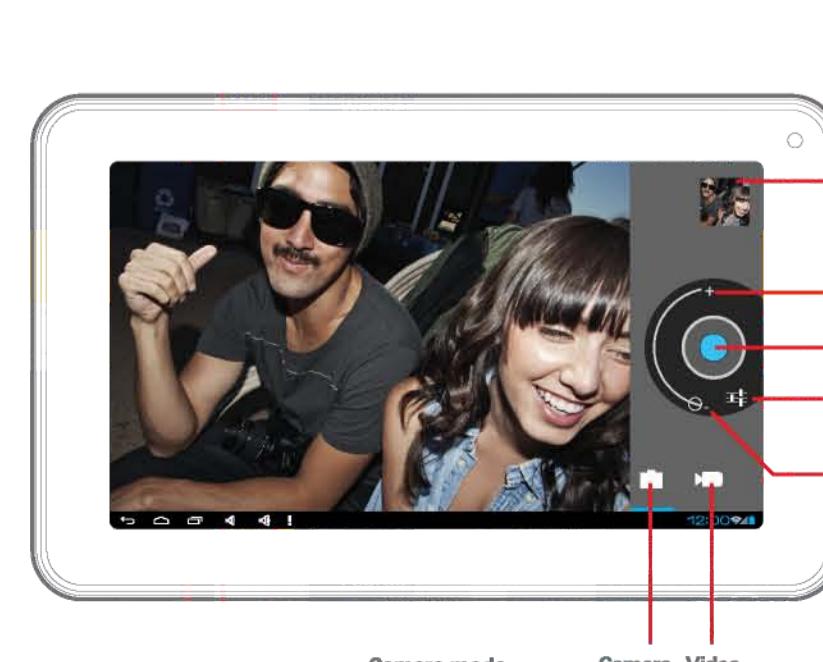



Video chat
Use the built-in, front facing camera to video chat with friends and family.

There are many different services that offer video chat, which are available on the app stores.

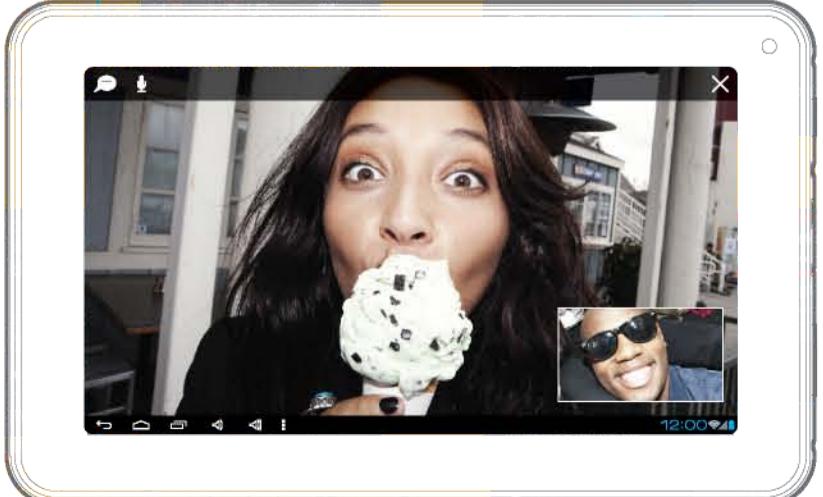



Select "Browser" on the Home or Apps screen (You must connect to Wi-Fi before accessing the web).

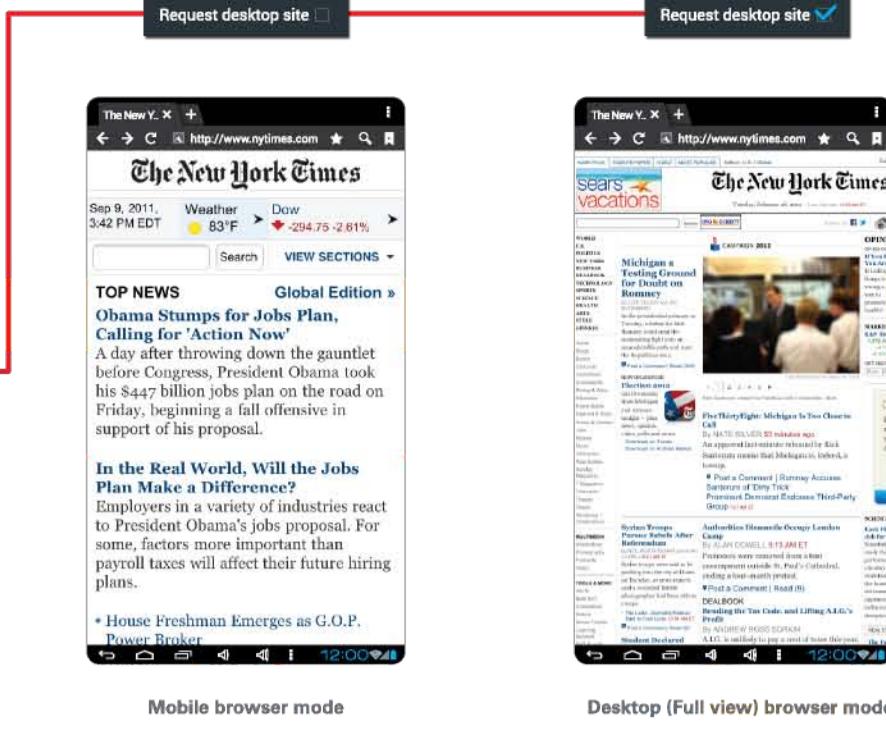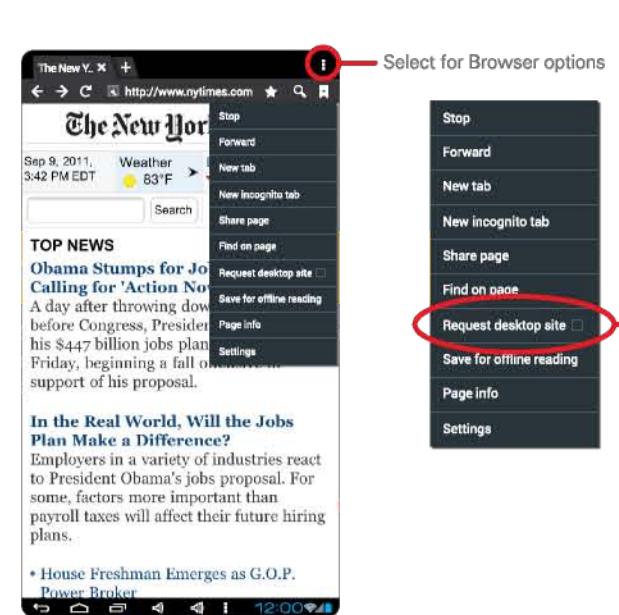

Setting up e-mail

Select "Email" on the Home or Apps screen and follow the instructions to set up your email account on the tablet. (You must connect to Wi-Fi before accessing or setting up email accounts).


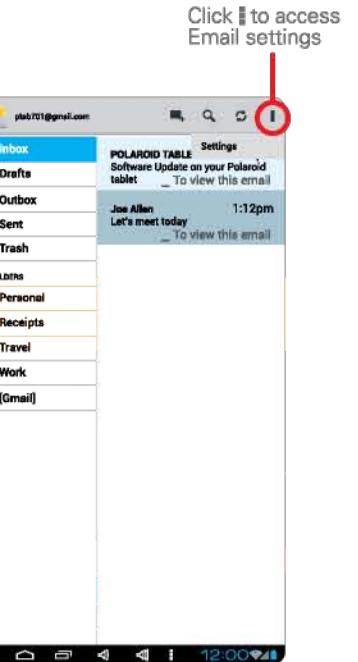


Photo gallery

Select "Gallery" on the Home or Apps screen to access pictures and videos stored on the tablet or Micro SD card.



Select "Gallery" on the Home or Apps screen to access pictures and videos stored on the tablet or Micro SD card.

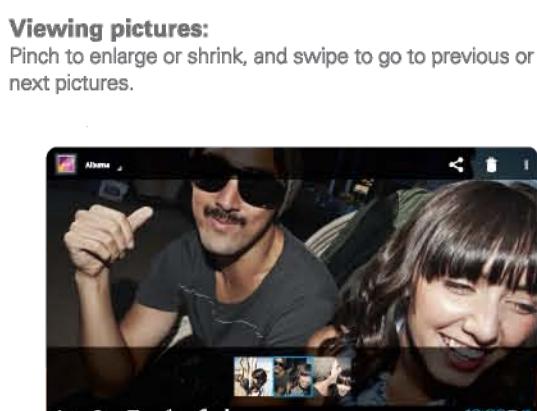

Viewing pictures:
Pinch to enlarge or shrink, and swipe to go to previous or next pictures.

- Share: Share the selected picture through Email, Facebook, or Twitter
- Trash: Delete the selected picture
- Menu: Slideshow, edit and more


Watching videos:
While playing a video, tap the display to access the video controller, tap the display again to hide the controller.

Transferring and managing files

It is possible to manage and transfer media files to the tablet by connecting it to your computer.


Conserve Internal Memory!

It is strongly recommended to purchase and install a Micro SD card before transferring or downloading media files.

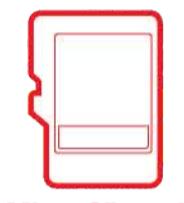


Micro SD card

Tips: Transfer and store media files such as music, pictures and video on a Micro SD card and avoid placing these types of files in the internal memory of the tablet - this will conserve the internal memory, and allow you to download more apps.

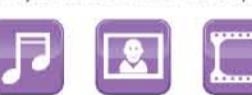

4. Copy media files from your computer to the Micro SD card.

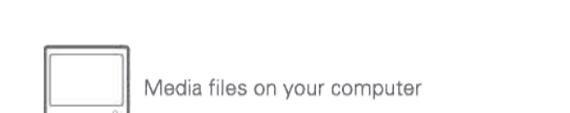

Inserting Micro SD card

The tablet supports Micro SD cards up to 32GB (not included).

To install a Micro SD card into the tablet:

1. Insert the card face up into the card slot until it clicks and locks into place.



2. Once the card is mounted, the card icon appears on the Status Bar.




3. To access the Micro SD card, select "Explorer" from the Apps screen.



Explorer


Unmount & remove the Micro SD card:

1. Open "Settings".
2. Select "Storage".
3. Select "Unmount Micro SD card".
4. It is now safe to remove the card from the tablet.

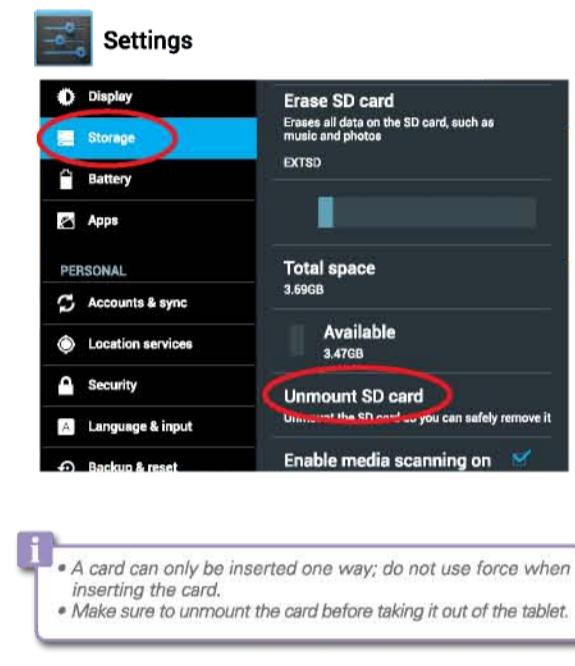


Connecting the tablet to a PC or Mac:


1. Connect the included USB cable to the "USB port" of the tablet and USB port of the computer.

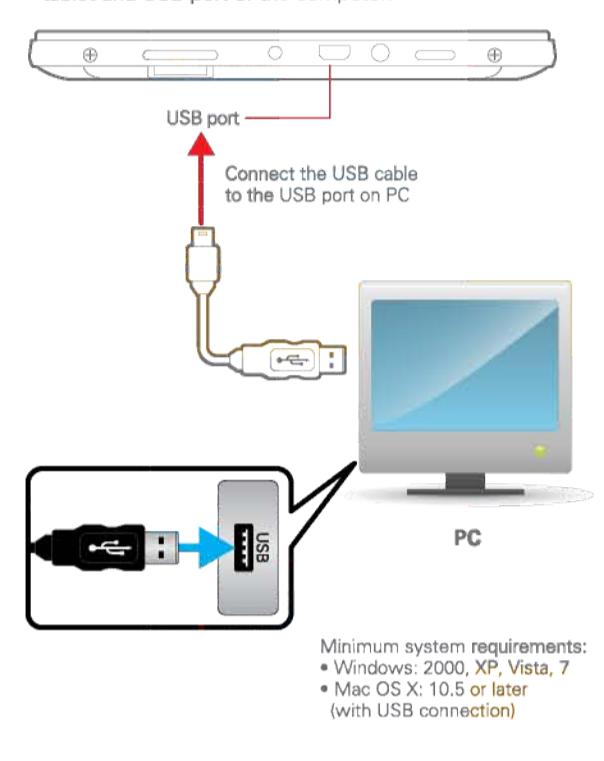

2. The "USB connected" screen appears, select "Turn on USB storage", then select "OK".

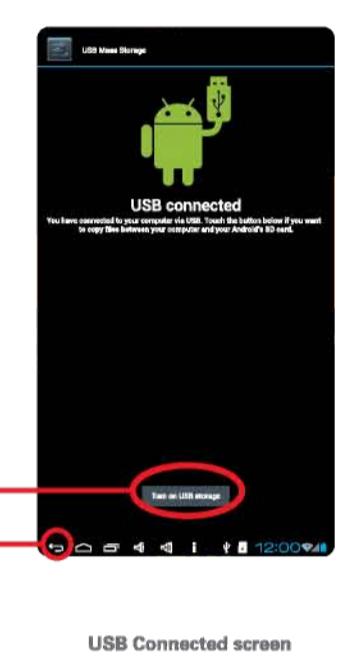


3. The "AutoPlay" window appears on your computer's display - select "INTERNAL" to view and manage files on the tablet, or if a Micro SD card is inserted, select "Removable" to manage files on the card.

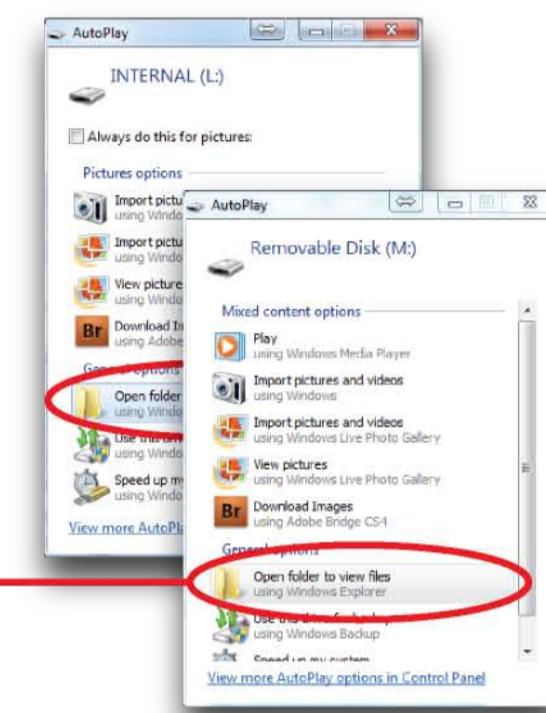


Browsing files


Explorer app: To view, open, copy or delete files on the internal memory of the Tablet, inserted Micro SD card or USB stick, select "Explorer" on the Apps screen.

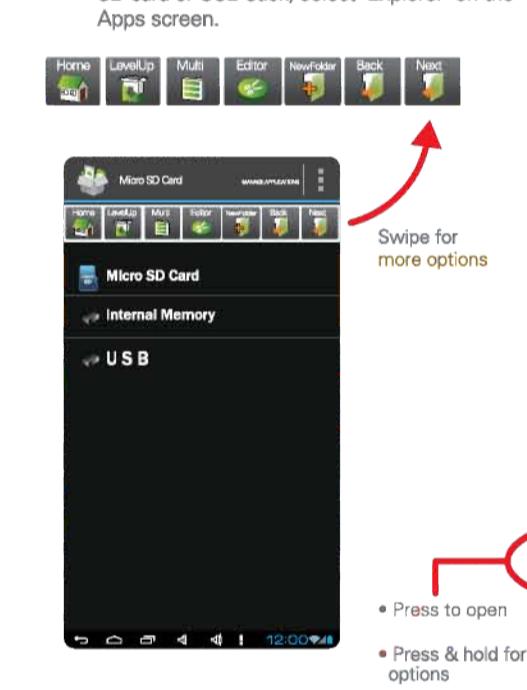


1. Briefly press a file or folder to open it. To copy, move or delete a file or folder, press and hold it until the options window appears.

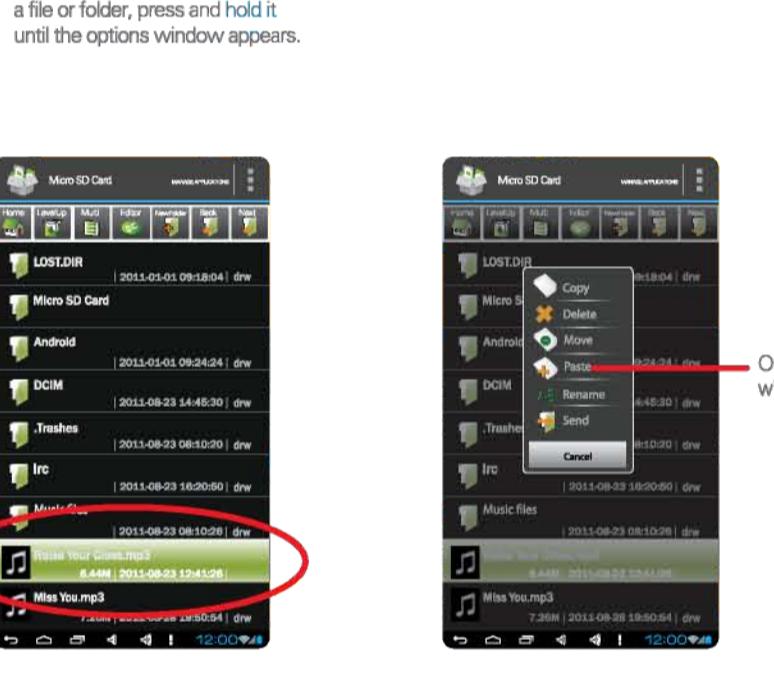

2. Select an option from the options window.


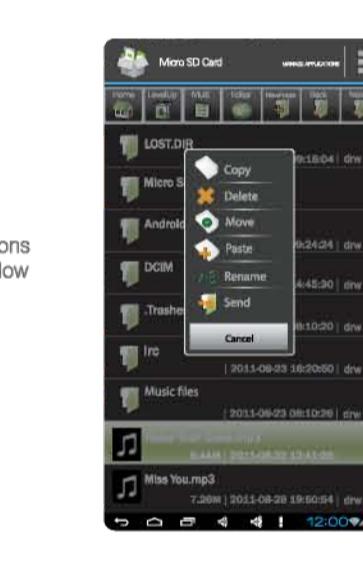


3. If you select "Copy" or "Move", use the "Home" or "LevelUp" options on the top bar, and select a location to move the file or folder to, and press "Editor" and select "Paste".

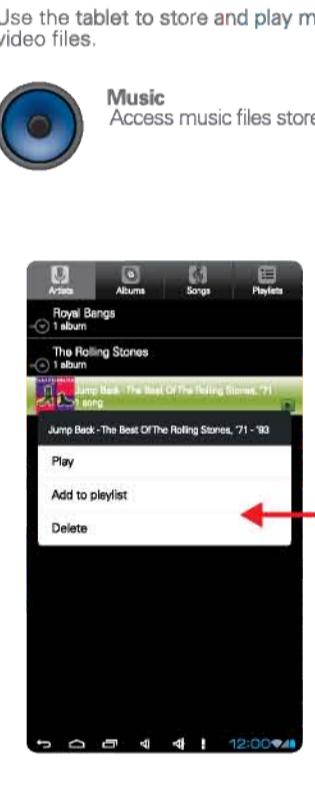

Use the tablet to store and play music, pictures and video files.


Music Access music files stored on the tablet.

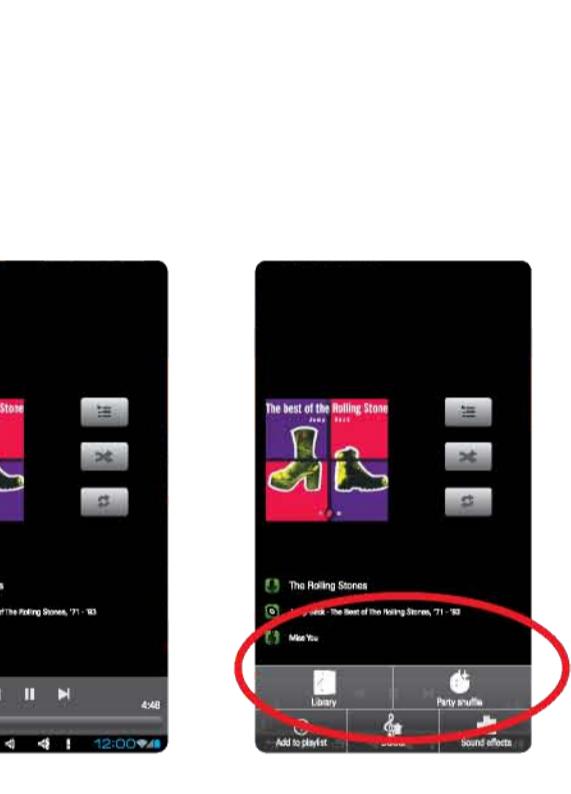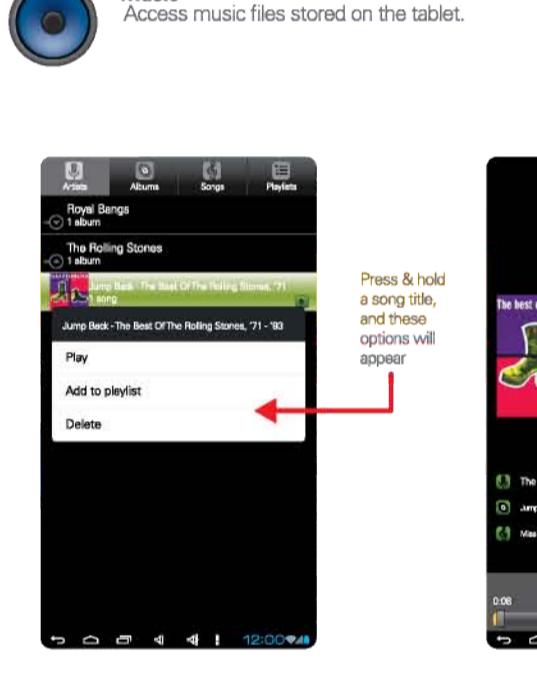


Conserve Internal Memory!

Transfer media files to "Removable Disk" (Micro SD card)

 
5. Select "Turn off USB storage" on the tablet to disconnect it from the computer.



Tips: Organize your media (pictures, videos and music) by creating folders such as "Pictures", "Videos" and "Music" on the Micro SD card as shown below.

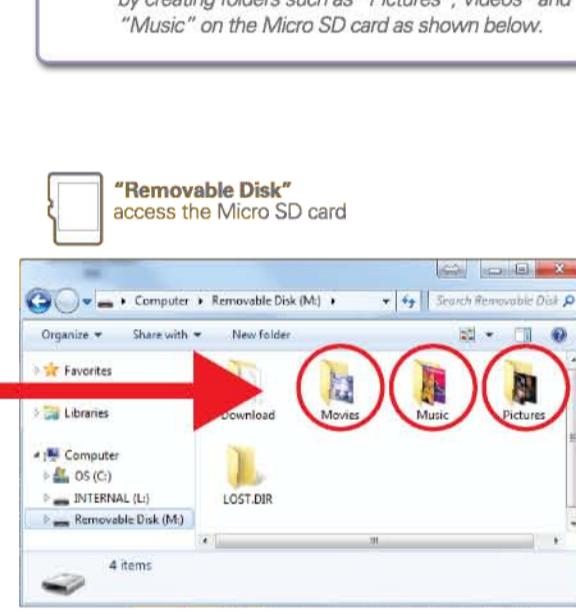


5. Select "Turn off USB storage" on the tablet to disconnect it from the computer.

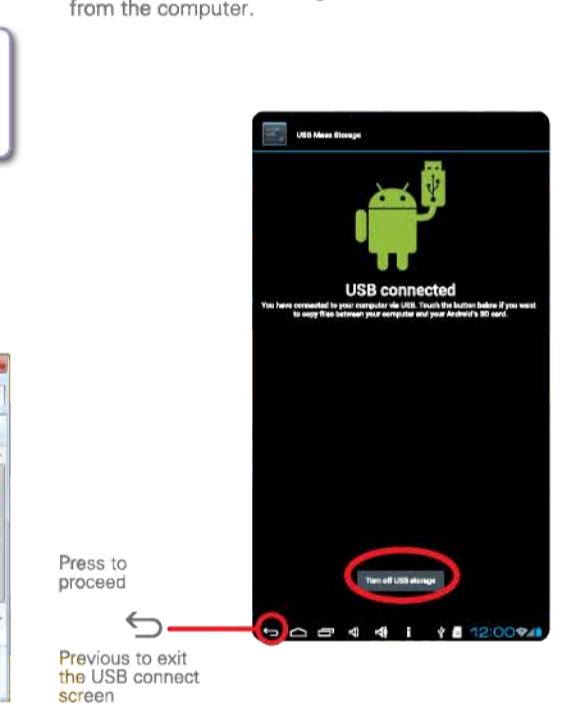

Settings


Settings app: Select and customize the options in "Settings" to increase battery performance, manage applications, manage Wi-Fi, change display options, set passwords and more.

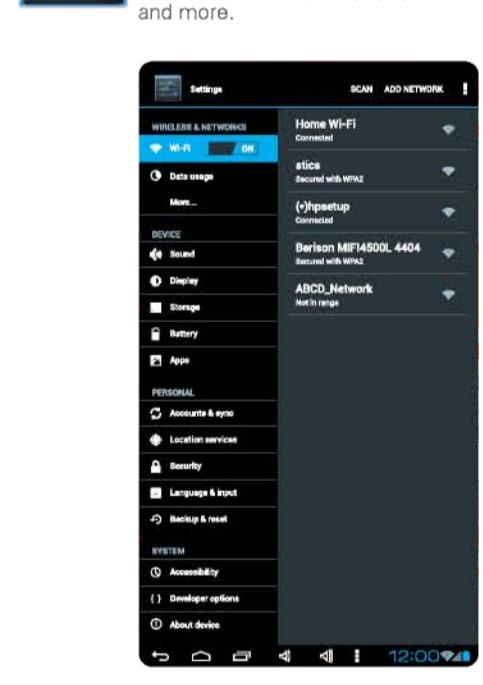

Online help

Select "Online Help" on the Apps screen to access:


- App stores
- Firmware updates
- Technical support
- Product registration

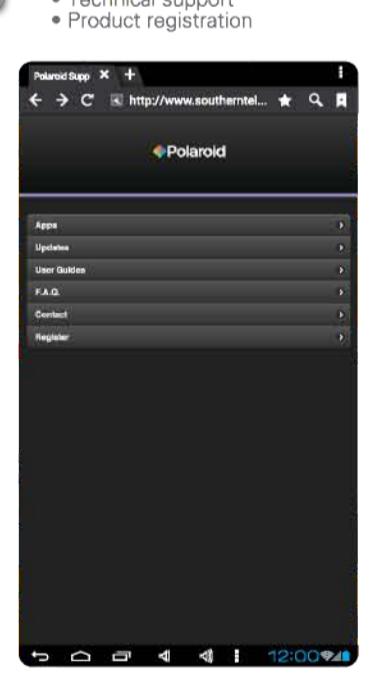

Resetting

In the event that the tablet freezes or does not function properly, try correcting the problem by pressing the RESET button located on the back panel (shown below).


Use a paper clip or the tip of a stylus to press the RESET button. Data stored on the tablet will not be affected by using the RESET button.

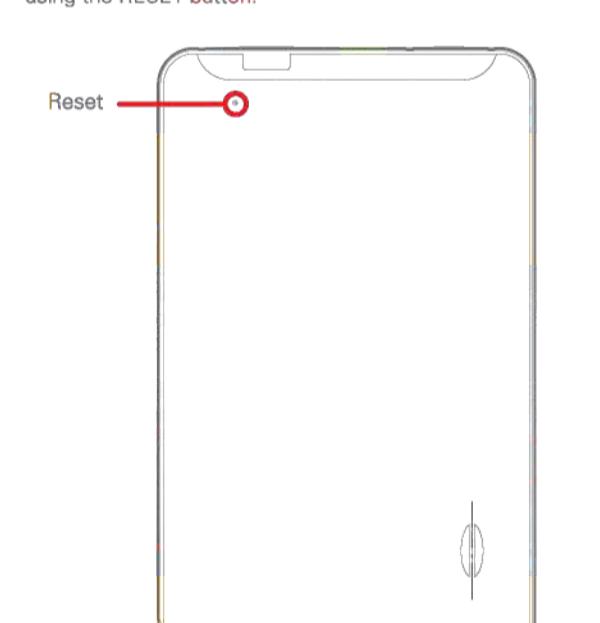

Restore

If the problem persists it may be necessary to restore the tablet to the factory default settings:

1. Select "Settings" from the Apps screen.
2. Select "Backup & reset".
3. Select "Factory data reset" (this will erase data stored on the device so make sure to back up your data prior to using this option).

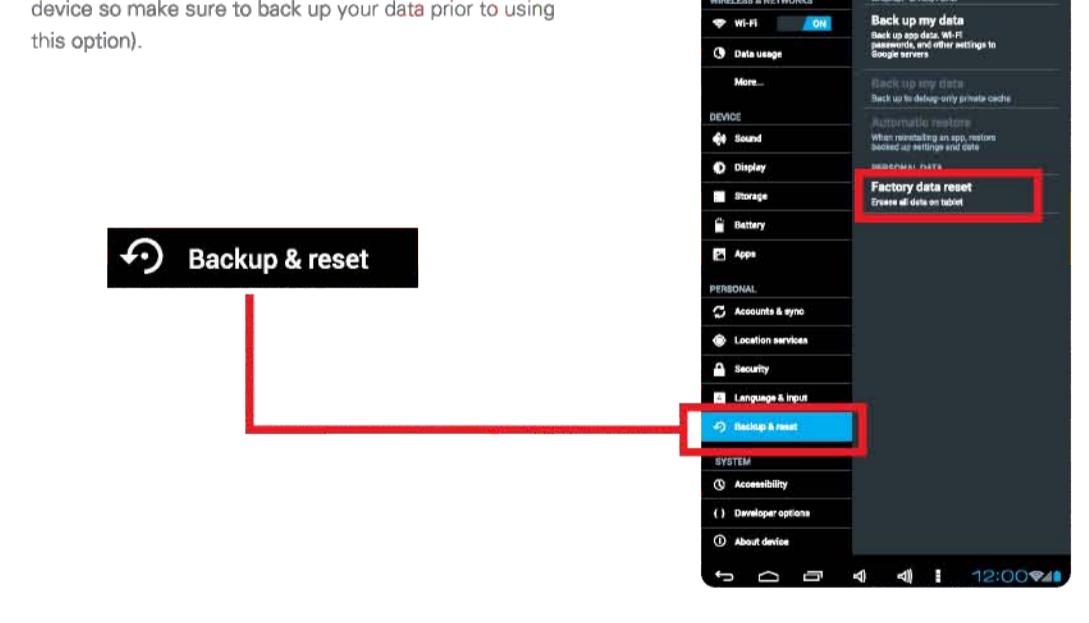

Specifications

- Operating System: Android 4.1 (Jelly Bean)
- Processor: ARM CORTEX-A8
- Processor Speed: 1GHz
- RAM: 512MB DDR3
- Graphic Accelerator: OpenGL ES 2.0 (3D game support)
- Memory: Internal Memory: 4GB
 - External Memory: Micro SD card slot
- Display: 7" capacitive multi-touch screen
- Display Resolution: 800x480 (16:9), 4 way auto rotation
- Cameras: 0.3MP Front camera
- Network: Wi-Fi (802.11 b/g/n)

* Actual internal memory may vary depending on the operating system of the device and the preloaded apps.

- Operating System: Android 4.1 (Jelly Bean)
- Processor: ARM CORTEX-A8
- Processor Speed: 1GHz
- RAM: 512MB DDR3
- Graphic Accelerator: OpenGL ES 2.0 (3D game support)
- Memory: Internal Memory: 4GB
 - External Memory: Micro SD card slot
- Display: 7" capacitive multi-touch screen
- Display Resolution: 800x480 (16:9), 4 way auto rotation
- Cameras: 0.3MP Front camera
- Network: Wi-Fi (802.11 b/g/n)

* Actual internal memory may vary depending on the operating system of the device and the preloaded apps.

- Operating System: Android 4.1 (Jelly Bean)
- Processor: ARM CORTEX-A8
- Processor Speed: 1GHz
- RAM: 512MB DDR3
- Graphic Accelerator: OpenGL ES 2.0 (3D game support)
- Memory: Internal Memory: 4GB
 - External Memory: Micro SD card slot
- Display: 7" capacitive multi-touch screen
- Display Resolution: 800x480 (16:9), 4 way auto rotation
- Cameras: 0.3MP Front camera
- Network: Wi-Fi (802.11 b/g/n)

* Actual internal memory may vary depending on the operating system of the device and the preloaded apps.

- Operating System: Android 4.1 (Jelly Bean)
- Processor: ARM CORTEX-A8
- Processor Speed: 1GHz
- RAM: 512MB DDR3
- Graphic Accelerator: OpenGL ES 2.0 (3D game support)
- Memory: Internal Memory: 4GB
 - External Memory: Micro SD card slot
- Display: 7" capacitive multi-touch screen
- Display Resolution: 800x480 (16:9), 4 way auto rotation
- Cameras: 0.3MP Front camera
- Network: Wi-Fi (802.11 b/g/n)

* Actual internal memory may vary depending on the operating system of the device and the preloaded apps.

- Operating System: Android 4.1 (Jelly Bean)
- Processor: ARM CORTEX-A8
- Processor Speed: 1GHz
- RAM: 512MB DDR3
- Graphic Accelerator: OpenGL ES 2.0 (3D game support)
- Memory: Internal Memory: 4GB
 - External Memory: Micro SD card slot
- Display: 7" capacitive multi-touch screen
- Display Resolution: 800x480 (16:9), 4 way auto rotation
- Cameras: 0.3MP Front camera
- Network: Wi-Fi (802.11 b/g/n)

* Actual internal memory may vary depending on the operating system of the device and the preloaded apps.

- Operating System: Android 4.1 (Jelly Bean)
- Processor: ARM CORTEX-A8
- Processor Speed: 1GHz
- RAM: 512MB DDR3
- Graphic Accelerator: OpenGL ES 2.0 (3D game support)
- Memory: Internal Memory: 4GB
 - External Memory: Micro SD card slot
- Display: 7" capacitive multi-touch screen
- Display Resolution: 800x480 (16:9), 4 way auto rotation
- Cameras: 0.3MP Front camera
- Network: Wi-Fi (802.11 b/g/n)

* Actual internal memory may vary depending on the operating system of the device and the preloaded apps.

- Operating System: Android 4.1 (Jelly Bean)
- Processor: ARM CORTEX-A8
- Processor Speed: 1GHz
- RAM: 512MB DDR3
- Graphic Accelerator: OpenGL ES 2.0 (3D game support)
- Memory: Internal Memory: 4GB
 - External Memory: Micro SD card slot
- Display: 7" capacitive multi-touch screen
- Display Resolution: 800x480 (16:9), 4 way auto rotation
- Cameras: 0.3MP Front camera
- Network: Wi-Fi (802.11 b/g/n)

* Actual internal memory may vary depending on the operating system of the device and the preloaded apps.

- Operating System: Android 4.1 (Jelly Bean)
- Processor: ARM CORTEX-A8
- Processor Speed: 1GHz
- RAM: 512MB DDR3
- Graphic Accelerator: OpenGL ES 2.0 (3D game support)
- Memory: Internal Memory: 4GB
 - External Memory: Micro SD card slot
- Display: 7" capacitive multi-touch screen
- Display Resolution: 800x480 (16:9), 4 way auto rotation
- Cameras: 0.3MP Front camera
- Network: Wi-Fi (802.11 b/g/n)

* Actual internal memory may vary depending on the operating system of the device and the preloaded apps.

- Operating System: Android 4.1 (Jelly Bean)
- Processor: ARM CORTEX-A8
- Processor Speed: 1GHz
- RAM: 512MB DDR3
- Graphic Accelerator: OpenGL ES 2.0 (3D game support)
- Memory: Internal Memory: 4GB
 - External Memory: Micro SD card slot
- Display: 7" capacitive multi-touch screen
- Display Resolution: 800x480 (16:9), 4 way auto rotation
- Cameras: 0.3MP Front camera
- Network: Wi-Fi (802.11 b/g/n)

* Actual internal memory may vary depending on the operating system of the device and the preloaded apps.

- Operating System: Android 4.1 (Jelly Bean)
- Processor: ARM CORTEX-A8
- Processor Speed: 1GHz
- RAM: 512MB DDR3
- Graphic Accelerator: OpenGL ES 2.0 (3D game support)
- Memory: Internal Memory: 4GB
 - External Memory: Micro SD card slot
- Display: 7" capacitive multi-touch screen
- Display Resolution: 800x480 (16:9), 4 way auto rotation
- Cameras: 0.3MP Front camera
- Network: Wi-Fi (802.11 b/g/n)

* Actual internal memory may vary depending on the operating system of the device and the preloaded apps.

- Operating System: Android 4.1 (Jelly Bean)
- Processor: ARM CORTEX-A8
- Processor Speed: 1GHz
- RAM: 512MB DDR3
- Graphic Accelerator: OpenGL ES 2.0 (3D game support)
- Memory: Internal Memory: 4GB
 - External Memory: Micro SD card slot
- Display: 7" capacitive multi-touch screen
- Display Resolution: 800x480 (16:9), 4 way auto rotation
- Cameras: 0.3MP Front camera
- Network: Wi-Fi (802.11 b/g/n)

* Actual internal memory may vary depending on the operating system of the device and the preloaded apps.

- Operating System: Android 4.1 (Jelly Bean)
- Processor: ARM CORTEX-A8
- Processor Speed: 1GHz
- RAM: 512MB DDR3
- Graphic Accelerator: OpenGL ES 2.0 (3D game support)
- Memory: Internal Memory: 4GB
 - External Memory: Micro SD card slot
- Display: 7" capacitive multi-touch screen
- Display Resolution: 800x480 (16:9), 4 way auto rotation
- Cameras: 0.3MP Front camera
- Network: Wi-Fi (802.11 b/g/n)