

3/11/02

USERS MANUAL

MEDIAGROUP WIRELESS HANDHELD AUDIENCE RESPONSE KEYPAD

FCC ID: P8LMGW220

This device complies with part 15 of the FCC Rules:

Operation is subject to the following conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received,
Including interference that may cause undesired operation

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Mediagroup Wireless
12 S. Main Street
South Norwalk, CT 06854**

INSTRUCTIONS FOR USE

- Keypads are turned ON by depressing any key on the face of the handset
- A “ • ” on the keypad LCD Screen indicates that the keypad is ‘ON’
- Keypads not hearing any ‘pulse’ from the Transceiver Base Station (TBS), will turn off in approximately :60 seconds
- Keypads may be turned off manually by depressing the “ * ” key and holding it for 3+ seconds
- Single Digit Data from a Keypad is transmitted by depressing the appropriate key
- Multiple Digit Data from a Keypad is transmitted by depressing the appropriate keys, followed by the “SEND” key
- Keypad Channels are set by commands from the PC. However manual assignment can be accomplished ‘onboard’ by depressing the letter keys ‘B’ & ‘D’ simultaneously and waiting (approximately 3+ seconds) for the letter ‘C’ to appear in the LCD. A new Channel Number may then be entered
- Keypad Numbers can be set ‘onboard’ by depressing the ‘#’ key and waiting (approximately 3+ seconds) for the # icon to appear in the LCD. A new Keypad Number may then be entered
- The ‘CLEAR’ Key will ‘back-out’ digits on the LCD screen one at a time, or if held for 2+ seconds, will clear the LCD screen completely (except for the ‘Flag’ or ‘Call’ icons)
- The ‘FLAG’ Key and the ‘CALL’ Key can be set by depressing the appropriate Key. The ‘FLAG’ or ‘CALL’ icon will appear on the LCD screen. Depressing the key a second time, will clear the icon from the LCD, or it may be cleared by a command from the PC
- Entering a “USER SPECIFIC ID#” is accomplished by depressing the ‘LOG’ Key. The ‘LOG-IN’ icon will appear on the LCD. The user then enters the appropriate ID#, and depresses the ‘LOG’ Key a second time to set and allow the ID# to be retrieved
- A ‘BATTERY’ icon light on the LCD screen automatically when the Battery power falls below an acceptable level. Replace battery promptly.
- Depressing the letter keys ‘A’ & ‘E’ keys simultaneously for 3+ seconds, will clear all memory held in the Keypad, and re-set the Keypad to its original factory setting