




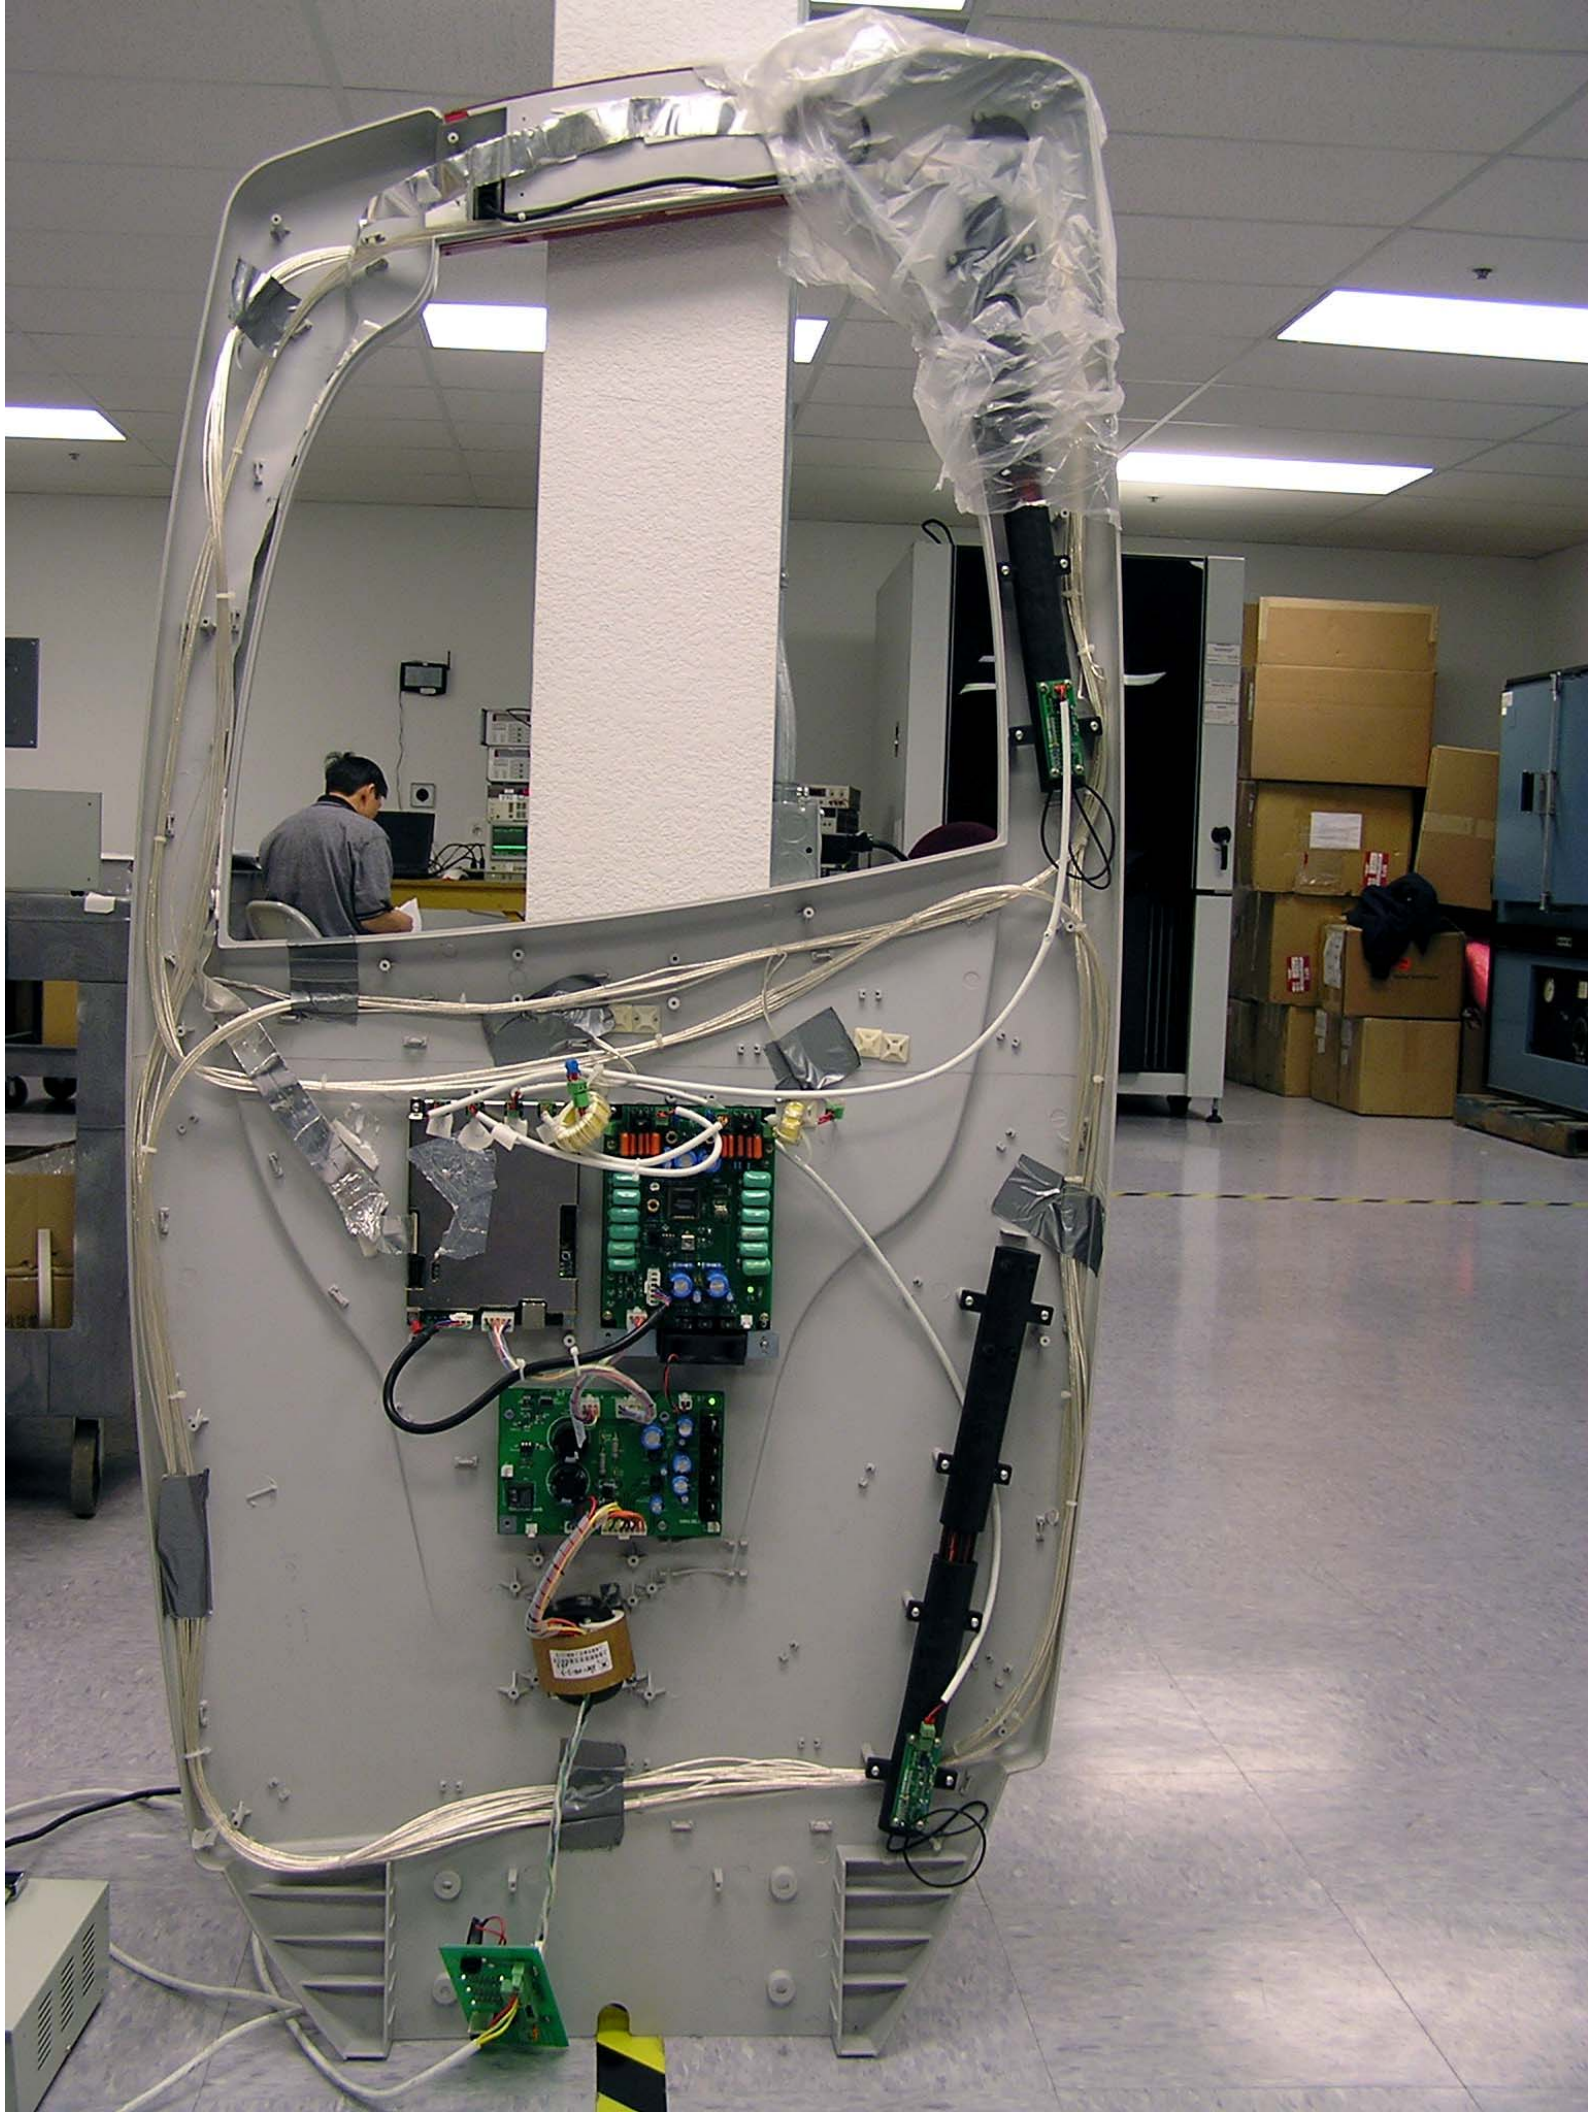

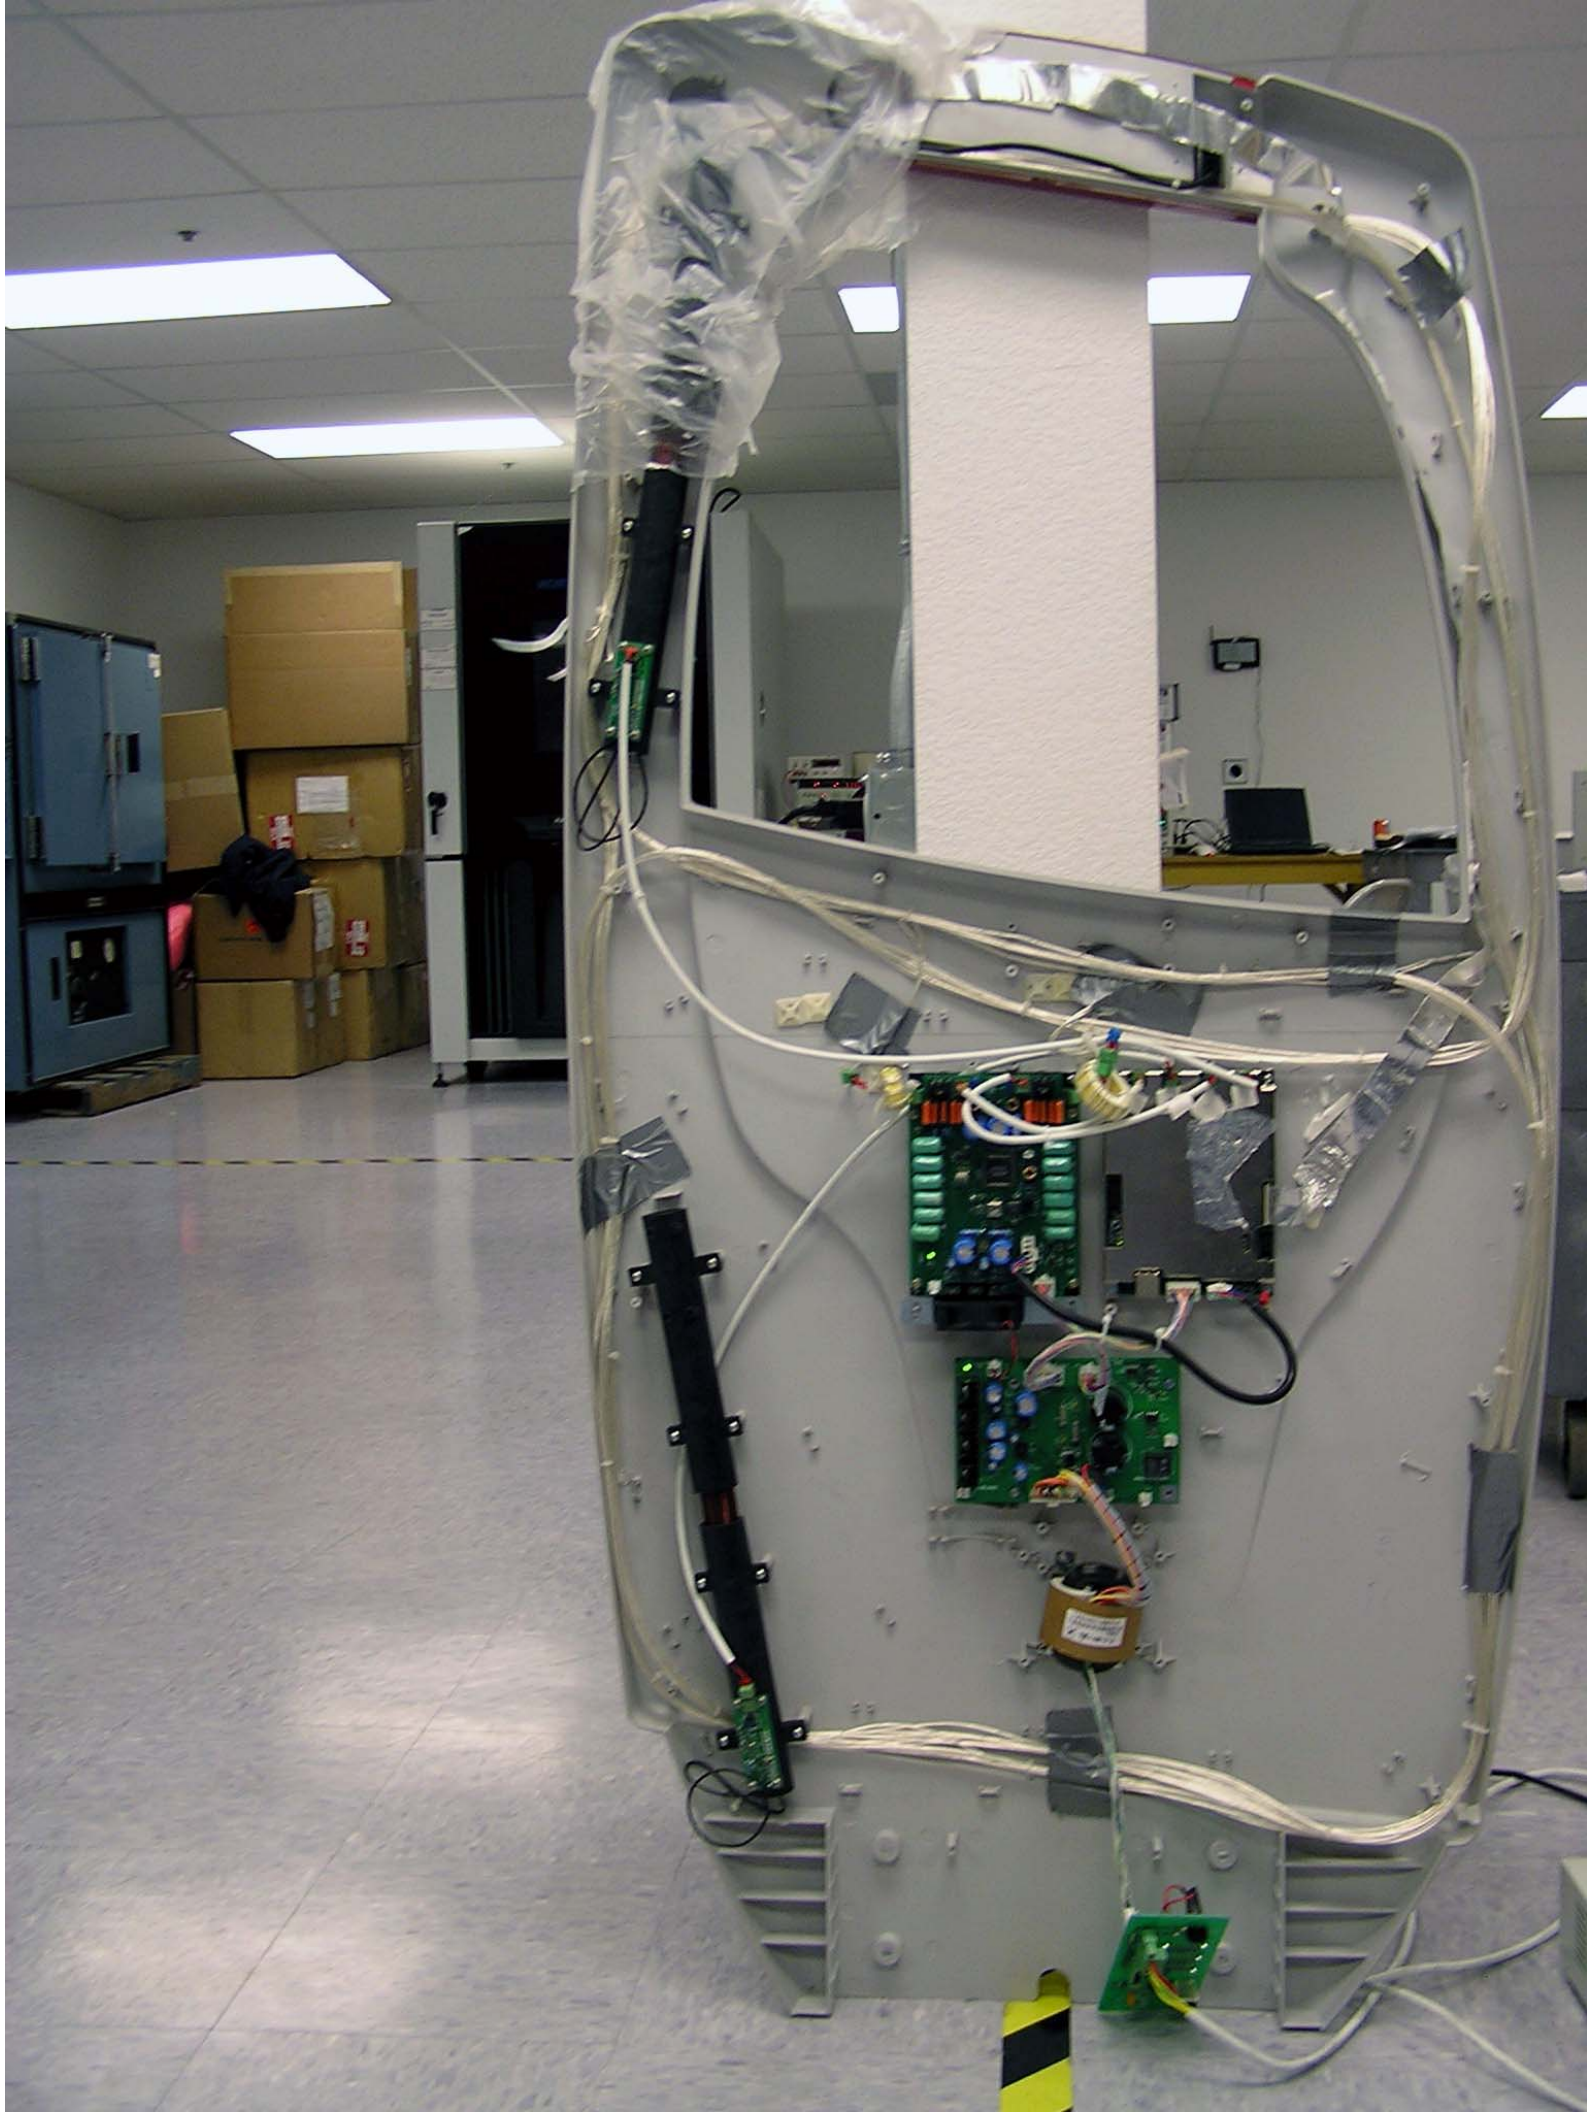

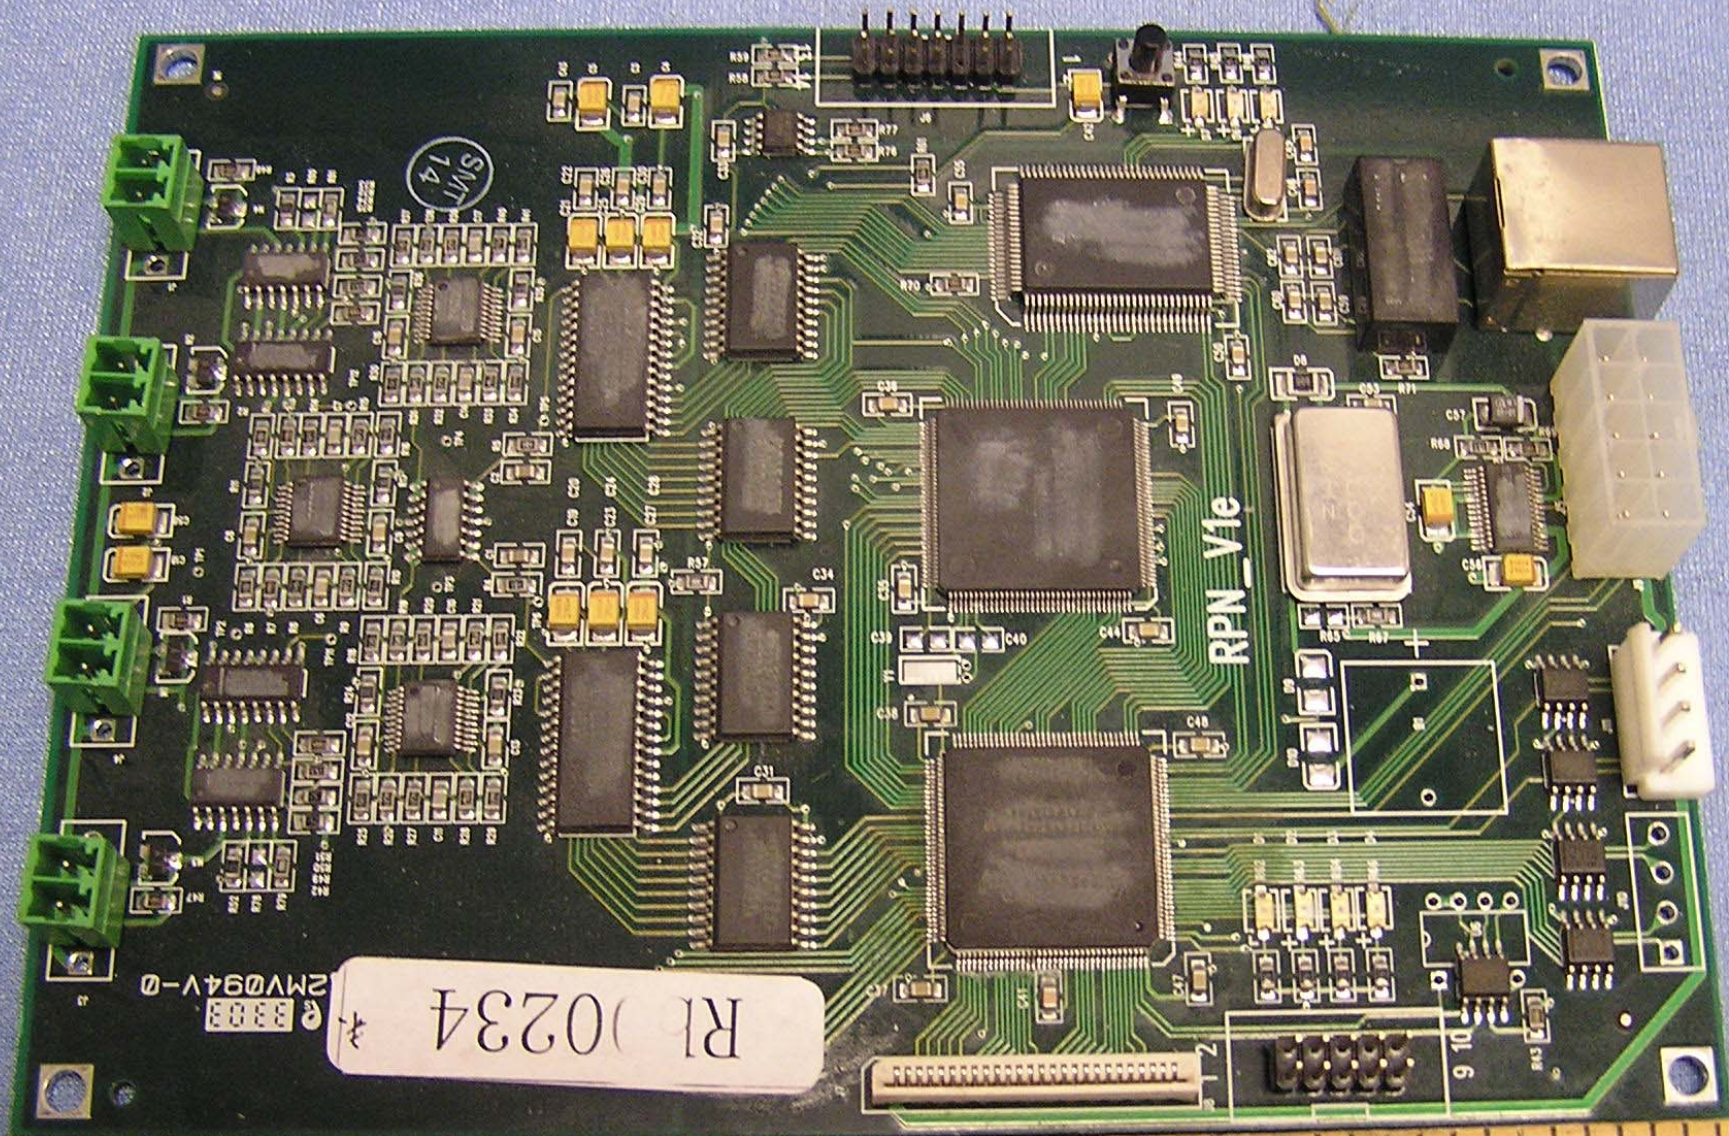



RI 00234
2MV094V-0


RI 00234


RPN_V1e


SMT
14




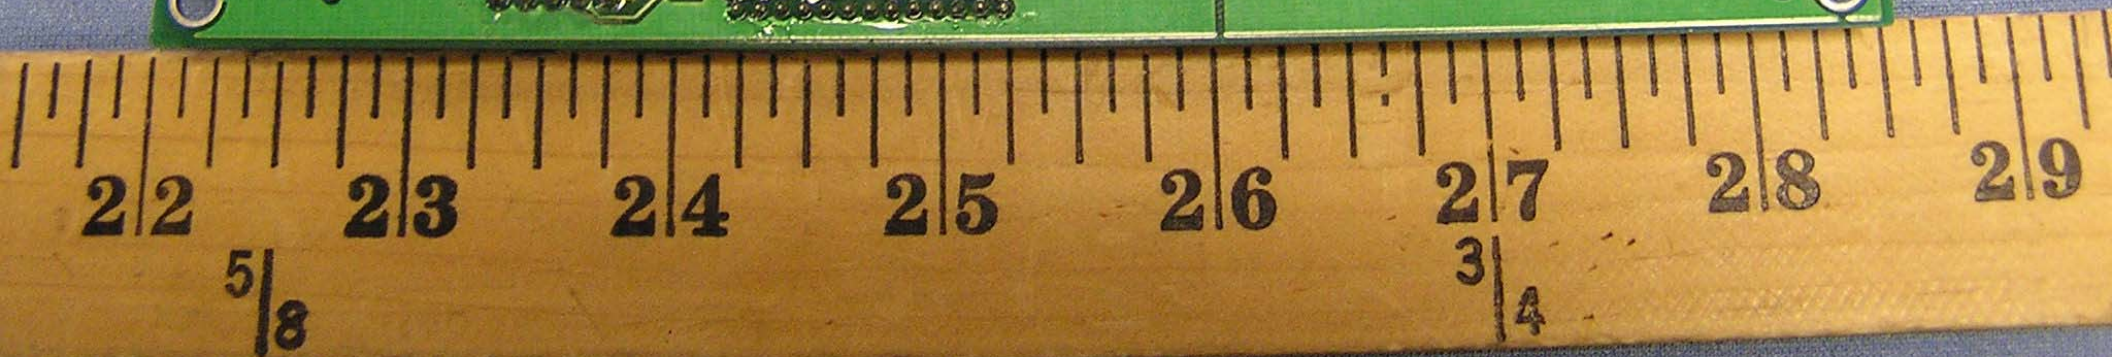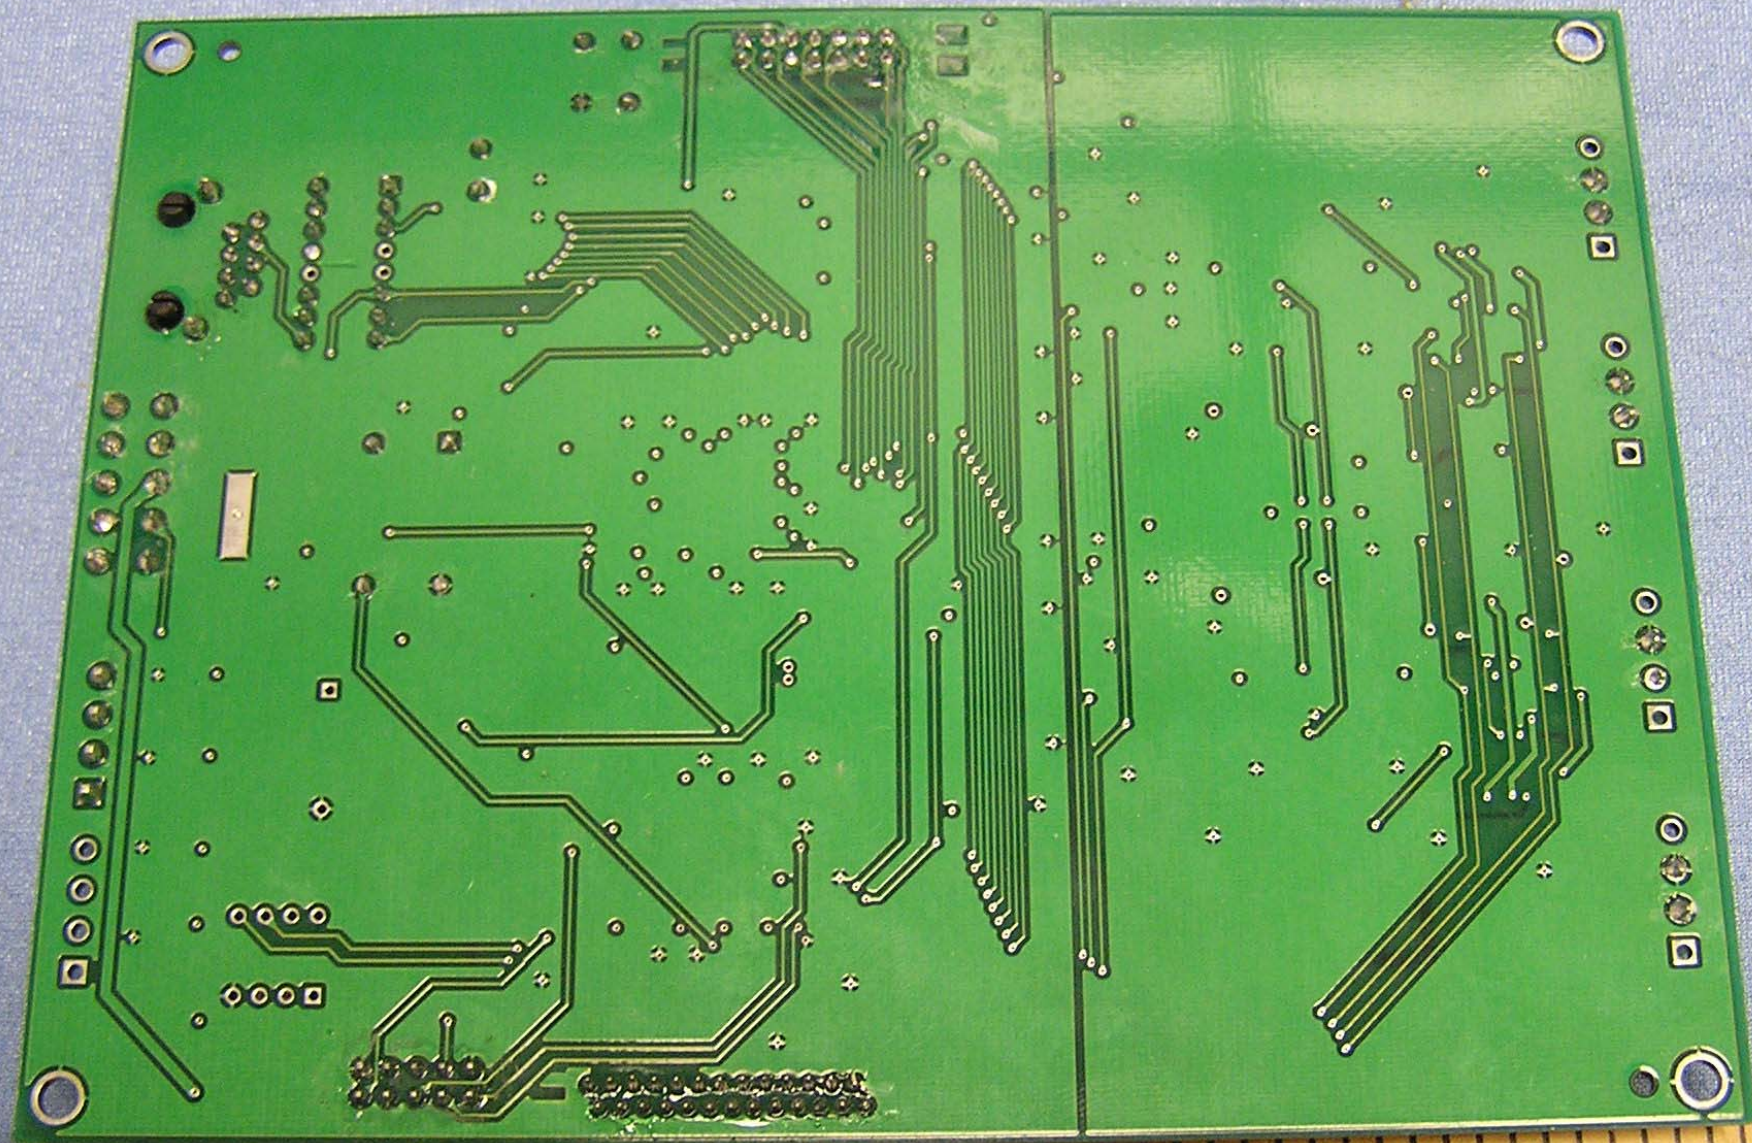

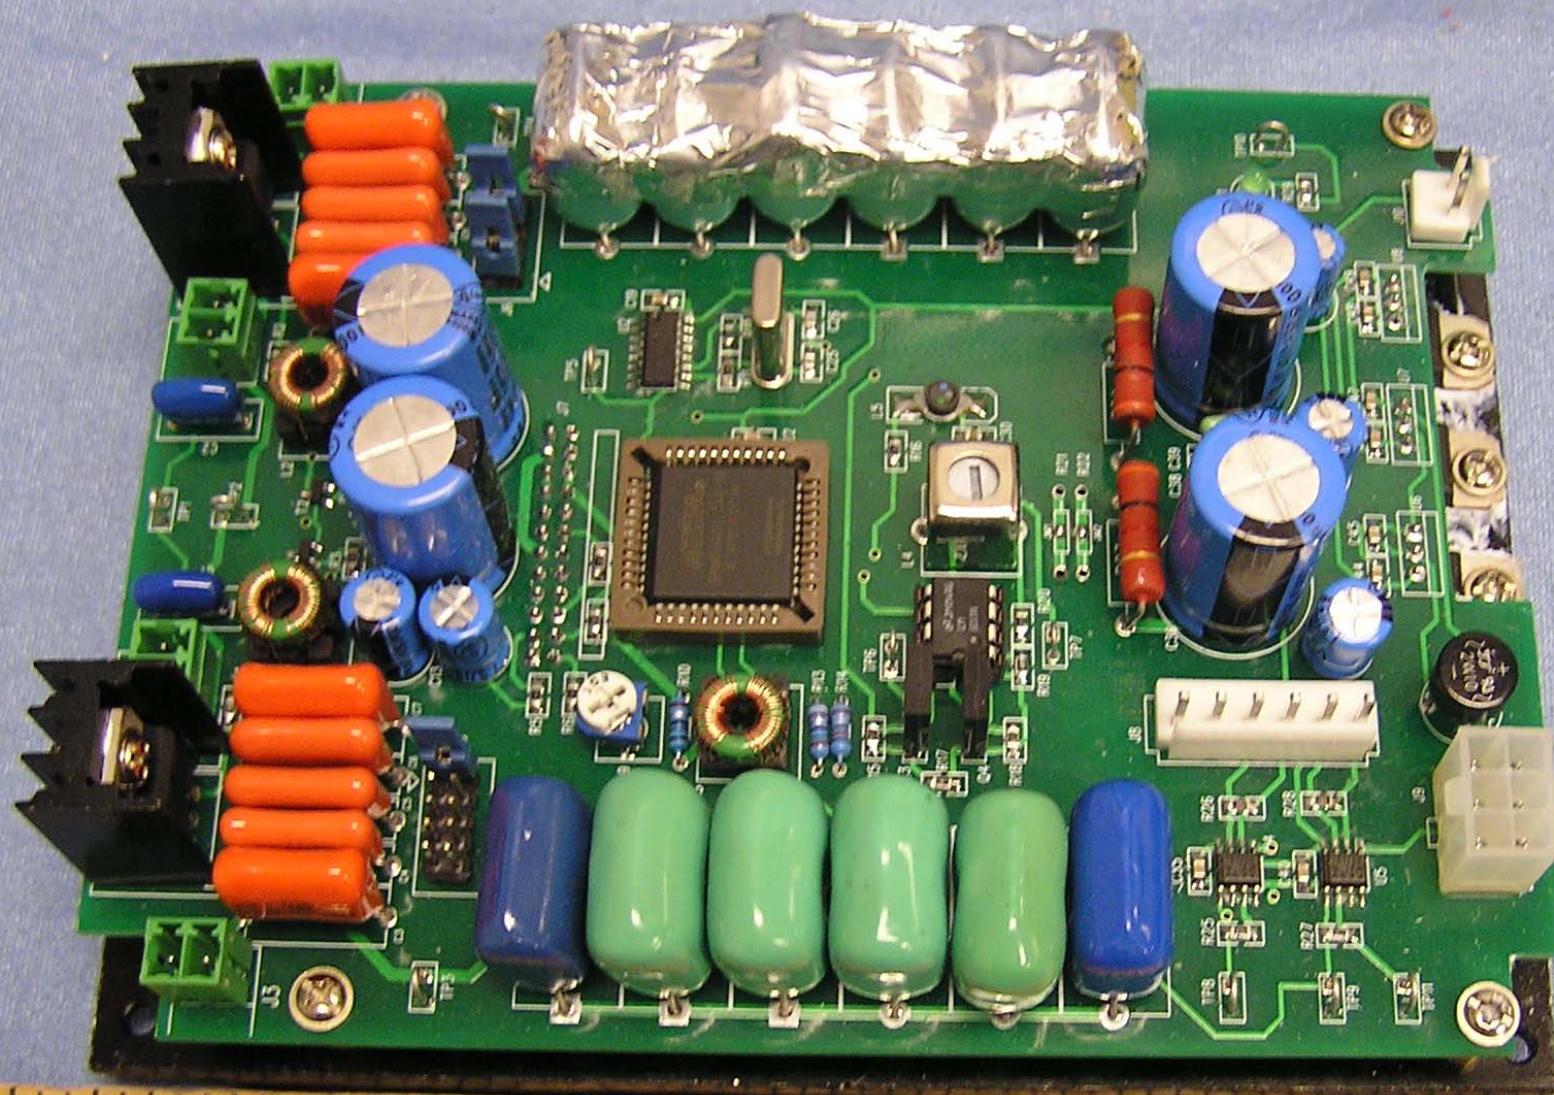

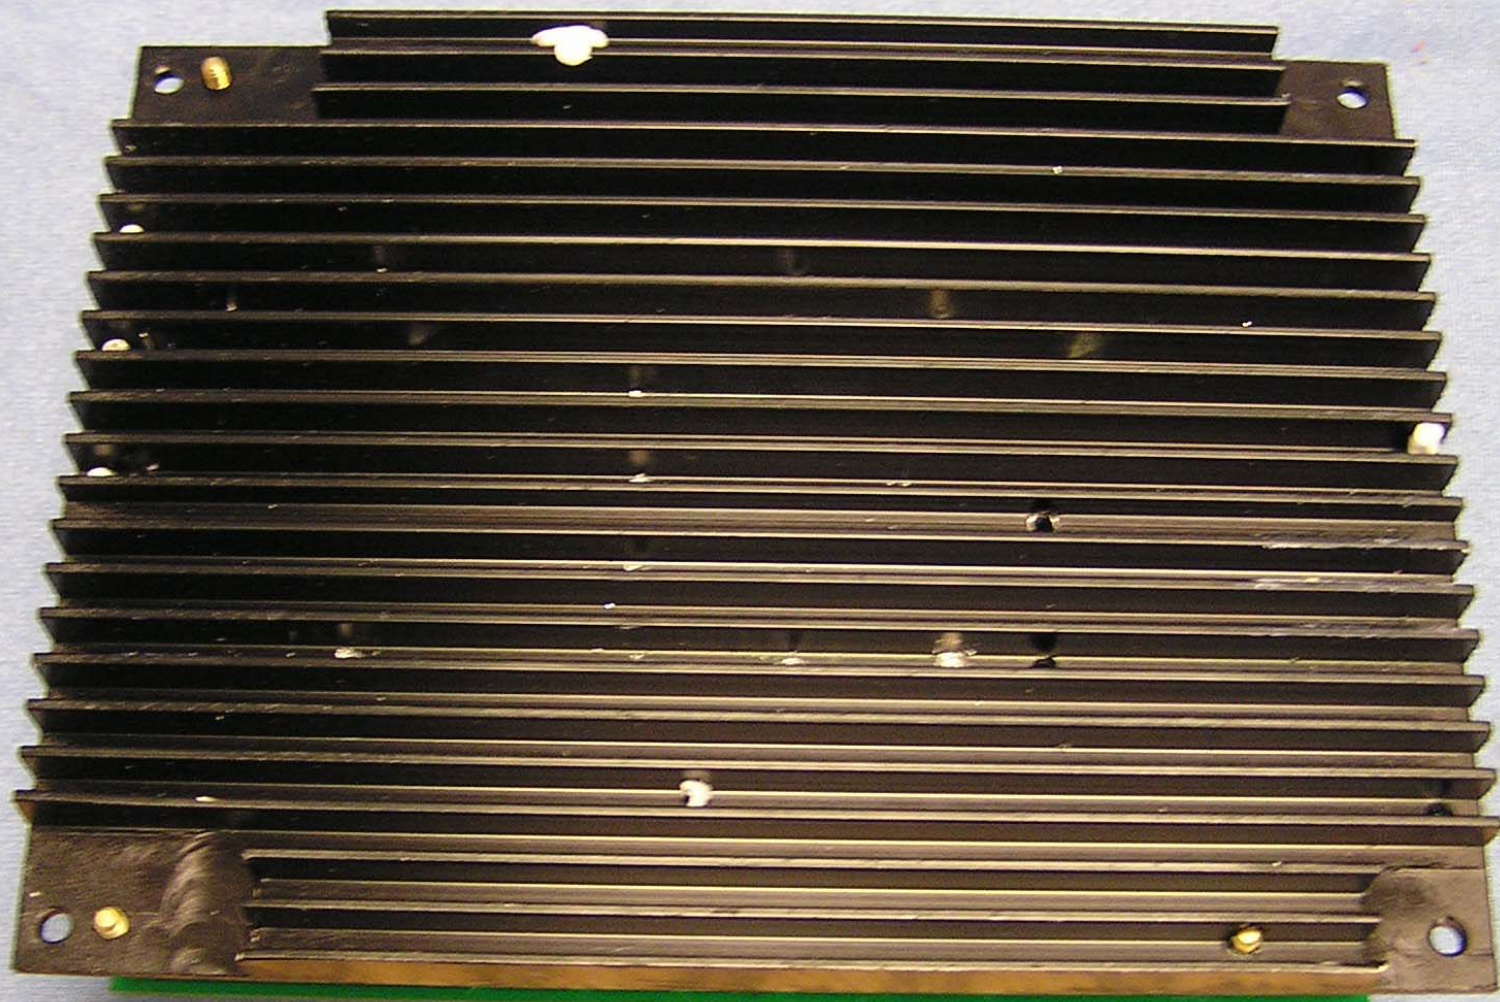

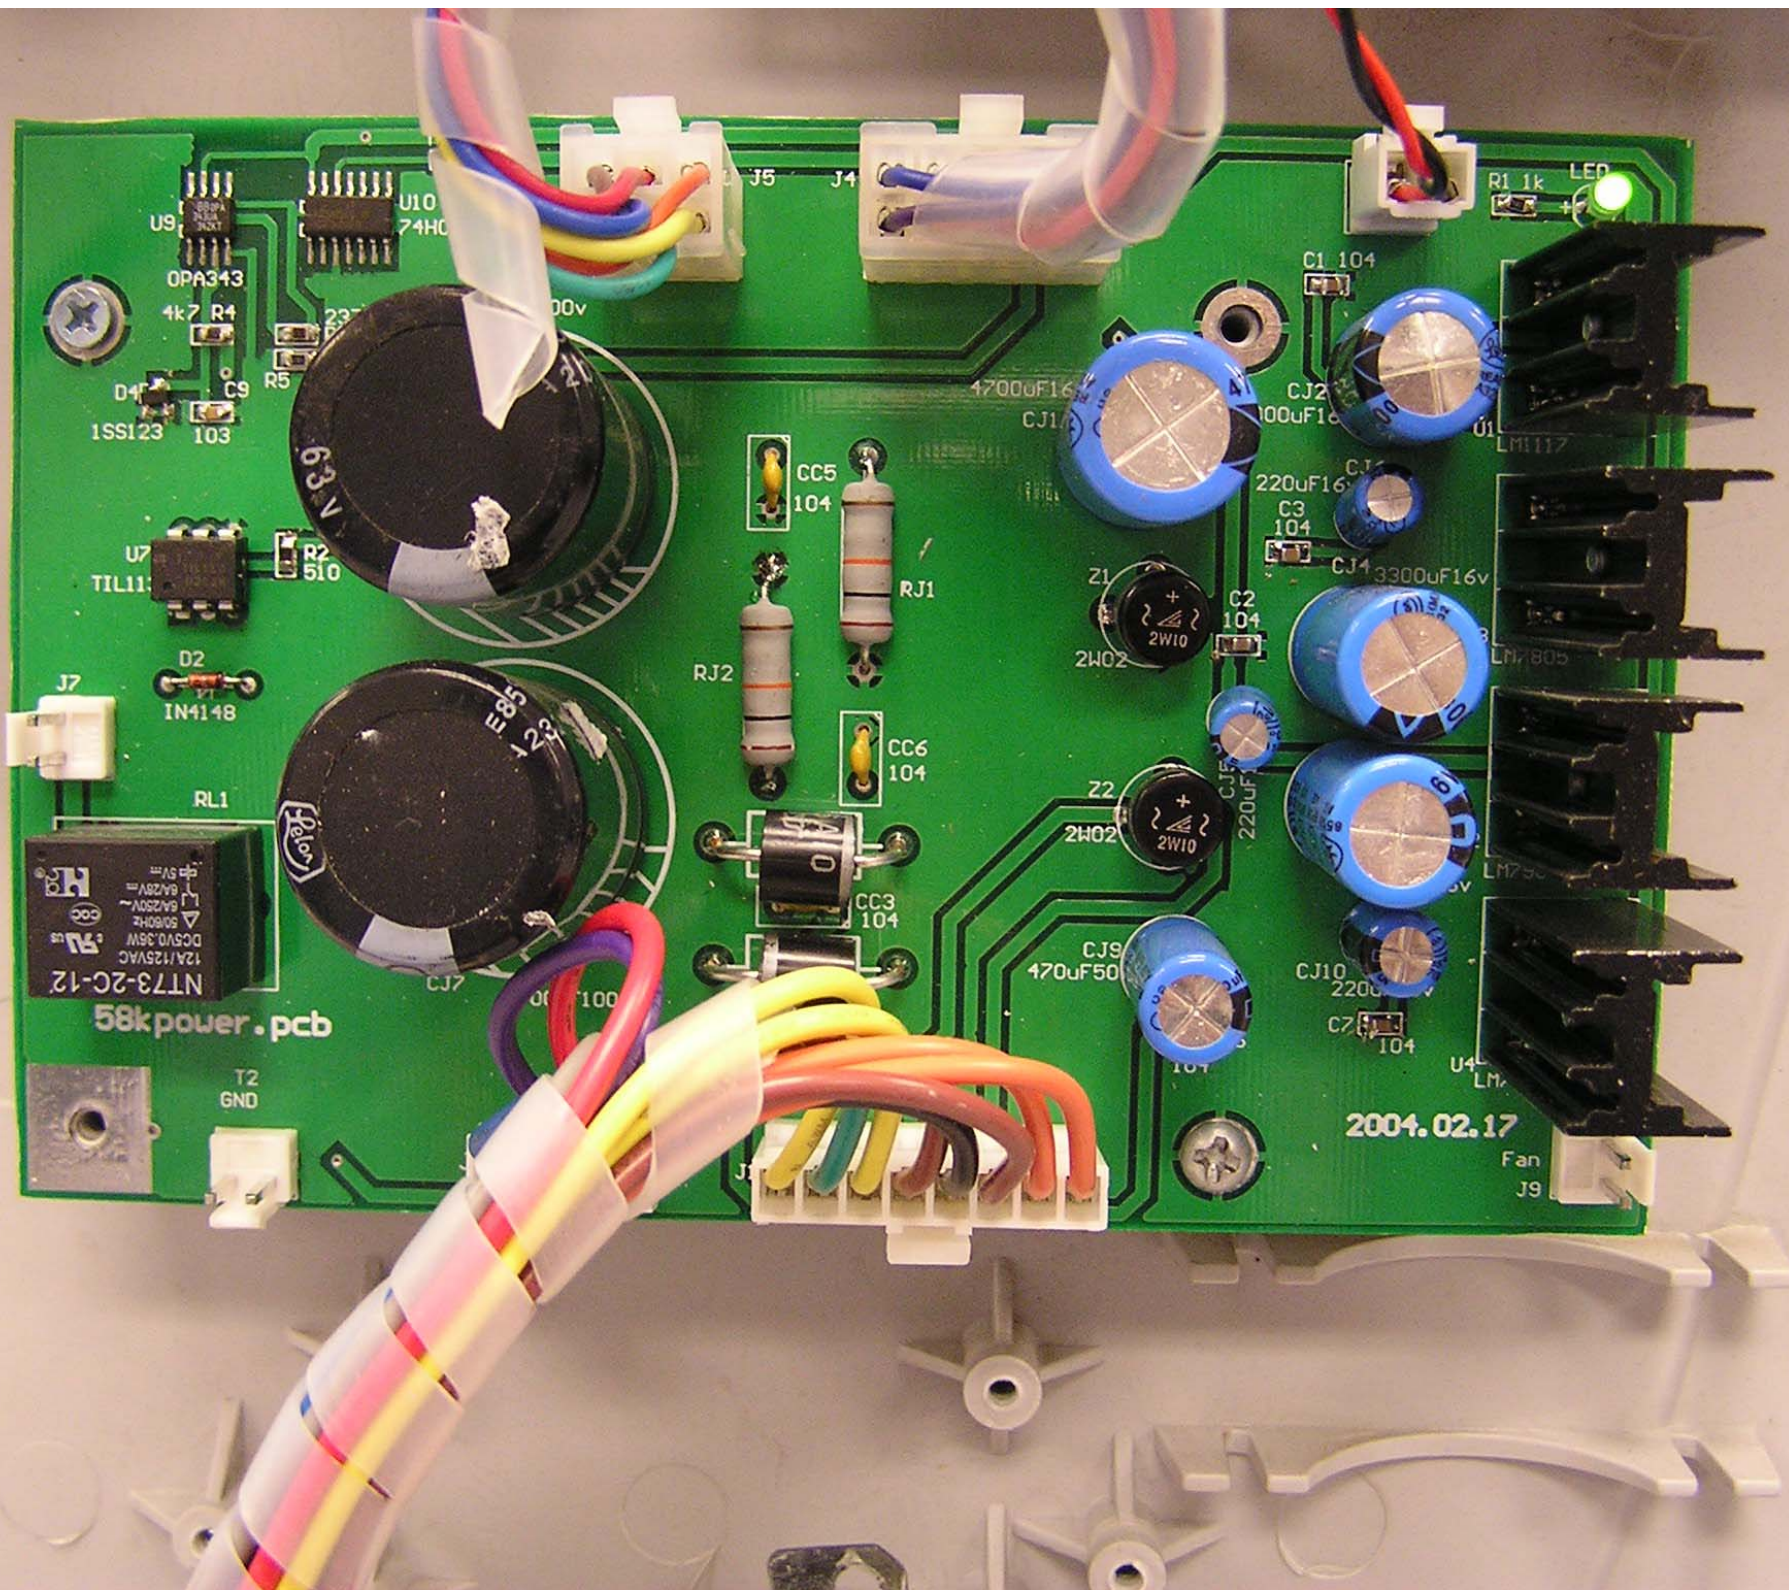

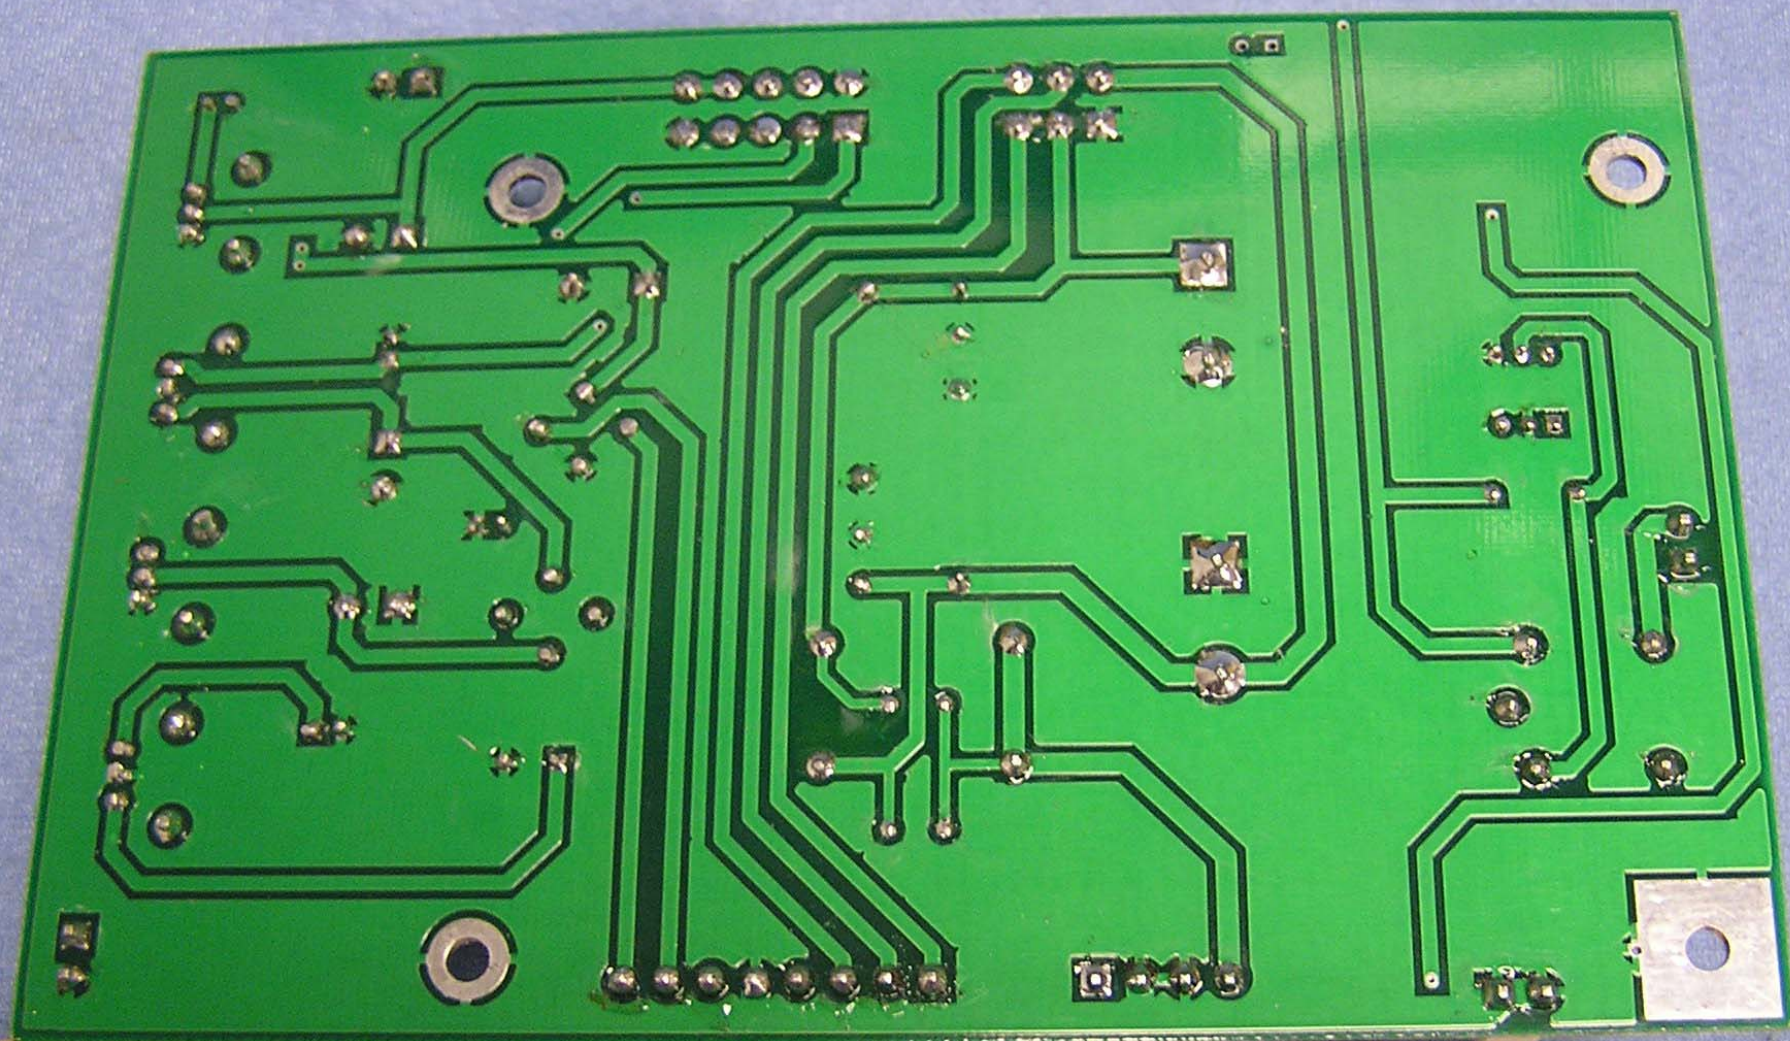

FLOOR_S.PCB

WARNING: TO REDUCE
THE RISK OF FIRE,
REPLACE ONLY WITH
THE SAME TYPE AND
RATING OF FUSE.

The equipment shall be
electrically disconnected
from the branch-circuit
supply when replacing
the primary fuse.

Alarm Signal

TX

RX Slave

24V 5A

JSE

J6


J5

J12

J3

J1



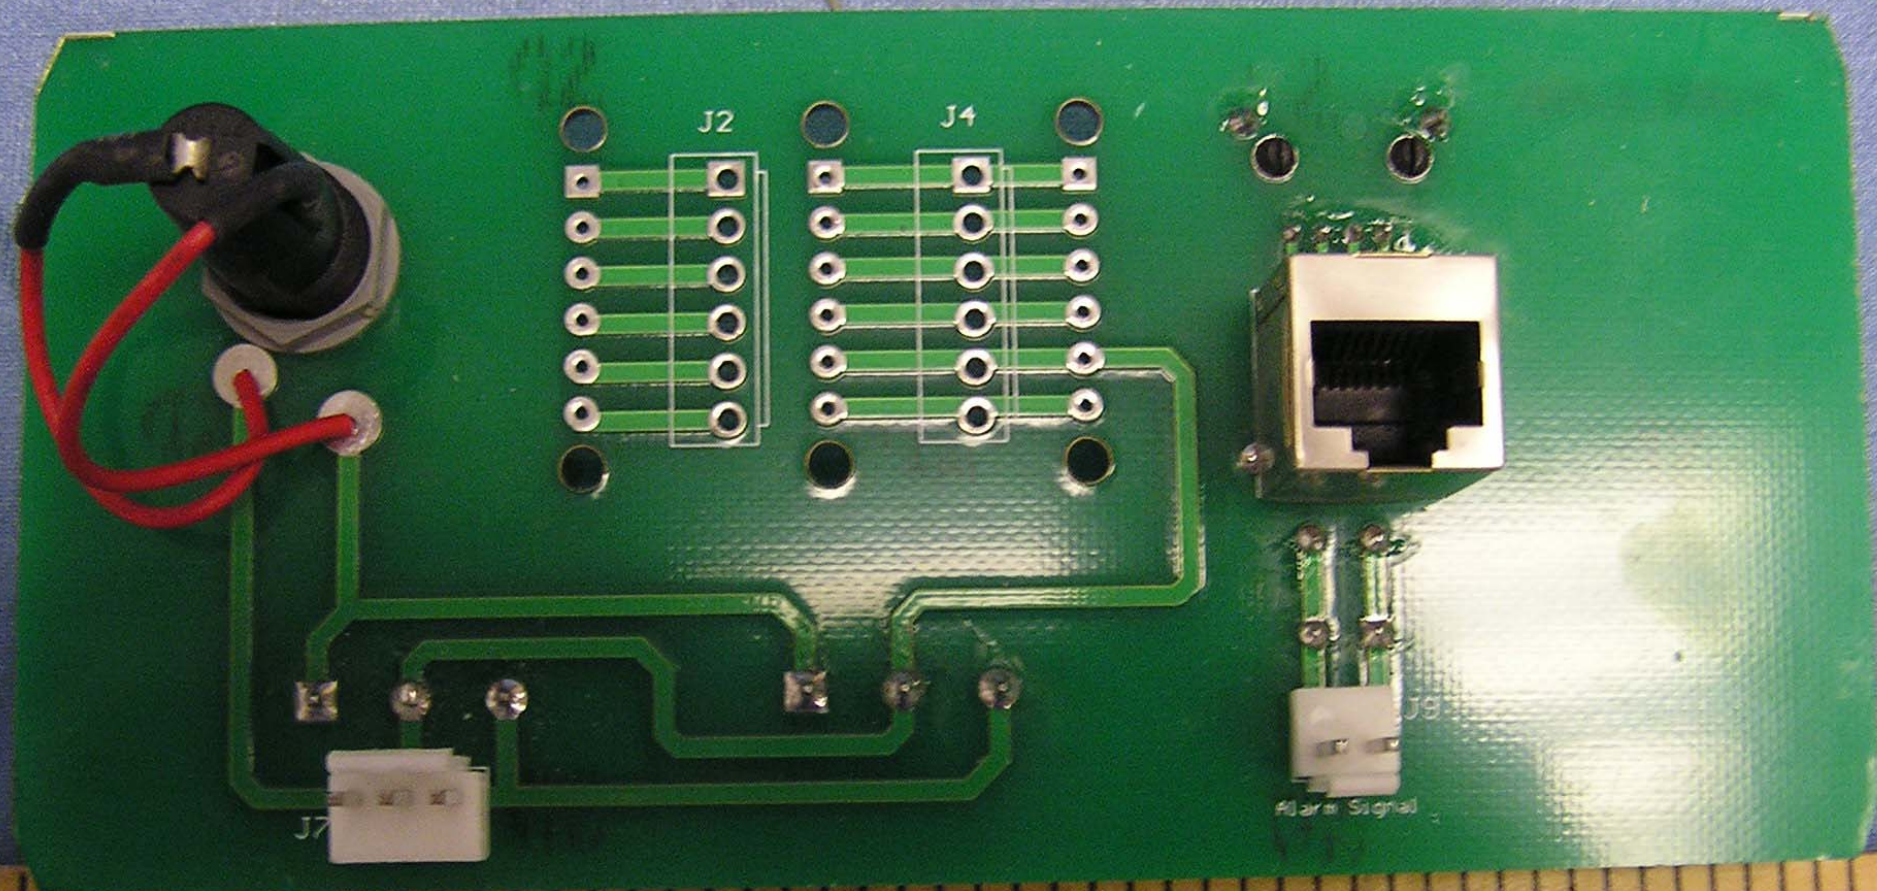

25

26

27

28

29

30

31

3

4