







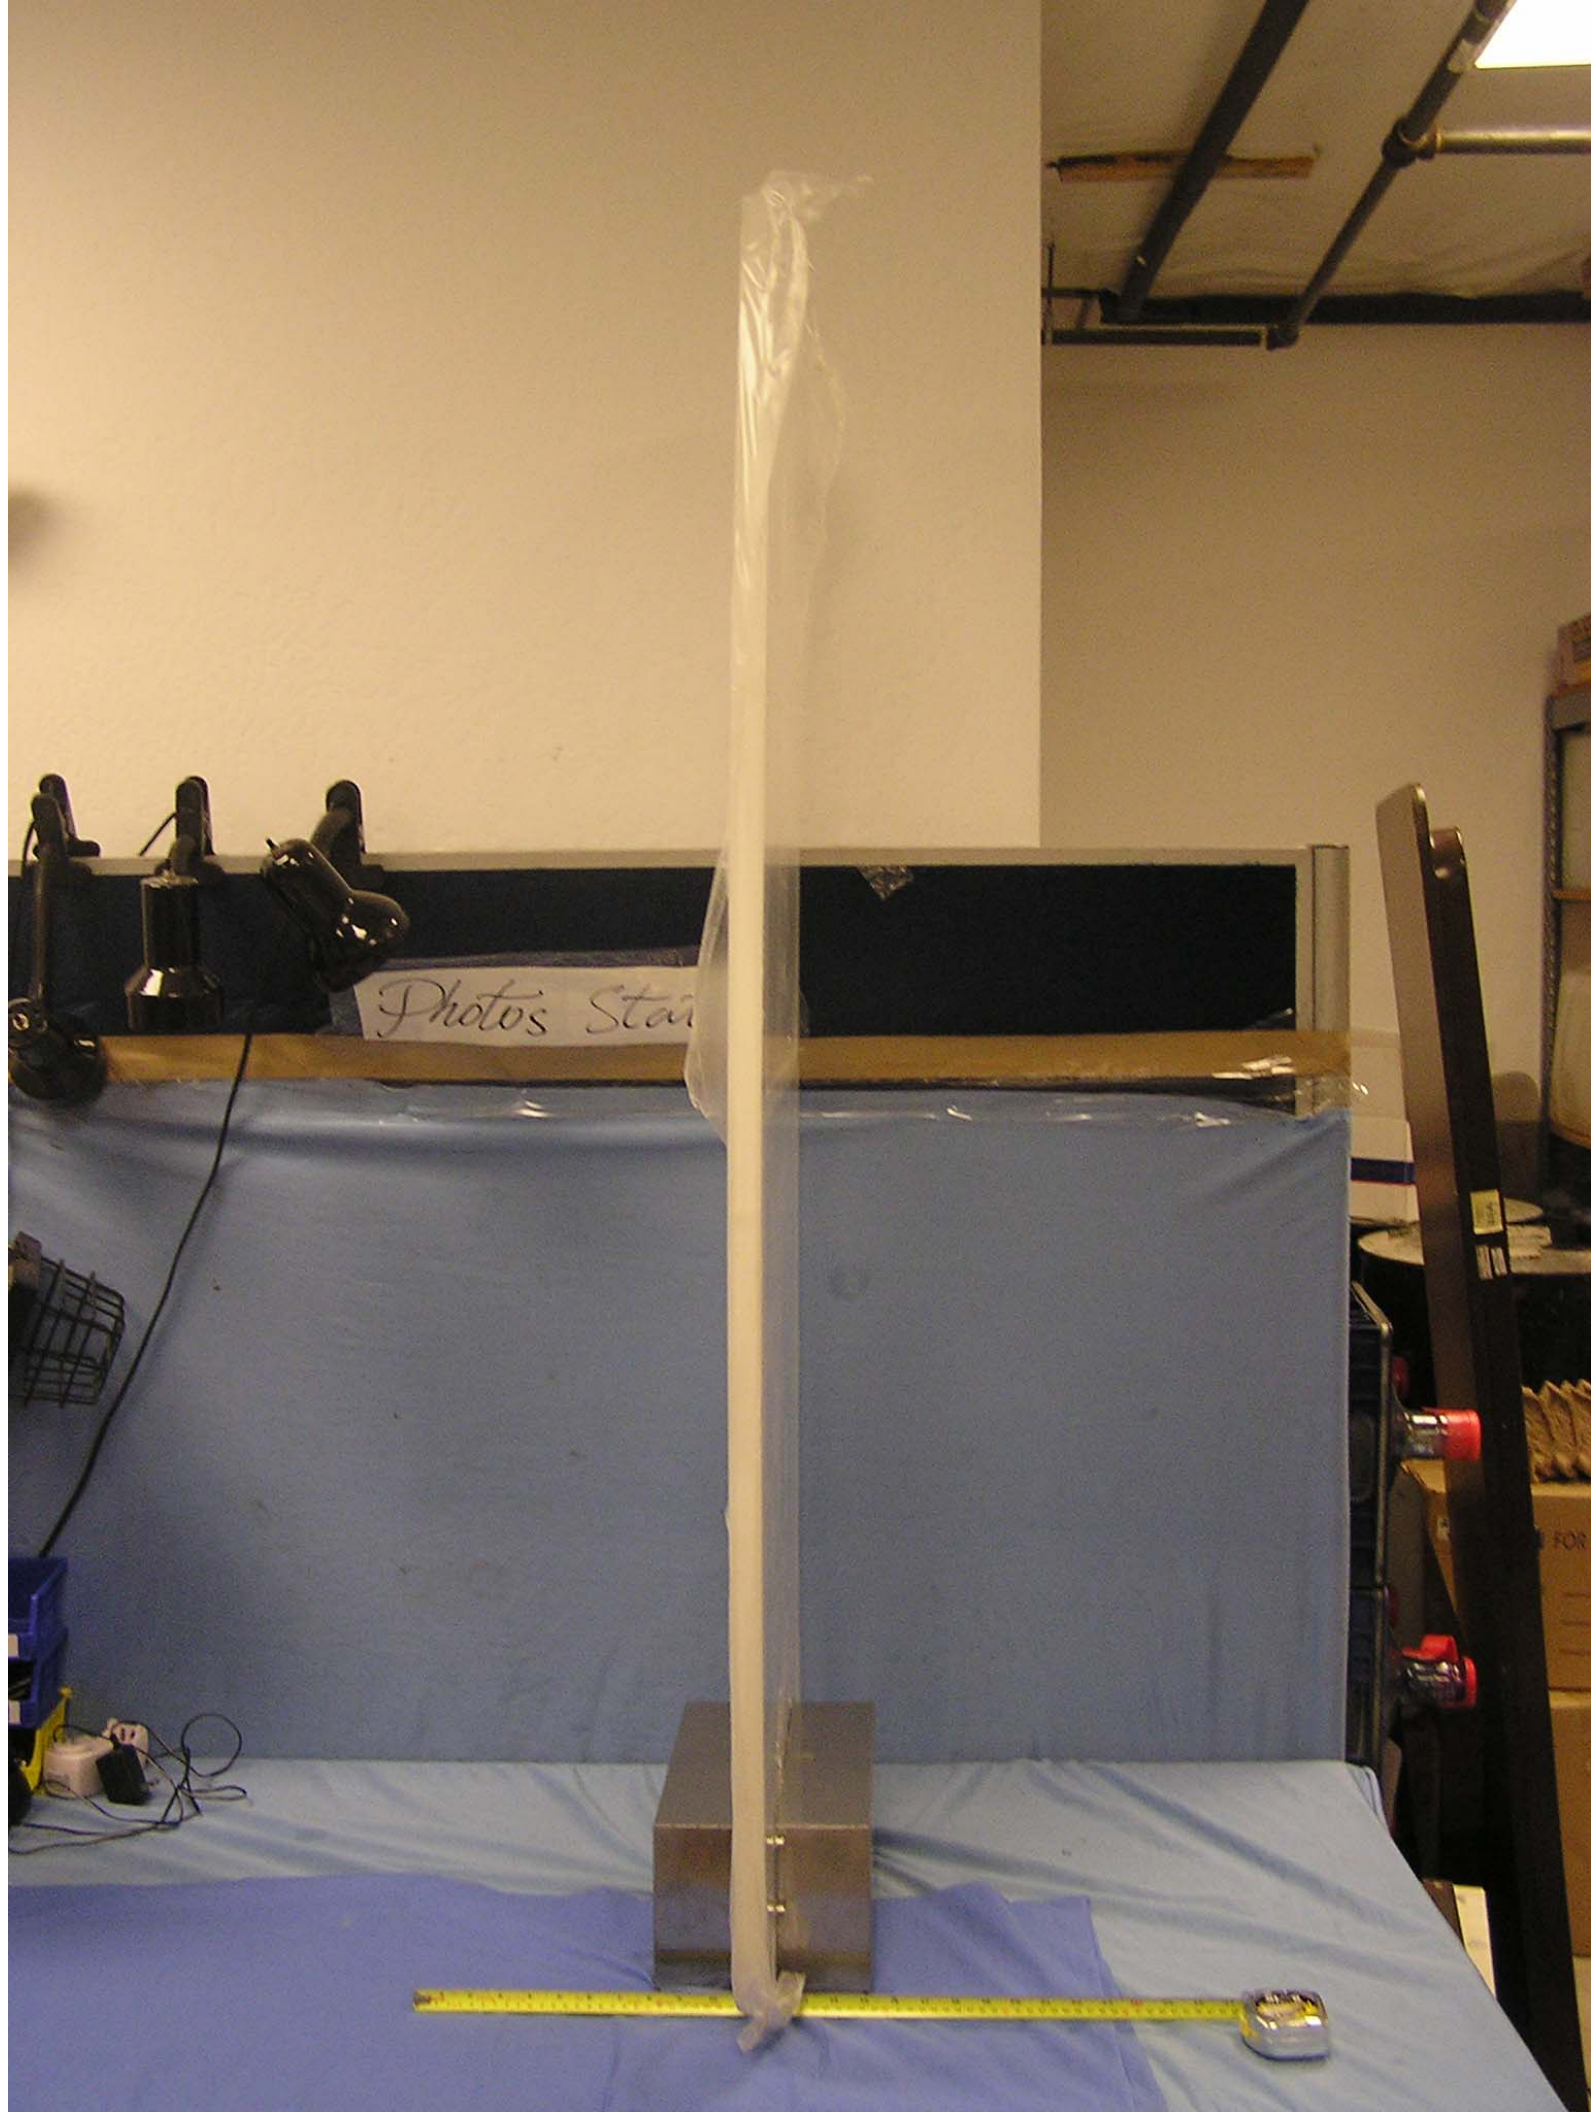

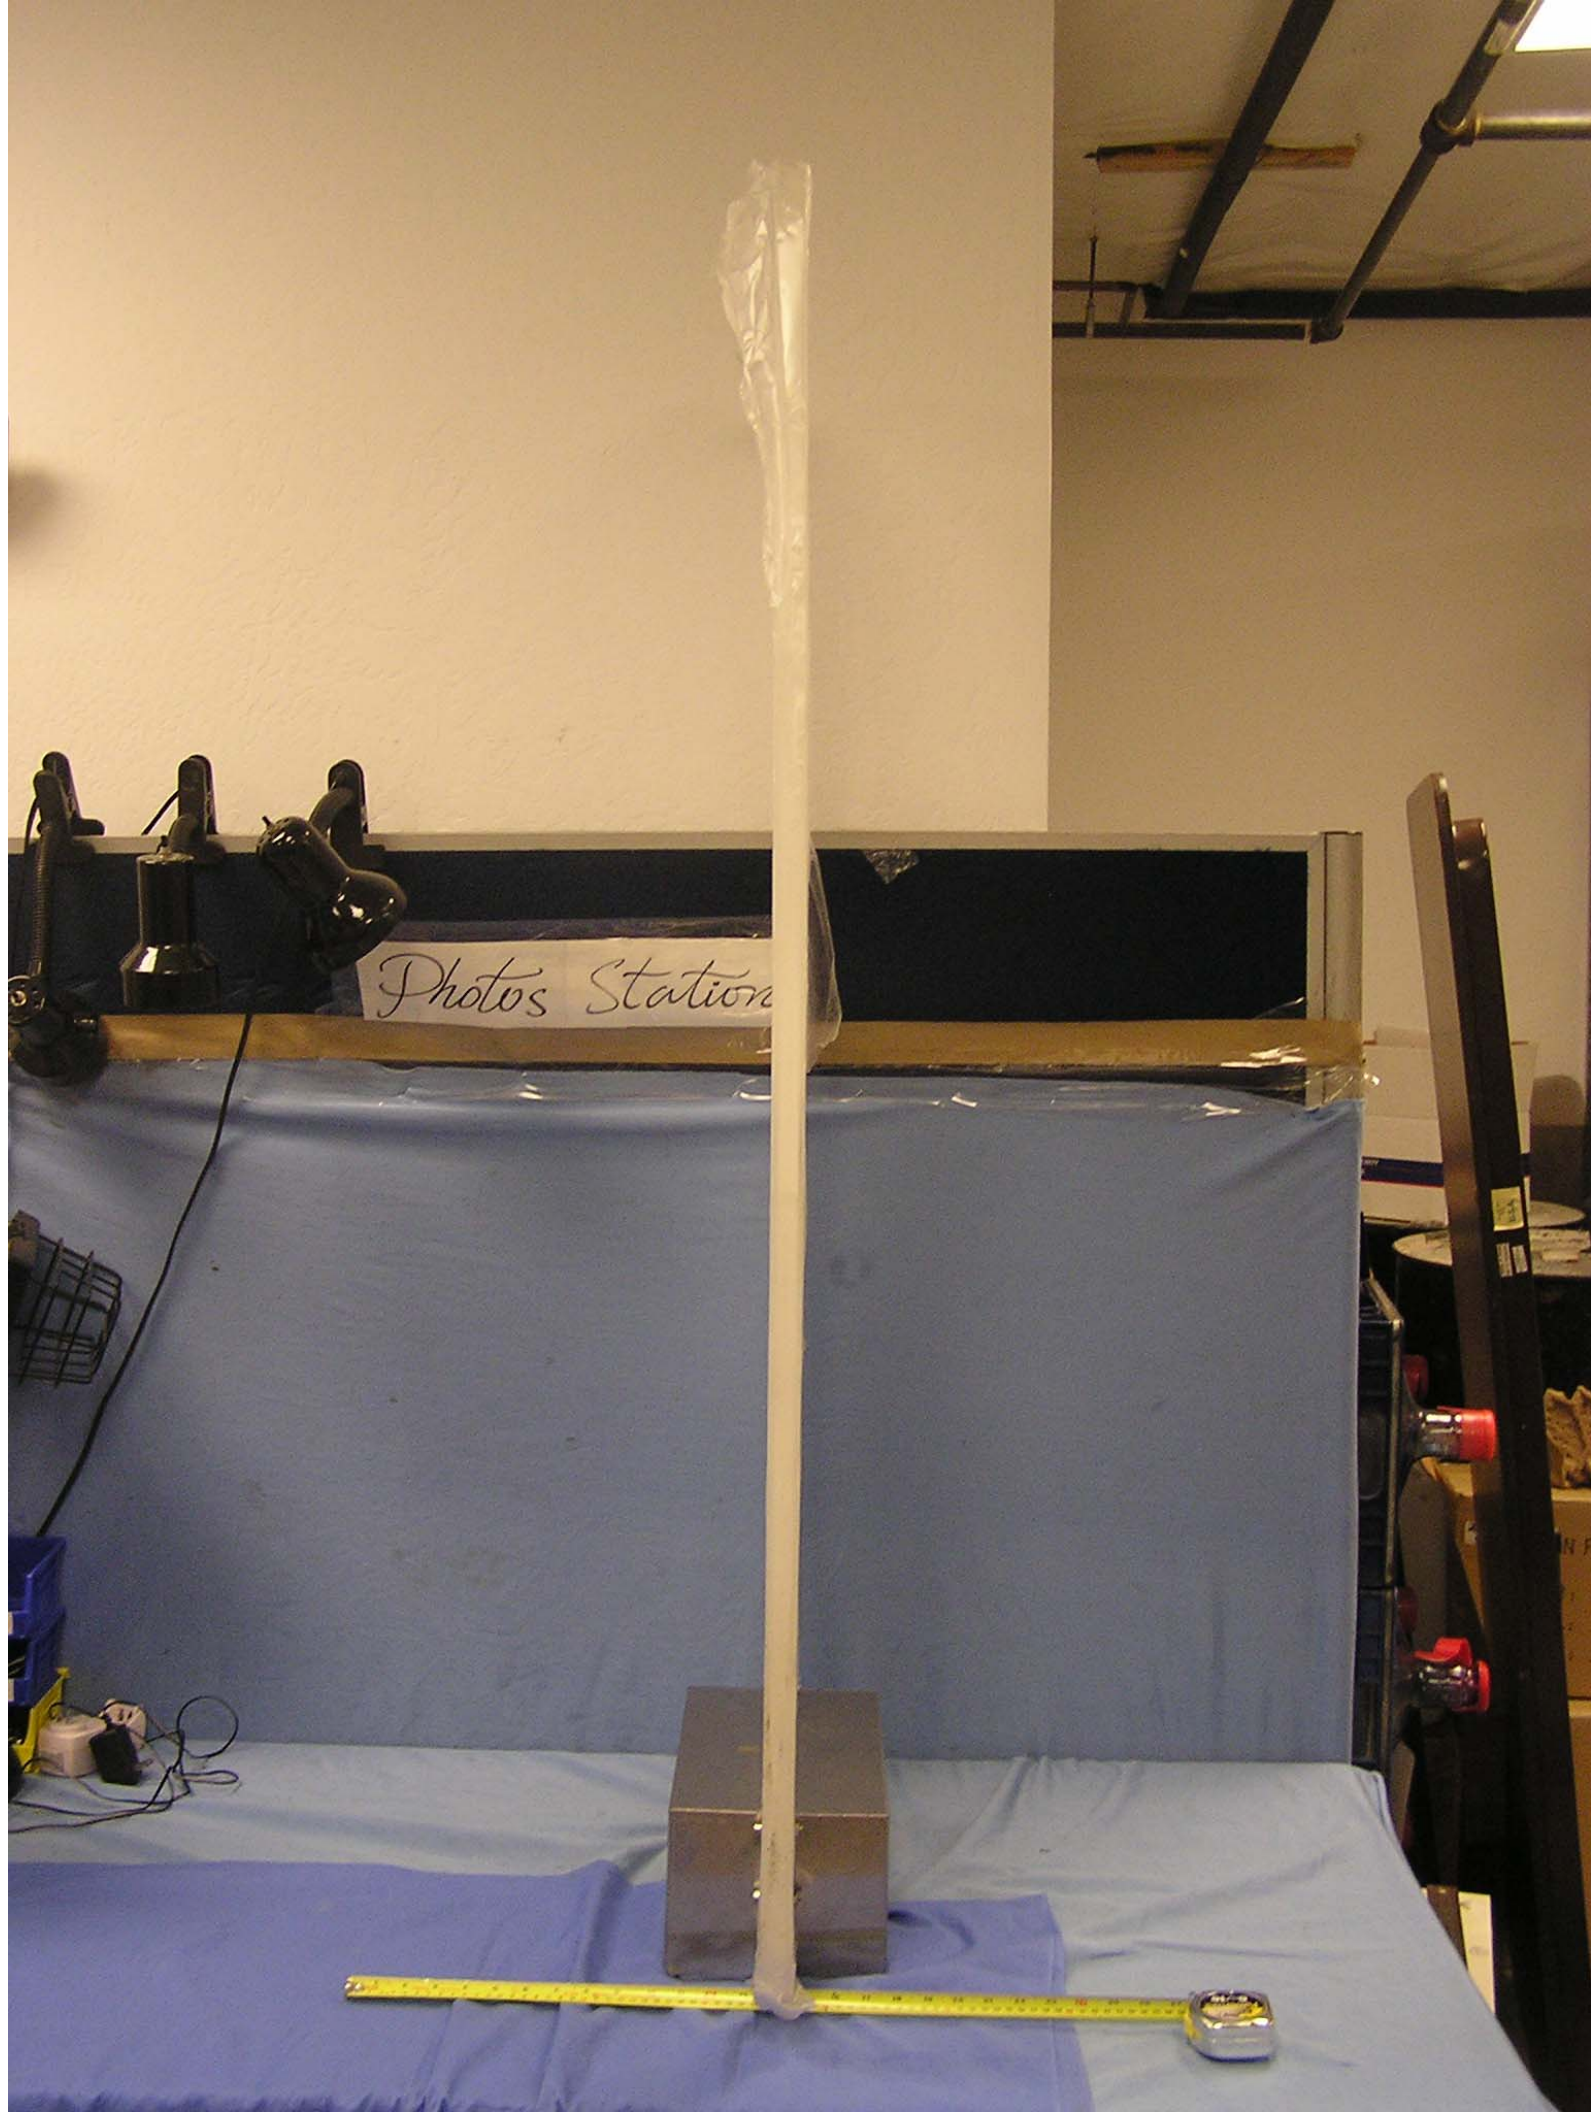

Photos Station






Equipment shall be electrically disconnected from the branch-circuit supply when replacing the fuse.

WARNING - TO REDUCE THE RISK OF DAMAGE. REPLACE ONLY WITH SAME TYPE AND RATING OF FUSE.

2007/03/08

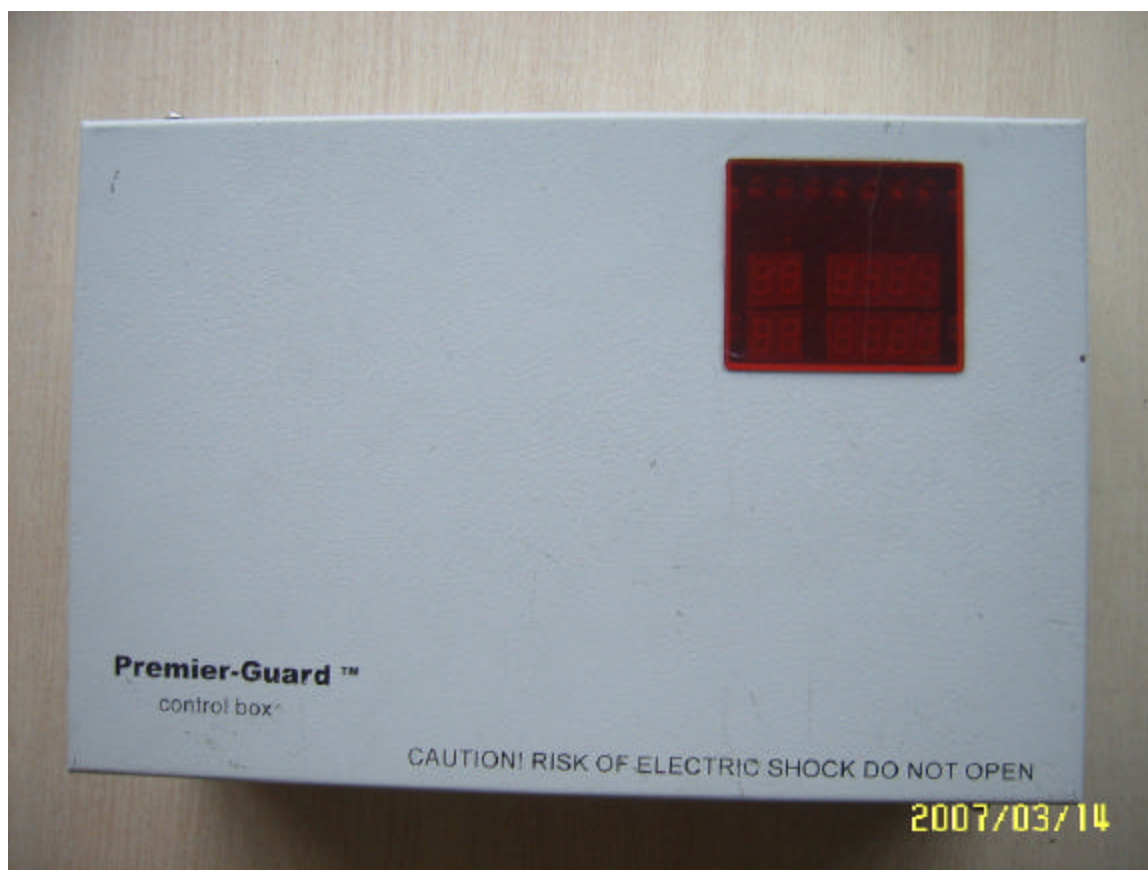

Premier-Guard™
control box

CAUTION! RISK OF ELECTRIC SHOCK DO NOT OPEN

2007/03/14