

OPERATIONS

- the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

Please follow instructions for repairing if any (e.g. battery replacement section); otherwise do not alternate or repair any parts of device except specified.

NOTICE: If your home has specially wired alarm equipment connected to the telephone line, ensure the installation of this *equipment ID* does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.

Should you experience trouble with this equipment, please contact *company name or service center in the U.S.A. and phone number* for repair or warranty information. If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the equipment until the problem is resolved.

[NOTICE: According to telephone company reports, AC electrical surges, typically resulting from lightning strikes, are very destructive to telephone equipment connected to AC power sources. To minimize damage from these types of surges, a surge arrester is recommended.] **[To comply with state tariffs, the telephone company must be given notification prior to connection for customer-owned coin or credit card phone. In some states, the state public utility commission, public service commission or corporation commission must give prior approval of connection.]**

IN NO EVENT SHALL WE BE LIABLE FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESSED OR IMPLIED, WHATSOEVER.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

40-Channel Operation

The GH3000 cordless telephone automatically searches and selects the clearest of 40 channels when it is being used.

Security Code

The security code prevents your cordless telephone conversation from being accessed by a phone on a different line. Once the handset battery is fully charged, the handset will automatically select the code from a total of over 65,000 combinations. The code is changed every time the handset is placed in the cradle.

If you experience difficulty with placing or receiving calls, a lost security code may be the cause of the problem. When this occurs, the handset can no longer communicate with the base. Reset by placing handset on base for 5-10 seconds. If that does not work, unplug the AC adaptor from the wall outlet. Disconnect the handset battery for 5-10 seconds, then reconnect. Place handset back on base and then replug the AC adaptor.

Placing a Call

1. Press **TALK** button.
2. **TALK BUTTON** on handset will light.
3. When you hear a dial tone, place your call.
4. While on a call, if you experience noise or static:
 - a. Press **CH** on handset until a clear channel is found; the call will not be interrupted.
 - Or
 - b. Move closer to base.

Note: You must be in usable range to change channels. Base antenna should be in upright position.

Receiving a Call

1. IF THE HANDSET IS OUT OF THE BASE UNIT, press **TALK**.
2. IF THE HANDSET IS IN THE BASE UNIT, lift the handset.
Do not press **TALK**. You will automatically be connected.

Ending a Call

1. Place the handset in the base or press **TALK** to be disconnected from the line.
2. **TALK BUTTON** on handset will turn off.

Flash

Use the **FLASH** button to activate custom calling services such as Call Waiting or Three-Way Calling (*Special sub-scription from your local telephone company required).

Temporary Tone (*)

PULSE (rotary) service users may access touch-tone features needed to operate answering machines or use electronic banking, calling cards, etc., by pressing the **TONE (*)** button. Phone will automatically return to pulse dialing after the call ends.

Out of Range

If you experience static while using the telephone, move closer to the base or change the channel by pressing the **CH** button.

Redial

Last number dialed (up to 32 digits) is stored in redial memory until another number is dialed.

1. Press **TALK** on handset.
2. When you hear a dial tone, press **REDIAL**.