



Mini GT Racer


1. Twist the clear cover to the left, slide out the antenna and remove the battery cover.

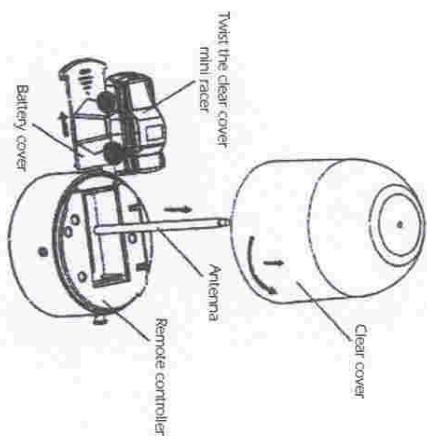

2. Insert 2pcs AA size batteries and replace the battery cover properly.

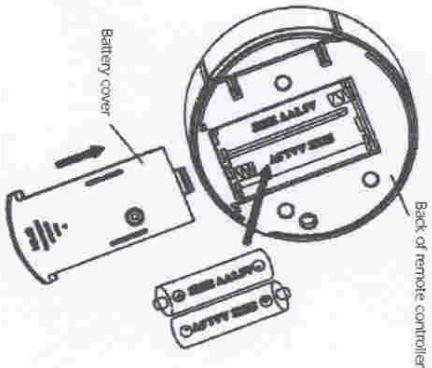

3. Screw in the antenna into the top slot of the remote controller.

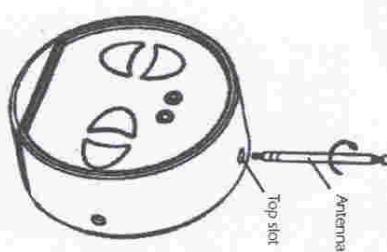

Operating direction:

1. The remote controller has auto power off feature, there is no need ON/OFF switch necessary. When pressing any button, the red color Power indicator will ON. If the light turn dark, it means the batteries dried and need to replace a new batteries.
2. Please extend the antenna to the longest level to achieve the best reception for Mini Racer
3. There are 4 main buttons to control Mini Racer, "Forward", "Backward", "Left" & "Right". But "Forward" and "Backward" OR "Left" and "Right" cannot press at the same time.
4. The fine adjuster is located at the back of Mini Racer which allows fine alignment made on Mini Racer to runs straight.

Charging the Mini Racer

1. Open the Charging cover upward
2. Place the Mini Racer into the Charging stand
3. Ensure the Mini Racer in Lock position
4. The Charging Indicator will light ON
5. When charging process completed, the Charging Indicator will light OFF automatically. You can remove the Mini Racer from charging stand. Charging stand

Warning: Changes or modifications to this unit not expressly approved responsible for compliance could void the user authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant of Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, it is encouraged to try to correct the interference by one of more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Battery Safety:

- Batteries are small objects. Replacement of batteries must be done by adult.
- Follow the polarity (+/-) diagram in the battery compartment.
- Promptly remove dead batteries from the toy.
- Dispose of used batteries properly.
- Only batteries of the same or equivalent type as recommended are to be used.
- DO NOT incinerate used batteries.
- DO NOT mix old and new batteries or types of batteries (i.e. alkaline/alkaline, etc.).
- DO NOT use rechargeable batteries.
- DO NOT recharge non-rechargeable batteries.
- DO NOT short-circuit the supply terminals.

*If continue charging Mini Racer when Charging Indicator lights OFF, the usage time may be extend more.

For ages 8 years up