 


VIDEO BABY MONITOR

Model: KT-868W

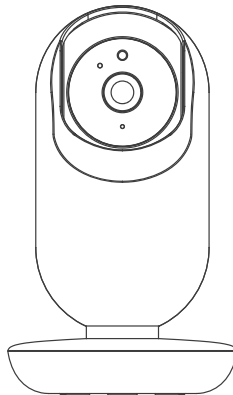

Dear Customer,

We are truly grateful that you chose our product, we hope that you will be happy upon enjoy the fantastic quality and our services.

Meantime, Your any requirements, suggestions and expectations that will be most helpful for our product improved and created new to fit your standards.

This user's manual can guide you to understand how to operate this product and solve any problem, that customers may encounter in using our products. Please read carefully before using the device.

WARNING

DANGER - Keep the adapter cable away from the baby to avoid a choking hazard from entangling the baby's neck.

Keep the baby camera unit and cable out of the reach of children more than 3 feet or 1 meter away.

Do not place the camera or power supply in a child's cot/crib.

CAMERA SETTINGS AND USAGE

- **Fix the camera in a place where can be observed well of children/babies.**
- **Place the camera on a flat surface such as table, desk or shelf.**

This baby monitor meets all standards related to electromagnetic fields and safe-use when operating in accordance with the instructions of user guide. Therefore, please read the user guide carefully before using the device.

- Must be assembled by an adult.
- This baby monitor can be used for adult guardianship.
- Store this user guide for future reference.
- Do not cover the baby monitor with towel or blanket.
- Keep the baby monitor away from water.
- Keep the baby monitor away from heater, humidifier & others.
- Do not use other charger or power adaptor which may damage the device.
- Do not touch the plug with a sharp or metal object.

IMPORTANT NOTES FOR INSTALLING A BABY MONITOR

- When using, must check if the wireless Transmission is smoothly connected between camera and the displayer. The wireless Transmission distance is affected by environmental conditions.
- Any heavy metal objects or home appliances will block wireless signal transmission, such as refrigerators, metal doors, or reinforced concrete.
- The strength of the signal may be attenuated by solid buildings (such as walls), radios or electrical equipment (such as televisions, computers).

- If the signal is lost, try to move the device to a different location indoors.
- Do not put monitor and camera together within 1.5 meters, otherwise, it will cause howling.

UNIT PACKAG:

1 X Camera

1 X Monitor

1 X User Manual

2 X Power Adaptor

2 X USB charging cable

CONTENTS

1/

IMPORTANT SAFETY INSTRUCTIONS

01

2/

KNOWING YOUR BABY MONITOR

04

3/

USING YOUR BABY MONITOR

07

Using your baby monitor by monitor ————— 07

Using your baby monitor by app ----- 23

1. Home Page Overview ----- 23

2. Me Page Overview ----- 27

3. View Live page Overview ----- 27

4

TROUBLESHOOTING

34

Monitor Troubleshooting ----- 34

App Troubleshooting ----- 36

5

CUSTOMER CARE

37

IMPORTANT SAFETY INSTRUCTIONS

READ ALL CAUTIONARY MARKINGS ON THE APPLIANCE AND SAFETY INSTRUCTIONS IN THE USER MANUAL BEFORE USE.

General Safety



 
Not a Substitute for Proper Adult Supervision: You **MUST** check your children's activities regularly.

Not Intended for Use as a Medical Camera: This appliance should not replace adult supervision.

Not a Toy: Do not allow children to play with this appliance.

Risk of Suffocation: Keep all packaging materials out of reach of children.

Location Safety

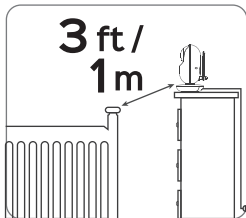

Strangulation Hazard:

Children can be entangled in cords. Keep the appliance, adapter and power cords out of the reach of children at all times, at least 3 feet / 1 meter away.

Danger from Power Cords:

To avoid possible danger from power cords, the cords should be secured and never be hung on or near the crib or playpen. Do not place in the crib, bed or playpen.

Keep Away From Heat:

Do not install near any heat sources such as radiators, heat registers and stoves.

Water and Moisture:

Do not use the appliance near water, including near a bathtub, sink, laundry machine, wet basement, etc.

Electricity Safety

- Only use the AC adapters provided.
- Do not insert anything into upgrade pinholes.
- Do not block any ventilation openings.
- Unplug the appliance during lightning storms.
- Only use attachments and accessories provided.
- Unplug the appliance when unused for long periods of time.

HVIN: KT-868W-1

SPECIFICATIONS

General System

Connectivity	2.4GHz WIFI
RF Frequency	2.412-2.462GHz
Type of Modulation	OFDM
Selectable Camera Channels	2
Transmission Distance	1000ft / 300m

Monitor

Resolution	1280*720P
Display	5 inch TFT Color Display
Input Voltage	DC5V
Operating Voltage	DC5V - 1.5A
Battery	5000mAh
Zoom	2X & 4X

Camera

Resolution	2K
Input Voltage	DC5V
Operating Voltage	DC5V - 1.5A
Night Vision	Black and white
Pan &Tilt	65 degrees vertical, 300 degrees horizontal

Gentle Reminder

Check the appliance regularly and refer to TROUBLESHOOTING or contact our customer support if it shows any of the following signs:

 
- Power cord or plug is damaged.
- Poor reception or excessive noise.

KNOWING YOUR BABY MONITOR

2

Package Contents


*Actual contents may vary depending on your purchase.

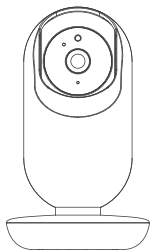


Camera



 Baby Monitor



 USB Charger and Charging Cable
(For Camera)




USB Charger and Charging Cable
(For Monitor)



User Manual

Product Diagram

 Camera

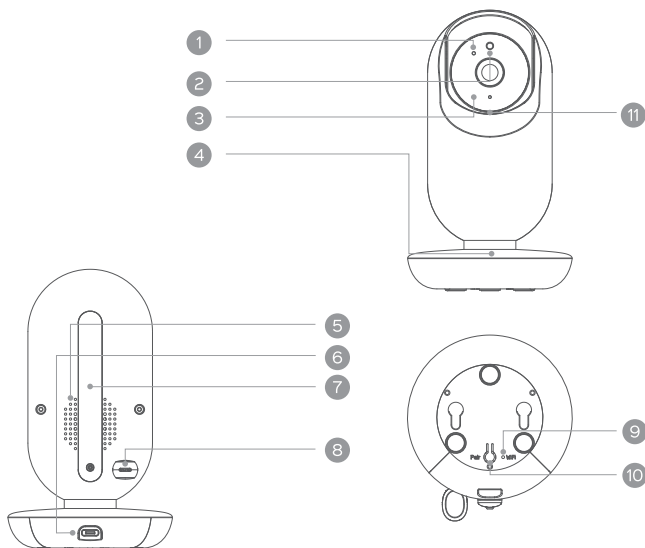

1 Microphone

2 Light Sensor

3 Lens

4 Camera Base

5 Speaker

6 Power Jack

7 Antenna

 
8 Temperature Sensor

9 Wi-Fi Pair Button

10 Monitor Pair Button

11 TF Card Jack

Baby Monitor

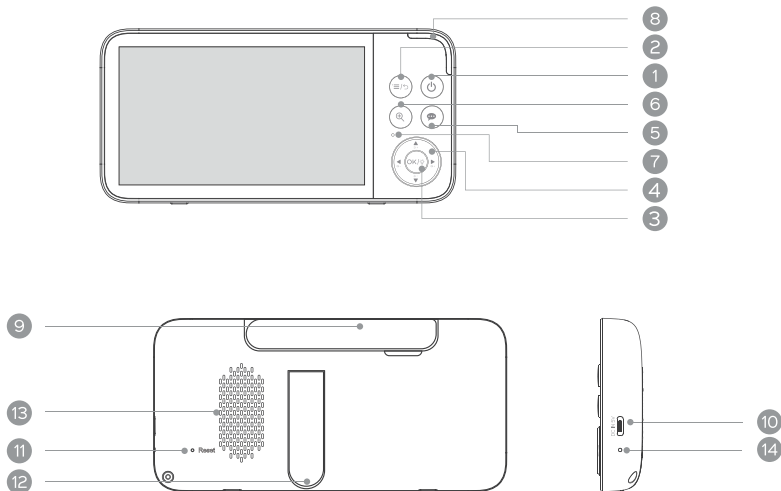

1 Power/Sleep Button	6 Zoom	11 Reset Hole
2 Menu/Back Button	7 Microphone	12 Back Stand
3 OK/Night light	8 Volume Indicator	13 Speaker
4 Arrow Key	9 Antenna	14 Charging Indicate
5 Talk Button	10 Power Jack	

 
USING YOUR BABY MONITOR

3

Getting Started

1. Plugging in the Camera


Connect the camera to the 5V DC power supply with the included AC adapter. The camera will automatically power on. Approximately 15 seconds later, you will hear a notification sound indicating that the camera has successfully powered on.

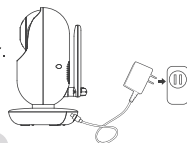

Place the camera and power cord out of reach of children. Camera is not battery powered. Keep plugged in when in use.

2. Charging the Monitor

 It takes around 4 hours to fully charge. The power indicator will turn red while charging and turn green when fully charged.

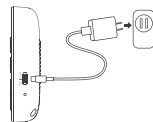

It takes around 7 hours to fully charge. The charging indicator will turn on while charging and off when fully charged.

3. Pairing the Camera with the Monitor

By default, the camera has been paired with the monitor when manufactured. If the camera is disconnected, please refer to page 12.



Keep camera and monitor within a distance of 12-40 in (30-100cm) when pairing. Note that microphone feedback might occur when they are close to each other.

4. Positioning the Camera

Keep the camera 3-16 ft (1-5m) away from your baby's crib, playpen and baby bed for best viewing and safety reasons.

5. Wall Mounting the Camera (Optional)

 
Select a spot to mount the camera, ideally 5-8 ft high, keeping it beyond the reach of children. Install the included screw into the wall and mount the camera onto the screw.



Do not release the camera until you're sure it is firmly mounted.

Function & Operations

1. Interface Overview

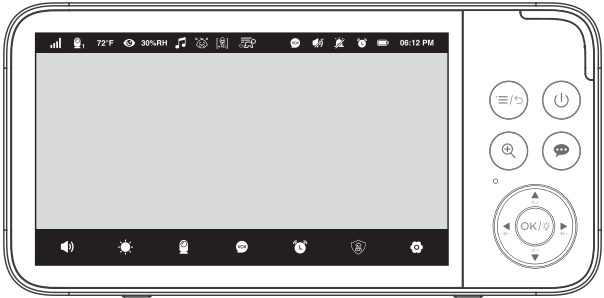

Status Bar

 Signal Strength	 Current Camera	 Temperature	 Video Muted	 Humidity
 Lullaby	 Alert Muted	 Reminder On	 Battery Status	 Current Time

Menu Bar



Volume Settings



Monitor Volume

Adjust video volume



Talk Volume

Adjust 2-way talk back volume



Lullaby

Play lullaby



Lullaby Volume

Adjust lullaby volume



Alert Volume

Adjust alert/reminder volume



Brightness Settings



Brightness

Adjust brightness level



Screen Timeout

Change screen timeout to 1 min, 3 mins, 5 mins, or never



Camera Settings



Add

Add camera



Auto Switch

Automatic switching between two camera views



Cam View

Select camera view to display



Delete

Remove camera pairing



VOX Settings



VOX On

Turn on VOX



VOX Off

Turn off VOX



Reminder Settings



Reminder

Set reminder at a specific time



Repeat

Create a repeating reminder (2 hrs, 4 hrs, 6 hrs, or never)



Reminder Off

Turn off reminder



Safety Settings



Safety Protection

Sleep the camera / Forbid app access to the camera



Crying Detection

Detect crying and alert you



Action Tracking

Ensure the baby is in your sight



Motion Detection

Detect motion and alert you



Other
Settings

 **Device Info**

Device Information

 **TF Card**

TF Card information

 **Languages**

Select Language

 **Times**

Set the date and time on the monitor

 **Temperature**

Select temperature scale between °C and °F

 **Reset**

Reset to factory settings

 
 
2. Volume Settings

· Press  , select through  →  **Monitor Volume** /  **Alert Volume** /  **Talk Volume**

 **Lullaby Volume** , and press  /  to adjust degree →  to set the desired volume level.


· Short press  , and press  /  to adjust the degree to set the desired volume level.

If you have paired two cameras, press  /  to select the corresponding camera
first, press  to confirm, and then repeat the above steps.

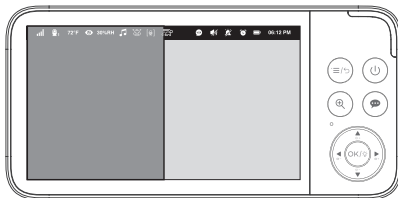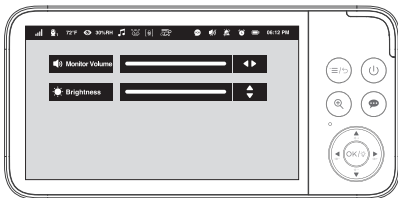



3. Lullaby

 Press , select through  →  Lullaby , and press  /  to select lullabies and play mode. Press  to play the lullaby. The first three tracks are white noise, and the following five tracks are lullabies.

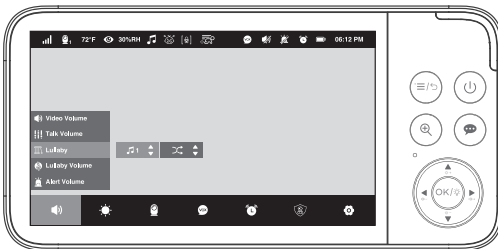


4. Brightness Settings

  - Press , select through  →  Brightness , and press  /  to adjust degree →  to set the desired brightness level.
- Short press , and press  /  to adjust degree →  to set the desired brightness level.

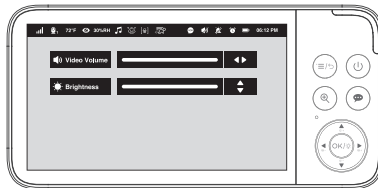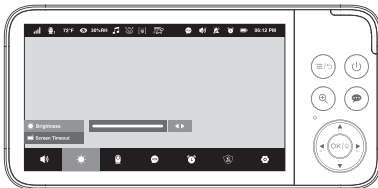



5. Screen Timeout

 Press , select through  →  Screen Timeout, and press  /  to select duration →  to set the desired time for the screen to turn off automatically.

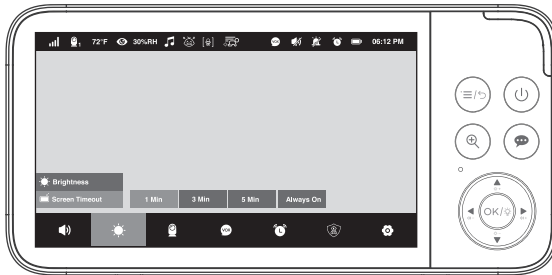


6. Add a Camera

  Press , select through  →  → , press and hold the Pair button 3S on the camera near the antenna and listen for the prompt tone, then the camera will pair with the monitor automatically.

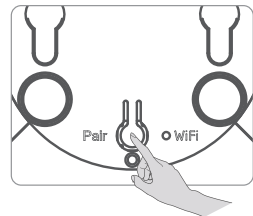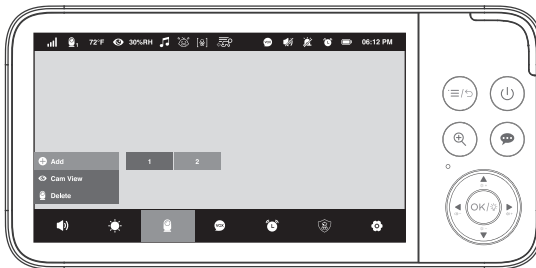

7. View a Camera

 Press , select through  →  **Cam View** ,
and select the camera number 1/2 to view.

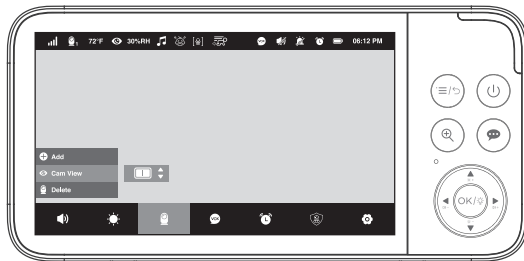

8. Delete a Camera

 
Press , select through  →  **Delete** , and select the camera number 1/2 to view.



At least one camera should stay connected.

The current camera number will appear at the top of the screen.

If you want to remove the remaining camera, press the PAIR button three times to disconnect it, and then you can delete the remaining camera.

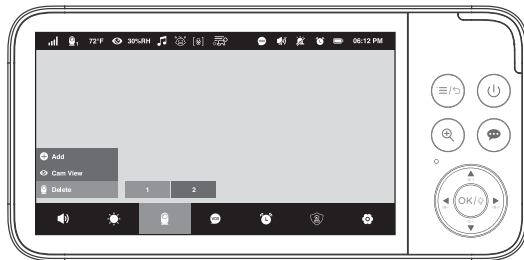

9. Auto Switch

Press , select through  →  Auto Switch → ON .

 Once set, the screen will automatically switch from one camera to another camera (if connected) every 15 seconds.



10. Split Screen

Press , select through  →  Cam View , and select two cameras.

 
 · Once two cameras are selected, you can view two cameras in split-screen mode.
· In split-screen mode, the audio will switch between cameras every 15 seconds.

11. VOX (Voice Activated Alert)

- 1) Press , select through  → .
- 2) choose a sensitivity level. The higher the VOX sensitivity level, the more sensitive the camera is in detecting sounds for transmitting to the monitor.



- Once set, the screen will go into sleep and enter VOX mode.
- In VOX mode, the screen will stop broadcasting sounds from the camera side until the audio detected is above the alert level.

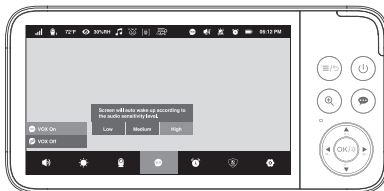


12. Nursing Reminder

- Press , select through  →  Reminder, press  /  to select the group, you can set up to four alarms →  to set a specific time for the monitor to alert you for nursing. You can also select through  →  Repeat, and select 2 hours, 4 hours, or 6 hours to create a repeating reminder.





 - The reminder will sound for 30 seconds and again after 1 minute if no action is taken, but will shut off automatically if none is taken after three times.

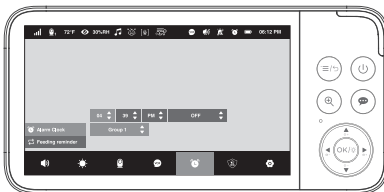

13. Privacy Mode

  - Press , select through  →  Safety Protection →  Privacy Protection ON , to sleep the camera on app.
- Press , select through  →  Safety Protection →  WiFi ON /  WiFi OFF /  Access Time to turn on / off Wi-Fi or set a specific time to allow camera access Wi-Fi.

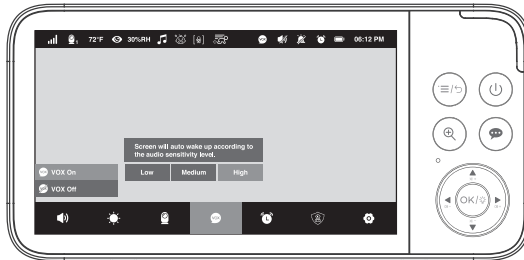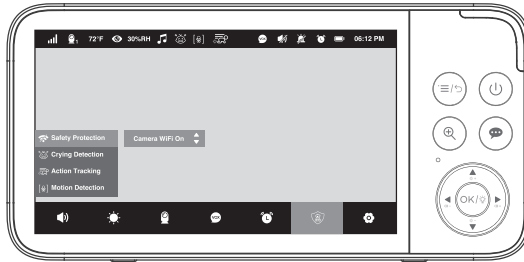


Note: App can only access camera when wifi is ON.

14. Detection

1) Crying Detection

· Press , select through  →  **Crying Detection** to turn on/off detection.

 
Monitor will alert you when detect the baby's cry.

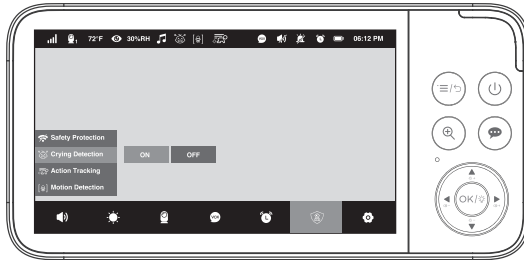

2) Motion Detection

· Press , select through  →  **Motion Detection** to select **High** / **Middle** / **Low** / **OFF** sensitivity levels to monitor your baby's movements.

 
For example, select high sensitivity while your baby is sleeping to receive alerts for any movement. For an awake and playing baby, choose medium or low sensitivity.

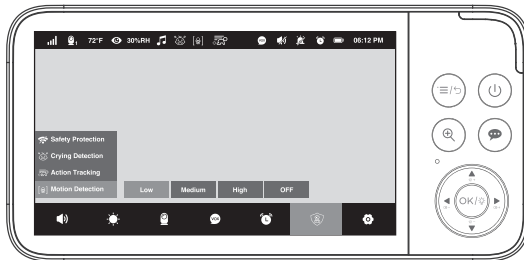

3) Action Tracking


· Press  , select through  →  **Action Tracking** to turn ON/OFF camera tracking.

 The camera continuously tracks your baby, ensuring they remain in your sight.

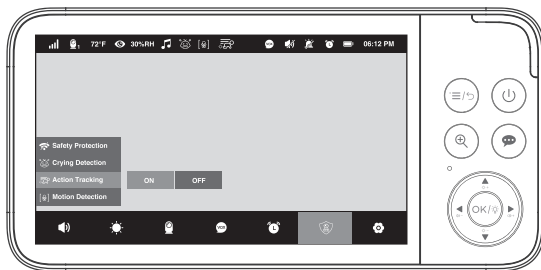

15. Talkback

 Push  to talk and release to listen.

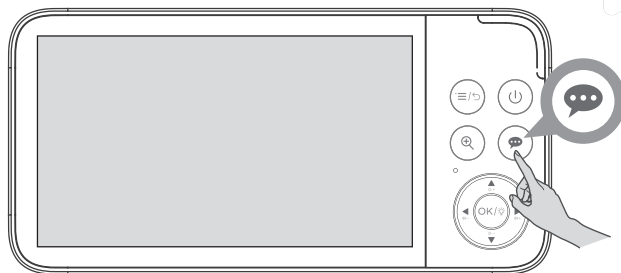


16. Sleep Mode

Short press  to enter sleep mode. Press any button to wake up.




 In sleep mode, the screen will turn off, but the monitor will continue to receive sounds from the camera. At the same time, if the camera detects any abnormal condition, the monitor will be awakened.

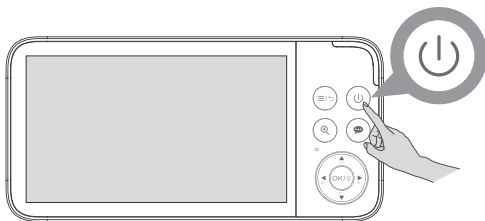


17. Zoom In & Zoom Out

 When viewing a camera, press  to magnify the screen at 2x or 4x.

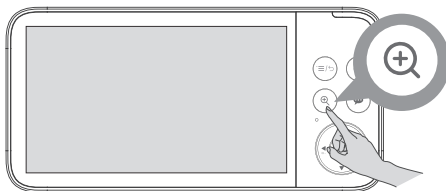

18. Pan & Tilt

 Press  /  to select the camera, and press  to enter camera control, press  /  /  /  to view from different angles, 65 degrees vertically and 300 degrees horizontally.

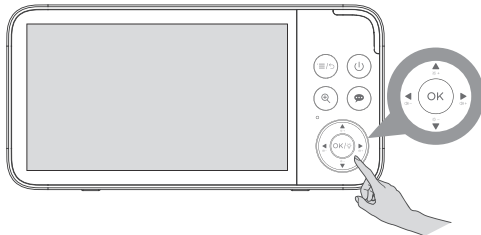


19. Night Vision

The night vision is automatically activated in a dim environment. Infrared LEDs attached on the front of the camera allow you to see the baby in a dark room.

20. Temperature Alert

Press , select through  →  Temperature, press  /  to select

 
Unit / High temperature threshold / High temperature threshold → press  and press  /  to set.

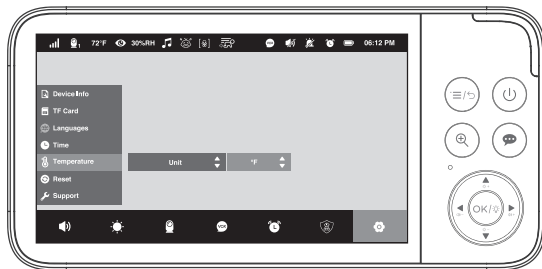

21. Other Settings


Press , and select  to enter other settings.

- | | | |
|----|--|---|
| 1) |  Device Info | View device information |
| 2) |  TF card | Only FAT32 memory cards are supported |
| 3) |  Languages | Select device language |
| 4) |  Time | Set the time on the monitor manually or sync it with the phone's time |
| 5) |  Temperature | Select temperature |
| 6) |  Reset | Reset to factory settings |
| 7) |  Support | View support contacts |

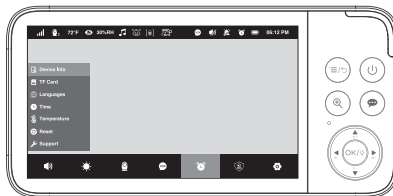 

22. Reset Hole

 If the monitor screen does not respond when you press any buttons, you can use a pin to press the reset hole on the back of the monitor to restart it.

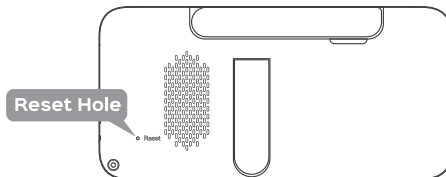

Function & Operations

Getting Start

Please follow page 16 step 13 and make sure you have not forbidden the Wi-Fi.

Add camera

Step 1: Connect your Phone to a 2.4GHz Wi-Fi Network

- For optimal performance, ensure that your device has a strong wireless signal. Additionally, please confirm that your Wi-Fi network is 2.4GHz, as 5GHz Wi-Fi is not supported.

Step 2: Download and Install the BB CAM App

- Ensure that your phone is compatible with the BB CAM app. Scan the QR code to download and install the BB CAM app. You can also search for "BB CAM" in the Apple App Store or Google Play Store.



- To receive immediate updates about your children, please allow BB CAM to send notifications to your device. Additionally, enable BB CAM to access Wi-Fi and wireless data networks.

- Allow the BB CAM app to use wireless data.

 
 
Step 3: Sign Into Your BB CAM Account

- If you don't have a BB CAM account, please tap "Register" to create one. Choose your country or region and enter your email address and password, then tap "Send" to receive a verification code. If you do not receive the code within 60 seconds, you can request a new one.

- If you already have an account, tap "Login" to interact with your baby.

Step 4: Pair the Camera with Your Phone



1. Before adding the camera, ensure that your phone is connected to a 2.4GHz Wi-Fi network. Also, allow BB CAM to find and connect to devices on your local network.
2. Tap "Add Device."

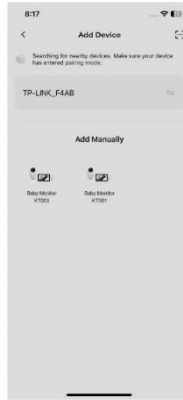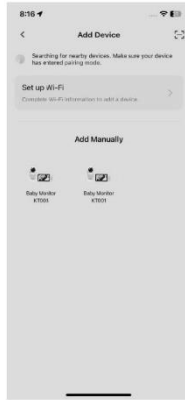

3. Allow BB CAM to access your location and use Bluetooth.

4. Enter the Wi-Fi information to which your phone is connected.

  
5. Select the device you want to pair with your phone.

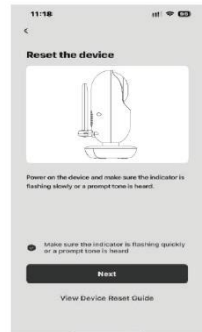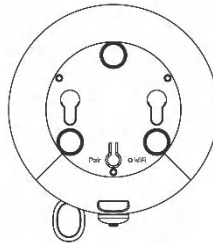

6. Press and hold the Reset button near the camera antenna for 5 seconds. When you hear the "DIDI" prompt tone, click "Next".

7. Your device will be found immediately. Tap "Add" and enter the password for the Wi-Fi network to which your phone is connected. Otherwise, you will not be able to link your phone to the device.

 8. When you hear the prompt tone, your device has been set up successfully, and you will be able to see your baby monitor on the homepage.

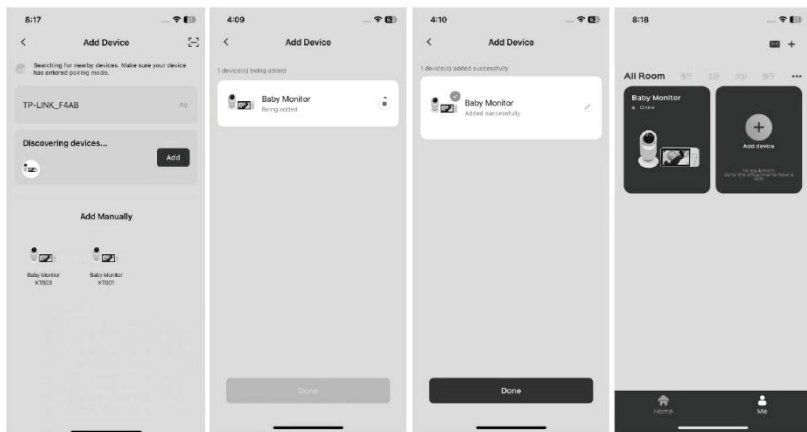

9. You can now interact with your baby anytime and anywhere!

- If you have another camera to pair, simply tap "Add Device" and follow the steps outlined above.

1. Home Page Overview

After you successfully set up the camera, you will see your camera listed on the home page.



1	Notification center	2	Add camera
3	Home management	4	Other Settings

(1). Join in a Home

If you have review a invitation code from the manager of Home, press ●●● select through "Join a home" and enter the invitation code.

(2). Home management

 
On the Home page, press ●●● select through "My home" to manage your home settings and members.

(3). View the message history

On the Home page, press  to examine the alarm from abnormal condition, cameras management history or account logon history.

2. Me page Overview

After you successfully set up the camera, you will see your camera listed on the home page.

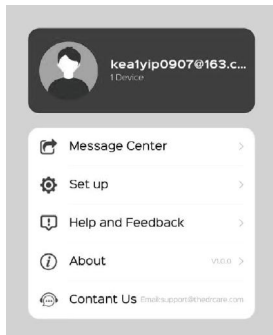

(1). Language Setting

Press select through "Language" to set app language.

 
(2). Reset account's password

Press select through "Account setting", tap Reset Password.

(3). Ask for help

Press to search the problem you meet, if not found, tap **My feedback** and create a new feedback or tap to contact us, we will reply you as fast as possible.

3. View Live Page Overview

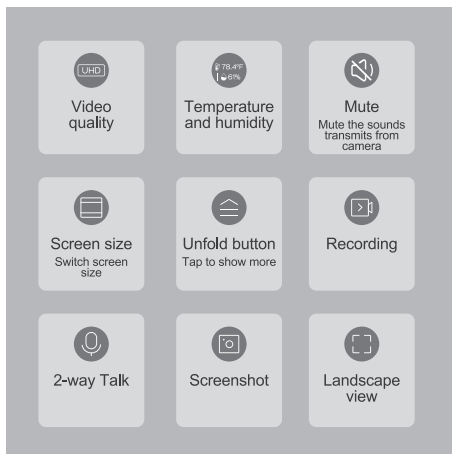

Feature Bar



Playback

View playback



Gallery

View recordings and screenshot



Bright/Dark mode

Switch Display mode



Camera switch

Turn on/off camera



Night Mode

Turn on/off Night vision



Lullaby volume

Adjust lullaby volume



Motion Tracking

Turn on/off motion Tracking



Motion Detection

Turn on/off Motion Detection



Temperature

Set alert scale between °C or °F



Lullaby

Play Lullaby



Breastfeeding

Set reminders at a specific time or repeat reminder to breastfeeding

Function & operation

1. Volume Setting

· Lullaby Volume

Press  select through  →  and Pull the bar to adjust the volume.

· Device Volume

On the live page, press key  select through **Sounds** and pull the bar to adjust the volume.

· If the sound is still too low, you can adjust the volume on the phone itself.

Note: The volume of the lullaby is synchronized with the device's volume.

2. Lullaby

· On the live view page, press  select through  →  and press  /  to choose your favourite lullaby, and press  to play.

· Press  to change play mode, default is loop.

· Pull the bar to adjust the volume.

The first three are white noise, the last five are lullabies.

3. Temperature

On the live view page, press  select through  →  to select temperature unit and set High/Low temperature alarm.

4. Night Vision Mode

On the live view page, press  select through  → and press  to turn on/off or automatically.

5. Breast Feeding Alarm

On the live view page, press  select through  → and press  , select "Time interval" or "Timing"
"Time interval" mean you set a duration, app will remind you after a duration from now. "Timing" means that app will remind you at the time you set.

6. Privacy Mode

 
On the live view page, press  select through  → and press  to sleep your lean, then the camera will stop transmit the image and sounds.

7. Motion Tracking

On the live view page, press $\equiv$ select through $\diamond \rightarrow$ and press $\bullet$ to turn on motion tracking, tap again to turn off, it will track your baby automatically, ensuring your baby is in your sight.

8. Motion detection

- On the live view page, press $\equiv$ select through $\diamond \rightarrow$ and press $\bullet$ to turn on motion detection, tap again to turn off, it will detect your baby's motion, if the baby moves it will send a notification to you.
- Press key $\bullet \bullet \bullet$ select through **Detection Alarm Settings** to set Motion Detection Alarm sensitivity level.

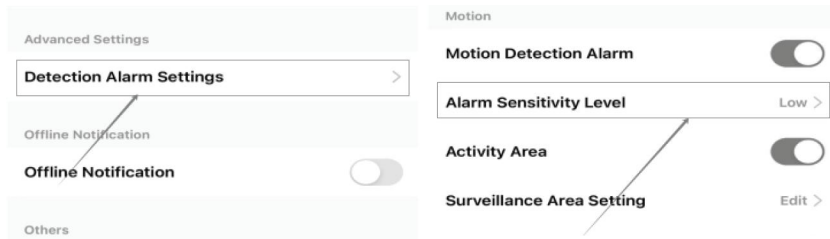

9. Playback

Before you want to view playback, please ensure that you have plug a FAT32 memory card. On the live view page, press $\equiv$ select through $\diamond \rightarrow$ and press $\bullet$ to view the play back.

10. Light/Dark mode

On the live view page, press $\equiv$ select through $\diamond \rightarrow$ press $\oplus$ to switch the display mode.

11. Pan&Tilt control

On the live view page, press  select through  →press  /  /  /  to control the camera.

12. Message

On the Live view page, press  select through  to view abnormal condition from this camera.

 
 
13. Talk Back

· One-way intercom

On the live view page, press and hold  to talk, release to listen. Baby Unit is muted when talking. By default, the system is set to one-way communication mode.

· Two-Way Talk back

On the live page, press key  select through “basic function” → “Talk mode” select Two-way Talk.

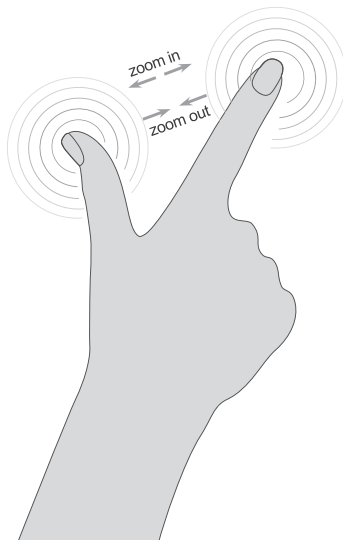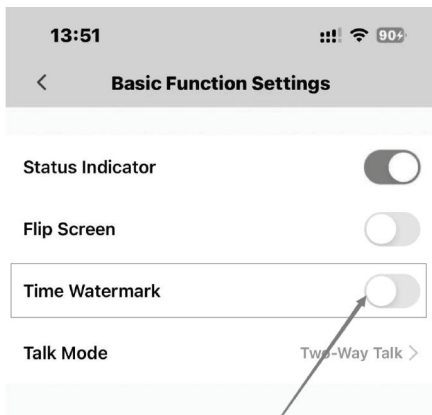


14. Zoom in&Zoom out

- On the live view page, tap  to adjust the screen ratio.
- Use a manual sliding gesture on the screen to zoom in or out.

15. Activity Area Setting


On the live page, press key **...** select through **Detection Alarm Settings** → **Surveillance Area Setting** to edit the activity zone by dragging the border.

 Note: You will receive an alert when the child climbs out of this area.

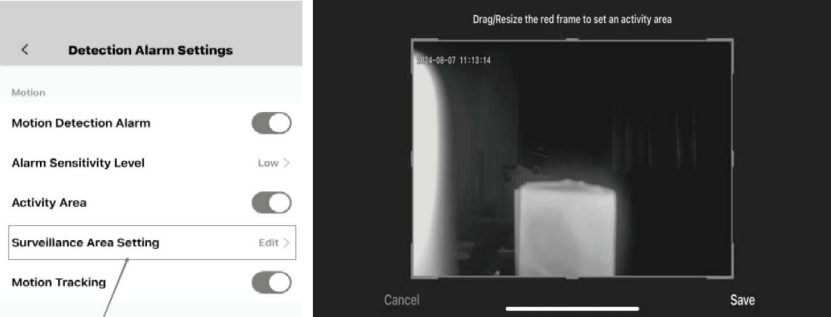

16. Schedule

 On the live page, press key **...** select through **Detection Alarm Settings** → **Schedule** to add timer.

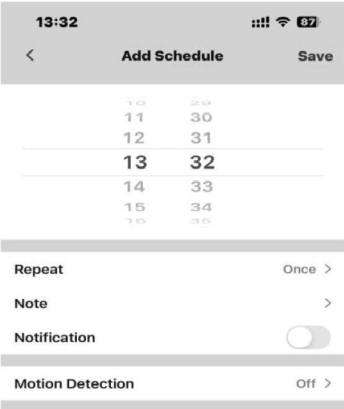

17. Offline Notification

On the live page, press key **...** select through **Offline Notification** to turn on.

Cameras settings

 
1. Select room-by-room view and name cameras

On the live page, press key **...** select through  **Camera 1** , you can rename the cameras and categorize them into the appropriate rooms.

2. Share cameras to your families

On the live page, press key **...** select through **Share Device** and select a sharing method, such as sharing via account, link, etc.

You can see who has shared the cameras.

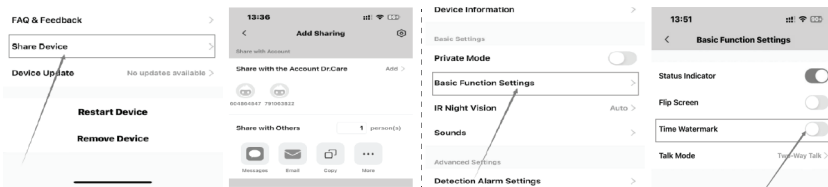

3. Enable video watermark

On the live page, press key **...** select through **Basic Function Settings** → **Time Watermark** to turn on.

4. Turn on Offline Notification

On the live page, press key **...** select **Offline Notification** to turn on Offline Notification.

5. Remove camera

On the live page, press key **...** and tap **Remove Device** .

Note: Once you remove the camera, no one in your created Home could access the camera.

NOTE: If both the monitor and app are connected to the camera, any settings changed on one end will be synchronized on the other.

TROUBLESHOOTING

4

Why won't my baby monitor turn on?

- Make sure the monitor is turned on and there is still power left.
 - Charge with the included power cable only.
 - Check if the charging indicator is on.
- If not, please switch to another power outlet or change the adapter.

Is a WiFi connection required to set up and use?

- This non-WiFi appliance does not need an internet connection for setup.
- The baby monitor and camera use 2.4GHz radio frequency for transmission.

Why won't my baby monitor connect to the camera?

- Make sure the camera is securely plugged in. Check if the plug and power cord are damaged.
- Make sure the monitor is close to the camera when pairing.
- Check if there are large metallic objects like doors, refrigerators, mirrors that might block signal transmission.
- Check if there are existing 2.4GHz equipment like WiFi networks and microwave ovens that might interfere with signal transmission.
- Press the Menu Button, select through  →  Add →  and press the PAIR button on the camera, then the camera will pair with the monitor automatically.

Why does the monitor screen keep switching off when I'm using it?

Why is the screen black when I view a camera?

Why is there no sound from the monitor?

How should I clean and maintain my monitor and accessories?

- Press the Menu Button, select through  →  and press  /  →  to set the desired time for the screen to turn off automatically.
- You may have the VOX (Voice Activated Alert) mode on so that the screen will only come on when the sound is above the alert level.
You can switch this feature off within the menu.

- Make sure the camera is in range and securely plugged in.
- Check if the plug and power cord are damaged.
- Adjust the monitor antenna to improve the signal strength.

- Check if the video volume is too low. Press the Menu Button, select through  →  and press  →  to set the desired volume level.
- Check if VoX mode is turned on. Note that in VOX mode the screen will stop broadcasting sounds from the camera side until the audio detected is above the alert level.

- Never immerse in water or other liquids. They are not waterproof.
- Clean with a dry cloth only. Exercise caution when cleaning the camera lens.
- Clean the temperature sensor on the camera with a dry cotton swab on a regular basis.

Why is the temperature shown on the monitor not accurate?

Why did the monitor video suddenly turn black and white?

Why is the screen a bit choppy?

My baby monitor makes a noise.

- The temperature sensor is on the camera. Please make sure there is enough air circulation around the sensor.
- Do not place the camera near heat sources, including heaters, air-conditioning vents, and lamps.
- The air at the ceiling is warmer than the air at the floor. Place the camera at a relatively low height to read the temperature more accurately.
- Power the monitor and camera off and on again, reset the monitor to factory settings, and pair the camera with the monitor again.

• Night vision may have become activated. Turn on the room lights and night vision will turn off automatically.

- Make sure the camera is in range.
- Adjust the monitor antenna to improve the signal strength.

• Microphone feedback might occur when the monitor is too close to the camera. Keep them away from each other.

• Volume is too high. Press the Menu Button, select through  →  Video Volume, and press  →  to lower the volume.

• The camera is not in range. Please keep the distance within 30 feet / 10 meters.

Troubleshooting of app

If have any problem with the Baby monitor, please press  to search the problem you meet, if not found, tap  **My feedback** and create a new feedback or tap  to contact us, we will reply you as fast as possible.

CUSTOMER CARE



Default 24-Month Warranty

This appliance is covered by EasyCare® Baby warranty for 24 months from the date of its original purchase.

The warranty will not apply in cases of:

- Accident, misuse, or repairs performed by unauthorized personnel.
- Any unit that has been tampered with or used for commercial purposes.
- Normal wear and tear of wearable parts.
- Use of force, damage caused by external influences.
- Damage caused by non-observance of the User Manual, e.g. connection to an unsuitable mains supply or noncompliance with the instructions.
- Partially or completely dismantled appliances.
- Defects caused by or resulting from damages from shipping or from repairs, service, or alteration to the product or any of its parts that have been performed by a repair person not authorized by EasyCare® Baby.

We can only provide after-sales service for products that are sold by EasyCare® Baby or EasyCare® Baby authorized retailers and distributors. If you have purchased the appliance from a different place, please contact your seller for return and warranty issues.

FCC Statement

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: (1) This device may not cause interference. (2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) L'appareil ne doit pas produire de brouillage (2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Camera:

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.

Cet émetteur ne doit pas être Co-placé ou ne fonctionnant en même temps qu'aucune autre antenne ou émetteur. Cet équipement devrait être installé et actionné avec une distance minimum de 20 centimètres entre le radiateur et votre corps.

Monitor:

SAR compliance is based on a separation distance of 0 mm between the unit and the body of the user

La conformité du DAS est basée sur une distance de séparation de 0 mm entre l'unité et le corps de l'utilisateur