


QUICK START GUIDE


Know the fundamentals

① Charge

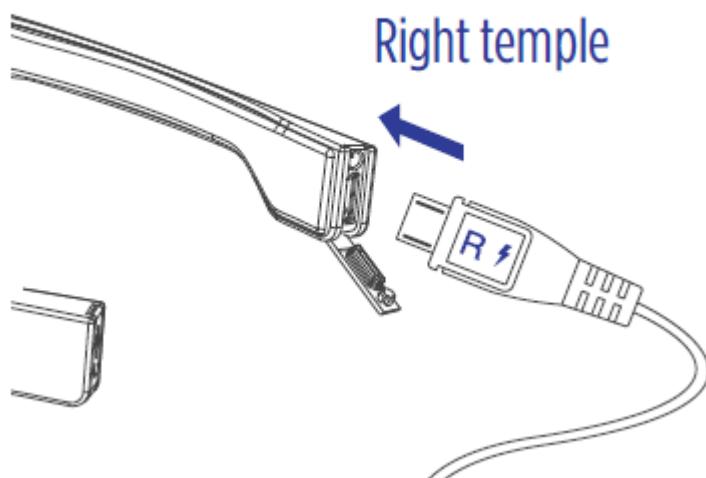


Insert charging cable into right temple. Steady green LED light indicates charging is complete.

② Storage

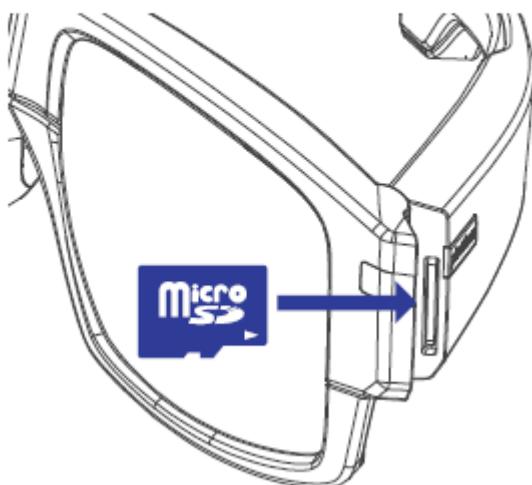

Insert Micro SD card fully into left temple hinge until clicks into place.


③ Power

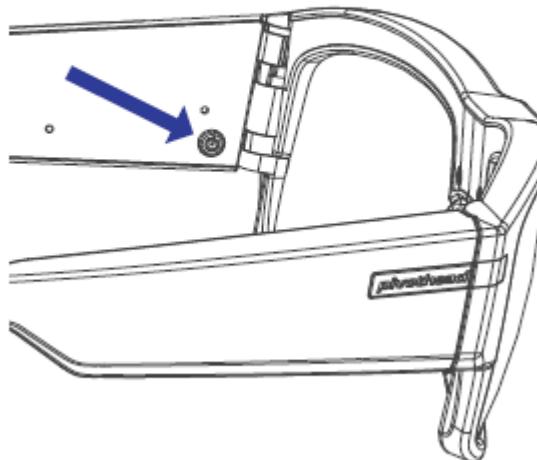

Press power button located inside left temple. Steady blue LED light indicates eyewear is on.


Capturing and downloading media

④ Swipe

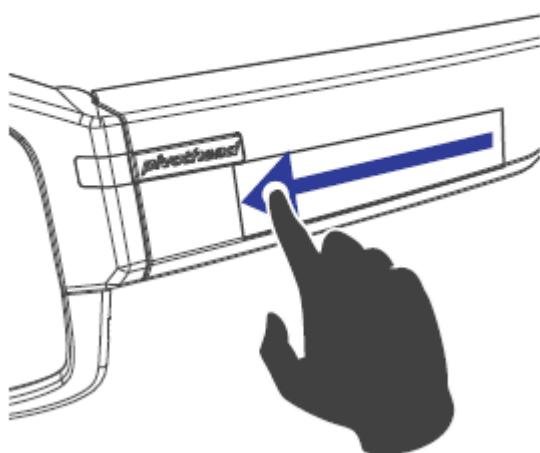


Swipe forward to start a video. Swipe forward again to stop. Flashing red LED light indicates recording.

⑤ Tap

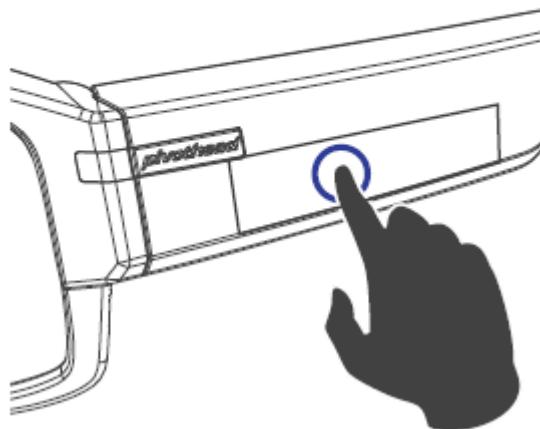

Tap to capture photos. Tap twice to capture burst shots. Tap three times to start/stop a time-lapse.

⑥ Download

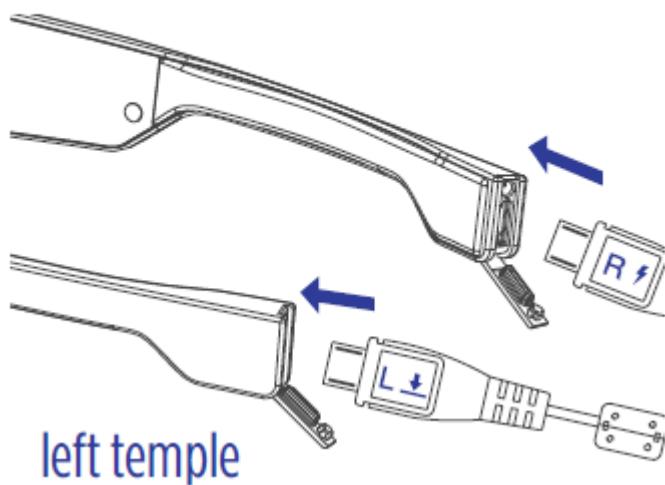

Download media from left temple with left branch of supplied cable. Suggested to supply power to right temple during media transfer.

FCC Notice to Users

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution:

Any changes or modifications in construction of this device which are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-orientate or relocate the receiving antenna.
- Increase the distance between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

DISCLAIMER

Cape Evolution (Shanghai) Co., Ltd., the producer of the Pivothead products, does not promote, endorse or intend for its products to be used in high risk, careless or dangerous activities, and is not responsible for any injuries or property damage arising from any user activities. Cape Evolution (Shanghai) Co., Ltd. will not under any circumstances be responsible for injuries or property damages resulting from any misuse, illegal use, or unintended use of its products. Cape Evolution (Shanghai) Co., Ltd is not responsible for any illegal action taken while recording or editing video or still images captured with our products. The Pivothead products are intended to be used to capture images and recordings in strict compliance with all applicable federal, state and local laws and regulations. It is the user's responsibility to comply with such laws and regulations.

Correct Disposal of This Product (Waste Electrical & Electronic Equipment)



(Applicable in the European Union and other European countries with separate collection systems) This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from

other types of waste and recycle them responsibly to promote the sustainable reuse of material resources. Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.

Correct disposal of batteries in this product



(Applicable in the European Union and other European countries with separate battery return systems) This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste at the end of their working life. Where marked, the chemical symbols Hg, Cd or Pb indicate that

the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66. If batteries are not properly disposed of, these substances can cause harm to human health or the environment. To protect natural resources and to promote material reuse, please separate batteries from other types of waste and recycle them through your local, free battery return system.