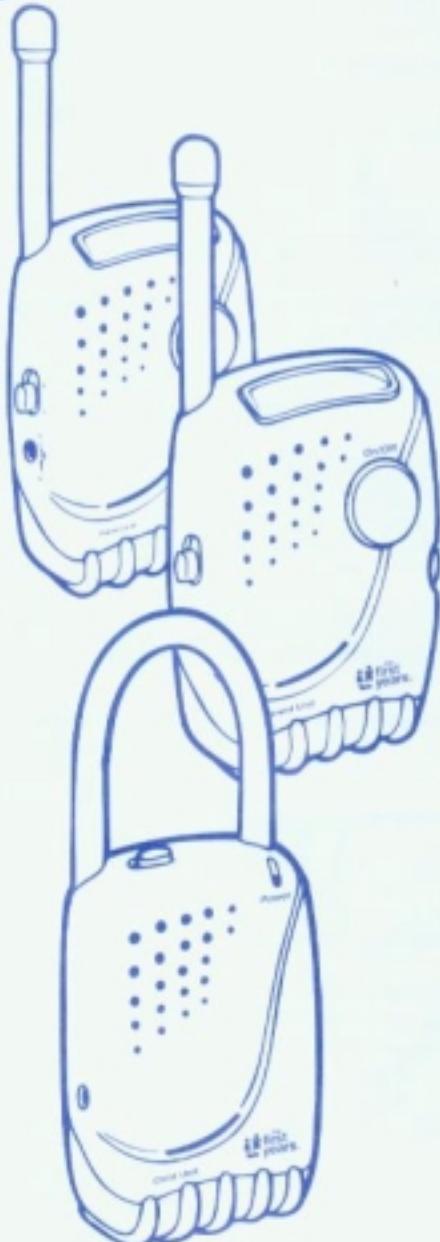




## Peace of Mind Monitor with Two Receivers



### Quick Start Instructions

You'll find detailed instructions inside.  
Please read the safety instructions on page 2.

#### ① Set up the Parent Units

- Install four AA batteries. Battery compartment is located at base of unit. Unscrew compartment cover using a standard screwdriver.
- Or, plug one of the three AC adapters provided into each Parent Unit.

#### ② Set up the Child's Unit

- Place the unit near your child (within 6 feet, but well beyond child's reach).
- Position the unit straight up.
- Install four AA batteries. Battery compartment is located at base of unit. Unscrew compartment cover using a standard screwdriver.
- Or, plug in one of the AC adapters provided.
- Slide the channel/off switch to A or B to turn the unit on.

#### ③ Use the Monitor (Parent Units)

- Slide the channel switch to the same channel as the Child's Unit (A or B). Push the on/off button. If clarity is not satisfactory on one channel, switch to the other. Always keep both units set to the same channel.
- Rotate the volume dial to the desired level.
- Keep a Parent's Unit with you, and keep it positioned upright.

#### **WARNING:**

- THIS PRODUCT IS A MONITORING DEVICE DESIGNED TO ASSIST IN THE MONITORING OF CHILDREN, NOT AS A PREVENTION FOR INJURY TO OR LOSS OF CHILD.
- THIS PRODUCT IS NOT A SUBSTITUTE FOR ADULT SUPERVISION. ALL CHILDREN SHOULD BE MONITORED AT ALL TIMES BY RESPONSIBLE ADULTS.
- THIS PRODUCT IS NOT A TOY. DO NOT ALLOW CHILDREN TO PLAY WITH IT.
- TO PREVENT ELECTRIC SHOCK, STRANGLING BY CORD, CHOKING, OR EYE INJURY, DO NOT PLACE THE MONITOR IN, OR ATTACH IT TO, A CRIB OR PLAYPEN.
- NEVER PLACE ANY UNIT WITHIN A CHILD'S REACH.

If you have questions about the use of your Peace of Mind Monitor, please call us toll-free: 1-800-533-6708.

## Safety Instructions



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.



This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



### DANGER!

**DANGER! TO AVOID THE RISK OF FIRE OR ELECTRIC SHOCK**

- **DO NOT USE THE ADAPTER NEAR WATER (BATHTUB, SINK, SWIMMING POOL, ETC.)**
- **DO NOT REMOVE THE COVER OR BACK OF ANY UNIT. THERE ARE NO USER-SERVICEABLE PARTS INSIDE**



**WHEN USING THE ADAPTER, KEEP OUT OF REACH OF CHILDREN TO PREVENT ELECTRIC SHOCK, STRANGLING BY CORD, CHOKING, OR EYE INJURY.**

### • IMPORTANT!

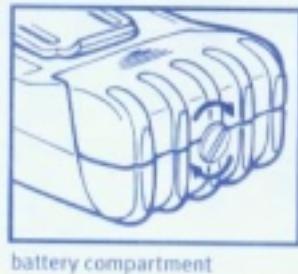
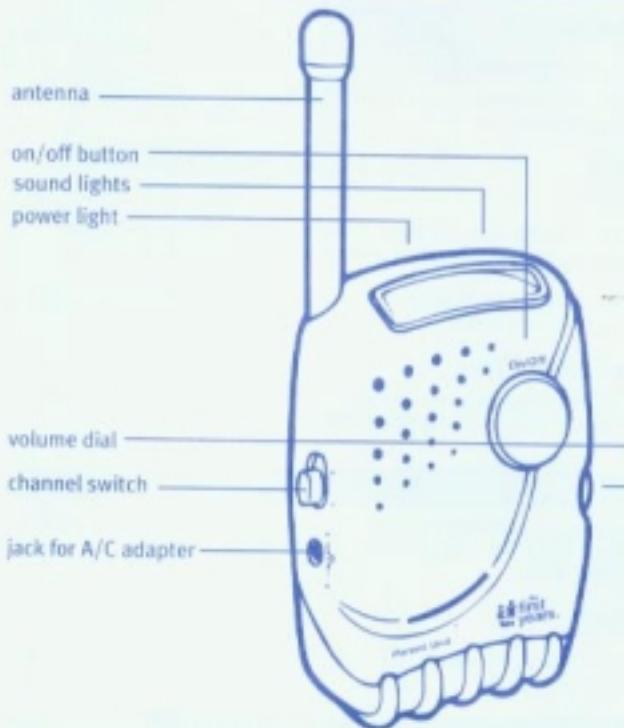
## KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.

- **OBSERVE ALL WARNINGS.**
- **FOLLOW ALL OPERATING INSTRUCTIONS.**
- **WATER AND MOISTURE.**  
This product should not be used near water, for example, near a bathtub or sink, in a wet basement or near a swimming pool.
- **VENTILATION.**  
This product should be situated in such a way that it has proper ventilation. Do not place on a bed, sofa, rug, or similar surface that may block ventilation openings. Do not place in an enclosed area, such as a cabinet or bookcase that might impede the flow of air through the ventilation openings.
- **HEAT.**  
This product should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances that produce heat.
- **POWER SOURCE.**  
This product should be connected to a power supply only of the type described in these instructions or marked on the product itself.

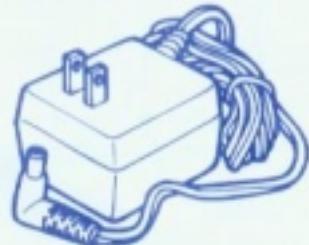
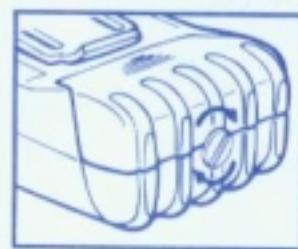
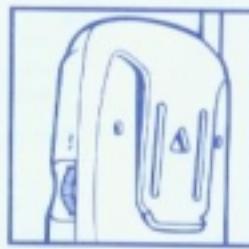
### IMPORTANT

THE FOLLOWING APPLIES ONLY TO **UL LISTED UNITS**. THIS PRODUCT IS BEING SUPPLIED WITH THE REQUIRED SAFETY FEATURE OF A POLARIZED PLUG. YOU WILL NOTE THAT ONE PRONG IS LARGER THAN THE OTHER SO THAT THE PLUG FITS INTO THE OUTLET ONLY ONE WAY. **DO NOT TAMPER WITH THE PLUG UNDER ANY CIRCUMSTANCES.**

- **POWER CORD PROTECTION.**  
The power supply cord should be routed so that it is not likely to be walked on or pinched by items placed upon or against it. Pay particular attention to the cord at the plug, at the convenience receptacle, and at the points it exits from the appliance.
- **CLEANING.**  
Before cleaning, be sure to unplug monitor. Clean only as recommended in these instructions.
- **NON-USE PERIODS.**  
The power cords of the product should be unplugged from the outlet when the monitor will not be in use for a long period of time.
- **OBJECT AND LIQUID ENTRY.**  
Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through the openings.
- **DAMAGE REQUIRING SERVICE.**  
This product should be serviced by qualified service personnel (see below) when:
  - A. The power supply cord or plug has been damaged; or
  - B. Objects have fallen or liquid has been spilled into it; or
  - C. The product has been exposed to rain; or
  - D. The product does not appear to operate normally or exhibits a marked change in its performance; or
  - E. The product has been dropped or the enclosure damaged.
- **WALL MOUNTING.**  
The monitors should be mounted to a wall only as recommended in these instructions.

**Parent Units (receiver)**

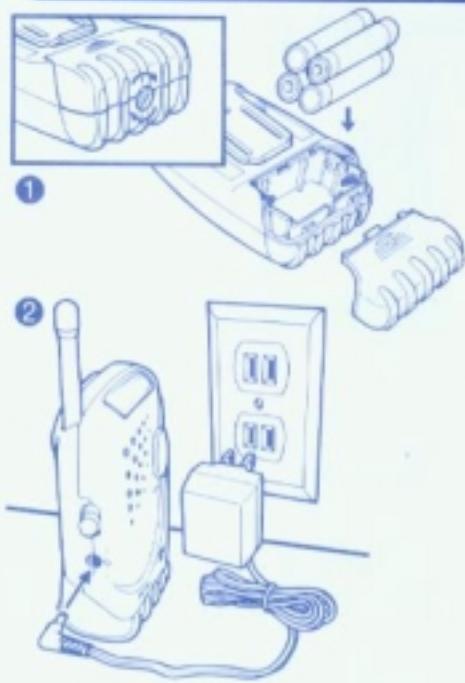
A/C adapter

**Child's Unit (transmitter)**

A/C adapter



## To Set Up



### Parent Units

- To operate with batteries.
  - Unscrew battery compartment cover, located at the base of unit, using a standard screwdriver.
  - Press on the indented finger grip to release, then slide and lift the battery compartment cover.
  - Insert four AA batteries. Position them so the + and – contacts are aligned with the corresponding contacts on the battery clip.
  - Replace the battery compartment cover, and slide it until it clicks into place, then tighten screw.
- To operate with AC adapter.
 

Insert the AC adapter plug into the jack on the back of the unit, and then plug the adapter into an electrical outlet.



#### WARNING:

ALWAYS USE THE AC ADAPTER(S) SUPPLIED WITH THIS PRODUCT. DO NOT USE ANY OTHER ADAPTER. MONITOR COULD BE DAMAGED, AND WARRANTY WOULD BECOME VOID.

### Child's Unit

- Position the Child's Unit within approximately 6 feet of your child, yet out of the child's reach.



#### WARNING:

DO NOT PLACE CHILD'S UNIT IN CRIB OR ATTACH TO CRIB. (TO PREVENT HEAT BUILD UP, PLACE ON AN OPEN SURFACE AWAY FROM HEAT SOURCES; DO NOT PLACE IN AN ENCLOSED SPACE.)

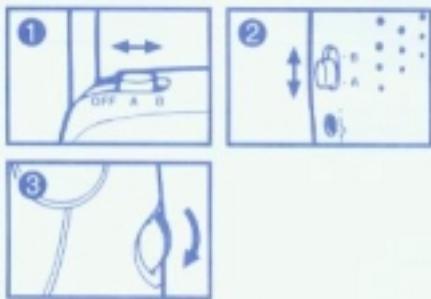
- Insert the AC adapter plug into the jack on the side of the unit, then plug the adapter into an electrical outlet.

For battery operation (optional): Unplug the unit, and install four AA batteries (not included). (See "Care of Your Monitor").

### For wall mounting (optional):

- Securely fasten one #6 flat head wood screw on the wall. (For best results, use a 3/4-inch screw; mount in a solid wood panel, or use a screw anchor).
- Leave the screw head protruding from the wall by at least 1/4 inch.
- Fit the screw head slot (on the back of the unit) over screw head and slide the unit down to seat it firmly.
- To test that the unit is securely mounted, press on its edges.

## To Use Monitor



- ➊ Slide the channel/off switch on the Child's Unit to either A or B to turn the unit on.
- ➋ Slide the channel/off switch on the Parent Units to the same channel as the Child's Unit (A or B). Push the on/off button. (For the Monitor to work properly, both units must be set to the same channel.)
- ➌ Turn the volume dial on the Parent Units clockwise to the desired loudness level.
- ➍ Keep a Parent Unit with you. For best reception, keep all units as near upright as possible.

### Using belt clip:

Slide onto your belt or waistband. The belt clip has two slots; you can thread your belt through these slots for added security.

### Changing channels:

Always keep all units set to the same channel (A or B). If clarity is not satisfactory on one channel, switch to the other.

### Lights:

Here's how to interpret the lights on the Parent Units.

- ➊ Power Indicator
  - Light is green – Unit is on and the Monitor is ready to transmit sound.
  - Not lit - Unit is not receiving power. (See Troubleshooting, "No power.")
- ➋ Sound Lights
  - No lights lit – No sound from Child's Unit (baby is quiet).
  - One or two lights lit – Quiet sounds (baby may be whimpering or talking).
  - All three lights lit – Loud sounds (baby may be crying or talking loudly).



Problem	Possible Cause	Solution
No Power (Power indicator not lit at all)	Parent Units: Unit is not turned on.	Press on/off button.
	Batteries are dead. Adapter not plugged in.	Replace batteries, or plug in adapter. (See "Care of Your Monitor.")
	Adapter plugged in to outlet that's turned off.	If outlet is controlled by a wall switch, be sure switch is turned on.
	Child's Unit: Unit is not turned on.	Slide channel/on switch to A or B (whichever channel Parent Units are set to).
	Batteries are dead. Adapter not plugged in.	Replace batteries, or plug in adapter.
	Adapter plugged in to outlet that's turned off.	If outlet is controlled by a wall switch, be sure switch is turned on.
Hissing sound	Parent Units are turned on, but Child's Unit is off.	Leave Child's Unit plugged in and turned on at all times (or, if you turn it off, turn off Parent Units also).
Static or interference	Units set to different channels.	Set all units to the same channel.
	Appliances (fan, hair dryer or mixer, for example) causing interference.	Try turning off any nearby appliances or switching channels.
	Cross-talk from cordless phone or some other nearby transmitter.	Try switching channels.
	Child's unit not receiving power.	Make sure adapter is plugged in and outlet is receiving power.
	Batteries are low in one or more units.	Replace batteries in one or more units.
Noisy feedback (high-pitched "screech")	Units too close together	Be sure Parent Units are at least 3 feet from Child's Unit.
	Volume too high.	Lower volume setting in Parent's Unit.
No sound or very weak reception	Unit is getting little or no power.	Make sure adapter is plugged in and outlet is receiving power, or replace batteries.
	Out of range.	Move Parent Units closer to Child's Unit (and be sure Child's Unit is turned on.)
	Units are set to different channels.	Set all units to the same channel.
	Weak batteries.	Replace batteries or use A/C adapter.
	Volume is set too low.	Raise volume setting.

## Care of Your Monitor

### Parent Units

Replacing Batteries:

Remove old batteries and see "To Set Up Parent Units" on page 4.

### Child's Unit

Installing or replacing batteries (for battery operation):

- Use four standard AA batteries
- Unscrew battery compartment cover, located at the base of the unit, with a standard screwdriver.
- Press on the indented finger grip to release, then slide and lift the battery compartment cover.
- Remove the old batteries, if any, and insert new batteries, matching the + and - contacts to the corresponding contacts in the battery clip as indicated.
- Lower the battery compartment cover, and slide it until it clicks into place. Screw the battery compartment cover back onto unit.

#### **WARNING:**

KEEP BATTERIES AWAY FROM CHILDREN. PARENTS ARE URGED TO EXERCISE CARE IN THE STORAGE, USE, AND DISPOSAL OF ALL BATTERIES.

- Do not dispose of batteries in fire. They may explode. Failure to follow the following instructions may cause the batteries to make "popping" sounds and leak battery acid resulting in personal injury and damage to the Monitor. If battery leakage occurs, thoroughly wash the affected skin and clothes. Keep battery acid away from your eyes and mouth. Contact the battery manufacturer for further information. To avoid battery leakage:
- Be sure to insert batteries correctly following instructions. Do not put batteries in backwards (positive (+) and negative (-) ends must face the proper direction).
- Do not mix old and new, rechargeable and non-rechargeable or carbon zinc and alkaline batteries.
- Always remove exhausted batteries from the product.
- Never use a screwdriver or any other tool to pry batteries from the compartment, as the supply terminals may be short-circuited.
- Do not leave batteries in the Monitor for long periods of non-use.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## Care of Your Monitor (continued)

### INFORMATION FOR INDUSTRY CANADA:

Transmitter carrier frequencies are range of 905.400 MHz and 905.990 MHz. Field strength is approx. 76.4dBuWm at 3 meters distance.



### WARNING:

CHANGES OR MODIFICATIONS TO THIS UNIT NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE COULD VOID THE USER'S AUTHORITY TO OPERATE EQUIPMENT.

Operation is subject to the following two conditions:

- (1) This device may not cause interference and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

### To Clean Both Units

Wipe exterior surfaces with a clean, dry cloth.

## Service

If your Monitor is not working properly, please call The First Years at:  
1-800-533-6708.

Often, we can explain how to get the monitor working again. If the product needs repair, you will be requested to pack it carefully and send it to:

The First Years/Service Department  
One Kiddie Drive  
Avon, MA 02322-1171

Visit us at <http://www.thefirstyears.com>  
©2001 The First Years Inc.  
Avon, MA 02322-1171

Made in China to The First Years' quality specifications.

## One (1) Year Limited Warranty

The First Years warrants this product to be free from defects in material and workmanship for a period of one year from the date of original purchase.

Should this product prove to be defective at any time during the warranty period, The First Years will, at its option, either replace or repair it without charge.

For warranty service, please return the product, along with dated sales receipt or other proof of the purchase date, to The First Years, One Kiddie Drive, Avon, MA 02322-1171.

This warranty does not apply to battery life or to damage caused by battery leakage or improper handling or installation of batteries. This warranty does not cover damage caused by accident, misuse, abuse, improper maintenance, unauthorized modification, or connection to an improper power supply. A charge will be made for repair of such damage.

This warranty excludes all incidental or consequential damages.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, which vary from state to state.

**IMPORTANT: USE ONLY THE ADAPTERS SUPPLIED WITH THIS PRODUCT.  
USE OF OTHER ADAPTERS WILL VOID THE WARRANTY.**