

FCC RF EXPOSURE INFORMATION

WARNING! Read this information before using your phone



In August 1996 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards.

CAUTION

Operating Requirements

This device was tested in a notebook computer with the significant source of emissions (antenna) kept 1.0 cm. from the body. Please maintain a minimum of 1.0 cm separation distance between the user's body and the device to comply with FCC RF exposure requirements.


For more information about RF exposure, please visit the FCC website at www.fcc.gov

◆ Installation of User Program for Windows 95/98/ME/2000


1. Installation

1. Insert the install CD to the CD-ROM Drive.


2. Click the 'FREEWING SPEEDUP.exe' icon twice in 'My computer- CD-ROM Drive- Win9x'(for windows2000 users, Win2K folder.)

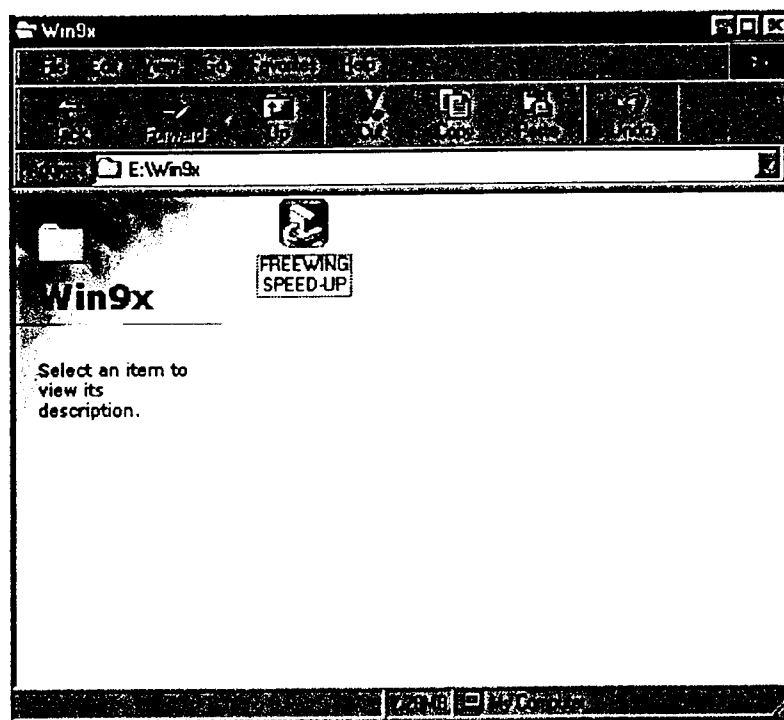


3. When InstallShield Wizard appears, click Next.

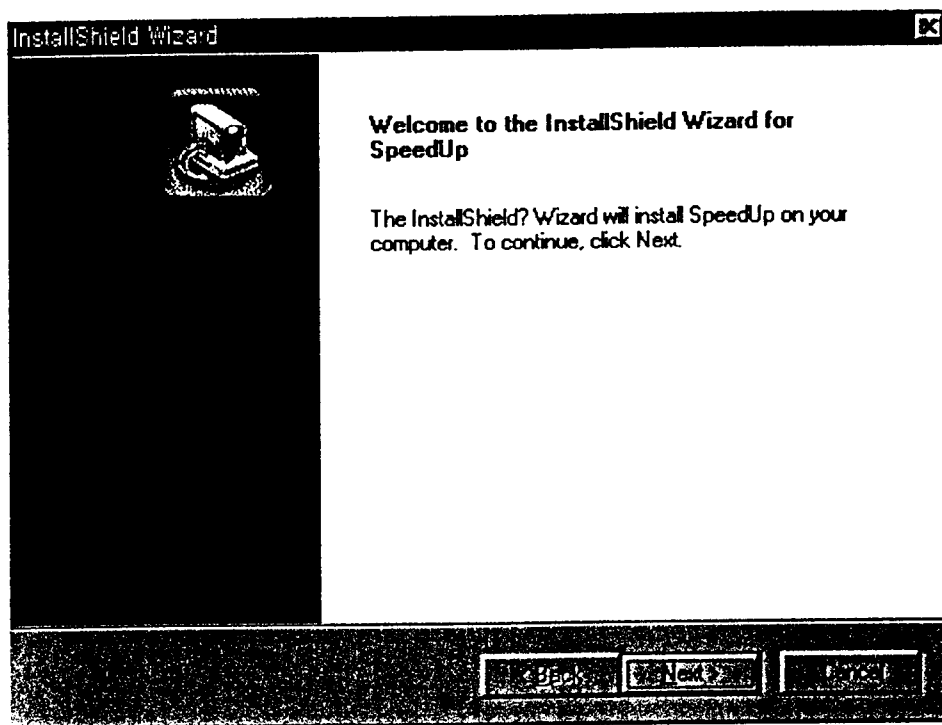


4. Select the location of folder you want(fixed value is also available), then click Next.

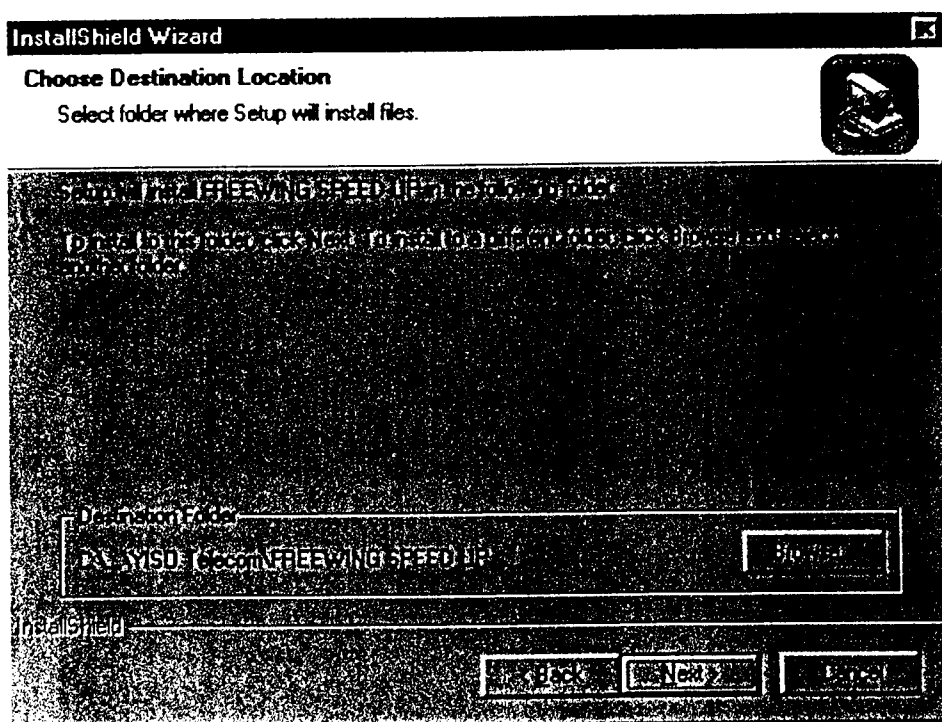


5. Click Next

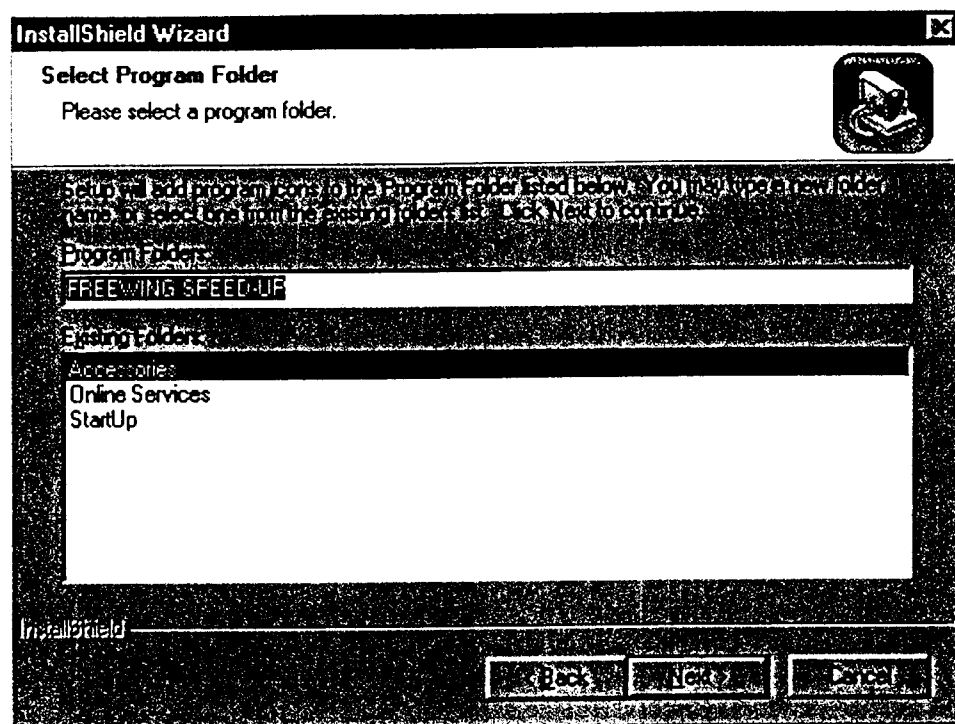


6. Wait for completing installation.

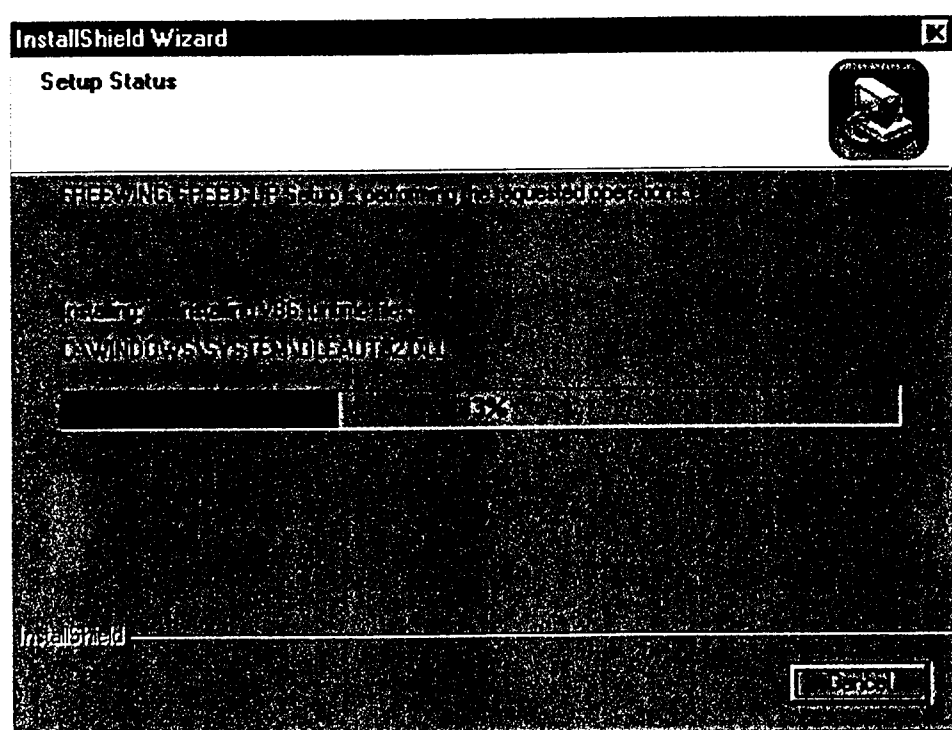

7. Click Finish to finish the installation.

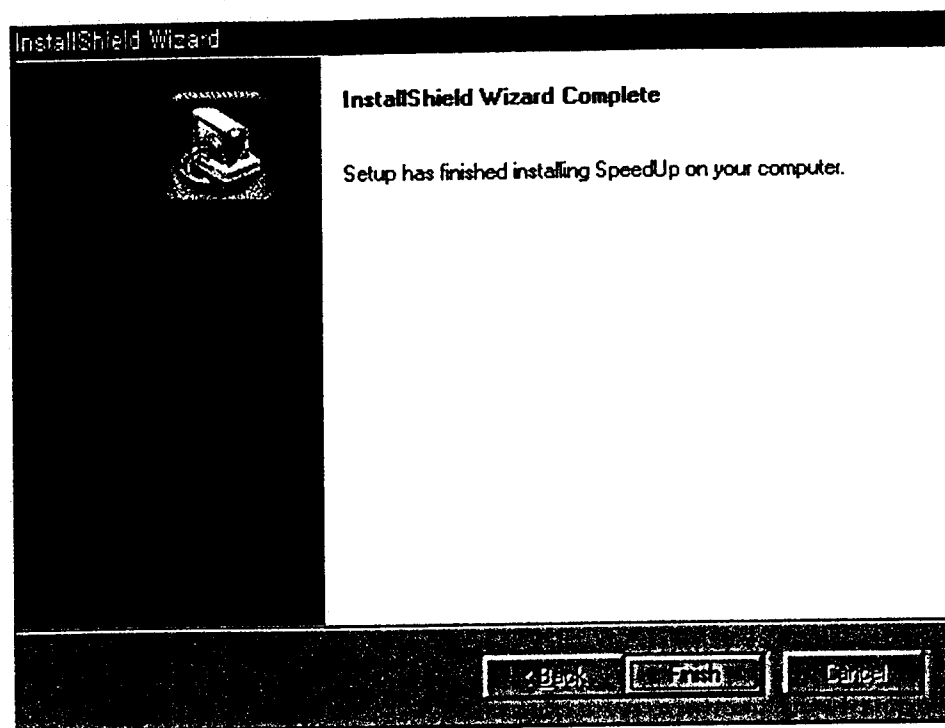


8. If you restart your computer, the installation of FREEWING SPEEDUP is completed.

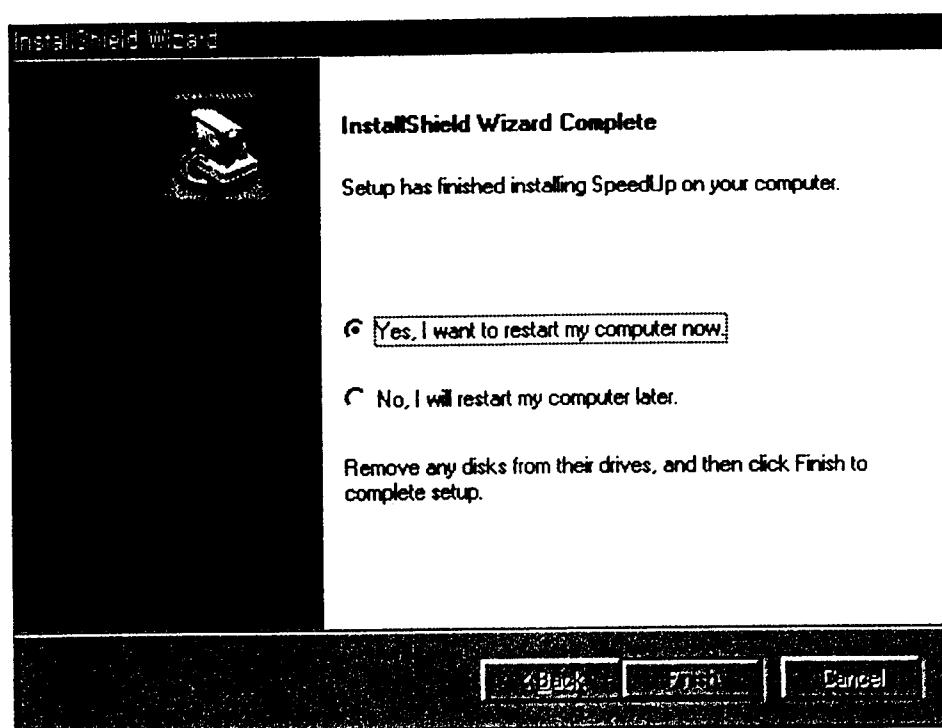

9. If you insert Freewing Card slot after restarting, driver setting is completed automatically.

2. Main View with functions

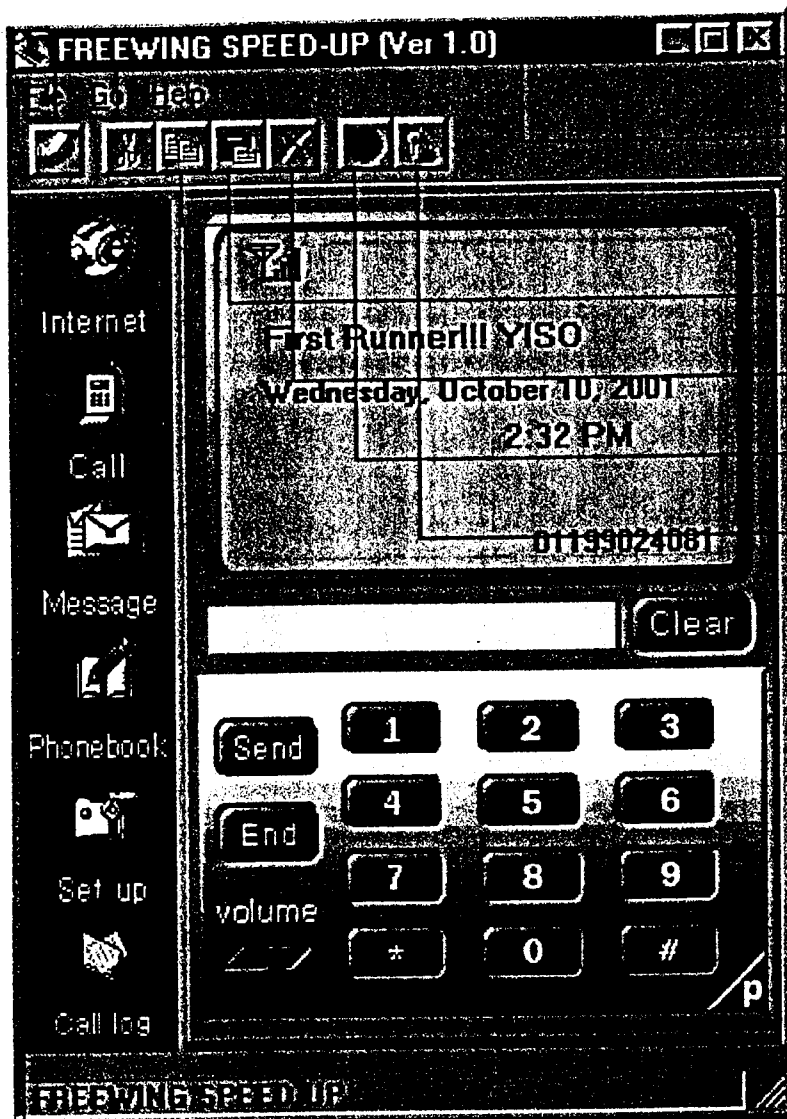

1. Connect Fax

2. Cut (text)

3. Copy

4. Paste

5. Delete

6. Delete SMS

7. Log out

1. Access Internet

2. Call(main)

3. Receive SMS,voice
message

4. Store and find phone
number

5. Setup others



6. Check call record

3. Internet access

1. If you insert Freewing Speed up into a PCMCIA Slot after installation, UI program operates automatically.




2. When you run the program first after setting, following screen appears. Click 'Yes'.

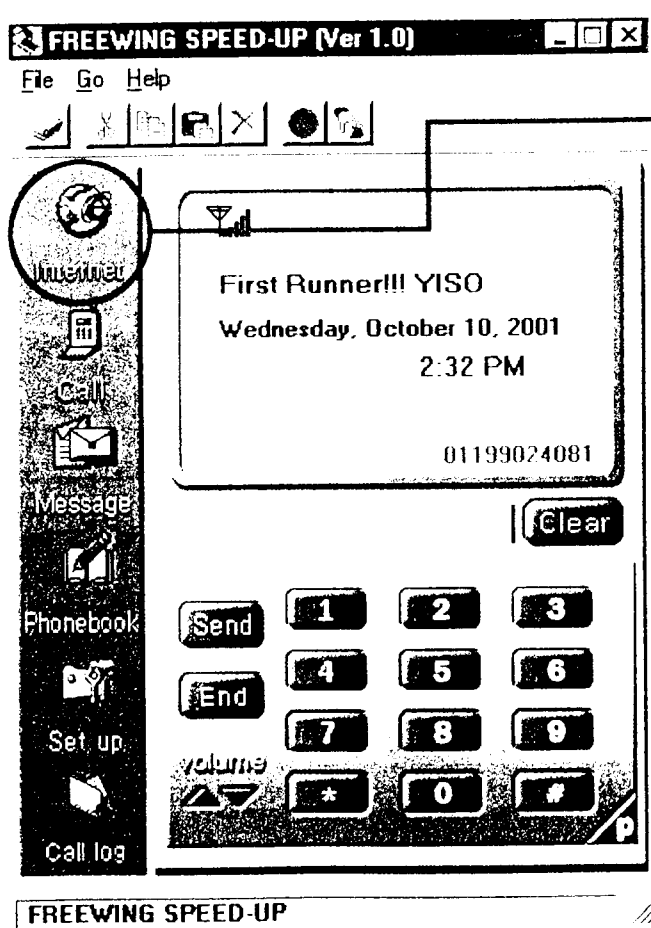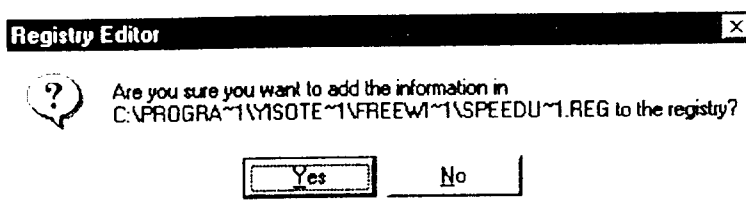


3. Click 'Internet' in left function icons.


4. On the left bottom following messages 'Dialing -> Verifying user name and password -> Connecting the Internet' appear, it connects the Internet and Internet browser operates automatically, then UI program is scale-down.

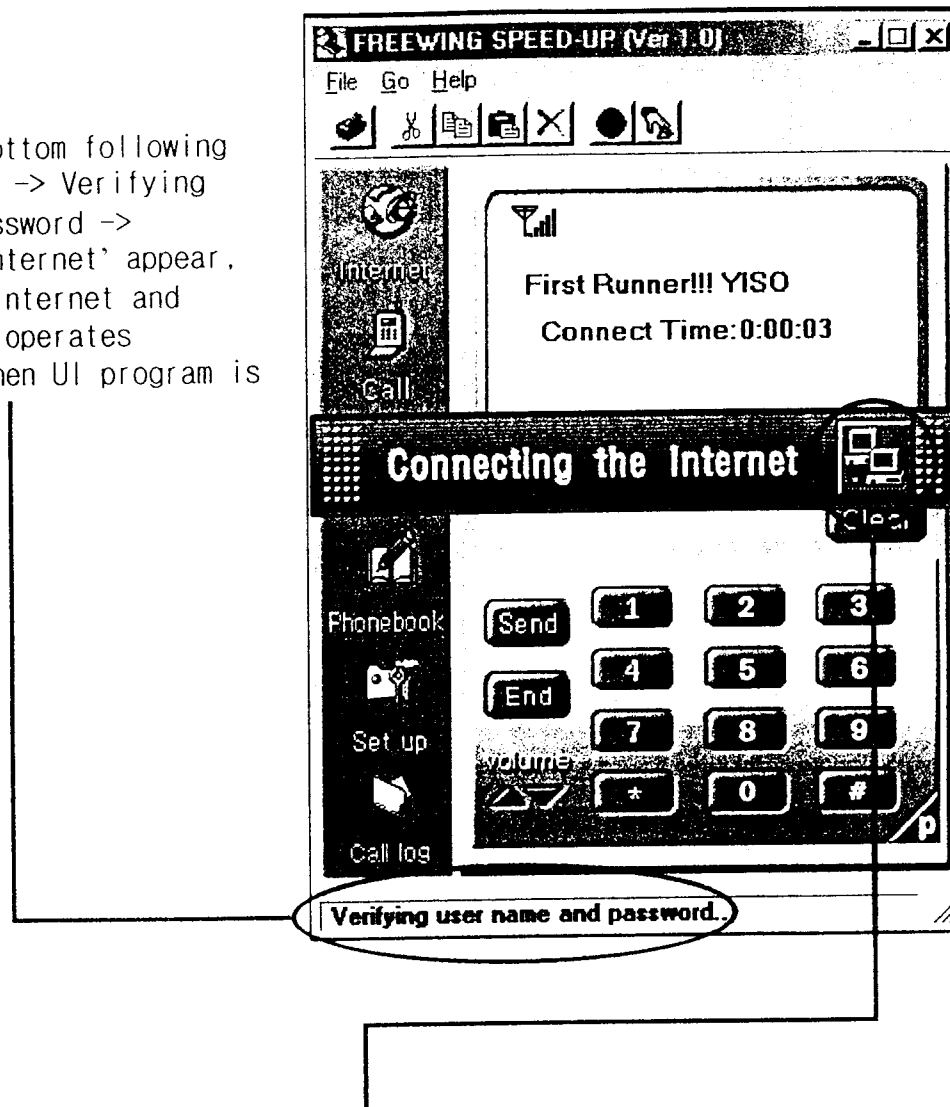

5. If you want close the Internet access, click 'Close the Internet access' icon on the right side of the centered bar. Or click 'Dial-up Networking script' icon in the right button and 'Disconnect', then it ends.

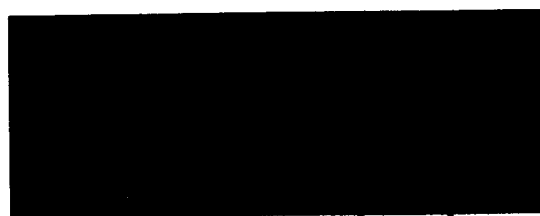



ed to Spee... | [Icons] 2:41 PM

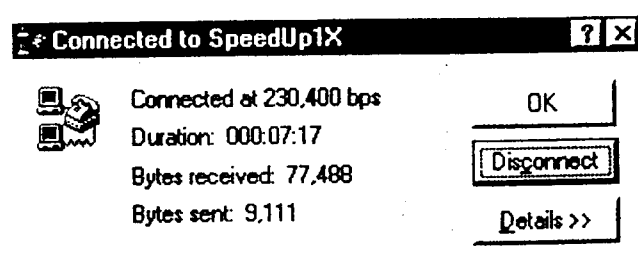

4. Making and Receiving a Call


* 'Call' function is not available in the Internet, check whether the Internet is connected or not before sending a call.

1. Input the phone number in the right center text box.

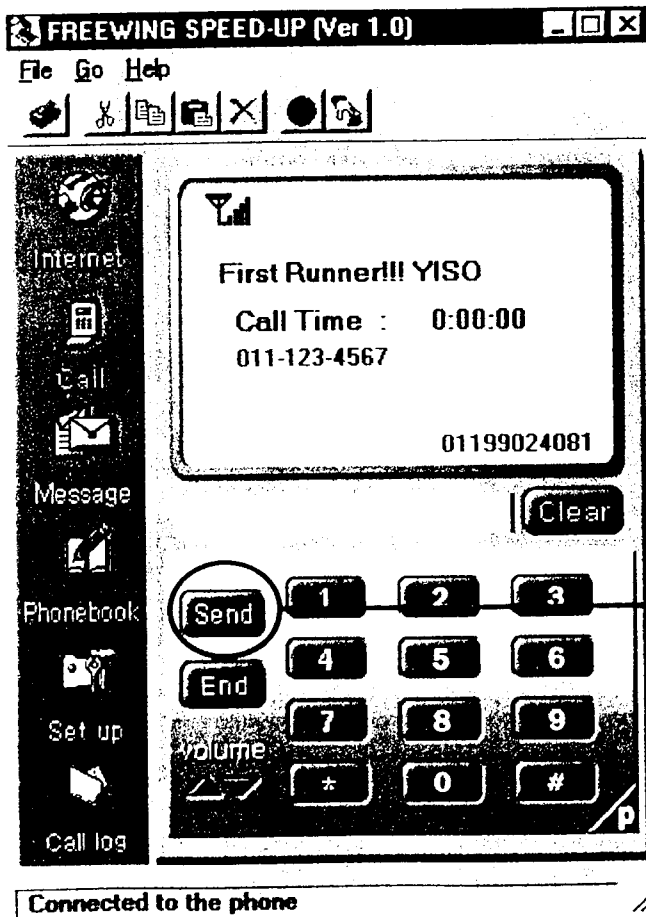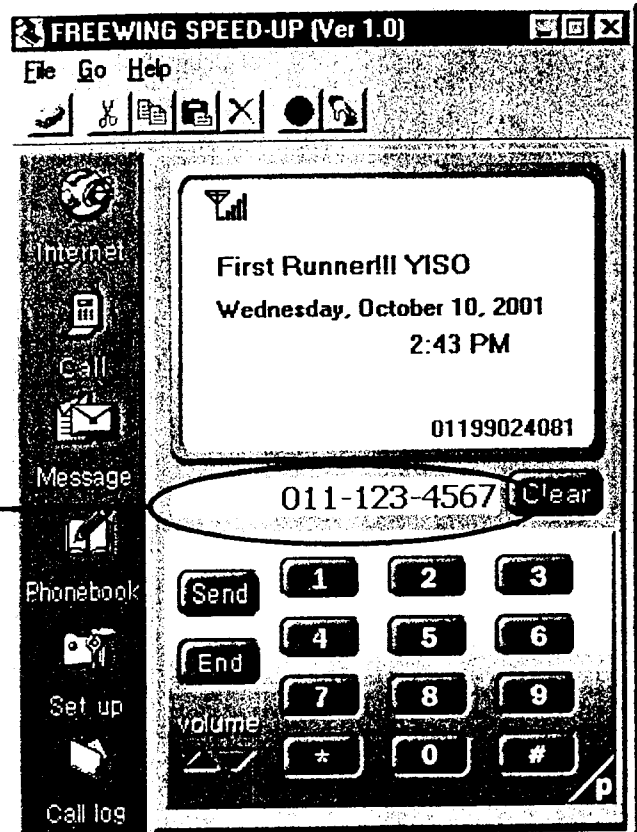


2. Click send button, phone is connected.

3. While FREEWING SPEEDUP is put into the slot, you can receive phone calls.(for changing phone bell, refer 'Setup' menu.)(you can not answer the phone in the Internet)

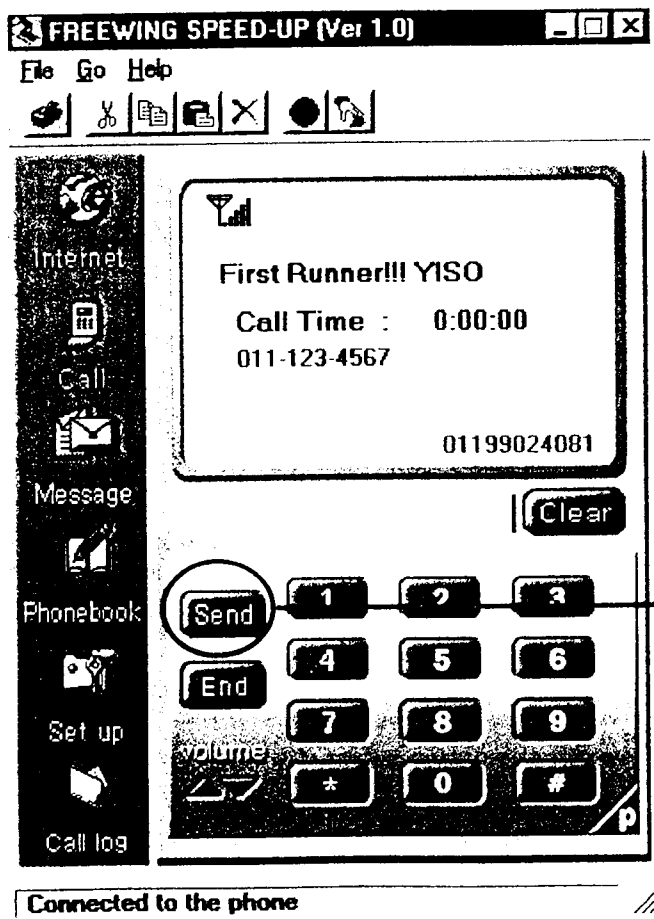

4. Click send button, you can answer the phone.



5. If you want to hang up, click
End button.

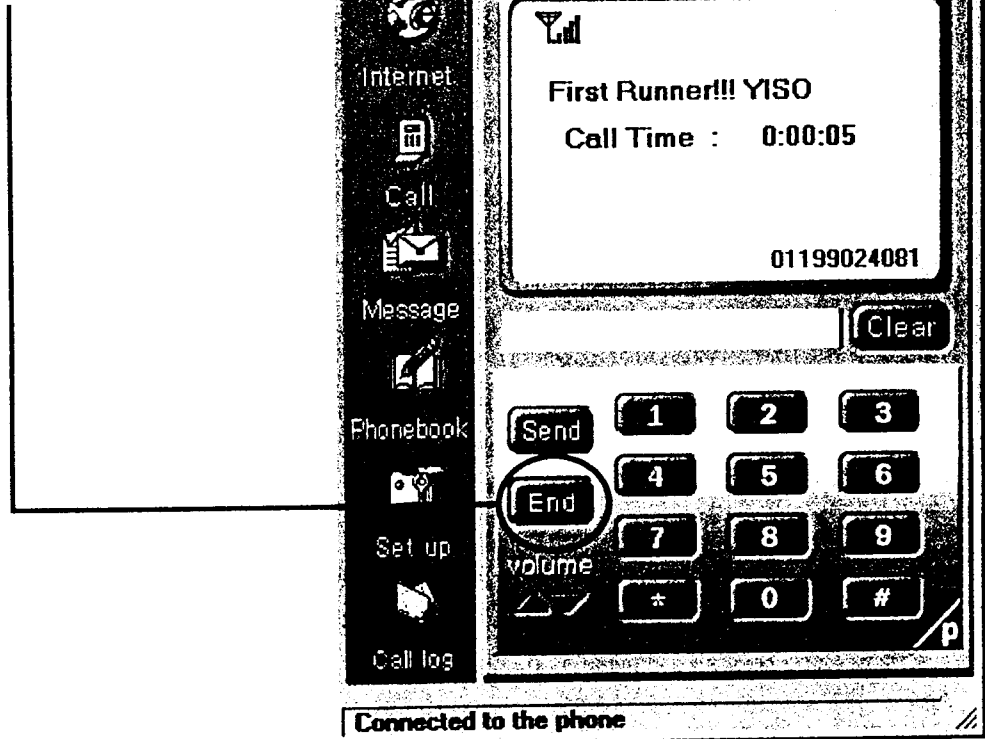

5. Sending SMS



* In the Internet you cannot send SMS.

1. Click 'Message' in the left function icons.

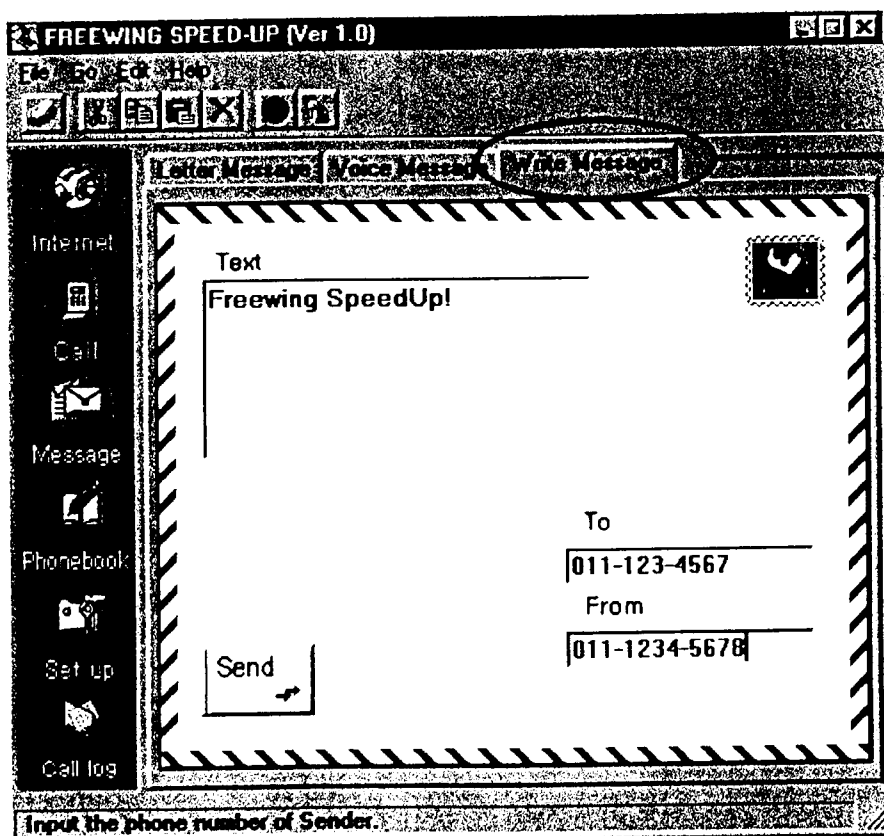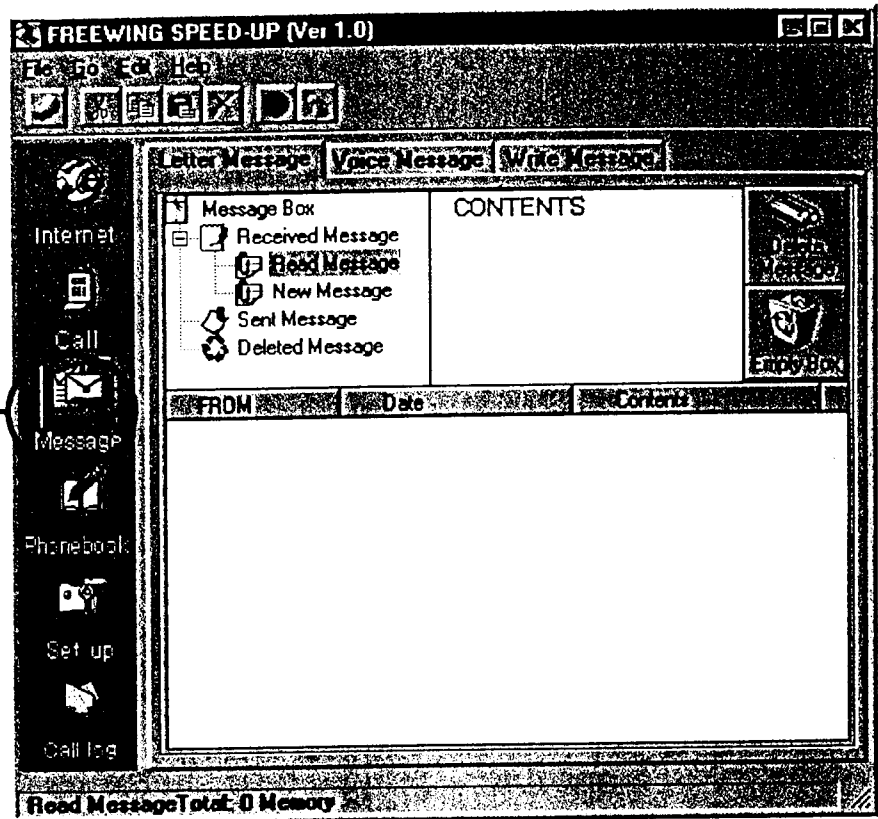

2. Activate 'Write message' screen.



3. Input the message you want to send in 'Text' screen, then input 'To(phone number of receiver)' and click 'Send' button.

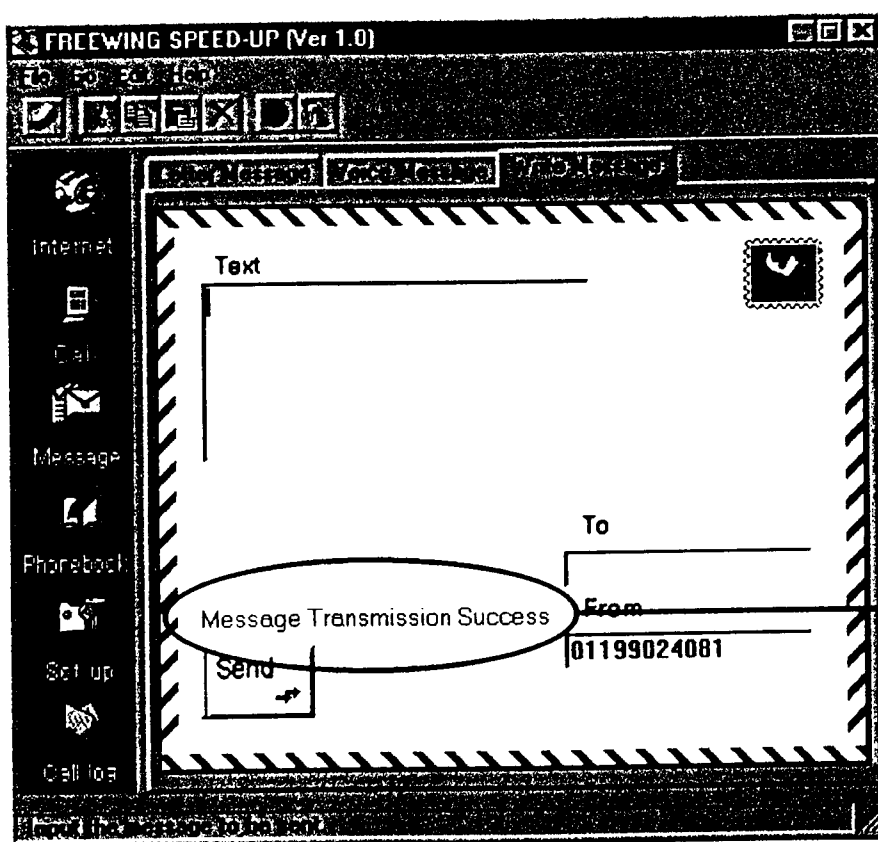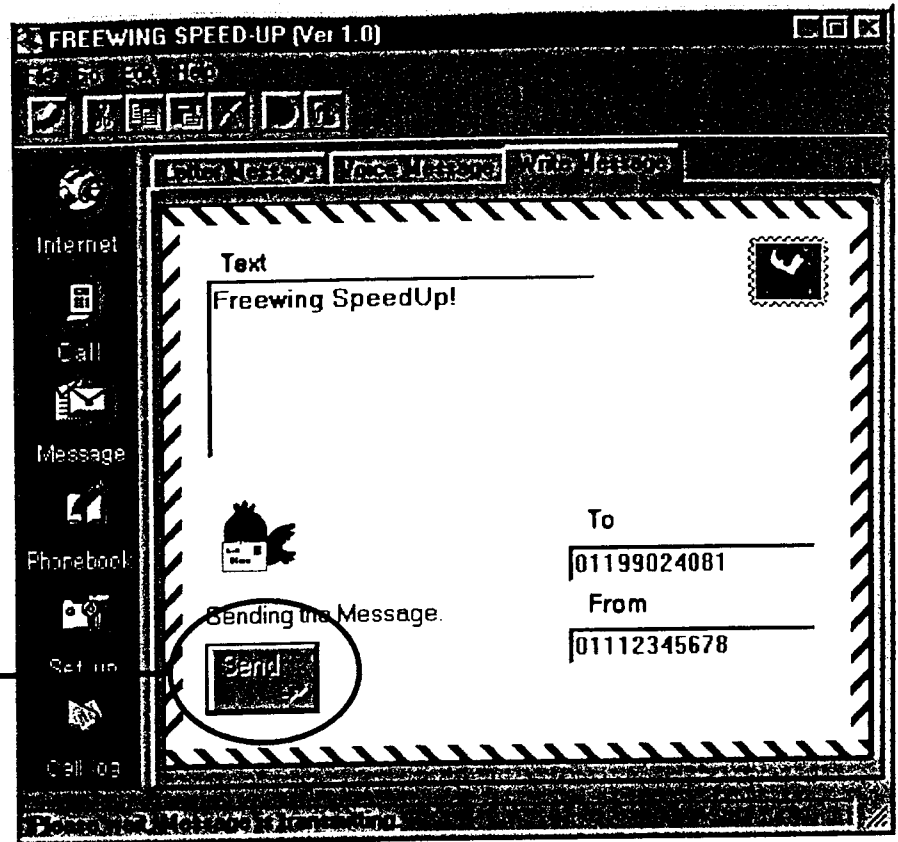


4. When the message is sent, 'Message Transmission Success' is marked.

6. Receiving SMS

1. On the FREEWING SPEEDUP system you've got SMS, 'Alarm' shows.

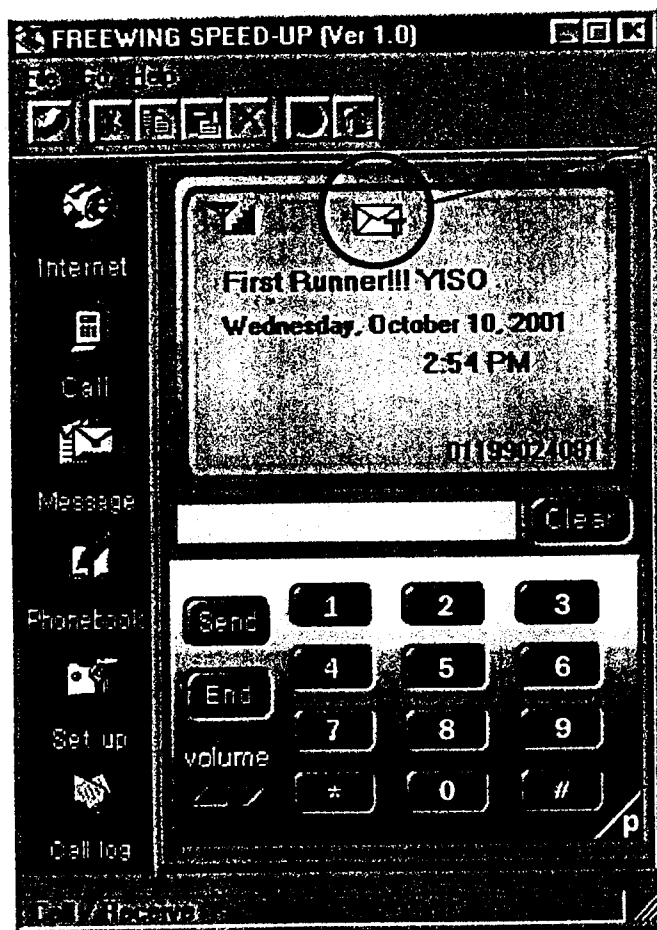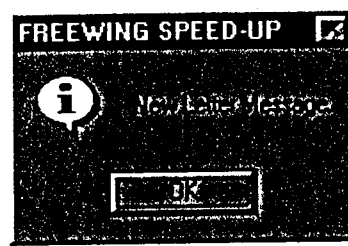


2. As for new SMS, following show on the main screen.

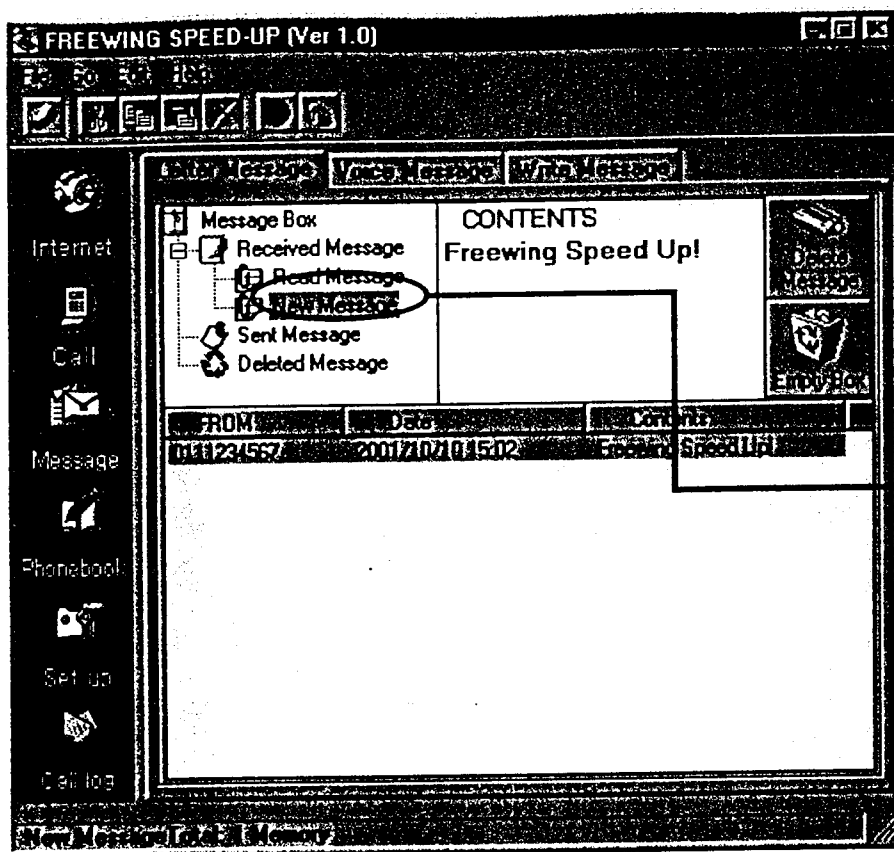


3. You can check SMS in 'New message' folder. The checked message moves to 'Read Message' folder automatically.

4. If you delete the 'Read message', it is kept in 'Deleted message' box. If you click and check 'Deleted message box' in 'Empty box', the message is deleted completely. (You can also select and empty other message boxes.)

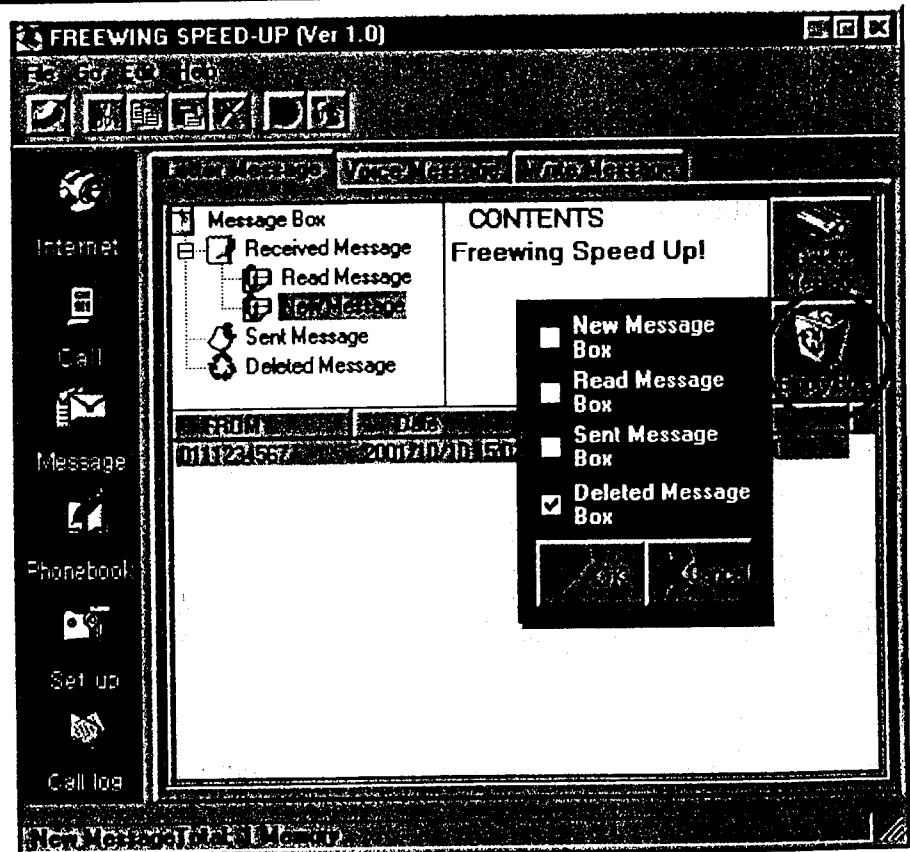


7. Receiving voice message


1. On the FREEWING SPEEDUP system if you've got a voice message, 'Alarm' shows.

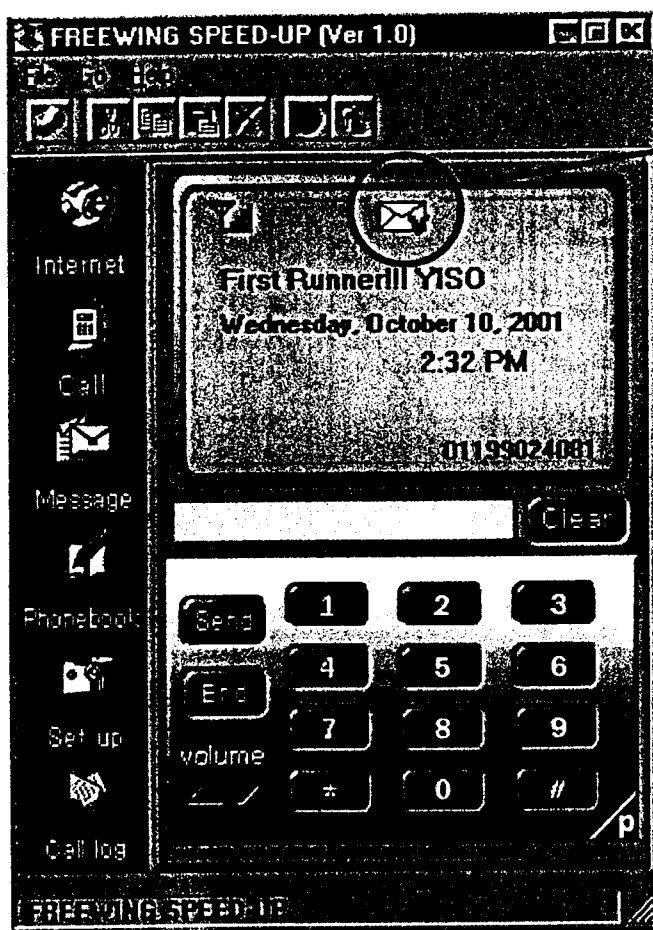

2. As for new voice message, following show on the main screen.

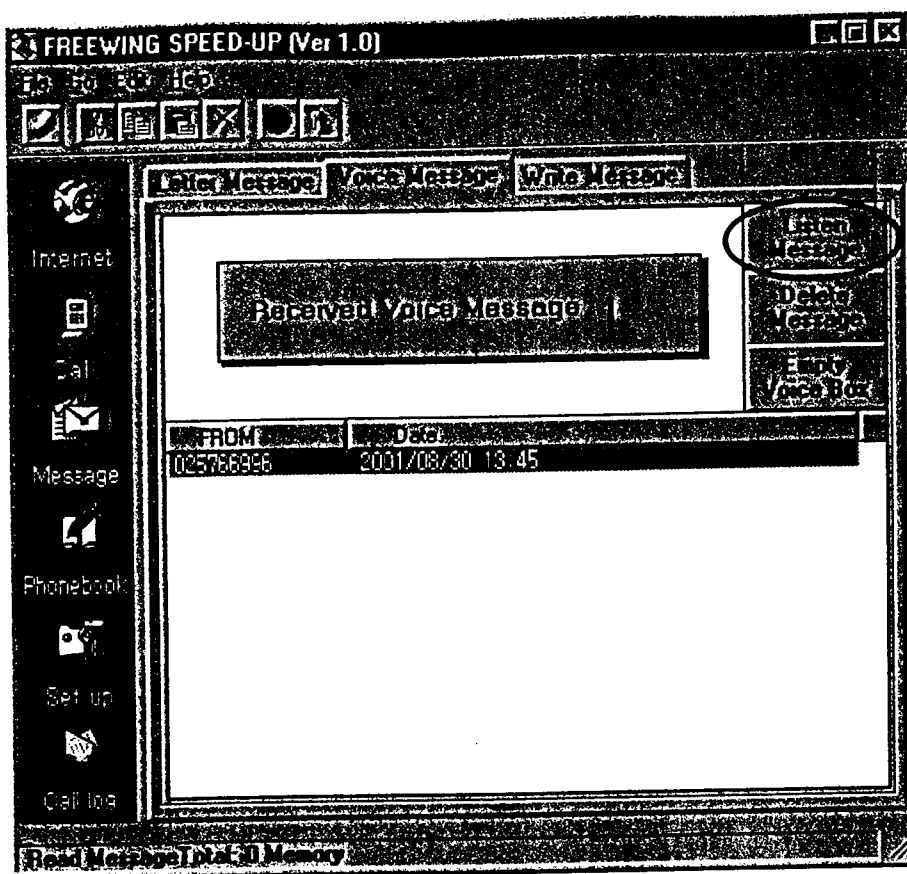

3. In 'Message-voice message', select the new voice message then click 'Listen message'.

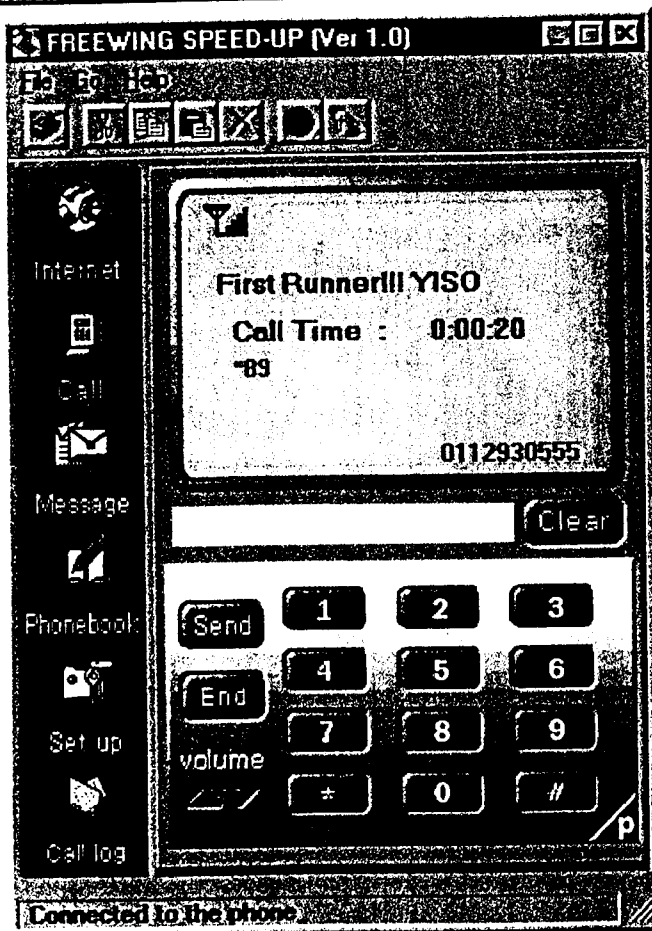

4. Voice call window is activated and connected with voice call box automatically.

8. Phone Book

1. Functions of the telephone book

Phone Book - FREEWING SPEED-UP

YISO Telecom

A N **Name** YISO Telecom

B O **Phone1** 82-2-576-6996

C P **Phone2** 82-2-576-6921

D Q **Phone3**

E R **Address**

F S 261 5th FL Yangjae B/D Yangjae-dong,
Seocho-ku, Seoul, Korea

G T

H U

I V **Remark**

J W First Runner!!! Yiso Telecom!!!

K X

L Y

M Z

etc.

Number of memory 1 memory

All **Add** **Modify** **Delete** **Call**

Search : Search by name or phone number .

Add : Input name, phone numbers, address, other memos.


Modify : Modify the input contents by click the edited name.

Delete : Delete the input contents after click the deleted name
(many names are deleted at once).

Call : Select one of the input numbers and click 'Call',
Calling starts on the Calling screen.



9. Setting bell sound

1. Click 'Set up' in the left function icons.
2. Click folder icon and select the sound you want.
3. You can also select the notice sound for voice message and SMS.

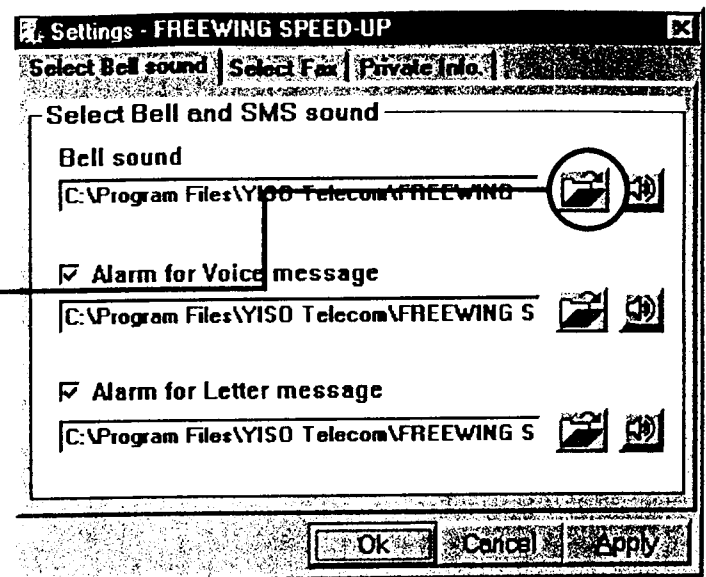

10. Setting FAX

1. Activate FAX set tap in 'Set up'.
2. You can select your Fax program that you may have

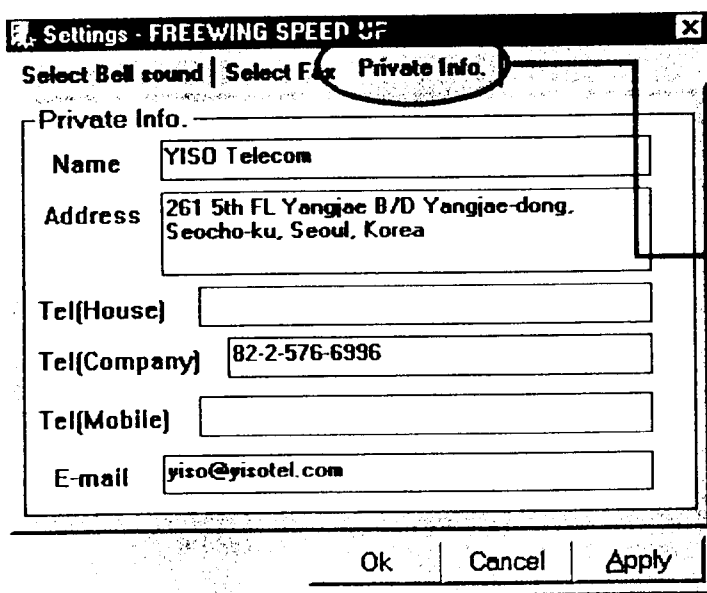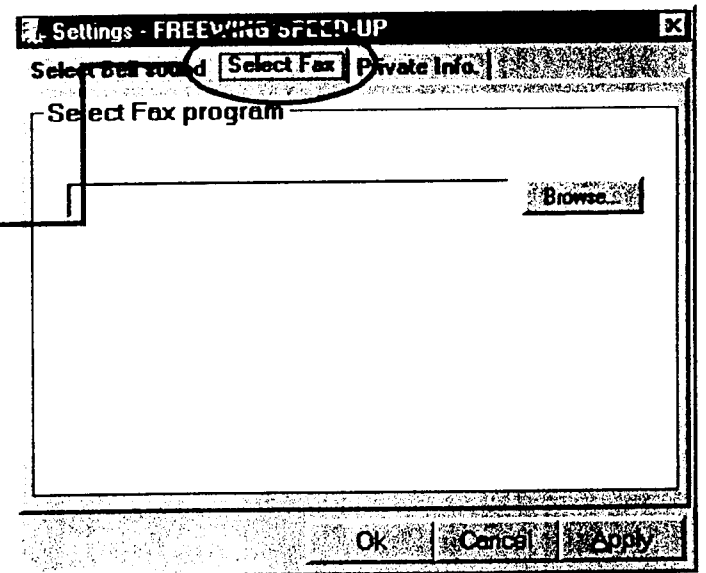


11. Setting personal information

1. Activate personal information window.
2. Input personal information and click 'OK'.
3. The input name appears on the main screen.

12. Call record checking

1. In the left function icons, click 'call record', then you can check the calling time and the recent call list.

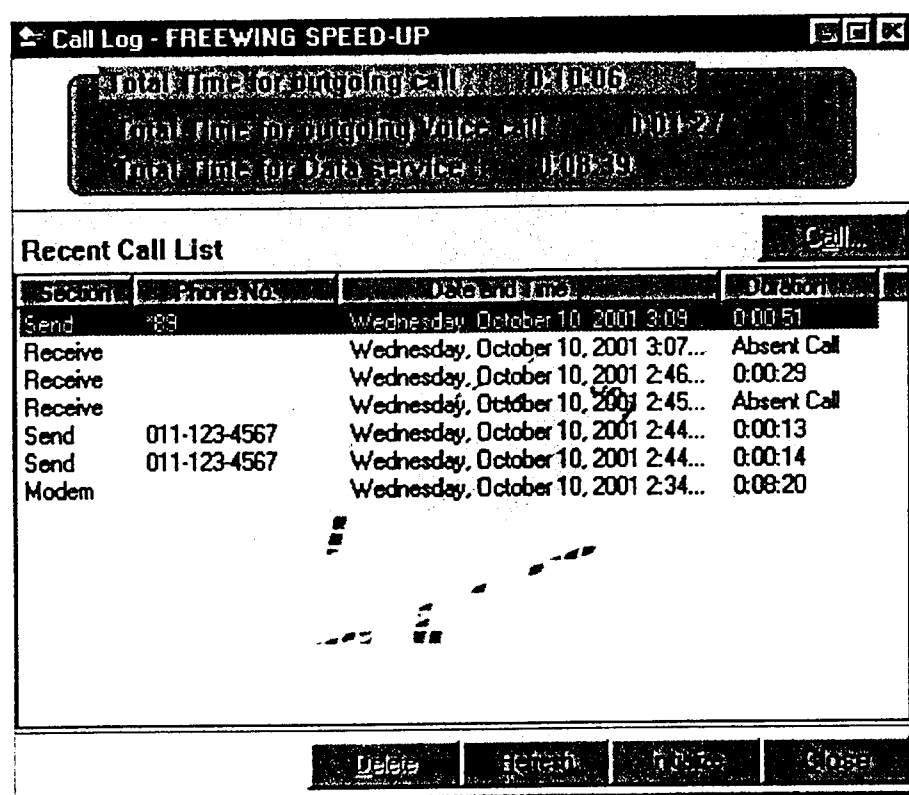

Section	Phone No.	Date and time	Duration
Send	88	Wednesday, October 10, 2001 3:09	0:00:51
Receive		Wednesday, October 10, 2001 3:07...	Absent Call
Receive		Wednesday, October 10, 2001 2:46...	0:00:29
Receive		Wednesday, October 10, 2001 2:45...	Absent Call
Send	011-123-4567	Wednesday, October 10, 2001 2:44...	0:00:13
Send	011-123-4567	Wednesday, October 10, 2001 2:44...	0:00:14
Modem		Wednesday, October 10, 2001 2:34...	0:08:20

Total time for outgoing call : It is the total hour used for voice calling, data communication.


Total time for outgoing voice call : It is the total hour used for sending voice call.

Total time for data service : It is the total hour used for accessing the Internet.


Call : Select the phone you want call again in the recent call list then click 'Call', sending call starts in 'Sending' screen.

13. Removing FREEWING SPEEDUP



1. In 'System registration information -device controller-Multi-function adapters' select 'YISO SPEEDUP 3V' then click 'Remove'.

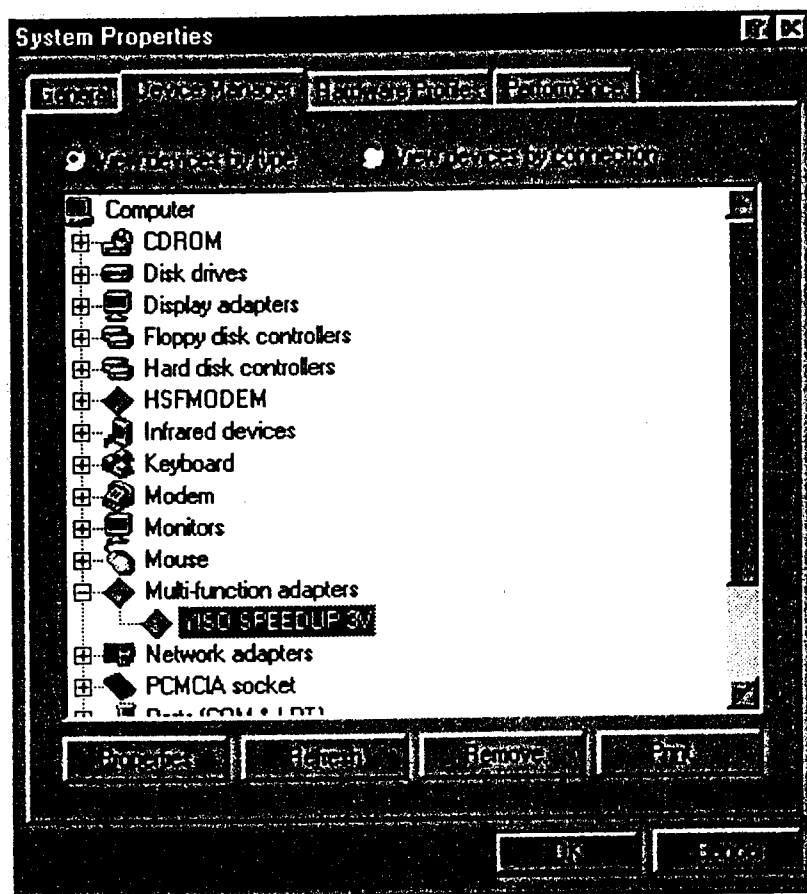

2. The following screen appears, click 'OK'.

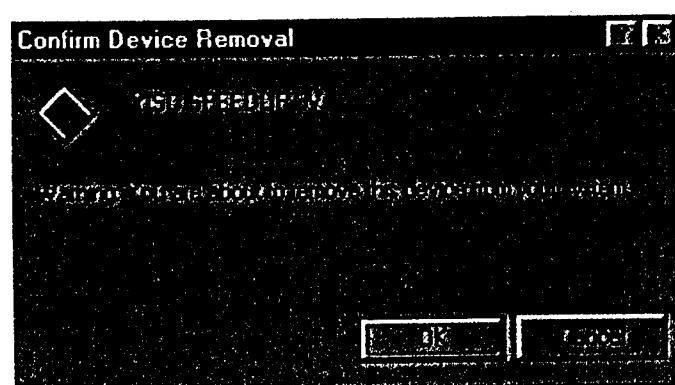

3. In 'Start - Setting - Control Panel - Add/Remove Programs' select 'FREEMING SPEED UP' then click 'Add/Remove' button.

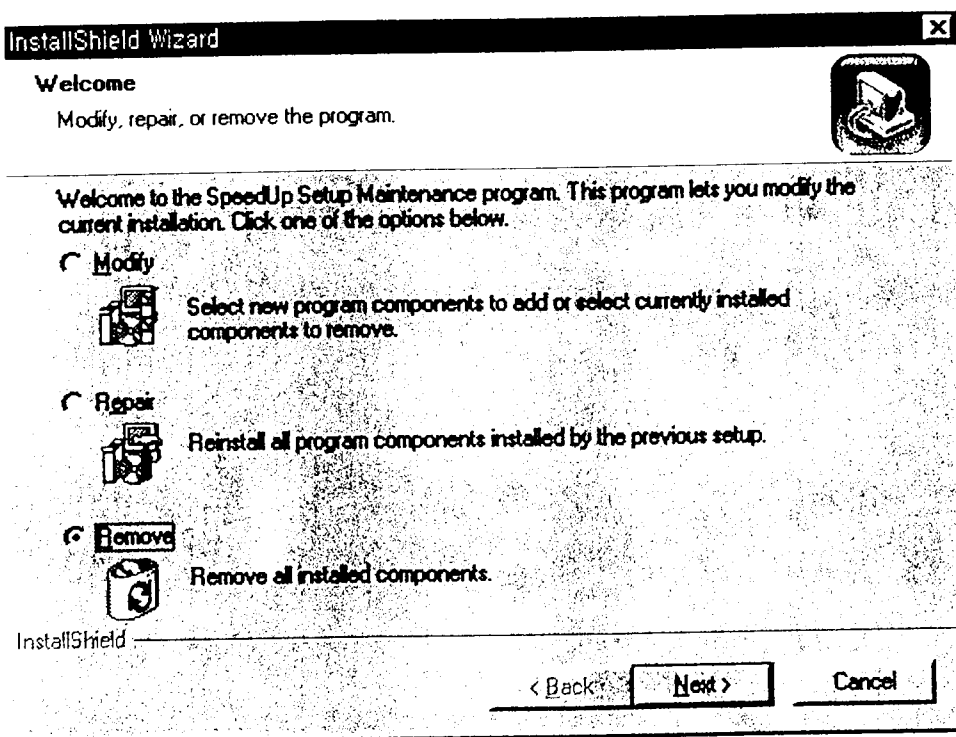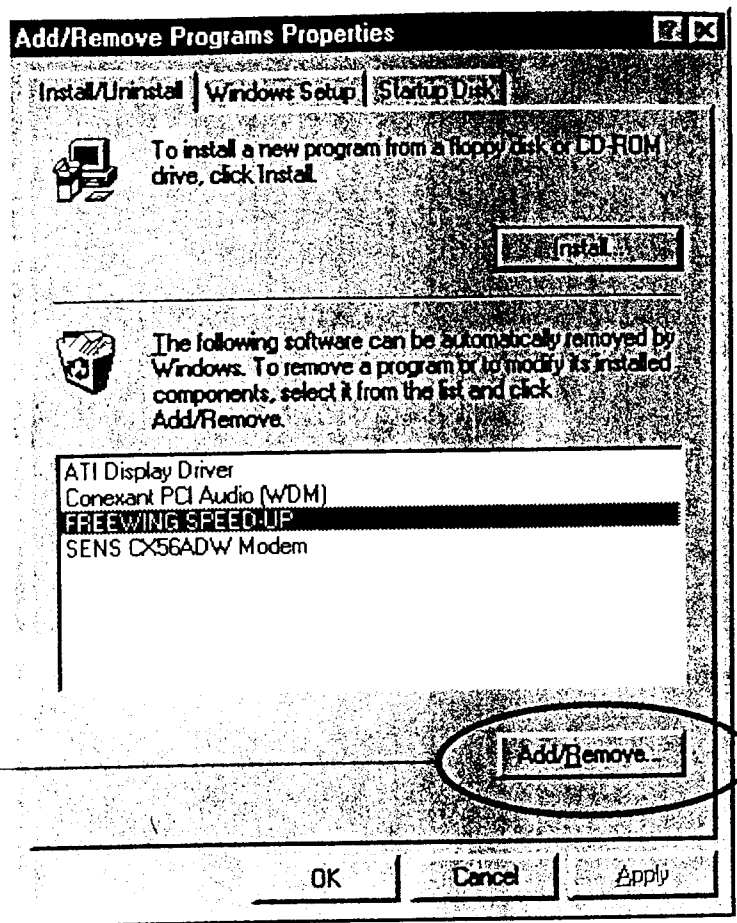

4. Select Remove and click 'Next'.

5. Click 'Finish' then restart, Freewing SPEEDUP user program has been removed.

