

BT-CB.02 User Guide

Appearance



Specification

- 1.Part Number: BT-CB.02;
- 2.Working Voltage: 18-30V;
- 3.Working Current: 5mA @29V;
- 4.Operation Temperature:-20~55℃;
- 5.Storage temperature: -45~85℃;
- 6.RF Frequency Range: 2.402~2.480GHz;
- 7.RF Modulation: GFSK;

- 8.RF Transmitted Power: -4.0dBm;
- 9.Housing Material: ABS 765A, 94V-0;

Interface Description



1. Status Indication: one color, two different status
 - Status 1: Breathing lamp, when powered on;
 - Status 2: Blue, when Bluetooth is linked by smart phone;

Instructions


1. Open the NewOreBeding application

<http://www.pgyer.com/jbm0> -----Android mobile app download address


<http://www.pgyer.com/Synergy369-ios>-----Iphone mobile app download address




2. Select the current control box is a few motor systems

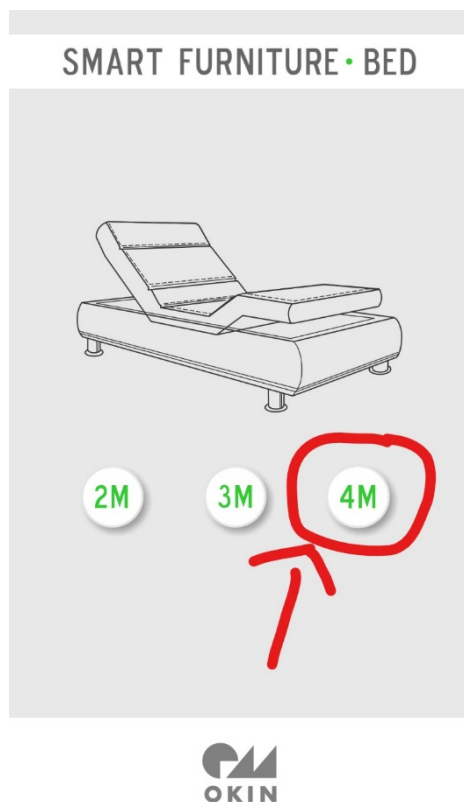

3. Go to the setup interface and pair the Bluetooth control box

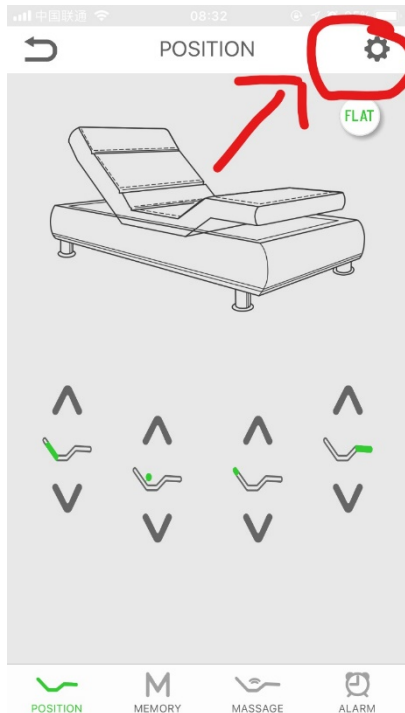

3. Select the signal pairing from the currently used Bluetooth control box

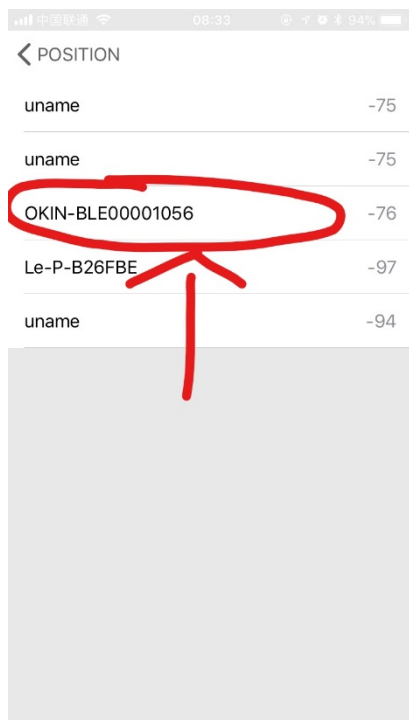

4. After successful pairing, operate the main interface, you can operate the control box

FCC:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

ISED RSS Warning:

This device complies with Innovation, Science and Economic Development Canada licence exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'ISED applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

ISED Radiation Exposure Statement:

This equipment complies with ISED radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Le rayonnement de la classe B respecte IC fixant un environnement non contrôlé. Installation et mise en œuvre de ce matériel devrait avec écart de distance minimale entre 20 cm et ton corps. Les émetteurs ou ne peuvent pas coexister avec cette antenne ou capteurs avec d'autres.