

	Issue Department: RD Department	Date:	2019-7-22
	Product Manual	Author:	Jarek
Product Manual of RF2517		Version:	1.0
		Page 1 of 7	

Product Manual of RF2517

Design & Change Record


Date	Version	Issue Description	Author	Approval	
				Sign	Post
2018-7-22	V1.0	First draft	Jarek		

 A Phoenix Mecano Company	Issue Department: RD Department	Date:	2019-7-22
	Product Manual	Author:	Jarek
Product Manual of RF2517		Version:	1.0
		Page 2 of 7	



Figure 4 Remote RF2517

  A Phoenix Mecano Company	Issue Department: RD Department	Date:	2019-7-22
	Product Manual	Author:	Jarek
Product Manual of RF2517		Version:	1.0
		Page 3 of 7	

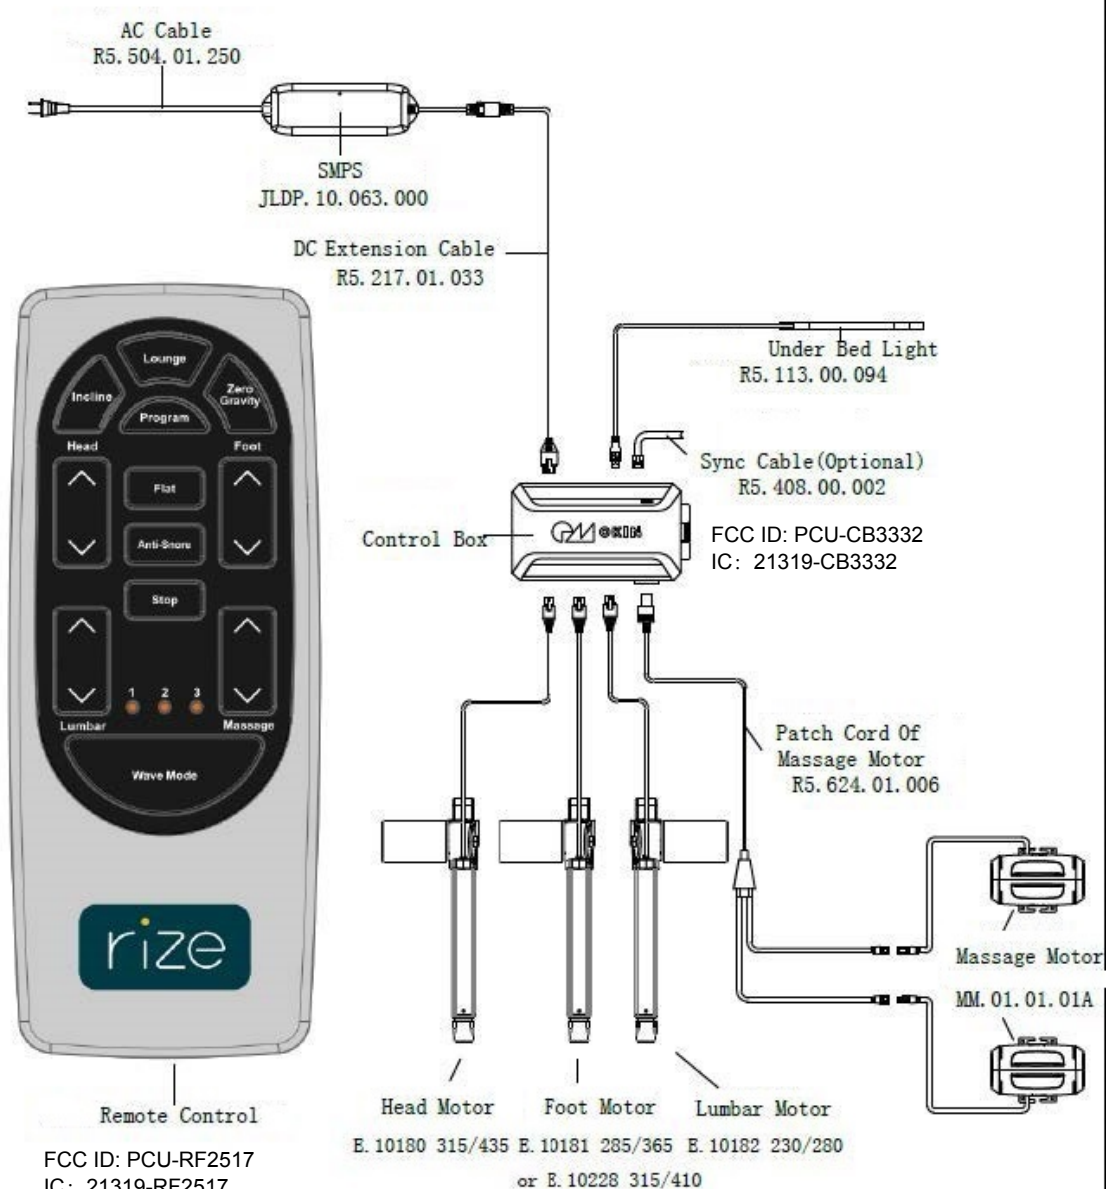

1. Test Item

2.1 Pairing function

1. Power on the control box or double-click the pairing button of control box, the blue light

 A Phoenix Mecano Company	Issue Department: RD Department	Date:	2019-7-22
	Product Manual	Author:	Jarek
Product Manual of RF2517		Version:	1.0
		Page 4 of 7	

of the control box turns on, and the control box enters pairing mode;



2. Press and hold the pairing combination button of remote

(For RF.25.15 series, press and hold flat + stop for 4s, the remote enters pairing status, the backlight of the remote starts flashing)

Until the backlight of remote is off and the blue light of the control box is off, the pairing is successful (if the pairing fails, repeat steps 1-2);

2.2 Function of Head up& down buttons

Press and hold Head upbutton of remote, telecontrol the control box to execute head actuator up, stop when released;

Press and hold Head downbutton of remote, telecontrol the control box to execute head actuator down, stop when released;

2.4 Function of foot up& down buttons



Press and hold Foot up button of remote, telecontrol the control box to execute foot actuator up, stop when released;

Press and hold Footdownbutton of remote, telecontrol the control box to execute foot actuator down, stop when released;

 
2.5 Function of Lumbar up& down buttons



Press and hold Lumbar up button of remote, telecontrol the control box to execute Lumbar actuator up, stop when released;

Press and hold Lumbardownbutton of remote, telecontrol the control box to execute Lumbar actuator down, stop when released;

2.6 Function of Flat button

RF2517series	Click FLAT button, telecontrol the control box to execute actuators to go flat, during the movement, stop when click any button;
	

 A Phoenix Mecano Company	Issue Department: RD Department	Date:	2019-7-22
	Product Manual	Author:	Jarek
Product Manual of RF2517		Version:	1.0
		Page 5 of 7	

2.7 Function of Incline button



 
Click Incline button, telecontrol the control box to execute actuators to move to Incline position, during the movement, stop when click any button;
Press and hold Program + Incline button for 2.5s, the backlight of remote flashes, the control box recored the current position as Incline position;

2.8 Function of Lounge button



Click Lounge button, telecontrol the control box to execute actuators to move to Lounge position, during the movement, stop when click any button;
Press and hold Program + Lounge button for 2.5s, the backlight of remote flashes, the control box recored the current position as Lounge position;

2.9 Function of Anti-Snore button



Click Anti-Snore button, telecontrol the control box to execute actuators to move to Anti-Snore position, during the movement, stop when click any button;

2.10 Function of ZeroGravity button



Click ZeroGravity button, telecontrol the control box to execute actuators to move to ZeroGravity position, during the movement, stop when click any button;
Press and hold Program + ZeroGravity button for 2.5s, the backlight of remote flashes, the control box recored the current position as ZeroGravity position;

2.11 Test of restore memory position to factory settings



 A Phoenix Mecano Company	Issue Department: RD Department	Date:	2019-7-22
	Product Manual	Author:	Jarek
Product Manual of RF2517		Version:	1.0
		Page 6 of 7	

RF2517series	Press and hold Program + Flat for 2.5s, the backlight of remotel flashes, and the control box restore the memory positions such as Incline position and ZeroGravity position to the factory setting position;
--------------	---

2.12 Function of under bed light button(the back side)



Click under bed lighton/off button, telecontrol the control box to switch the on/off status of under bed light;

2.13 Function of Program button

Program+memory position, press and hold for 2.5s, set the current position as memory position;

Program+flat , press and hold for 2.5s, restore memory position to factory settings;

2.14 Massage intensity adjustment function




Click Massage Up button, telecontrol the control box to open the massage intensity to level 3, and then click, it will increase step by step, the maximum is level 3;

Click Massage down button, telecontrol the control box to open the massage intensity to level 3, and then click, itwill decrease step by step, the miniimum is level 2;

Massage level	Level 1	Level 2	Level 3	Level 4	Level 5	Level 6	Level 7	Level 8
duty cycle	Nouse	30%	40%	50%	60%	70%	80%	90%

 2.15 Massage mode adjustment test



Click message wave button, telecontrol the control box to open the massage to mode 1, the intensity has 4 levels;

then click,it cycles among mode 1-2-3-1; the corresponding indicator will light up;

 A Phoenix Mecano Company	Issue Department: RD Department	Date:	2019-7-22
	Product Manual	Author:	Jarek
Product Manual of RF2517		Version:	1.0
		Page 7 of 7	

1. FCC Warning:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

2. ISED RSS Warning:

This device complies with Innovation, Science and Economic Development Canada licence exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'ISED applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

ISED RF exposure statement:

This equipment complies with ISED radiation exposure limits set forth for an uncontrolled environment. The device has been evaluated to meet general RF exposure requirement.

Le matériel est conforme aux limites de dose d'exposition aux rayonnements énoncés pour un autre environnement. ce dispositif a été évalué à satisfaire l'exigence générale de l'exposition aux rf.