

User Manual

Thank you very much for your trust and your decision to buy our product!

As we constantly update and improve our pad there may be small differences between the printed manual and your pad in some cases. You have the option of downloading the current version of the manual and firmware updates

Table of Contents

Safety instructions	3
Device overview	4
Description of the buttons	5

Language settings	6
Power monitoring	
and charging the batteries	7
Screen lock	7
Connecting with computer and data transfer	7
Functions of the buttons on the	
user interface	8
Programme menu	10
System settings	13
1. Wireless & Networks	13
2. Sound settings	15
2. Sound settings	16
3. Display settings	16
4. Location & safety	16
5. Application	16
6. Accounts & synchr.	16
7. Data protection	16
8. Memory	17
9. Language & keyboard	17
10. Date & time	17
11. Telephone info	17
Internet	18
Open Source Code & GNU General Public License	19
Technical Data	20
FCC Statement	21

This user manual contains important safety instructions and information for proper use of the device. Please follow the instructions in this manual carefully.

A Please keep the device away from places with high temperatures, high humidity or dust.

B In particular please avoid leaving the device in the car during summer if the doors are closed.

C Avoid shocks and do not let the device fall, as otherwise it may cause damage to the device.


D The Standby Time of the batteries may vary due to different environmental influences.

E We are not responsible for data losses that are caused by damage to the product, repairs or any other reasons.

F Do not open the housing of the device. Doing this will void your warranty claims.

G Do not use alcohol, thinners or petrol to clean the display
– use only a dry cloth.

Device overview

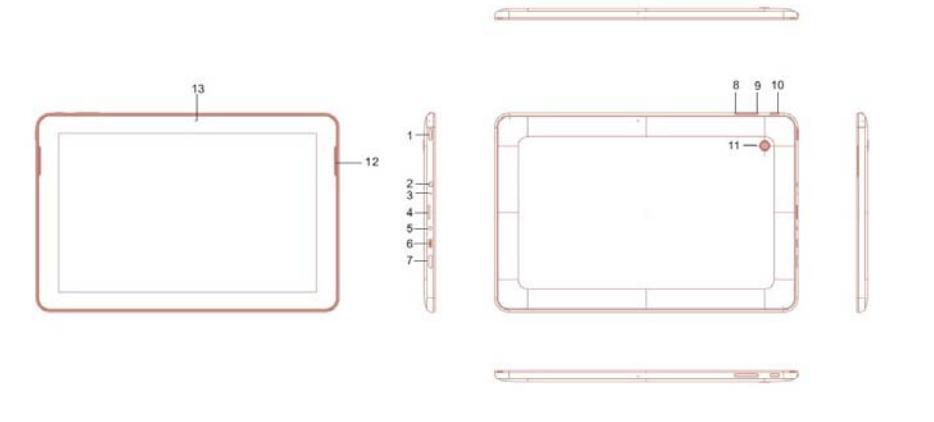

1. Power button	9. Volume- Button
2. Earphone	10. Menu Button USB Port
3. MIC Volume+ Button	11. Rear Camera
4. Micro SD/SDHC Card Slot	12. Speakers
5. DC-in	13. Front Camera
6. USB/ OTG	
7. HDMI PORT	
8. Volume+ Button	

Description of the buttons

Volume Buttons:

Here you can increase or reduce the volume.

Power Button:

Press the button for two seconds to switch on or switch off the device. Press the button briefly to activate or end the Standby-Mode. Reset: Press the button for seven seconds to restart the device.

ESC Button:

To go back to the previous menu

Menu Button:

To open the context menu

Language setting

English as a default language.

To change the language setting, please do the following:



- Press on the programme menu symbol on the right side of the screen.



- Select 'Settings'.
- Scroll to the end of the list.
- Select 'Language & keyboard'.
- Select 'Select language'.
- Type your preferred language.
- Press the 'Home' button to return to the home screen.

Power monitoring and charging the batteries

The battery charge symbol  on the status bar indicates the charging status of the batteries.

If the power goes down, the device  shuts itself off automatically.

If less power is shown, use the power adapter or a computer via USB to charge the device. 

The charging time for the battery is approximately six hours. 

Screen lock

If the device is not used for specified time or the 'Power' button is pressed briefly, the screen is switched off and display lock is activated.

By pressing the 'Power' button briefly the screen will be reactivated.

For locking the screen press the 'Lock' button in the specified direction.

Connecting to the computer and data transfer

101 is equipped with a High-Speed USB2.0 Interface.

After you connect the device to a computer, it appears in the status display .

Pull the status bar down and press 'USB Connection' to activate the USB Memory. When using the device for data transfer, you cannot access the Micro SD/TF Card from 97D!

Functions of the buttons on the user interface:



Home Button:

To go back to the start screen.



Menu Button:

To open the context menu.



Back Button:

To go back to the previous menu / previous page.



Program Menu Button:

To display the programs and applications.



Change Window Button:

The device has five desktops. You can press this button or push your finger on the touchscreen to the side to navigate between different desktops.



WIFI / WLAN Signal Icon



System instructions:

Pull the status bar down to view messages about new e-mails,
downloaded documents, USB Connection Status or other information.

Program menu



ApkInstaller:

Program for installing and uninstalling Apps that were not downloaded from the Android Market.



Market:

Load Apps (programs) from the Android Market. You can download and install apps, games and other applications. Many are free.



Explorer:

Open the Explorer to access Micro SD TF Cards, USB sticks and other storage media. The Explorer is a practical manager for documents and all types of data.



Internet browser



Camera



E-mail:

Program for retrieving, processing and sending e-mails.



G-mail:

Program for retrieving, processing and sending e-mails through Google account.



Google Maps:

Program for the display of maps or satellite images – Route planner.



Skype:

Program to chat with other Skype users or to make telephone calls via Internet.



Twitter:

Application for Microblogging – Facilitates the display of public diaries or create a public diary of your own.



Facebook:

Program for using the social network site Facebook.



Calendar:

Managing schedules – can be synchronised automatically with a Google account.



Pocket Calculator



Time:

Time display and setting alarm functions.



Settings:

Changing the basic settings of EasyPad.



Sound Recorder:

Dictation Device Function.



Video Player



Gallery:

Manage and display images and videos – also enables synchronisation with Picasa web albums.



Shelves:

A program for reading and managing e-books.



Angry Birds Rio: Game of skill



Fruit Ninja: Game of skill

System settings



Touch the icon for the settings to open the system settings menu:

1. Wireless & Networks

Touch 'Wireless & Networks'.




WLAN: Touch => to switch on the WLAN function.

The device automatically searches for available WLAN networks.

WLAN Settings: Select your network here.

If needed you will be requested to enter your WLAN password:

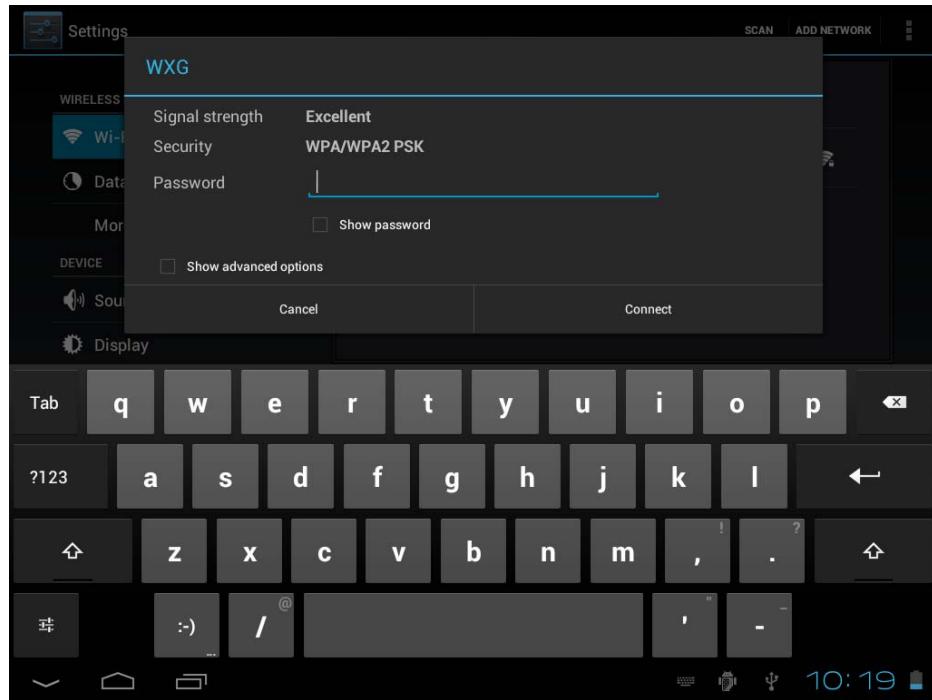


Advanced WLAN / Wi-Fi settings:



Touch  in the menu for WLAN / Wi-Fi Settings, the menu for advanced settings will open up automatically. In the menu for the advanced settings you can view the current status, the IP address and other device information.

2,Bluetooth setting

Touch 'Bluetooth'.

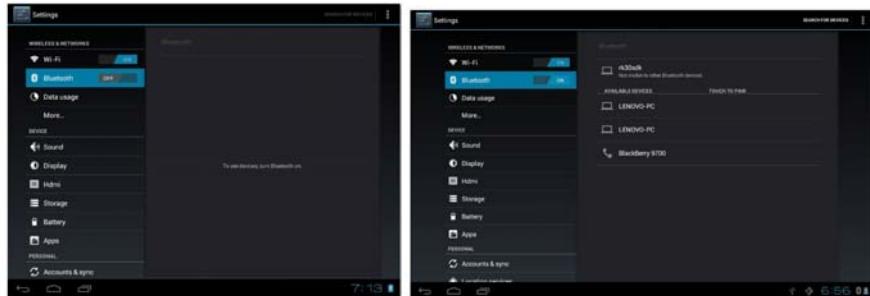

Bluetooth: Touch => to switch on the Bluetooth function.

The device automatically searches for available bluetooth device.

Bluetooth match Settings: Select your Bluetooth device.
If needed you will be requested to enter your pair password:

3. Sound settings

The 'Sound' settings contain the volume control, and selection of notification sounds, system sounds, signal tones for Micro SD/TF Cards and USB signal tone.

4. Display settings

Includes brightness, automatic screen rotation (G-sensor), animations and display timeout time. Switch off display after: 15 seconds, 30 seconds, 1 minute, 2 minutes, 10 minutes or 30 minutes are available. For example, if you select 30 seconds, the display will be switched after 30 seconds of inactivity and screen lock is activated. Press the 'Power' button to reactivate the Display. Push the 'Lock' button up to lift the screen lock.

5. Location & safety

Here you can activate the automatic recognition of the location. You can also set security passwords which will prevent unauthorised access to your EasyPad.

6. Application

Here you can manage your apps and define if apps from sources other than the Android Market are allowed to be installed.

7. Accounts & synchr.

General synchronisation settings:

1. Background data
2. Automatic synchronisation

Account management: Management of user accounts

8. Data protection

Secure my data: Here you can define if different settings should be stored on Google servers.

Touch 'Reset to default' to reset the device to factory settings.

All settings, self-installed apps and data stored on internal memory can be deleted.

9. Memory

Here the current memory use is displayed.

Touch 'Remove SD Card' to remove the Micro SD/TF Card during use.

10. Language and keyboard

Set the system language and input method.

11. Date and time

If your network does not support automatic setting of time, you can set the time, time zone and date manually after deactivating automatic settings.

12. Telephone info

Here you can view device internal values such as operating system version, battery status, signal strength of the mobile network etc.

Main functions


Internet



Touch  Icon to surf the net.

Google is the default start page.

Touch the input field to display the keyboard:

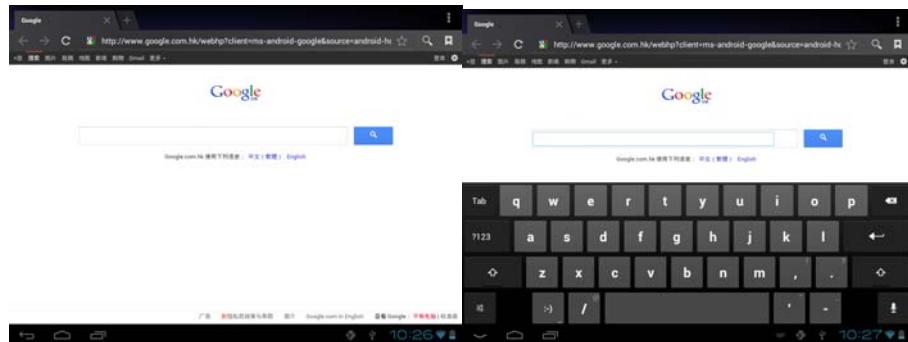


Touch  after entering a website address to open the website.

Note: The Android keyboard has few options for settings such as: keyboard language, numbers and icons etc.

The Internet browser can open four websites simultaneously;



Touch  and the menu will be displayed as follows:

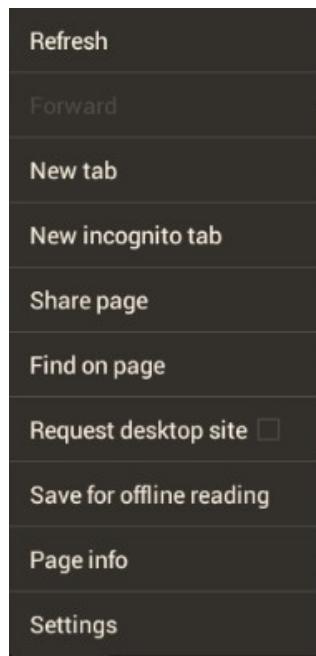

Touch 'Refresh' to refresh the current web page

Touch 'New tab' and a new website will be displayed.

Touch 'New incognito tab' and a new blank website will be displayed

Touch 'Share page' to Share this page to others

Touch 'Find on page' to enter new web address

Touch 'Request desktop site' to make it default web

Touch 'Save for offline reading' to read it when offline

Touch 'Page info' to check the web information

Touch 'Settings' to enter in browser settings

Technical Data

Screen size	10.1 inch Tablet-PC
CPU	Rockchip rk3066 dual-core 1.5 GHz
Operating System	Android 4.0 – Ice Cream Sandwich
RAM	1GB DDR3
Internal Memory	16GB NAND FlashS
Memory Expansion	Micro SD/SDHC up to 32GB
Display	16:9 Capacitive 10-point Multi-Touch-Display
Resolution	1280 x 800 Pixel
Camera	Front 2.0MP, Back 2.0MP
Battery	8000MAH, 5V, 2A rechargeable Li-ion Battery
MIC	Yes
	Internet & Skype Phone-Function
WIFI	802.11b/g/n (high sensitivity)
Bluetooth	Build in
I/O ports	1x DC In, 1x headphone, 1x TF Card-Slot, 1x USB 2.0, host/ OTG, 1 HDMI
Video-Formats	H.264, VP8, RV, WMV, AVS, H.263, MPEG4 etc 1080P, YouTube, 720P, HTML5, Flash 11
Office	Word / Excel / PDF / PPT, Microsoft Wordpad, Microsoft SpreadExcel
	The software is not on the device and must be downloaded by the user.
Images	JPG, BMP, PNG etc.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: any changes or modifications not expressly approved by the party Responsible for compliance could void the user's authority to operate this equipment.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

