

1. If use wireless transmitting mode. Please turn on car radio and set it at specify channel.
2. Select wireless transmitting mode or local speaker mode.