 


PET BOUNDARY ULTRASONIC PET BARRIER SYSTEM

Instruction
guide

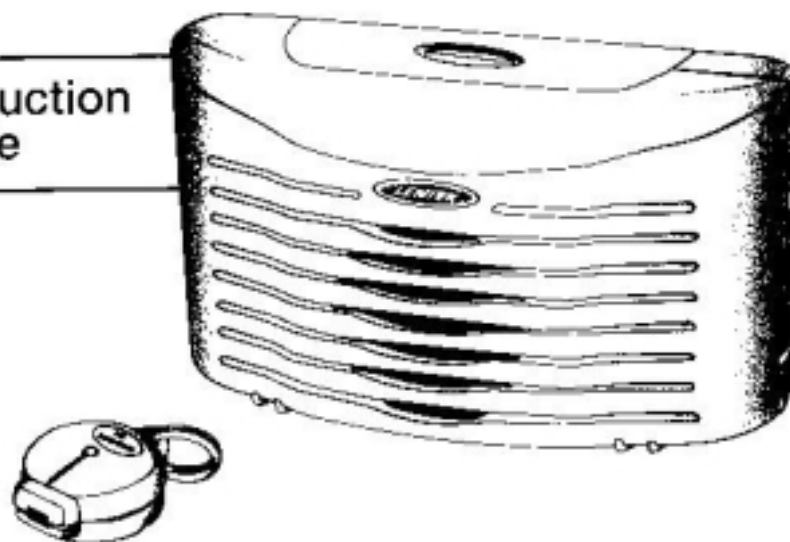


PB01



Setup To Comply
with FCC Standards



 Approved
Power Supply

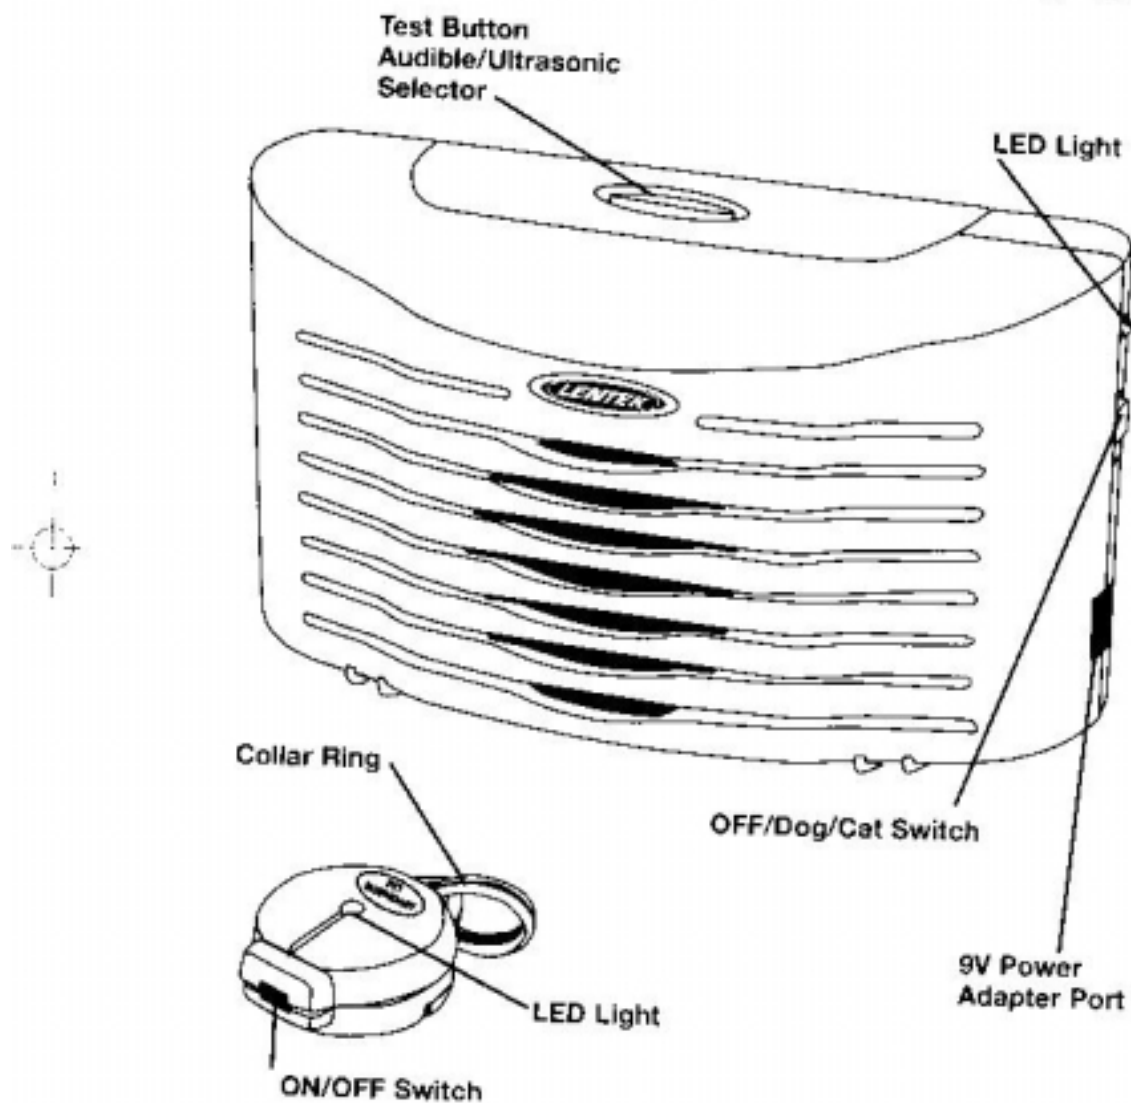


Place the base unit in the area you want to protect from your pet. The base unit will have a range of 6-10 ft (1.83m). Set the pet selector switch to either dog or cat and set the ON/OFF switch to ON. Attach the small transmitter to your pet's collar and set the ON/OFF switch to ON.

When your pet enters the protected zone, the base unit will emit an ultrasonic tone warning your pet to stay away. The tone is inaudible to humans and safe for pets.

Using the Audible Test Mode

To check the battery on the base unit, press the test button once. You should hear a tone when the transmitter is within range. Leaving the test button pressed in also lets you hear when your pet enters the protected zone. Some users may find this setting another effective method to keep the pet out of the area. Pressing the test button twice will take the base unit out of audible test mode.

 A solid red LED on the base unit indicates active operation. A solid red LED on the front of the transmitter indicates active operation and a flashing red LED on the side of the transmitter indicates ultrasonic operation.

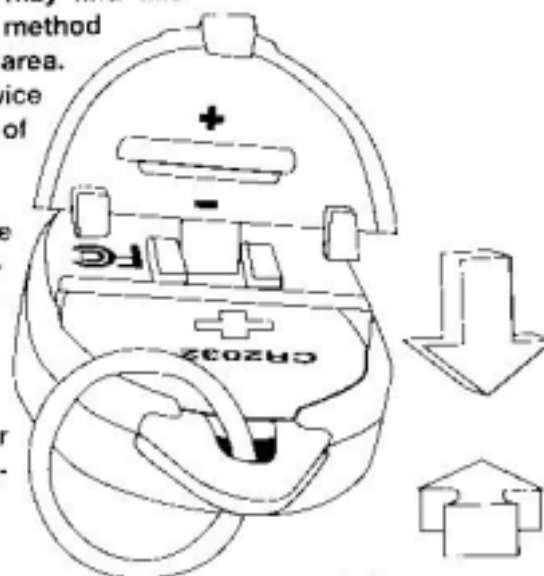


*View left for
corresponding text.*



Base Unit:

1. To remove battery compartment cover, pinch rear clasp to release.
2. Insert one 9V battery, which will have a life of approximately 30 days.
3. Reattach compartment cover.

 The Pet Boundary is also capable of being powered from a 9V DC adapter sold separately. Call Lentek customer service to order.

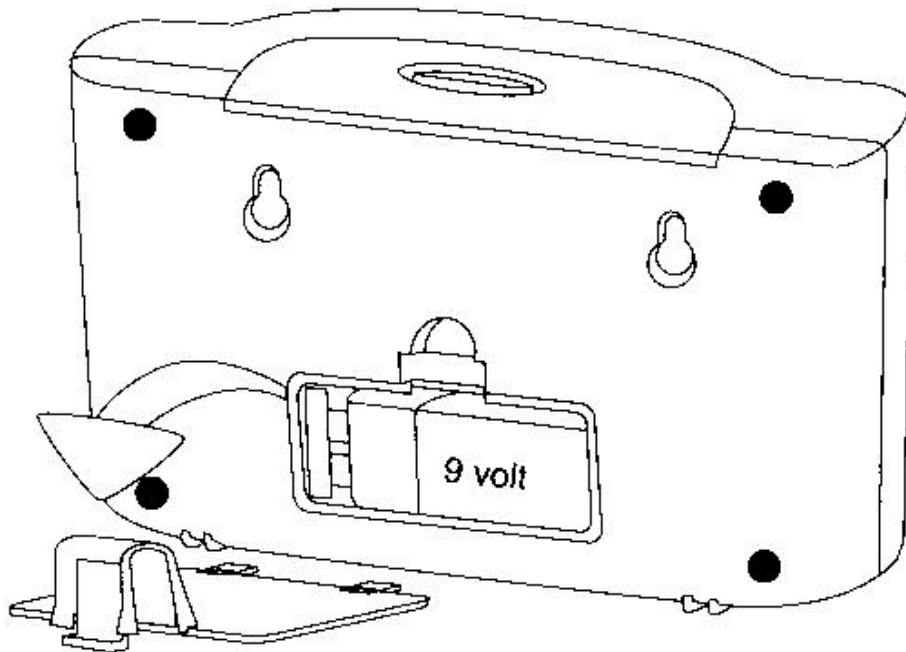

Transmitter:

1. To open the battery compartment cover, press the dots and slide out.
2. The transmitter includes a CR2032 3V Lithium battery. The battery life is approximately 3 months. Replace when needed.

(diagram to right)

Try Lentek's other exciting Pet Appliances.

- Pet Chime
- Pet Bath Ultra: Waterless Bath
Pet Brush Plus Flea Repeller
- Bark Free
- FleaContro
- Pet Fountain



LENTEK INTERNATIONAL, INC.
PO Box 593812
Orlando, FL 32859-3812

Phone: 407•857•8786
Fax: 407•857•4045
Toll Free: 800•456•3443
E-Mail: customerservice@lenteck.com

visit us on the web
www.lenteck.com

© 2000 Lentek International. All rights reserved.
All specifications are subject to change without notice.
Dimensions are approximate.

INSTPB01-1100