


XPS 13

Quick Start Guide
Quick Start Guide
Quick Start Guide
Quick Start Guide



Features

Features | Features | Features | Features

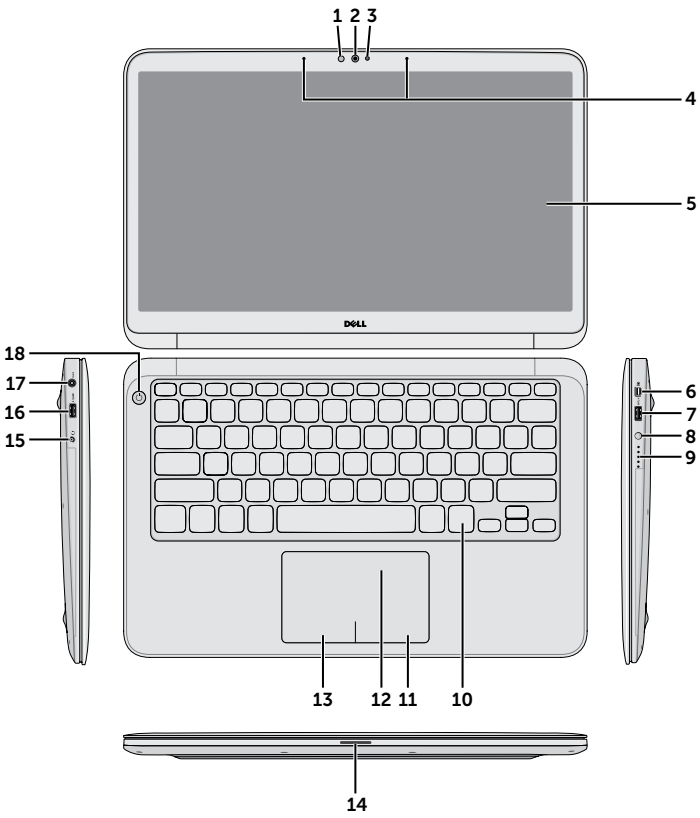

- 1. Ambient-light sensor
- 2. Camera
- 3. Camera-status light
- 4. Digital microphones (2)
- 5. Display
- 6. Mini DisplayPort
- 7. USB 3.0 port with PowerShare
- 8. Battery-status button
- 9. Battery-status lights (5)
- 10. Backlit keyboard
- 11. Right-click area
- 12. Touchpad

- 13. Left-click area
- 14. Power-indicator light
- 15. Headset port
- 16. USB 3.0 port with PowerShare
- 17. Power-adaptor port
- 18. Power button

- 1. Ambient-light sensor
- 2. Camera
- 3. Camera-status light
- 4. Digital microphones (2)
- 5. Display
- 6. Mini DisplayPort
- 7. USB 3.0 port with PowerShare
- 8. Battery-status button
- 9. Battery-status lights (5)
- 10. Backlit keyboard
- 11. Right-click area
- 12. Touchpad

- 13. Left-click area
- 14. Power-indicator light
- 15. Headset port
- 16. USB 3.0 port with PowerShare
- 17. Power-adaptor port
- 18. Power button

- 1. Ambient-light sensor
- 2. Camera
- 3. Camera-status light
- 4. Digital microphones (2)
- 5. Display
- 6. Mini DisplayPort
- 7. USB 3.0 port with PowerShare
- 8. Battery-status button
- 9. Battery-status lights (5)
- 10. Backlit keyboard
- 11. Right-click area
- 12. Touchpad

- 13. Left-click area
- 14. Power-indicator light
- 15. Headset port
- 16. USB 3.0 port with PowerShare
- 17. Power-adaptor port
- 18. Power button

- 1. Ambient-light sensor
- 2. Camera
- 3. Camera-status light
- 4. Digital microphones (2)
- 5. Display
- 6. Mini DisplayPort
- 7. USB 3.0 port with PowerShare
- 8. Battery-status button
- 9. Battery-status lights (5)
- 10. Backlit keyboard
- 11. Right-click area
- 12. Touchpad



- 13. Left-click area
- 14. Power-indicator light
- 15. Headset port
- 16. USB 3.0 port with PowerShare
- 17. Power-adaptor port
- 18. Power button

- 1. Ambient-light sensor
- 2. Camera
- 3. Camera-status light
- 4. Digital microphones (2)
- 5. Display
- 6. Mini DisplayPort
- 7. USB 3.0 port with PowerShare
- 8. Battery-status button
- 9. Battery-status lights (5)
- 10. Backlit keyboard
- 11. Right-click area
- 12. Touchpad

- 13. Left-click area
- 14. Power-indicator light
- 15. Headset port
- 16. USB 3.0 port with PowerShare
- 17. Power-adaptor port
- 18. Power button

1 Connect the power adapter and press the power button

Connect the power adapter and press the power button
Connect the power adapter and press the power button
Connect the power adapter and press the power button
Connect the power adapter and press the power button

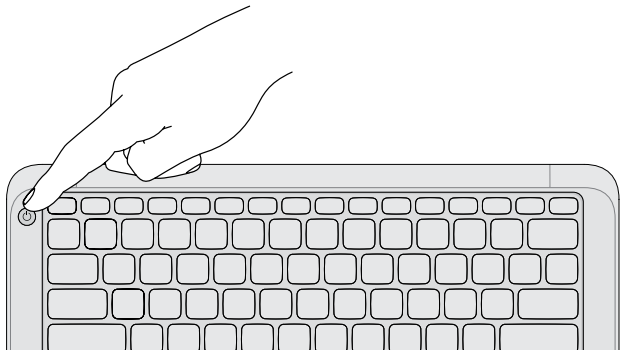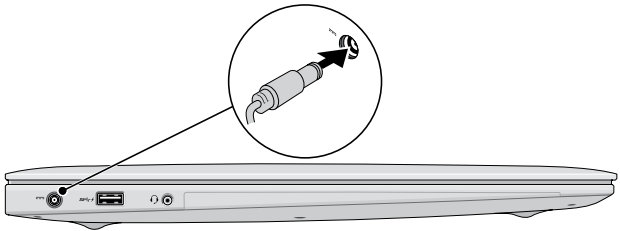

2 Complete Windows setup

Complete Windows setup | Complete Windows setup
Complete Windows setup | Complete Windows setup



Enable security
Enable security
Enable security
Enable security

3 Explore resources

Explore resources | Explore resources
Explore resources | Explore resources



Getting started
Getting started
Getting started
Getting started

My Dell
My Dell
My Dell
My Dell

Shortcut keys

Shortcut keys | Shortcut keys
Shortcut keys | Shortcut keys



Switch to external display
Switch to external display | Switch to external display
Switch to external display | Switch to external display



Turn off/on wireless
Turn off/on wireless | Turn off/on wireless
Turn off/on wireless | Turn off/on wireless



Show battery meter
Show battery meter | Show battery meter
Show battery meter | Show battery meter



Decrease brightness
Decrease brightness | Decrease brightness
Decrease brightness | Decrease brightness



Increase brightness
Increase brightness | Increase brightness
Increase brightness | Increase brightness



Toggle keyboard backlight
Toggle keyboard backlight | Toggle keyboard backlight
Toggle keyboard backlight | Toggle keyboard backlight



Play previous track or chapter
Play previous track or chapter
Play previous track or chapter
Play previous track or chapter



Play/Pause
Play/Pause | Play/Pause
Play/Pause | Play/Pause



Play next track or chapter
Play next track or chapter
Play next track or chapter
Play next track or chapter



Decrease volume level
Decrease volume level
Decrease volume level
Decrease volume level



Increase volume level
Increase volume level
Increase volume level
Increase volume level



Mute audio
Mute audio
Mute audio
Mute audio

Note: To use the F1–F12 shortcut keys, press <Fn> and the desired shortcut key.
 Note: To use the F1–F12 shortcut keys, press <Fn> and the desired shortcut key.
 Note: To use the F1–F12 shortcut keys, press <Fn> and the desired shortcut key.
 Note: To use the F1–F12 shortcut keys, press <Fn> and the desired shortcut key.

Contact Dell

Contact Dell | Contact Dell
Contact Dell | Contact Dell

dell.com/contactdell

More information

More Information | More Information
More Information | More Information

dell.com/support

Explore Windows 8

Explore Windows 8 | Explore Windows 8
Explore Windows 8 | Explore Windows 8

microsoft.com/windows8

Regulatory and safety

Regulatory and Safety | Regulatory and Safety
Regulatory and Safety | Regulatory and Safety

dell.com/regulatory_compliance

Computer model

Computer model | Computer model
Computer model | Computer model

9333


Regulatory Model and Type

Regulatory Model and Type | Regulatory Model and Type
Regulatory Model and Type | Regulatory Model and Type

P29G
P29G003

Regulatory and Service Tag labels

Regulatory and Service Tag Labels
Regulatory and Service Tag Labels
Regulatory and Service Tag Labels
Regulatory and Service Tag Labels

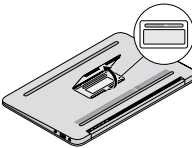

Información para NOM, o Norma Oficial Mexicana

La información que se proporciona a continuación se mostrará en los dispositivos que se describen en este documento, en conformidad con los requisitos de la Norma Oficial Mexicana (NOM):

Importador:

Dell México S.A. de C.V.
Paseo de la Reforma 2620 - Piso 11.º
Col. Lomas Altas
11950 México, D.F.

Número de modelo reglamentario:	P29G
Voltaje de entrada:	100 VAC–240 VAC
Corriente de entrada (máxima):	1.30 A
Frecuencia de entrada:	50 Hz–60 Hz
Corriente de salida:	2.31 A
Voltaje de salida	19.50 VDC



029N71A00