



User Guide

DRAFT

© Copyright **2015** Hewlett-Packard Development Company, L.P.

Adobe Photoshop Lighthouse is a trademark of Adobe Systems Incorporated. Bluetooth is a trademark owned by its proprietor and used by Hewlett-Packard Company under license. Intel is a trademark of Intel Corporation in the U.S. and other countries. Windows is a U.S. registered trademark of Microsoft Corporation.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

First Edition: **January 2015**

Document Part Number: ~~736656-xx1~~ **799013-001**

#### Product notice

This guide describes features that are common to most models. Some features may not be available on your computer.

Not all features are available in all editions of Windows. This computer may require upgraded and/or separately purchased hardware, drivers and/or software to take full advantage of Windows functionality. See <http://www.microsoft.com> for details.

#### Software terms

By installing, copying, downloading, or otherwise using any software product preinstalled on this computer, you agree to be bound by the terms of the HP End User License Agreement (EULA). If you do not accept these license terms, your sole remedy is to return the entire unused product (hardware and software) within 14 days for a refund subject to the refund policy of your place of purchase.

For any further information or to request a full refund of the computer, please contact your local point of sale (the seller).

DRAFT

## Safety warning notice

**⚠️ WARNING!** To reduce the possibility of heat-related injuries or of overheating the computer, do not place the computer directly on your lap or obstruct the computer air vents. Use the computer only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to come into contact with the skin or a soft surface, such as pillows or rugs or clothing, during operation. The computer and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950).

DRAFT

DRAFT

---

# Table of contents

|   |           |
|---|-----------|
| <b>1 Starting right .....</b>                               | <b>1</b>  |
| Visit the HP Apps Store .....                               | 1         |
| Best practices .....  | 1         |
| Fun things to do .....                                      | 2         |
| More HP resources .....                                     | 3         |
| <br>  |           |
| <b>2 Getting to know your computer .....</b>                | <b>5</b>  |
| Finding your hardware and software information .....        | 5         |
| Locating hardware .....                                     | 5         |
| Locating software .....                                     | 5         |
| Right side .....  | 6         |
| Left side .....   | 7         |
| Display .....   | 8         |
| Top .....   | 9         |
| TouchPad .....  | 9         |
| Lights .....  | 10        |
| Buttons .....   | 11        |
| Keys .....  | 12        |
| Bottom .....  | 13        |
| Labels .....  | 14        |
| <br>  |           |
| <b>3 Connecting to a network .....</b>                      | <b>16</b> |
| Connecting to a wireless network .....                      | 16        |
| Using the wireless controls .....                           | 16        |
| Using the wireless button .....                             | 16        |
| Using operating system controls .....                       | 17        |
| Sharing data and drives and accessing software .....        | 17        |
| Using a WLAN .....  | 18        |
| Using an Internet service provider .....                    | 18        |
| Setting up a WLAN .....                                     | 18        |
| Configuring a wireless router .....                         | 19        |
| Protecting your WLAN .....                                  | 19        |
| Connecting to a WLAN .....                                  | 19        |
| Using Bluetooth wireless devices (select models only) ..... | 20        |

|  |           |
|--|-----------|
| <b>4 Enjoying entertainment features .....</b>                   | <b>21</b> |
| Multimedia features .....  | 21        |
| Using the webcam .....   | 22        |
| Editing media in Adobe Photoshop Lightroom .....                 | 23        |
| Special features .....   | 23        |
| Using audio .....  | 23        |
| Connecting speakers .....  | 23        |
| Connecting headphones and microphones .....                      | 24        |
| Using Beats Audio .....  | 24        |
| Accessing Beats Audio Control Panel .....                        | 24        |
| Enabling and disabling Beats Audio .....                         | 24        |
| Testing your audio features .....                                | 24        |
| Using video .....  | 25        |
| Connecting video devices using an HDMI cable .....               | 25        |
| Setting up HDMI audio .....                                      | 26        |
| Connecting a digital display device .....                        | 27        |
| View media in high-resolution display (select models only) ..... | 28        |
| <b>5 Navigating the screen .....</b>                             | <b>29</b> |
| Using the TouchPad and gestures .....                            | 29        |
| Selecting and opening .....                                      | 30        |
| Scrolling .....  | 31        |
| Pinching/zooming .....   | 32        |
| Right-click .....  | 33        |
| Rotating .....   | 34        |
| Flicking .....   | 35        |
| Close an app .....   | 36        |
| Edge swipes .....  | 37        |
| Display and select a charm .....                                 | 37        |
| Reveal and select open apps .....                                | 38        |
| Display the Customize icon .....                                 | 39        |
| Switch between open apps .....                                   | 40        |
| Using touch screen gestures .....                                | 41        |
| Selecting .....  | 41        |
| Scrolling and moving objects .....                               | 42        |
| Pinching/zooming .....   | 43        |
| Rotating .....   | 43        |
| Edge swipes .....  | 44        |
| Display the charms .....   | 44        |
| Access open apps .....   | 44        |
| Display the Customize icon .....                                 | 45        |

|  |           |
|--|-----------|
| Using the keyboard and mouse .....                                     | 45        |
| Using the keys .....   | 45        |
| Using the action keys .....  | 45        |
| Using the hot keys .....   | 46        |
| Using voice navigation .....   | 47        |
| Windows essential tasks .....  | 47        |
| Displaying the Start button .....                                      | 47        |
| Displaying the Start menu .....  | 47        |
| Displaying all apps .....  | 48        |
| Opening apps .....   | 48        |
| Displaying open apps .....   | 48        |
| Closing an open app .....  | 48        |
| Switching between open apps .....                                      | 48        |
| Opening the Windows desktop and returning to the Start screen .....    | 48        |
| Displaying charms .....  | 49        |
| Searching for apps, settings, or files .....                           | 49        |
| Moving an app .....  | 49        |
| Creating an app group .....  | 49        |
| Unpinning an app from the Start screen .....                           | 49        |
| Resizing an app .....  | 49        |
| Printing .....   | 49        |
| Save and organize favorites .....                                      | 49        |
| Downloading apps from the Windows Store .....                          | 50        |
| Locking the computer .....   | 50        |
| Using Windows shortcut keys .....                                      | 51        |
| <b>6 Managing power .....</b>  | <b>53</b> |
| Initiating Sleep and Hibernation .....                                 | 53        |
| Intel Rapid Start Technology (select models only) .....                | 53        |
| Manually initiating and exiting Sleep .....                            | 54        |
| Manually initiating and exiting Hibernation (select models only) ..... | 54        |
| Setting password protection on wakeup .....                            | 54        |
| Using the power meter and power settings .....                         | 55        |
| Running on battery power .....   | 55        |
| Factory-sealed battery .....   | 55        |
| Finding battery information .....                                      | 55        |
| Conserving battery power .....   | 56        |
| Identifying low battery levels .....                                   | 56        |
| Resolving a low battery level .....                                    | 56        |
| Resolving a low battery level when external power is available .....   | 56        |
| Resolving a low battery level when no power source is available .....  | 56        |

|   |           |
|---|-----------|
| Resolving a low battery level when the computer cannot exit Hibernation .....                   | 56        |
| Running on external AC power .....  | 57        |
| Troubleshooting power problems .....  | 57        |
| HP CoolSense (select models only) .....   | 58        |
| Refreshing your software content with Intel Smart Connect Technology (select models only) ..... | 58        |
| Shutting down (turning off) the computer .....  | 59        |
| <b>7 Maintaining your computer .....</b>  | <b>60</b> |
| Updating programs and drivers .....   | 60        |
| Cleaning your computer .....  | 60        |
| Cleaning procedures .....   | 60        |
| Cleaning the display (All-in-Ones or Notebooks) .....   | 61        |
| Cleaning the sides or cover .....   | 61        |
| Cleaning the TouchPad, keyboard, or mouse .....   | 61        |
| Traveling with or shipping your computer .....  | 61        |
| <b>8 Securing your computer and information .....</b>   | <b>63</b> |
| Using passwords .....   | 63        |
| Setting Windows passwords .....   | 64        |
| Setting Setup Utility (BIOS) passwords .....  | 64        |
| TPM Embedded Security device (select models only) .....   | 65        |
| Using Internet security software .....  | 65        |
| Using antivirus software .....  | 65        |
| Using firewall software .....   | 66        |
| Installing software updates .....   | 66        |
| Installing critical security updates .....  | 66        |
| Installing HP and third-party software updates .....  | 66        |
| Securing your wireless network .....  | 66        |
| Backing up your software applications and information .....                                     | 67        |
| Using an optional security cable lock .....   | 67        |
| <b>9 Using Setup Utility (BIOS) and HP PC Hardware Diagnostics (UEFI) .....</b>                 | <b>68</b> |
| Starting Setup Utility (BIOS) .....   | 68        |
| Updating the BIOS .....   | 68        |
| Determining the BIOS version .....  | 68        |
| Downloading a BIOS update .....   | 69        |
| Using HP PC Hardware Diagnostics (UEFI) .....   | 69        |
| Downloading HP PC Hardware Diagnostics (UEFI) to a USB device .....                             | 70        |

|  |           |
|--|-----------|
| <b>10 Backing up, restoring, and recovering .....</b>      | <b>71</b> |
| Creating recovery media and backups .....                  | 71        |
| Creating HP Recovery media .....                           | 71        |
| Restore and recovery .....                                 | 72        |
| Recovering using HP Recovery Manager .....                 | 73        |
| What you need to know .....                                | 73        |
| Using the HP Recovery partition (select models only) ..... | 73        |
| Using HP Recovery media to recover .....                   | 74        |
| Changing the computer boot order .....                     | 74        |
| Removing the HP Recovery partition .....                   | 74        |
| <b>11 Specifications .....</b>                             | <b>75</b> |
| Input power .....  | 75        |
| Operating environment .....                                | 75        |
| <b>12 Electrostatic Discharge .....</b>                    | <b>76</b> |
| <b>Index .....</b>   | <b>77</b> |

DRAFT

DRAFT

# 1 Starting right

This computer is a powerful tool designed to enhance your work and entertainment. Read this chapter to learn about best practices after you set up your computer, fun things to do with your computer, and where to find additional HP resources.

## Visit the HP Apps Store

To download apps to the Start screen, visit the HP Apps Store. The HP Apps Store offers a wide choice of popular games, entertainment and music apps, productivity apps, and apps exclusive to HP. The selection is updated regularly and includes regional content and country-specific offers. Be sure to check the HP Apps Store frequently for new and updated features.



**IMPORTANT:** You must be connected to the Internet to access the HP Apps Store.

To view and download an app:


1. From the Start screen, select the **Store** app.
2. Select **HP Picks** to view all the available apps.
3. Select the app you want to download, and then follow the on-screen instructions. When the download is complete, the app appears on the Start screen.

## Best practices

To get the most out of your smart investment, after you set up and register the computer, we recommend the following steps:

- If you haven't already done so, connect to a wired or wireless network. See details in [Connecting to a network](#).
- Take a minute to browse [Windows essential tasks](#) to explore the new Windows® features.
- Become familiar with the computer hardware and software. For more information, see [Getting to know your computer](#) and [Enjoying entertainment features](#) for information.
- Update or purchase antivirus software. Learn more at [Using antivirus software](#).
- Back up your hard drive by creating recovery discs or a recovery flash drive. See [Backing up, restoring, and recovering](#).

## Fun things to do

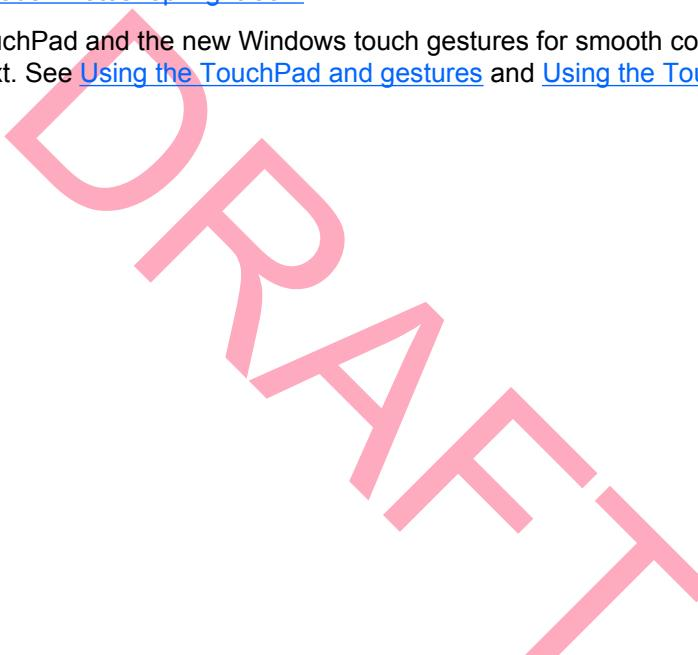- You know that you can watch a YouTube video on the computer. But did you know that you can also connect your computer to a TV or gaming console? For more information, see [Connecting video devices using an HDMI cable](#).
- You know that you can listen to music on the computer. But did you know that you can also stream live radio to the computer and listen to music or talk radio from all over the world? See [Using audio](#).
-  [Media in Adobe Photoshop Lightroom](#).
- Use the TouchPad and the new Windows touch gestures for smooth control of images and pages of text. See [Using the TouchPad and gestures](#) and [Using the TouchPad and gestures](#).

# More HP resources

You have already used *Setup poster* to turn on the computer and locate this guide. To locate resources that provide product details, how-to information, and more, use this table.

| Resource   | Contents   |
|--|--|
| <b>Setup poster</b>  | <ul style="list-style-type: none"><li>Overview of computer setup, features, and using Windows®.</li></ul>  |
| <b>Help and Support</b>  | <ul style="list-style-type: none"><li>A broad range of how-to information and troubleshooting tips</li></ul>   |
| To access Help and Support, from the Start screen, type <b>help</b> , and then from the Search window, select <b>Help and Support</b> . For U.S. support, go to <a href="http://www.hp.com/go/contactHP">http://www.hp.com/go/contactHP</a> . For worldwide support, go to <a href="http://welcome.hp.com/country/us/en/wwcontact_us.html">http://welcome.hp.com/country/us/en/wwcontact_us.html</a> . |  |
| <b>Worldwide support</b>   | <ul style="list-style-type: none"><li>Online chat with an HP technician</li><li><del>Email support</del></li><li>Support telephone numbers</li><li>HP service center locations</li></ul>   |
| <b>Safety &amp; Comfort Guide</b>  | <ul style="list-style-type: none"><li>Proper workstation setup</li><li>Guidelines for posture and work habits that increase your comfort and decrease your risk of injury</li><li>Electrical and mechanical safety information</li></ul> |
| To access this guide:<br><ol style="list-style-type: none"><li>From the Start screen, type <b>support</b>, and then select the <b>HP Support Assistant</b> app.</li><li>Select <b>My computer</b>, and then select <b>User guides</b>.</li></ol> <p>– or –</p> <p>Go to <a href="http://www.hp.com/ergo">http://www.hp.com/ergo</a>.</p>   |  |
| <b>Regulatory, Safety and Environmental Notices</b>  | <ul style="list-style-type: none"><li>Important regulatory notices, including proper battery disposal information</li></ul>  |

| Resource                 | Contents  |
|--------------------------|---|
| <b>Limited Warranty*</b> | <ul style="list-style-type: none"> <li>Specific warranty information about this computer</li> </ul> |

To access this warranty:

- From the Start screen, type support, and then select the **HP Support Assistant** app.
- Select **My computer**, and then select **Warranty and services**.

– or –

Go to <http://www.hp.com/go/orderdocuments>.


---

\*You can find the expressly provided HP Limited Warranty applicable to your product located with the user guides on your computer and/or on the CD or DVD provided in the box. In some countries or regions, HP may provide a printed HP Limited Warranty in the box. For some countries or regions where the warranty is not provided in printed format, you may request a printed copy from <http://www.hp.com/go/orderdocuments> or write to:

- North America:** Hewlett-Packard, MS POD, 11311 Chinden Blvd., Boise, ID 83714, USA
- Europe, Middle East, Africa:** Hewlett-Packard, POD, Via G. Di Vittorio, 9, 20063, Cernusco s/Naviglio (MI), Italy
- Asia Pacific:** Hewlett-Packard, POD, P.O. Box 200, Alexandra Post Office, Singapore 911507

When you request a printed copy of your warranty, please include your product number, warranty period (found on your service label), name, and postal address.

**IMPORTANT:** Do NOT return your HP product to the addresses above. For U.S. support, go to <http://www.hp.com/go/contactHP>. For worldwide support, go to [http://welcome.hp.com/country/us/en/wwcontact\\_us.html](http://welcome.hp.com/country/us/en/wwcontact_us.html).

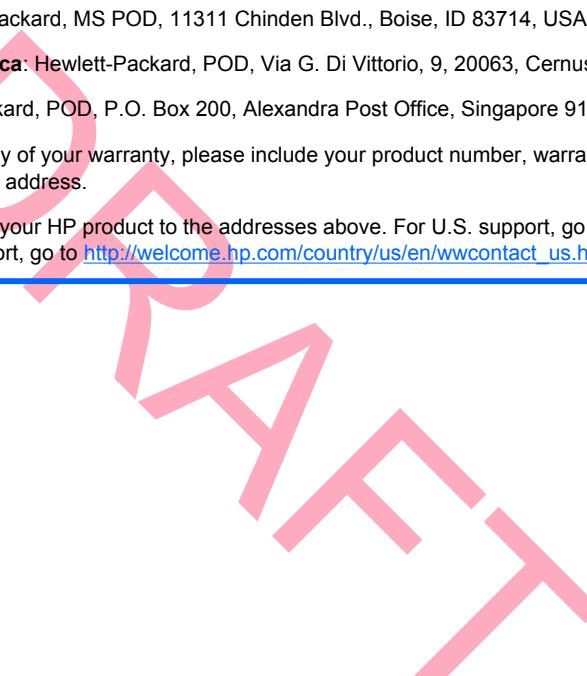

## 2 Getting to know your computer

### Finding your hardware and software information

#### Locating hardware

To find out what hardware is installed on your computer:

1. From the Start screen, type `control panel`, and then select **Control Panel**.
2. Select **System and Security**, select **System**, and then select **Device Manager** in the left column.

A list reveals all the devices installed on your computer.

To find information about system hardware components and the system BIOS version number, press **fn+esc**.

#### Locating software

To find out what software is installed on your computer:


- ▲ From the Start screen, move the cursor until the arrow appears in the lower-left corner of the screen, and then select the arrow.

## Right side




|  |   |
|--|---|
| <p>Supports HP USB Boost technology, which lets you charge devices with your USB ports even if your computer is powered off.</p>                                 |   |
| <p>Component</p>   |   |
| (1)  | USB 3.0 port       |
| (2)  |  Mini DisplayPort  |
| (3)  |  HDMI port         |
| (4)  | AC adapter light  |
| (5)  |  Power connector |
| <p>MS Start button<br/>Volume button<br/>Mini DisplayPort<br/>HDMI<br/>USB 3.0 ports (2)<br/>Audio out (Headphone)/ Audio in (Microphone)</p>                    |   |
| <p>mouse, external drive, printer, scanner or USB drive.</p>   |   |
| <p>Connects an optional digital display device, such as a high-performance monitor or projector.</p>   |   |
| <p>Connects an optional video or audio device, such as a high-definition television, any compatible digital or audio component, or a high-speed HDMI device.</p> |   |
| <ul style="list-style-type: none"><li>On: The AC adapter is connected and the battery is charged.</li><li>Off: The computer is using battery power.</li></ul>    |   |
| <p>Connects an AC adapter.</p>   |   |

## Left side

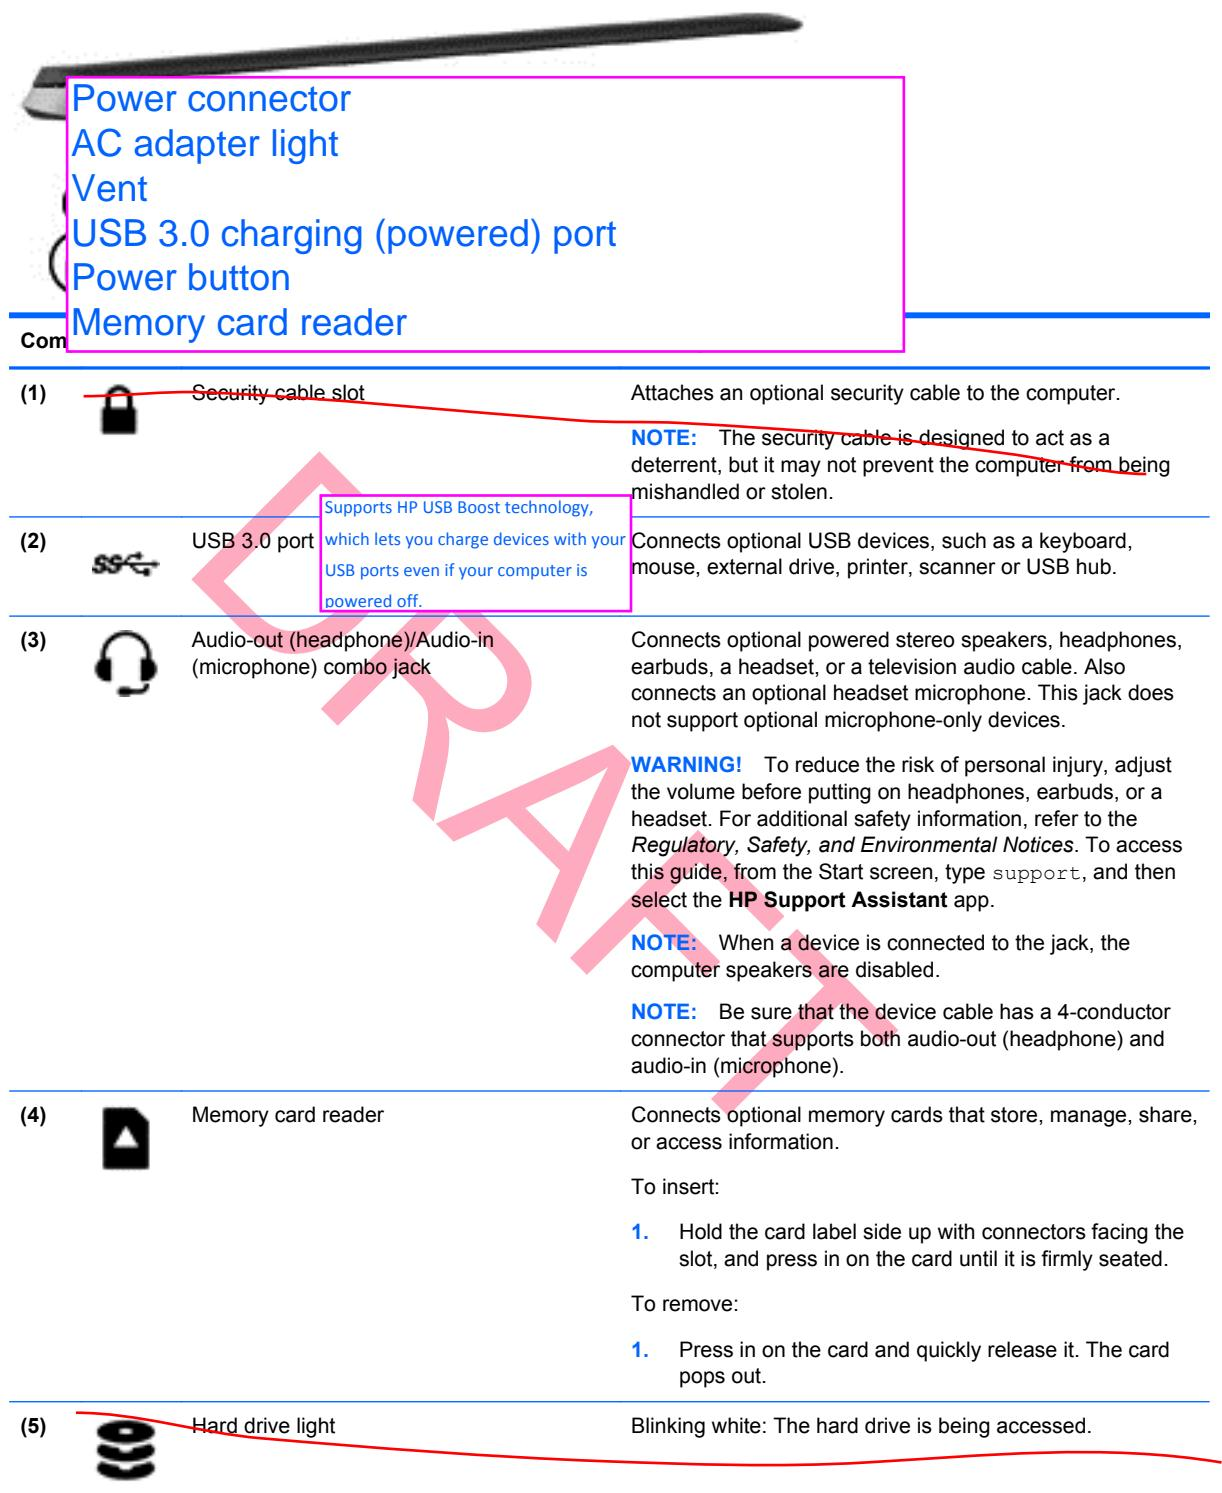

# Display

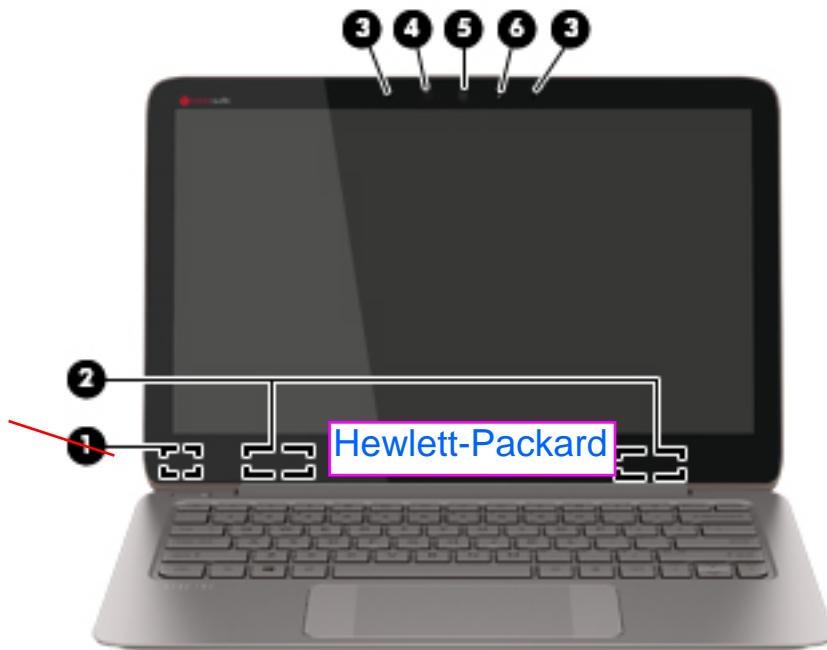

| Component                    | Description  |
|------------------------------|--|
|                              |  |
| (2) WLAN antennas (2)*       | Send and receive wireless signals to communicate with wireless local area networks (WLANs).  |
| (3) Internal microphones (2) | Record sound.  |
| (4) Ambient light sensor     | Automatically adjusts the display brightness based on the lighting conditions in your environment.   |
| (5) Webcam                   | Records video and captures photographs. Some models may allow you to video conference and chat online using streaming video.<br><br>To use the webcam, from the Start screen, type <code>cyberlink</code> , and then select <b>CyberLink YouCam</b> from the list of applications. |
| (6) Webcam light             | On: The webcam is in use.  |

\*The antennas are not visible from the outside of the computer. For optimal transmission, keep the areas immediately around the antennas free from obstructions. For wireless regulatory notices, see the section of the *Regulatory, Safety, and Environmental Notices* that applies to your country or region. To access this guide, from the Start screen, type `support`, and then select the **HP Support Assistant** app.


## Display modes

Your computer has a hinge that allows you to rotate the display 360 degrees. This allows you to use your computer in three modes: productivity mode, entertainment mode, or tablet mode.

| Mode               | Description   |
|--------------------|---|
| Productivity mode  |  <p>To use the notebook in productivity mode, raise the display until you can view the display (about 90 to 100 degrees).</p>  |
| Entertainment mode |  <p>To use your notebook in entertainment mode, raise the display, and then rotate it backward to a stand position (about 315 degrees). You can rest the notebook on the computer bottom or stand it on the front edges.</p> <p><b>NOTE:</b> The Touchpad and keyboard functions are locked during this mode.</p> |
| Tablet mode        |  <p>To use your notebook as a tablet, raise the display, and then rotate it backward until it is flush with the computer bottom (360 degrees).</p> <p><b>NOTE:</b> The Touchpad and keyboard functions are locked during this mode.</p>  |


# Top

## TouchPad

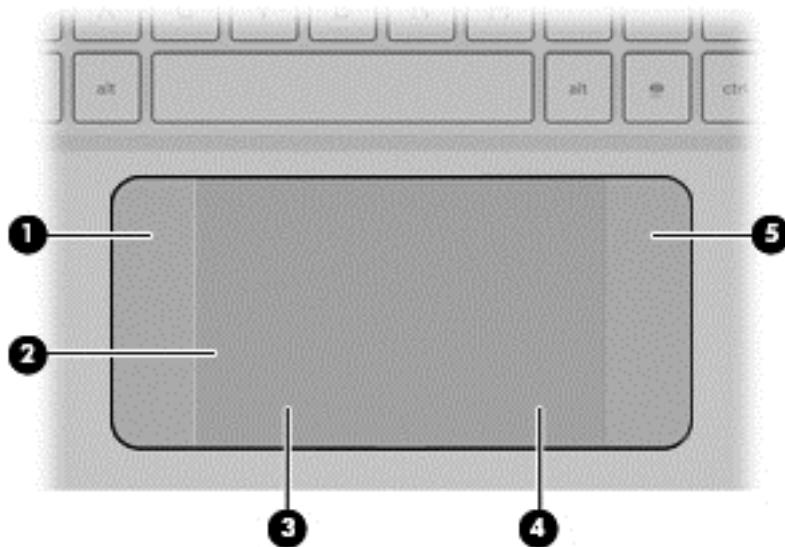


| Component                 | Description   |
|---------------------------|---|
| (1) Left control zone     | Textured area that allows you to perform additional gestures.   |
| (2) TouchPad zone         | Moves the on-screen pointer and selects or activates items on the screen.<br><b>NOTE:</b> The TouchPad also supports edge-swipe gestures. For more information, see <a href="#">Edge swipes</a> . |
| (3) Left TouchPad button  | Functions like the left button on an external mouse.  |
| (4) Right TouchPad button | Functions like the right button on an external mouse.   |
| (5) Right control zone    | Textured area that allows you to perform additional gestures.   |

## Lights

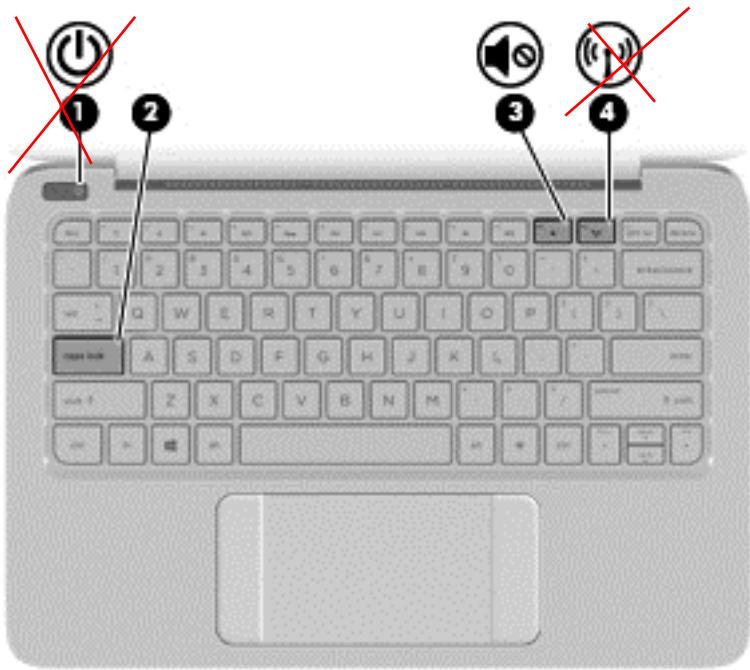


| Component  | Description  |
|--|--|
| (1) ■ Power light  | • On: The computer is on.<br>• <u>Initiating Sleep and Hibernation.</u>  |
| (2) Caps lock light  | On: Caps lock is on, switching the keys to all capital letters.  |
| (3)  Mute light | <ul style="list-style-type: none"><li>Amber: Computer sound is off.</li><li>Off: Computer sound is on.</li></ul> |

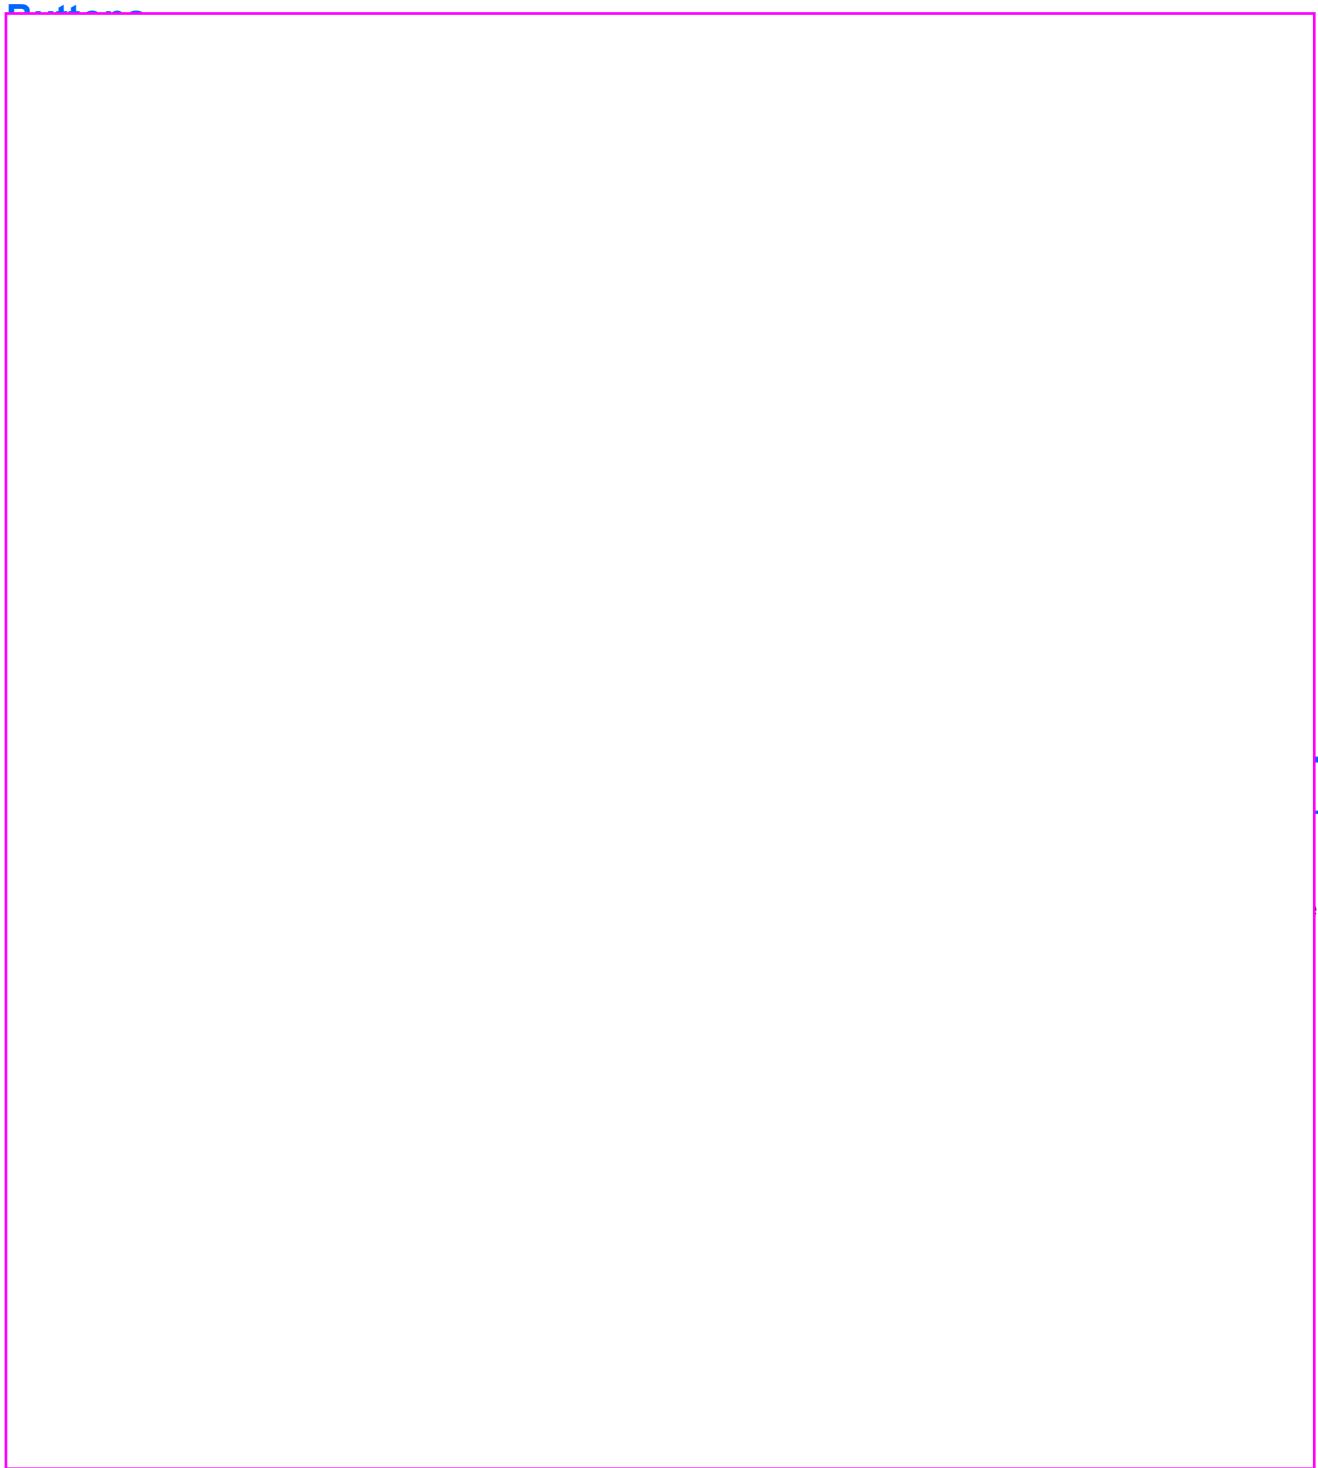


Options from the list of applications.

## Keys

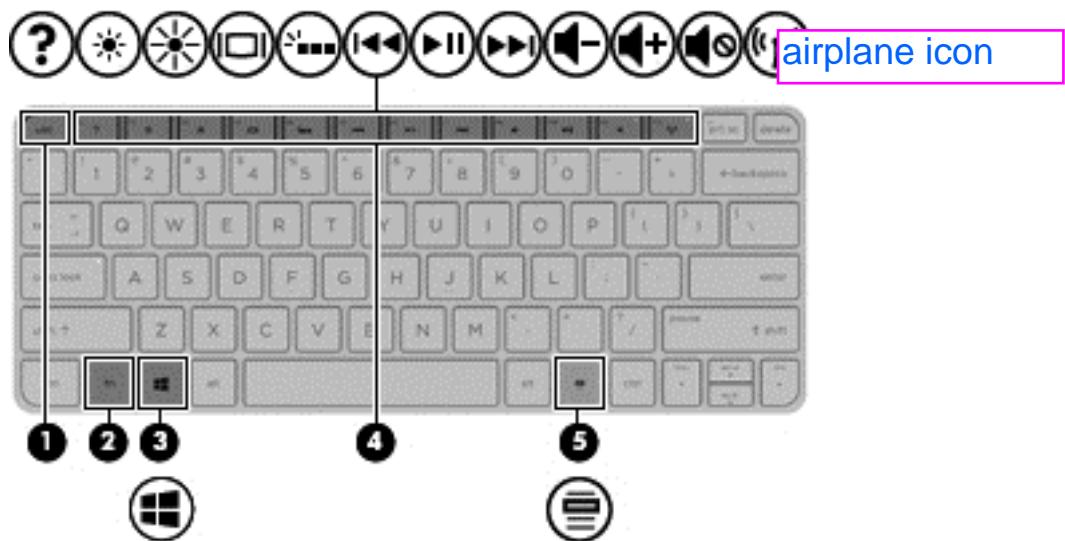

| Component                    | Description  |
|------------------------------|--|
| (1) esc key                  | Reveals system information when pressed in combination with the <b>fn</b> key.   |
| (2) fn key                   | Executes frequently used system functions when pressed in combination with the <b>b</b> key or the <b>esc</b> key.   |
| (3) Windows key              | Returns you to the Start screen from any app or window.<br><b>NOTE:</b> Pressing the Windows key again will return you to the most recent app that you had open. |
| (4) Action keys              | Execute frequently used system functions.  |
| (5) Windows applications key | Reveals options for a selected object.   |

## Bottom

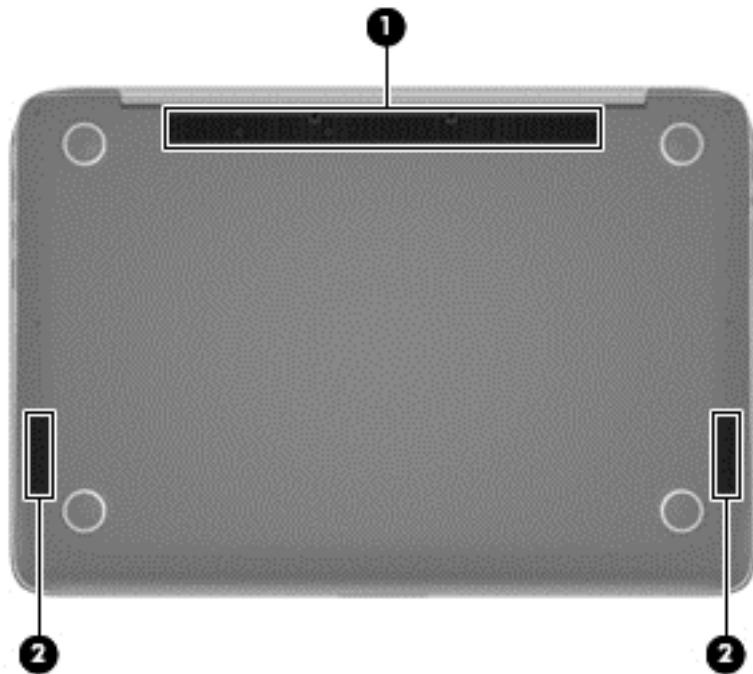

| Component        | Description  |
|------------------|--|
| (1) Vent         | Enables airflow to cool internal components.<br><b>NOTE:</b> The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation. |
| (2) Speakers (2) | Produce sound.   |

# Labels

The labels affixed to the computer provide information you may need when you troubleshoot system problems or travel internationally with the computer.




**IMPORTANT:** All labels described in this section will be located in one of 3 places, depending on your computer model: Affixed to the bottom of the computer, located in the battery bay, or under the service door.

For help finding these locations, refer to [Getting to know your computer](#).

- Service label—Provides important information to identify your computer. When contacting support, you will probably be asked for the serial number, and possibly for the product number or the model number. Locate these numbers before you contact support.



**NOTE:** Your service labels will resemble one of the examples shown below. Refer to the illustration that most closely matches the service label on your computer.

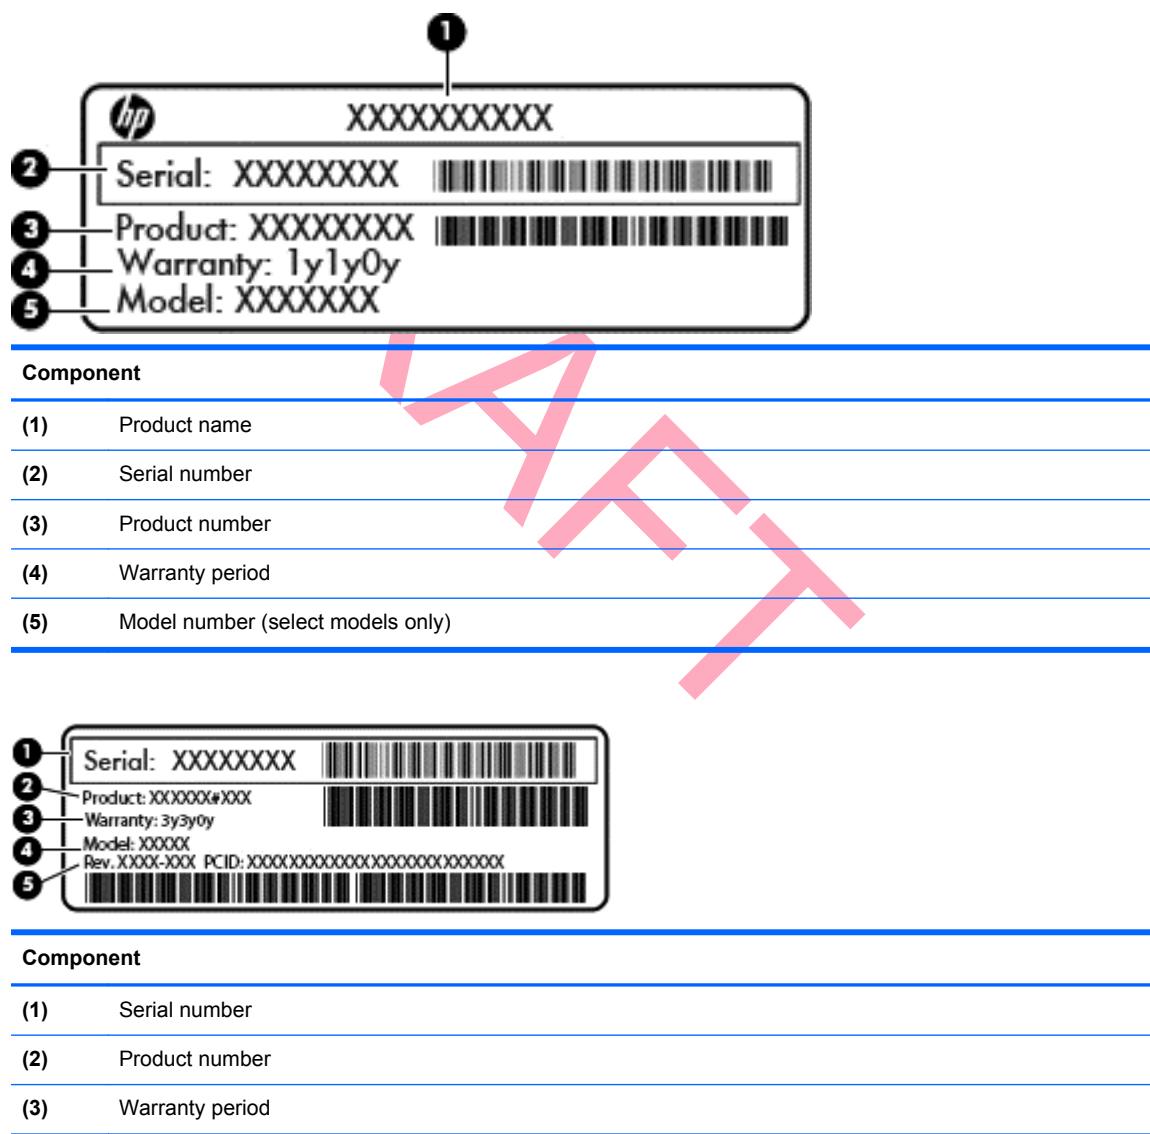

| Component  |
|--|
| (4) Model number (select models only)  |
| (5) Revision number  |
| ● Regulatory label(s)—Provide(s) regulatory information about the computer.  |
| ● Wireless certification label(s)—Provide(s) information about optional wireless devices and the approval markings for the countries or regions in which the devices have been approved for use. |

DRAFT

# 3 Connecting to a network

Your computer can travel with you wherever you go. But even at home, you can explore the globe and access information from millions of websites using your computer and a wired or wireless network connection. This chapter will help you get connected to that world.

## Connecting to a wireless network

Wireless technology transfers data across radio waves instead of wires. Your computer may be equipped with one or more of the following wireless devices:

- Wireless local area network (WLAN) device—Connects the computer to wireless local area networks (commonly referred to as Wi-Fi networks, wireless LANs, or WLANs) in corporate offices, your home, and public places such as airports, restaurants, coffee shops, hotels, and universities. In a WLAN, the mobile wireless device in your computer communicates with a wireless router or a wireless access point.
- Bluetooth device (select models only)—Creates a personal area network (PAN) to connect to other Bluetooth-enabled devices such as computers, phones, printers, headsets, speakers, and cameras. In a PAN, each device communicates directly with other devices, and devices must be relatively close together—typically within 10 meters (approximately 33 feet) of each other.

For more information about wireless technology, see the information and website links provided in Help and Support. From the Start screen, type **help**, and then select **Help and Support**.

## Using the wireless controls

You can control the wireless devices in your computer using these features:

- Wireless button, wireless switch, or wireless key (referred to in this chapter as the wireless button) (select models only)
- Operating system controls

## Using the wireless button

The computer has a wireless button, one or more wireless devices, and one or two wireless lights, depending on the model. All of the wireless devices on your computer are enabled at the factory, so the wireless light is on (white) when you turn on the computer.

The wireless light indicates the overall power state of your wireless devices, not the status of individual devices. If the wireless light is white, at least one wireless device is on. If the wireless light is off, all wireless devices are off.



**NOTE:** On some models, the wireless light is amber when all wireless devices are off.

Because the wireless devices are enabled at the factory, you can use the wireless button to turn on or turn off all the wireless devices simultaneously.

## Using operating system controls

The Network and Sharing Center allows you to set up a connection or network, connect to a network, and diagnose and repair network problems.

To use operating system controls:

1. From the Start screen, type `control panel`, and then select **Control Panel**.
2. Select **Network and Internet**, and then select **Network and Sharing Center**.

For more information, from the Start screen, type `help`, and then select **Help and Support**.

## Sharing data and drives and accessing software

When your computer is part of a network, you are not limited to using only the information that is stored in your computer. Network computers can exchange software and data with each other.



**NOTE:** When a disc like a DVD movie or game is copy-protected, it cannot be shared.

To share folders or content on the same network:

1. From the Windows desktop, open **File Explorer**.
2. From **This PC**, click a folder with content you want to share. Select **Share** from the navigation bar at the top of the window, and then click **Specific people**.
3. Type a name in the **File Sharing** box, and then click **Add**.
4. Click **Share** and then follow the on-screen instructions.

To share drives on the same network:

1. From the Windows desktop, right-click the network status icon in the notification area, at the far right of the taskbar.
2. Select **Open Network and Sharing Center**.
3. Click the **Share** tab, and then click **Advanced sharing**.
4. In the **Local Disk (C:) Properties** window, select **Advanced Sharing**.
5. Check **Share this folder**.

To share drives on the same network:

1. From the Windows desktop, right-click the network status icon in the notification area, at the far right of the taskbar.
2. Select **Open Network and Sharing Center**.
3. Under **View your active networks**, select an active network.
4. Select **Change advanced sharing settings** to set sharing options for privacy, network discovery, file and printer sharing or other network options.

## Using a WLAN

With a WLAN device, you can access a wireless local area network (WLAN), which is composed of other computers and accessories that are linked by a wireless router or a wireless access point.



**NOTE:** The terms *wireless router* and *wireless access point* are often used interchangeably.

- A large-scale WLAN, such as a corporate or public WLAN, typically uses wireless access points that can accommodate a large number of computers and accessories and can separate critical network functions.
- A home or small office WLAN typically uses a wireless router, which allows several wireless and wired computers to share an Internet connection, a printer, and files without requiring additional pieces of hardware or software.

To use the WLAN device in your computer, you must connect to a WLAN infrastructure (provided through a service provider or a public or corporate network).

## Using an Internet service provider

When you are setting up Internet access in your home, you must establish an account with an Internet service provider (ISP). To purchase Internet service and a modem, contact a local ISP. The ISP will help set up the modem, install a network cable to connect your wireless router to the modem, and test the Internet service.



**NOTE:** Your ISP will give you a user ID and a password to use for Internet access. Record this information and store it in a safe place.

## Setting up a WLAN

To set up a WLAN and connect to the Internet, you need the following equipment:

- A broadband modem (either DSL or cable) **(1)** and high-speed Internet service purchased from an Internet service provider
- A wireless router **(2)** (purchased separately)
- A wireless computer **(3)**



**NOTE:** Some modems have a built-in wireless router. Check with your ISP to determine what type of modem you have.

The illustration below shows an example of a wireless network installation that is connected to the Internet.



As your network grows, additional wireless and wired computers can be connected to the network to access the Internet.

For help in setting up your WLAN, see the information provided by your router manufacturer or your ISP.

## Configuring a wireless router

For help in configuring a wireless router, see the information provided by your router manufacturer or your ISP.



**NOTE:** It is recommended that you initially connect your new wireless computer to the router by using the network cable provided with the router. When the computer successfully connects to the Internet, disconnect the cable, and access the Internet through your wireless network.

## Protecting your WLAN

When you set up a WLAN or access an existing WLAN, always enable security features to protect your network from unauthorized access. WLANs in public areas (hotspots) like coffee shops and airports may not provide any security. If you are concerned about the security of your computer when connected to a hotspot, limit your network activities to email that is not confidential and basic Internet surfing.

Wireless radio signals travel outside the network, so other WLAN devices can pick up unprotected signals. Take the following precautions to protect your WLAN:

- Use a firewall.

A firewall checks information and requests that are sent to your network, and discards any suspicious items. Firewalls are available in both software and hardware. Some networks use a combination of both types.

- Use wireless encryption.

Wireless encryption uses security settings to encrypt and decrypt data that is transmitted over the network. For more information, from the Start screen, type **help**, and then select **Help and Support**.

## Connecting to a WLAN

To connect to the WLAN, follow these steps:

1. Be sure that the WLAN device is on. If the device is on, the wireless light is white. If the wireless light is off, press the wireless button.



**NOTE:** On some models, the wireless light is amber when all wireless devices are off.

2. From the Start screen, point to the far-right upper or lower corner to display the charms.
3. Select **Settings**, and then click the network status icon.
4. Select your WLAN from the list.
5. Click **Connect**.

If the WLAN is a security-enabled WLAN, you are prompted to enter a security code. Type the code, and then click **Sign in** to complete the connection.



**NOTE:** If no WLANs are listed, you may be out of range of a wireless router or access point.



**NOTE:** If you do not see the WLAN you want to connect to, from the Windows desktop, right-click the network status icon, and then select **Open Network and Sharing Center**. Click **Set up a new connection or network**. A list of options is revealed, allowing you to manually search for and connect to a network or to create a new network connection.

6. Follow the on-screen instructions to complete the connection.

After the connection is made, place the mouse pointer over the network status icon in the notification area, at the far right of the taskbar, to verify the name and status of the connection.



**NOTE:** The functional range (how far your wireless signals travel) depends on WLAN implementation, router manufacturer, and interference from other electronic devices or structural barriers such as walls and floors.

## Using Bluetooth wireless devices ~~(select models only)~~

A Bluetooth device provides short-range wireless communications that replace the physical cable connections that traditionally link electronic devices such as the following:

- Computers (desktop, notebook, PDA)
- Phones (cellular, cordless, smart phone)
- Imaging devices (printer, camera)
- Audio devices (headset, speakers)
- Mouse

Bluetooth devices provide peer-to-peer capability that allows you to set up a PAN of Bluetooth devices. For information about configuring and using Bluetooth devices, see the Bluetooth software Help.


DRAFT

# 4 Enjoying entertainment features

Use your HP computer as an entertainment hub to socialize via the webcam, enjoy and manage your music, and download and watch movies. Or, to make your computer an even more powerful entertainment center, connect external devices like a monitor, projector, or TV, or speakers and headphones.

## Multimedia features

Here are some of the entertainment features on your computer.

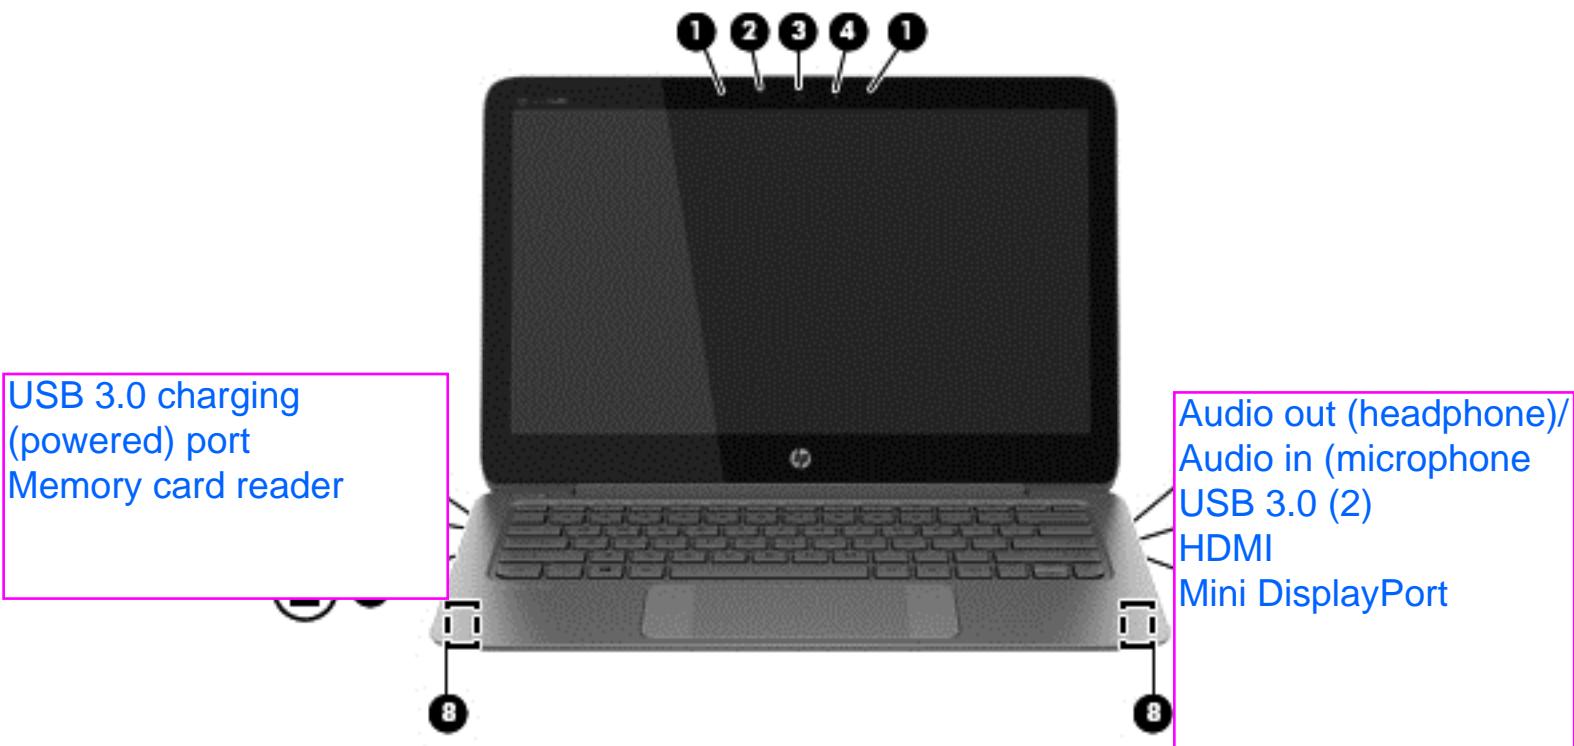

| Component                    | Description   |
|------------------------------|---|
| (1) Internal microphones (2) | Records sound.  |
| (2) Ambient light sensor     | Automatically adjusts the display brightness based on the lighting conditions in your environment.  |
| (3) Webcam                   | Records video and captures photographs. Some models may allow you to video conference and chat online using streaming video.<br>From the Start screen, type <b>cyberlink</b> , and then select <b>CyberLink YouCam</b> from the list of applications. |
| (4) Webcam light             | On: The webcam is in use.   |

| Component   | Description   |
|---|---|
| (5)  HDMI port   | Connects an optional video or audio device, such as a high-definition television, any compatible digital or audio component, or a high-speed HDMI device.   |
| (6)  Mini DisplayPort  | Connects an optional digital display device, such as a high-performance monitor or projector.   |
| (7)  USB 3.0 ports (2)   | Connect optional USB devices, such as a keyboard, mouse, external drive, printer, scanner or USB hub.   |
| (8)  Speakers (2)  | Produce sound.  |
| <b>NOTE:</b> The speakers are located on the bottom of the computer.  |   |
| (9)  Memory card reader  | Connects optional memory cards that store, manage, share, or access information.  |
| <ol style="list-style-type: none"> <li data-bbox="874 699 1420 783">1. To insert the memory card, hold the card, label side up with connectors facing the slot and push in the card until it is firmly seated.</li> <li data-bbox="874 804 1420 846">2. To remove the memory card, press in on the card and quickly release it until it pops out.</li> </ol>            |   |
| (10)  Audio-out (headphone)/Audio-in (microphone) combo jack   | <p>Connects optional powered stereo speakers, headphones, earbuds, a headset, or a television audio cable. Also connects an optional headset microphone. This jack does not support optional microphone-only devices.</p> |
| <p><b>WARNING!</b> To reduce the risk of personal injury, adjust the volume before putting on headphones, earbuds, or a headset. For additional safety information, refer to the <i>Regulatory, Safety, and Environmental Notices</i>. To access this guide, from the Start screen, type <code>support</code>, and then select the <b>HP Support Assistant</b> app.</p> |   |
| <b>NOTE:</b> When a device is connected to the jack, the computer speakers are disabled.  |   |
| <b>NOTE:</b> Be sure that the device cable has a 4-conductor connector that supports both audio-out (headphone) and audio-in (microphone).  |   |

## Using the webcam

The computer has an integrated webcam that records video and captures photographs. Some models may allow you to video conference and chat online using streaming video.

- ▲ To start the webcam, from the Start screen, type `cyberlink`, and then select **CyberLink YouCam** from the list of applications.

For details about using the webcam, go to Help and Support. From the Start screen, type `help`, and then select **Help and Support**.

# ~~Editing media in Adobe Photoshop Lightroom~~

## **Special**

### **Using audio**

On your computer, you can play music CDs on an optional external optical drive, download and listen to music, stream audio content from the Web (including radio), record audio, or mix audio and video to create multimedia. To enhance your listening enjoyment, attach external audio devices such as speakers or headphones.

#### **Connecting speakers**

You can attach wired speakers to your computer by connecting them to a USB port or to the audio-out (headphone)/audio-in (microphone) combo jack on your computer.

To connect *wireless* speakers to your computer, follow the device manufacturer's instructions. To connect high-definition speakers to the computer, see [Setting up HDMI audio](#). Before connecting speakers, lower the volume setting.

## Connecting headphones and microphones

You can connect wired headphones or headsets to the audio-out (headphone)/audio-in (microphone) combo jack on your computer. Many headsets with integrated microphones are commercially available.

To connect wireless headphones or headsets to your computer, follow the device manufacturer's instructions.

**WARNING!** To reduce the risk of personal injury, lower the volume setting before putting on headphones, earbuds, or a headset. For additional safety information, see the *Regulatory, Safety and Environmental Notices*. To access this guide, from the Start screen, type support, and then select the **HP Support Assistant** app.

## ~~Using Beats Audio~~

**Access**

**Enabli**

## Testing your audio features

To check the audio functions on your computer, follow these steps:

1. From the Start screen, type `control panel`, and then select **Control Panel** from the list of applications.
2. Select **Hardware and Sound**, and then select **Sound**.
3. When the Sound window opens, select the **Sounds** tab. Under **Program Events**, select any sound event, such as a beep or alarm, and then click **Test**.

You should hear sound through the speakers or through connected headphones.

To check the recording functions on your computer, follow these steps:

1. From the Start screen, type `sound`, and then select **Sound Recorder**.
2. Click **Start Recording** and speak into the microphone.
3. Save the file to your desktop.
4. Open a multimedia program and play the recording.

To confirm or change the audio settings on your computer, follow these steps:

1. From the Start screen, type `control panel`, and then select **Control Panel** from the list of applications.
2. Select **Hardware and Sound**, and then select **Sound**.

## Using video

Your computer is a powerful video device that enables you to watch streaming video from your favorite websites and download video and movies to watch on your computer when you are not connected to a network.

To enhance your viewing enjoyment, use one of the video ports on the computer to connect an external monitor, projector, or TV. Most computers have a video graphics array (VGA) port, which connects analog video devices. Some computers also have a high-definition multimedia interface (HDMI) port, which allows you to connect a high-definition monitor or TV.


 **IMPORTANT:** Be sure that the external device is connected to the correct port on the computer, using the correct cable. Check the device manufacturer's instructions.

### Connecting video devices using an HDMI cable

 **NOTE:** To connect an HDMI device to your computer, you need an HDMI cable, sold separately.

To see the computer screen image on a high-definition TV or monitor, connect the high-definition device according to the following instructions.

1. Connect one end of the HDMI cable to the **HDMI** port on the computer.

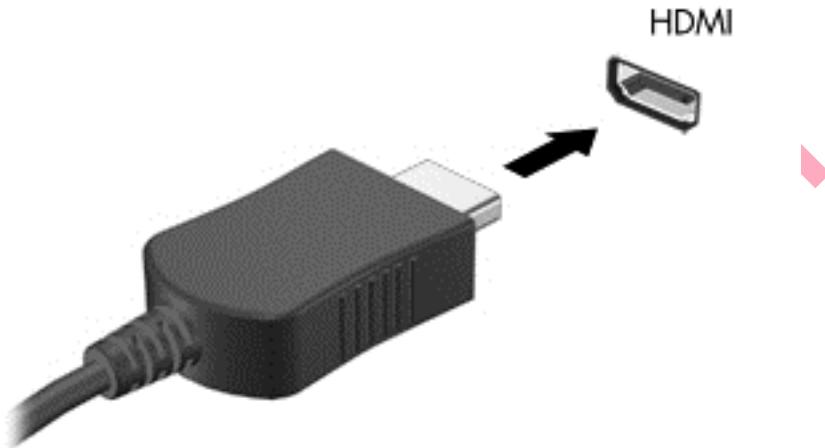

2. Connect the other end of the cable to the high-definition TV or monitor.
3. Press **f4** to alternate the computer screen image between 4 display states:
  - **PC screen only:** View the screen image on the computer only.
  - **Duplicate:** View the screen image simultaneously on *both* the computer and the external device.

- **Extend:** View the screen image extended across *both* the computer and the external device.
- **Second screen only:** View the screen image on the external device only.

Each time you press **f4**, the display state changes.

 **NOTE:** For best results, especially if you choose the “Extend” option, adjust the screen resolution of the external device, as follows. From the Start screen, type `control panel`, and then select **Control Panel** from the list of applications. Select **Appearance and Personalization**. Under **Display**, select **Adjust screen resolution**.

## Setting up HDMI audio

HDMI is the only video interface that supports high-definition video *and* audio. After you connect an HDMI TV to the computer, you can then turn on HDMI audio by following these steps:

1. From the Windows desktop, right-click the **Speakers** icon in the notification area, at the far right of the taskbar, and then select **Playback devices**.
2. On the Playback tab, select the name of the digital output device.
3. Click **Set Default**, and then click **OK**.

To return the audio stream to the computer speakers:

1. From the Windows desktop, right-click the **Speakers** icon in the notification area, at the far right of the taskbar, and then click **Playback devices**.
2. On the Playback tab, click **Speakers**.
3. Click **Set Default**, and then click **OK**.

## Connecting a digital display device

The Mini DisplayPort connects a digital display device such as a high-performance monitor or projector (cable purchased separately). The DisplayPort delivers higher performance than the VGA external monitor port and improves digital connectivity.

1. Connect the Mini DisplayPort connector on the cable to the matching port on your computer.



2. Connect the other end of the cable to the digital display device.
3. Press **f4** to alternate the computer screen image between 4 display states:
  - **PC screen only:** View the screen image on the computer only.
  - **Duplicate:** View the screen image simultaneously on *both* the computer and external device.
  - **Extend:** View the screen image extended across *both* the computer and external device.
  - **Second screen only:** View the screen image on the external device only.

Each time you press **f4**, the display state changes.

---

 **NOTE:** Adjust the screen resolution of the external device, especially if you choose the “Extend” option. From the Start screen, type `control panel`, and then select **Control Panel** from the list of applications. Select **Appearance and Personalization**. Under **Display**, select **Adjust screen resolution**.

## View media in high-resolution display (select models only)

Your computer has a stunning Full High Definition (FHD) or Quad High Definition (QHD) display that enhances the viewing experience with movies, games, and even everyday tasks in a whole new light.

If your computer has a high-resolution display, you may want to adjust the display settings when working in older software programs that are not compatible with high resolution.

- If the text in apps is too small, try zooming in.
- For Web pages, press **ctrl + / -** to zoom in and out.

 **TIP:** If these steps do not work, go to the control panel display settings and change to a lower resolution when working in older software, or right-click on the desktop and select **Screen resolution**.

## Using Intel Pro Wireless Display (select models only)

Intel® Pro Wireless Display (WiDi) allows you to share your computer content wirelessly on your TV. To

experience wireless display, a wireless TV adapter (purchased separately) is required. DVDs that have output protection may not play on Intel Wireless Display. (However, DVDs that do not have output protect will play.) Blu-ray discs, which have output protection, will not play on Intel Wireless Display. For details about using the wireless TV adapter, see the manufacturer's instructions.

**NOTE:** Be sure that wireless is enabled on your computer before using the wireless display.

## Discovering and connecting to Miracast-compatible wireless displays

Use Intel wireless display apps to wirelessly project individual files such as photos, music, or videos, or to duplicate your entire computer screen to a TV or a secondary display device.

Intel WiDi, a premium Miracast solution, makes it easy and seamless to pair your secondary display device;

provides for full-screen duplication; and improves speed, quality, and scaling. Intel WiDi Media Share enables

easy multitasking and provides tools to select and flick individual media files to your secondary display device.

Open the apps by following these steps:

1. To open the Intel WiDi connection app, from the Start screen, type Intel WiDi. Follow the on-screen instructions to pair your secondary display device and make display state choices. Use the **WiDi Connect** function to initiate a connection.
2. To open the Intel Media Share app, from the Start screen, type Intel WiDi Media Share. Follow the on-screen instructions to flick and share your media files to a secondary display device.

# 5 Navigating the screen

You can navigate the computer screen in several ways:

- Touch gestures
- Keyboard and mouse
- Voice navigation

Touch gestures can be used on your computer TouchPad or on a touch screen.

 **NOTE:** An external USB mouse (purchased separately) can be connected to one of the USB ports on the computer.

Your computer has special action keys and hot key functions on the keyboard to perform routine tasks.

## Using the TouchPad and gestures

The large TouchPad allows you to navigate the computer screen and control the pointer by using simple finger movements. You can customize the touch gestures by changing settings, button configurations, click speed, and pointer options. You can also view demonstrations of TouchPad gestures.

From the Start screen, type **control panel**, select **Control Panel**, and then select **Hardware and Sound**. Under **Devices and Printers**, select **Mouse**.


 **TIP:** Use the left and right buttons on the TouchPad as you would use the corresponding buttons on an external mouse.

 **NOTE:** TouchPad gestures are not supported in all apps.

## Selecting and opening

To make an on-screen selection, use the tap function on the TouchPad.


- Point to an item on the screen, and then tap one finger on the TouchPad zone. Double-tap an item to open it.

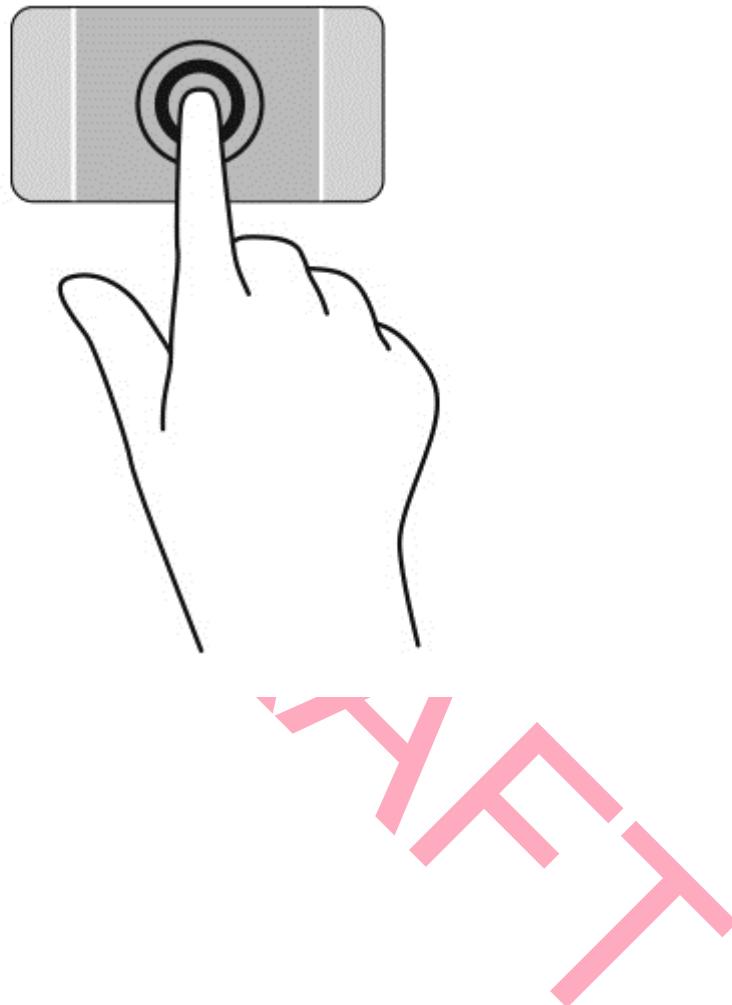

## Scrolling

Scrolling is useful for moving up, down, or sideways on a page or image.



- Place two fingers slightly apart on the TouchPad zone and then drag them up, down, left, or right.

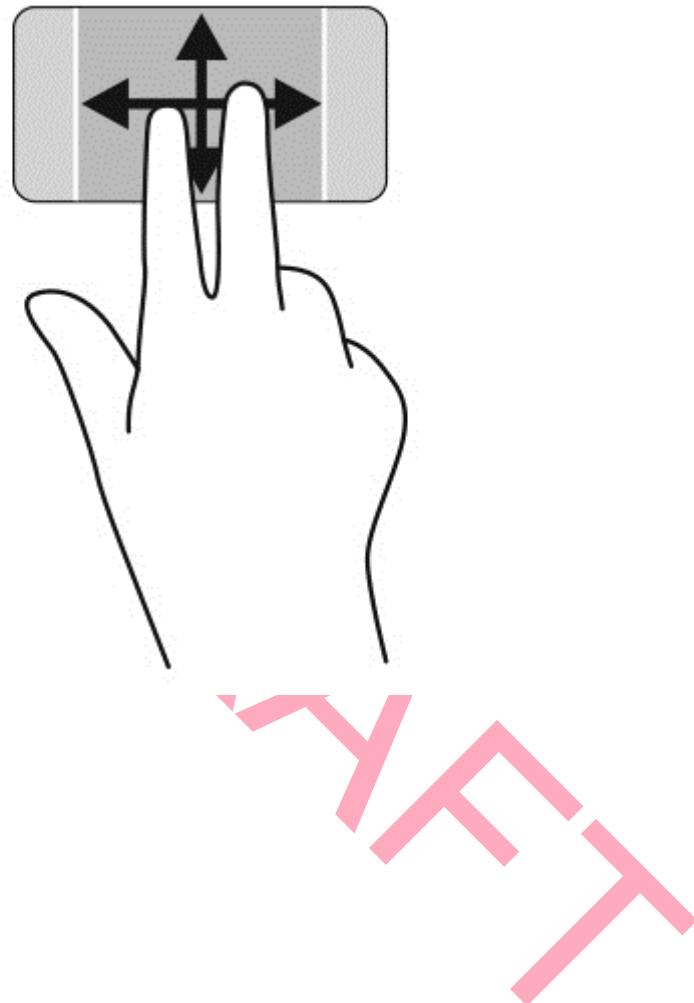

## Pinching/zooming

Pinching and zooming allow you to zoom in or out on images or text.

- Zoom out by placing two fingers apart on the TouchPad zone and then moving your fingers together.
- Zoom in by placing two fingers together on the TouchPad zone and then moving your fingers apart.

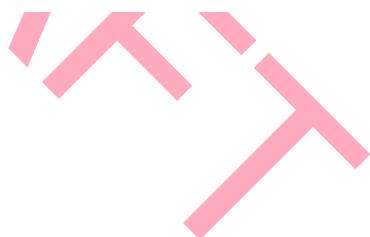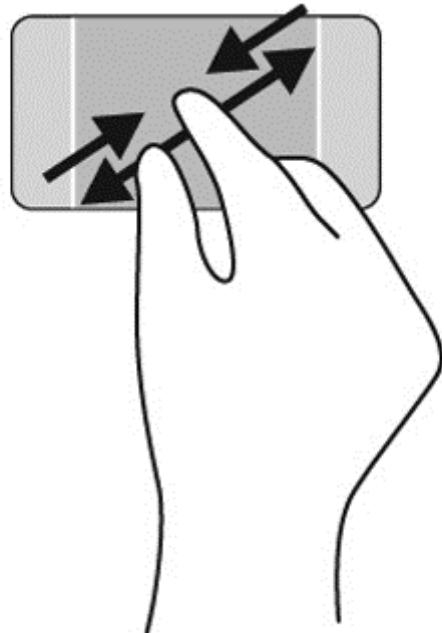


## Right-click

2-finger tap allows you to make menu selections for an object on the screen.



**NOTE:** Using 2-finger tap performs the same functions as using right-click with the mouse.

- Place two fingers on the TouchPad zone and tap to open the options menu for the selected object.

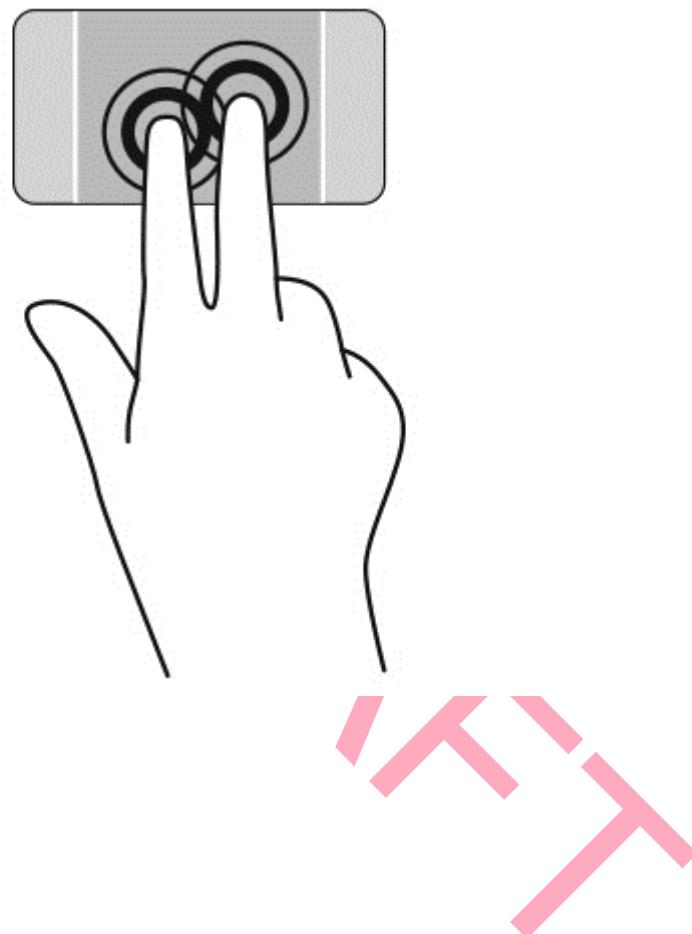



## Rotating

Rotating allows you to turn items such as photos.

- Point to an object, and then anchor the forefinger of your left hand in the TouchPad zone. Using your right hand, slide your forefinger in a sweeping motion from 12 o'clock to 3 o'clock. To reverse the rotation, move your forefinger from 3 o'clock to 12 o'clock.




**NOTE:** Rotate is intended for specific apps where you can manipulate an object or image. Rotate may not be functional for all apps.

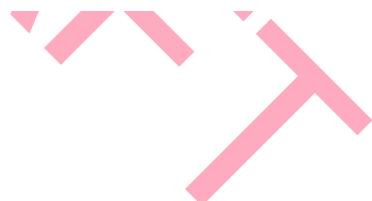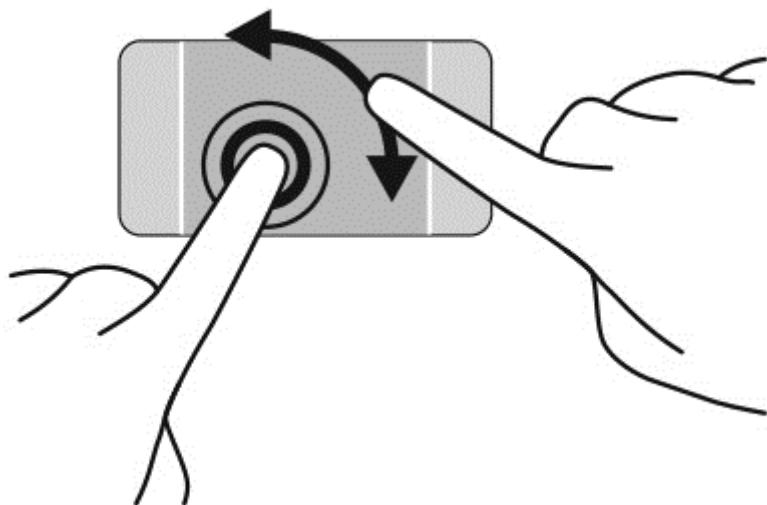

## Flicking



Flicking allows you to navigate through screens or quickly scroll through documents.

- Place three fingers on the TouchPad zone and flick your fingers in a light, quick motion left or right.

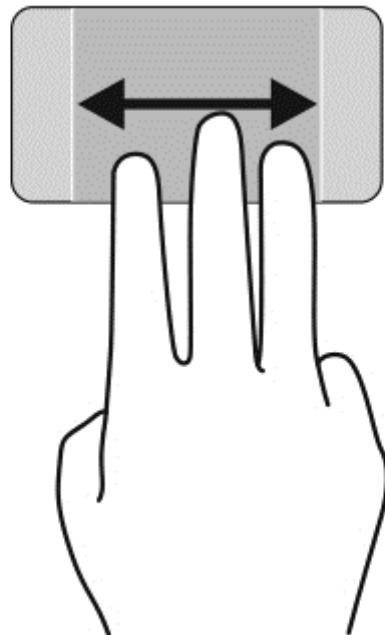

## Close an app

- Gently press 3 fingers on the top of the TouchPad zone and swipe your fingers down until the app is closed.

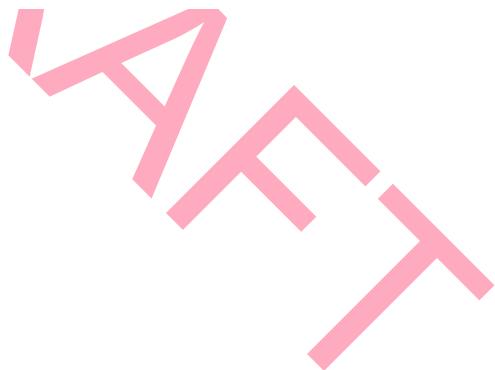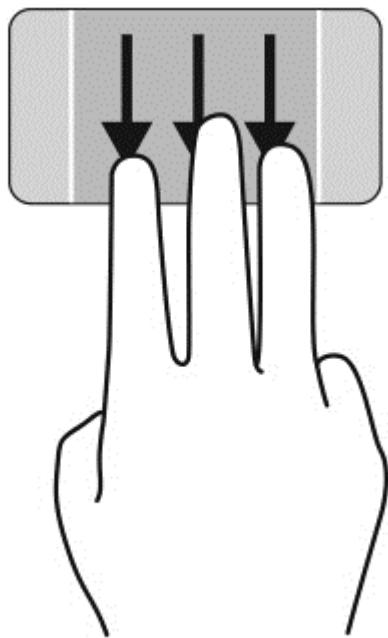


## Edge swipes

Edge swipes allow you to perform tasks such as changing settings and finding or using apps.

### Display and select a charm


With the charms, you can search, share, start apps, access devices, or change settings.

1. With your finger, press down in the middle of the right control zone to display the charms.
2. Swipe up or down to scroll between the charms, and then select the charm you want to use.

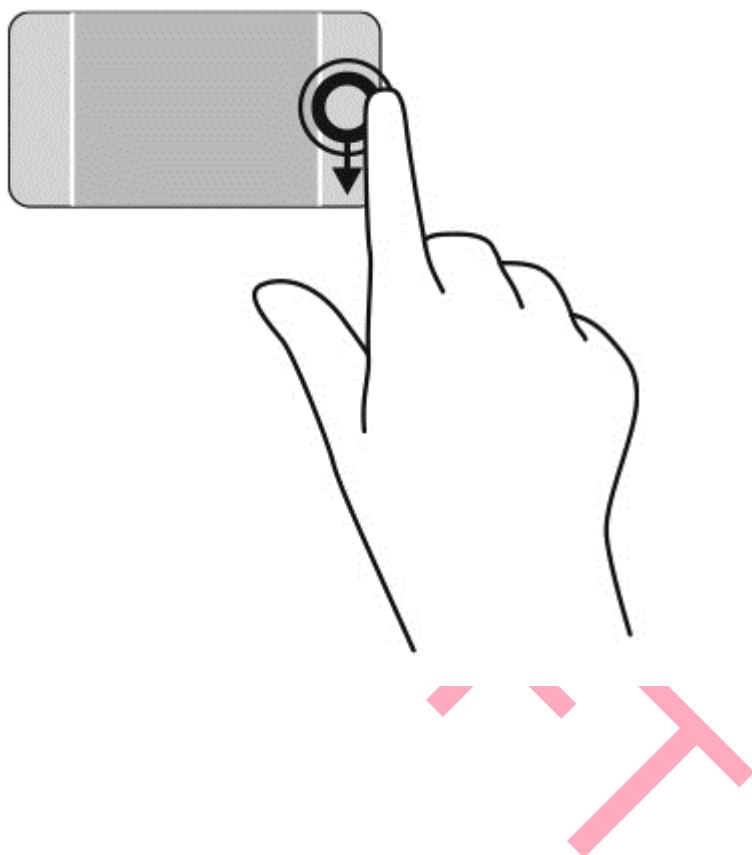

## Reveal and select open apps

1. With your finger, press down in the middle of the left control zone to display the open apps.
2. Swipe up or down to scroll between the open apps, and then select the app you want to use.

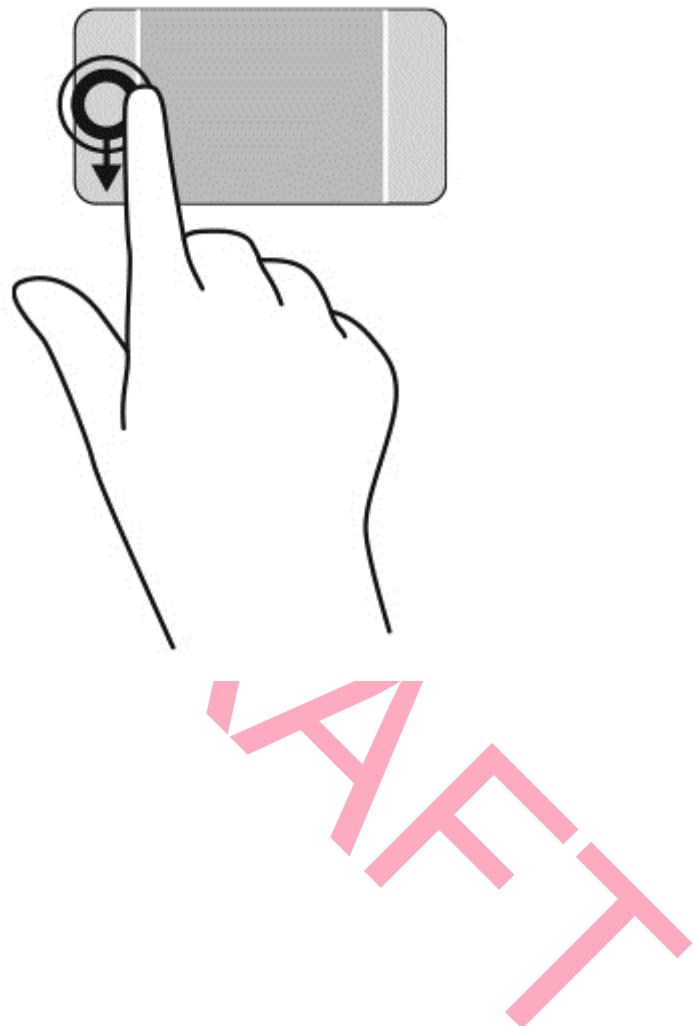


## Display the Customize icon

The top-edge swipe allows you to display the **Customize** icon at the bottom of the Start screen. Customize allows you to move, resize, pin and unpin apps.



**IMPORTANT:** When an app is active, the top-edge gesture varies depending on the app.


- Swipe your finger gently from the top edge of the TouchPad zone to reveal the **Customize** icon.

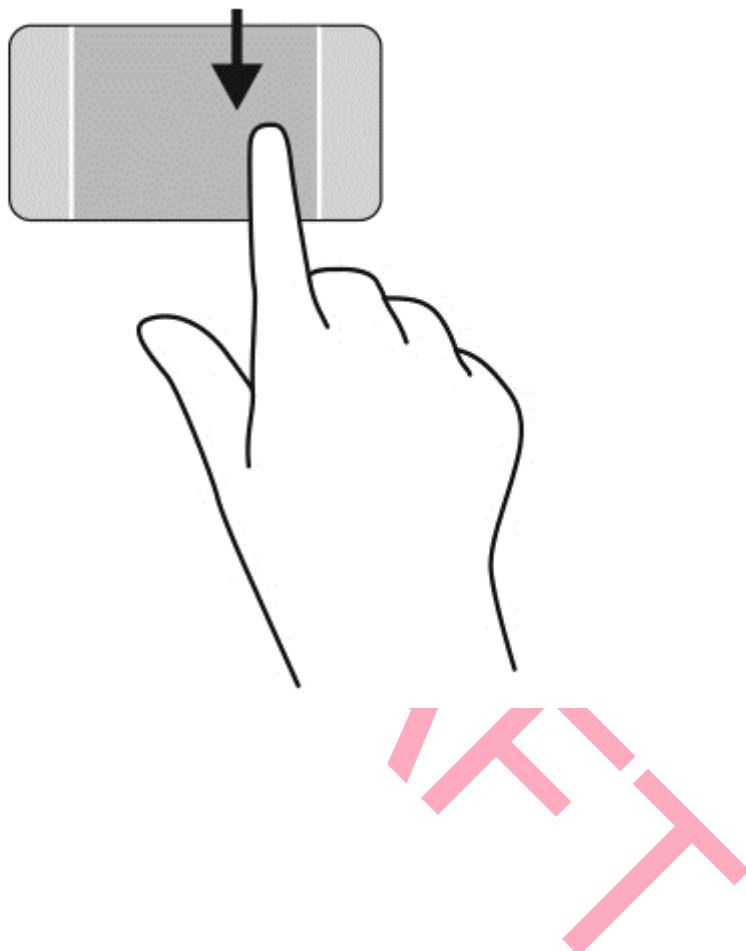

## Switch between open apps

The left-edge swipe accesses your recently opened apps so that you can switch between them quickly.

- Swipe your finger gently from the left edge of the TouchPad.

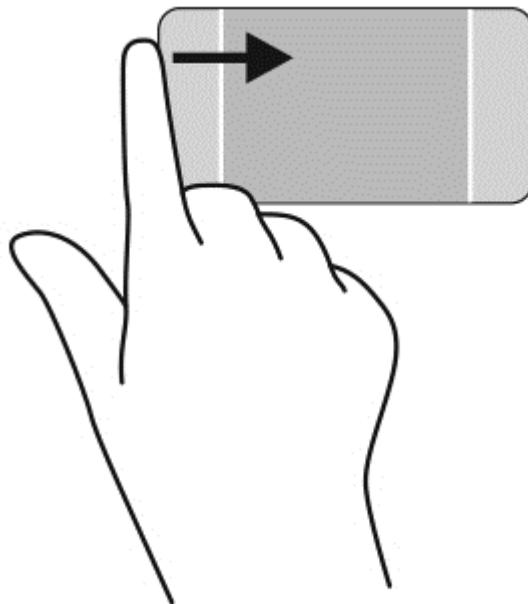

# Using touch screen gestures


A touch screen computer allows you to control items on the screen directly with your fingers.

 **TIP:** On touch screen computers, you can perform the gestures on the screen or on the TouchPad. You can also perform on-screen actions with the keyboard and mouse.

## Selecting

To make an on-screen selection, use the tap function.


- Use one finger to tap an object on the screen. Double-tap an item to open it.

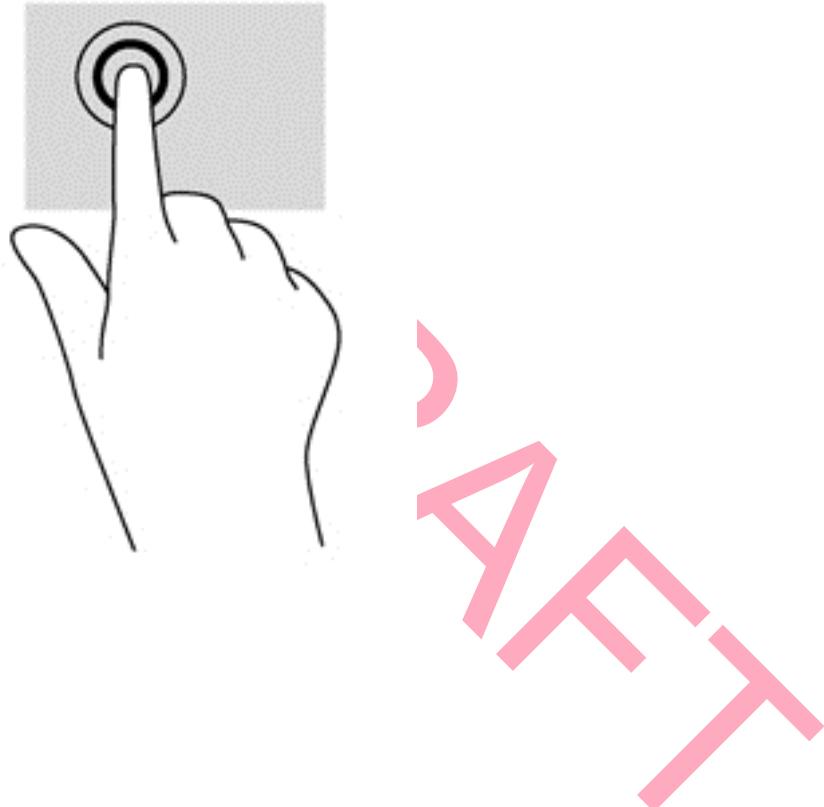

## Scrolling and moving objects

The one-finger slide is mostly used to pan or scroll through lists and pages, but you can use it for other interactions, too, such as moving an object.


- To scroll across the screen, lightly slide one finger across the screen in the direction you want to move.
- 
-  **NOTE:** When many apps are revealed on the Start screen, you can slide your finger to move the screen left or right.
- To drag, press and hold an object, and then drag the object to move it.

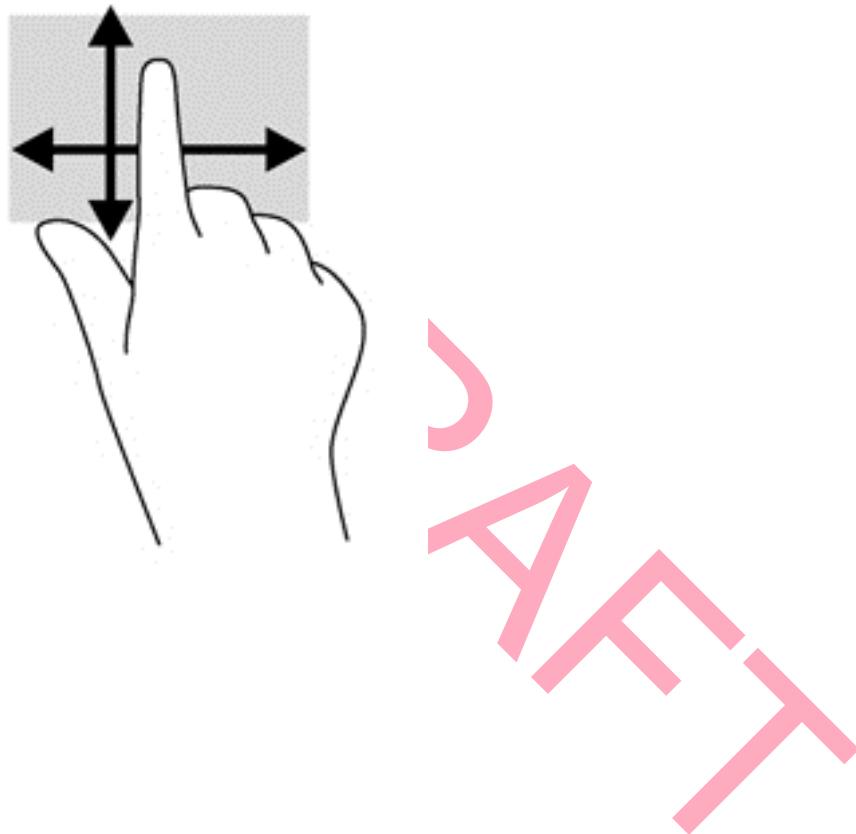

## Pinching/zooming

Pinching and zooming allows you to zoom out or in on images or text.

- Zoom out by placing two fingers apart on the display and then move your fingers together.
- Zoom in by placing two fingers together on the display and then move your fingers apart.

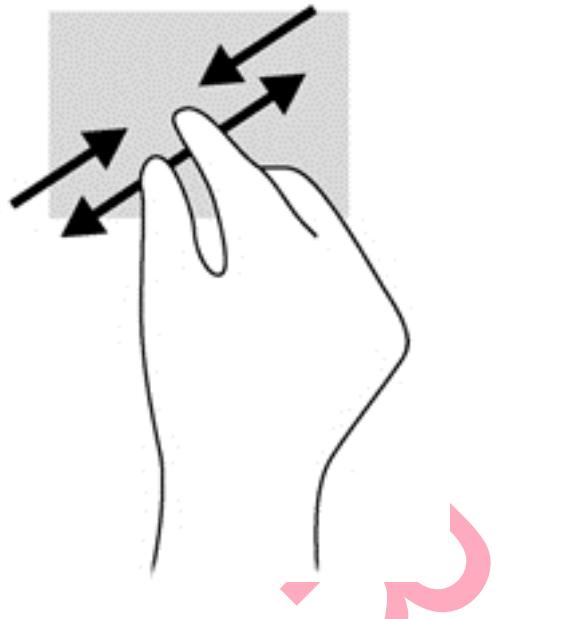


## Rotating

Rotating allows you to turn items such as photos.

- Anchor the forefinger of your left hand on the object you want to rotate. Using your right hand, slide your forefinger around in a sweeping motion from 12 o'clock to 3 o'clock. To reverse the rotation, move your forefinger from 3 o'clock to 12 o'clock.

 **NOTE:** Rotate is intended for specific apps where you can manipulate an object or image. Rotate may not be functional for all apps.

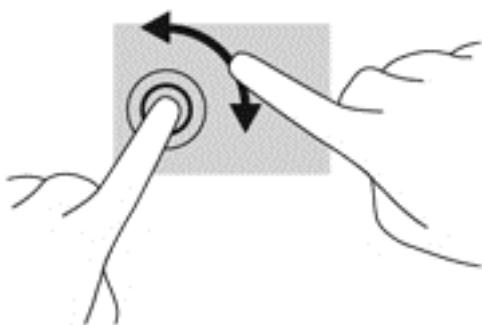


## Edge swipes

With edge swipes you can perform tasks such as changing settings and finding or using apps.

### Display the charms

The right-edge swipe reveals the charms, which let you search, share, start apps, access devices, or change settings.


- Gently swipe your finger inward from the right edge of the display onto the screen to reveal the charms.

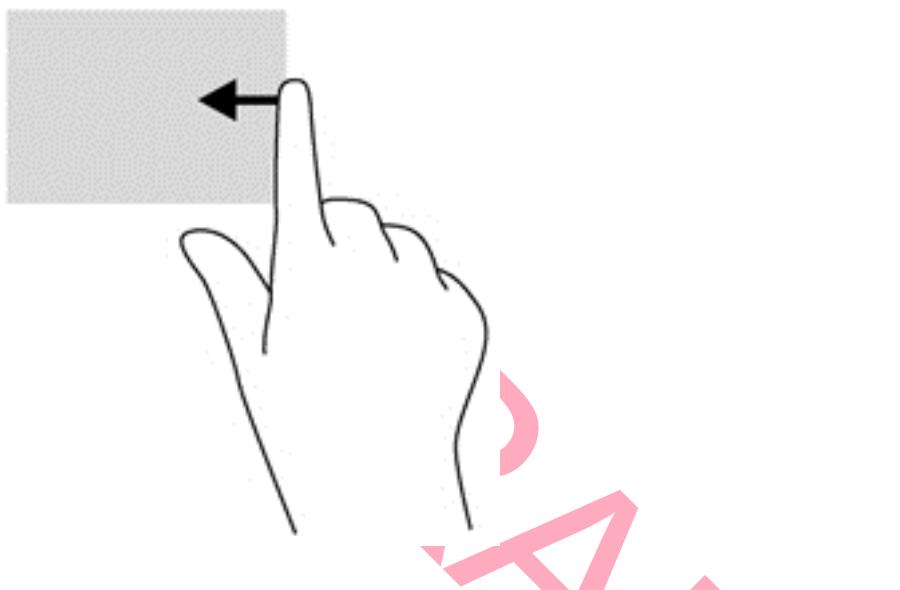

### Access open apps

The left-edge swipe reveals your open apps so that you can switch between them quickly.


- Gently swipe your finger inward from the left edge of the display to switch between apps. Without lifting your finger, swipe back toward the left edge to reveal all open apps.

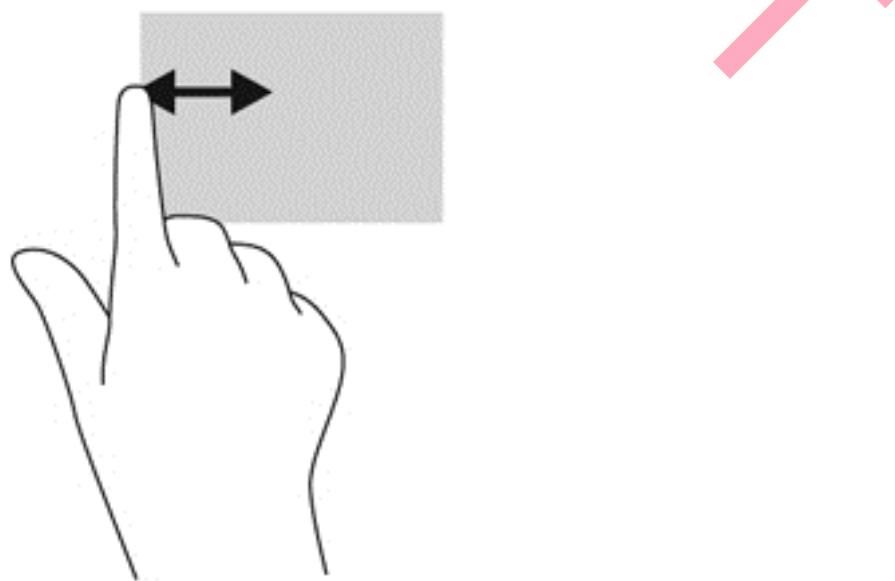

## Display the Customize icon

The top-edge swipe or bottom-edge swipe allows you to display the **Customize** icon on the Start screen. Customize allows you to customize your Start screen.

- ▲ From the Start screen, gently swipe your finger from the top edge or bottom edge of the display onto the screen.

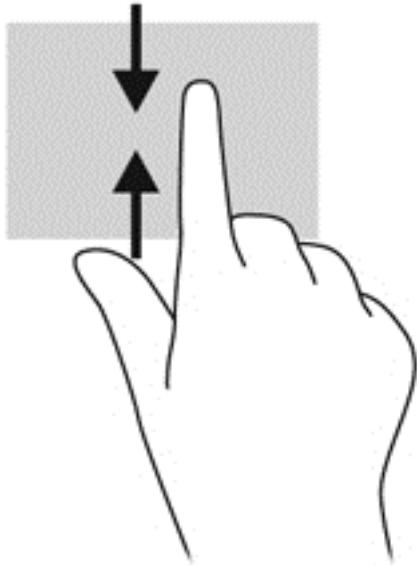

## Using the keyboard and mouse

The keyboard and mouse allow you to type, select items, scroll and to perform the same functions as you do using touch gestures. The keyboard also allows you to use action keys and hot keys to perform specific functions.

**TIP:** The Windows key  on the keyboard allows you to quickly return to the Start screen from any window or app. Pressing the Windows key again will return you to the most recent app you had open.

**NOTE:** Depending on the country or region, your keyboard may have different keys and keyboard functions than those discussed in this section.

## Using the keys

Your computer has different ways to quickly access information or perform functions when you use certain keys and key combinations.

### Using the action keys

An action key performs an assigned function. The icon on each of the **f1** through **f12** keys illustrates the assigned function for that key.

To perform an action key function, press and hold the key.

The action key feature is enabled at the factory. You can disable this feature in Setup Utility (BIOS). See [Using Setup Utility \(BIOS\) and HP PC Hardware Diagnostics \(UEFI\)](#) for instructions on opening Setup Utility (BIOS), and then follow the instructions at the bottom of the screen.

To perform an assigned function after you have disabled the action key feature, you must press the **fn** key in combination with the appropriate action key.

**CAUTION:** Use extreme care when making changes in Setup Utility. Errors can prevent the computer from operating properly.

| Icon | Key | Description   |
|------|-----|---|
| ?    | f1  | Opens Help and Support, which provides tutorials, information about the Windows operating system and your computer, answers to questions, and updates to your computer.<br>Help and Support also provides automated troubleshooting tools and access to support.                                  |
| *    | f2  | Decreases the screen brightness incrementally as long as you hold down the key.   |
| *    | f3  | Increases the screen brightness incrementally as long as you hold down the key.   |
|      | f4  | Switches the screen image between display devices connected to the system. For example, if a monitor is connected to the computer, pressing this key alternates the screen image from the computer display to the monitor display to a simultaneous display on both the computer and the monitor. |
| ***  | f5  | Turns the keyboard backlight feature off or on.<br><b>NOTE:</b> To conserve battery power, turn off this feature.   |
| ◀◀   | f6  | Plays the previous track of an audio CD or the previous section of a DVD or a BD.   |
| ▶    | f7  | Begins, pauses, or resumes playback of an audio CD, a DVD, or a BD.   |
| ▶▶   | f8  | Plays the next track of an audio CD or the next section of a DVD or a BD.   |
| —    | f9  | Decreases speaker volume incrementally as long as you hold down the key.  |
| +    | f10 | Increases speaker volume incrementally as long as you hold down the key.  |
| 🔇    | f11 | Mutes or restores speaker sound.  |
| (+)  | f12 | Turns the wireless feature on or off.<br><b>NOTE:</b> A wireless network must be set up before a wireless connection is possible.   |

## Using the hot keys

A hot key is a combination of the **fn** key and the **esc** key or the **b** key.

To use a hot key:

- ▲ Briefly press the **fn** key, and then briefly press the second key of the combination.

# Using voice navigation

(select models only)

Use your voice to create and edit documents and emails, launch apps, open files, search the Internet, and post to social networking sites. Using Dragon voice recognition software and the integrated microphone on your computer, you can quickly and easily capture your thoughts and ideas.

Your computer is equipped with either ~~Dragon Notes~~ or Dragon Assistant. To see what version is installed on your computer, see [Locating software](#).

To launch voice navigation software:

1. From the Start screen, type dragon, and then select ~~Dragon Notes~~ or Dragon Assistant.
2. Follow the on-screen instructions to set up and begin using voice navigation.

## Windows essential tasks

Use information in this section to perform everyday Windows tasks.

### Displaying the Start button

To quickly return to the Start screen from any app or window:

 **TIP:** Press the Start button or Windows key again to return you to the most recent app that you had open.

- ▲ Point to the lower-left corner of the Start screen or the Windows desktop, or press on the lower-left control zone on the TouchPad, and then click the Start button .
- or –
- ▲ Press the Windows key  on the keyboard.

### Displaying the Start menu

The Start menu offers quick access to frequently used features such as Control Panel, areas within Control Panel, File Explorer, Search, Shut down, and Desktop.

- ▲ To display the Start menu, point to the lower-left corner of the Start screen or the Windows desktop, right-click the Start button to display the Start menu, and then select one of the following items:
  - **Programs and Features**—Uninstall or change programs on your computer.
  - **Mobility Center**—Adjust commonly used mobile PC settings.
  - **Power Options**—Conserve energy or maximize performance.
  - **Event Viewer**—View event logs.
  - **System**—View information about your computer and change settings.
  - **Device Manager**—View and update device driver software.
  - **Network Connections**—Check network status, change settings, and set preferences for sharing files and printers.
  - **Disk Management**—Manage the disk drives on your computer.

- **Computer Management**—Access System Tools
- **Windows PowerShell (formerly Command prompt)**—Open a command-line shell and scripting environment.
- **Windows PowerShell (Admin)**—Open a command-line shell environment used by administrators to perform remote computer management.
- **Task Manager**—View and end running processes.
- **Control Panel**—Adjust computer settings.
- **File Explorer**—View and manage files and folders on the computer.
- **Search**—Find apps, files, or folders on the computer or on the Web.
- **Run**—Open a file, folder, app, or website.
- **Shut down**—Turn off the computer.
- **Desktop**—Open the Windows desktop.

## Displaying all apps

- ▲ From the Start screen, move the cursor until the arrow appears in the lower-left corner, and then select the arrow.

## Opening apps

- ▲ Using the TouchPad or touchscreen, select an app on the Start screen, such as mail, calendar, Internet Explorer, camera, or photos.

## Displaying open apps

When you have one or more apps open, you can display the open apps.

- ▲ With your finger, press in the middle of the left control zone to display the open apps.

## Closing an open app

- ▲ Gently press 3 fingers on the top of the TouchPad zone and swipe your fingers down until app is closed.

## Switching between open apps

When you have one or more apps open, you can switch quickly from one open app to another.

- ▲ Swipe your finger gently from the left edge of the TouchPad or touch screen to switch between open apps.

## Opening the Windows desktop and returning to the Start screen

The Desktop app on the Start screen opens the Windows desktop so that you can run traditional applications.

- ▲ Select the **Desktop** app on the Start screen

## Displaying charms

Display the five charms at the right side of the screen to perform the following tasks:

- **Search**—Find apps, settings, or files on your computer or on the Web.
  - **Share**—Send links, photos, and more to your friends and social networks without leaving the app you're using.
  - **Start**—Return to the Start screen from any open app or window.
  - **Devices**—Send files to printers and other devices, or stream movies to TVs.
  - **Settings**—Shut down your computer, change the volume, or configure account settings.
- ▲ With your finger, press down in the middle of the right control zone to display the charms.

## Searching for apps, settings, or files

The Search feature allows you to search for apps, settings, or files.

1. From the Start screen, start typing the name of an app, file, or setting. The Search screen is displayed immediately.
2. If the search item is not listed, select **Settings** or **Files**, and then select from the list of displayed items.

## Moving an app

- ▲ Select and hold an app, and then drag the app to a different area on the Start screen.

## Creating an app group

- ▲ Drag apps into groups to organize the Start screen in your favorite arrangement.
- To name a group, select the minus - icon in the lower-right corner of the Start screen, select **Customize**, select **Name group**, and then enter a name for the group.

## Unpinning an app from the Start screen

- ▲ Right-click an app, and then select **Unpin from Start**.

## Resizing an app

1. Right-click the app on the Start screen, select **Resize** at the bottom of the screen, and then select **Large**, **Wide**, **Medium**, or **Small**.
2. To return the app to its original size, right-click the app, select **Resize** at the bottom of the screen, and then select **Large**, **Wide**, **Medium**, or **Small**.

## Printing

- ▲ From the Start screen, type `print`, select **Device Settings**, and then select your printer.

## Save and organize favorites

A Save command appears in every Windows app.

- ▲ To save a file or app, select **File** on the top menu, select **Save**, and then choose a location in your Documents folder or on the desktop.

## Downloading apps from the Windows Store

The Windows Store provides many apps that you can download to the Start screen.




**NOTE:** You must be connected to a wireless network before you can connect to the Internet. See [Connecting to a network](#).

- ▲ From the Start screen, select the **Store** app, and then click an app. It begins to download and install. When the installation is finished, the app appears on the Start screen.

## Locking the computer

Follow these instructions to lock the computer or exit from Windows:

- ▲ On the Start screen, select your user account picture in the upper-right corner of the screen, and then select **Lock** or **Sign out**.

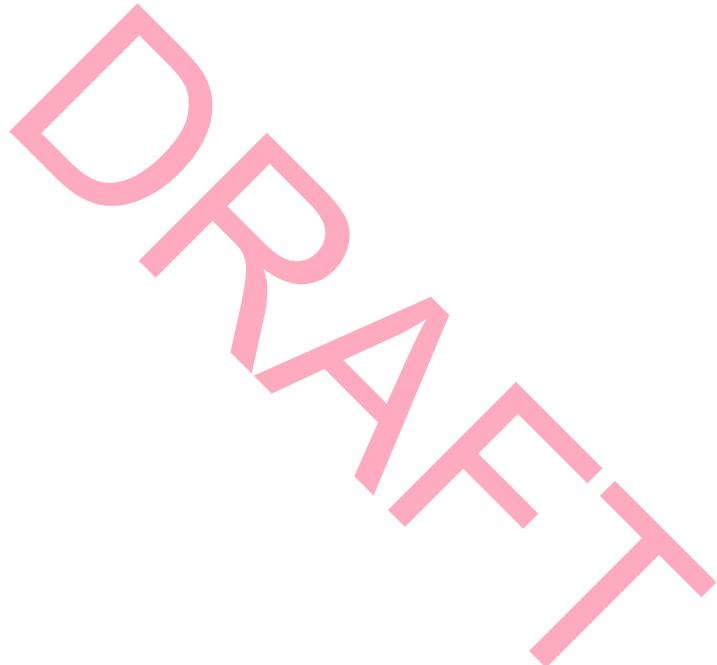

## Using Windows shortcut keys

Windows provides shortcuts to perform actions quickly. Press the Windows key  in combination with a designated key in the table to perform the action.

| Shortcut key  | Key  | Description   |
|---|------|---|
|    |      | Returns you to the Start screen from any app or window.<br><b>NOTE:</b> Pressing the key again returns you to the most recent app you had open. |
|    | + f1 | Opens online Help.  |
|    | + c  | Displays the charms.  |
|    | + d  | Opens the Windows desktop.  |
|    | + f  | Search for files.   |
|   | + l  | Open PC Settings.   |
|  | + k  | Open Devices.   |
|  | + l  | Lock the computer.  |
|  | + m  | Minimize all open windows (on the Windows desktop).   |
|  | + o  | Turns Autorotate on or off.   |
|  | + p  | Transfer the screen image to a connected projector.   |
|  | + q  | Search for apps.  |
|  | + r  | Open an app or file.  |
|  | + w  | Search Settings.  |

| Shortcut key   | Key   | Description  |
|--|---|--|
|   | +    | Display the Start menu.  |
|   | +    | Opens All Apps.  |
|   | + plus sign (+)   | Zoom in.   |
|   | + minus sign (-)  | Zoom out.  |
|   | +    | Switches between open apps.<br><b>NOTE:</b> Continue to press this key combination until the app you want is revealed. |
|   | +  +  | Display recent apps.   |
|   | + period (.)  | Snap an app.   |
|  | +   | Copy the active app screen or document.  |
| alt  | +    | Close an active app.   |

For additional information on Windows shortcut keys, go to **Help and Support**. From the Start screen, type `help`, and then select **Help and Support**.

# 6 Managing power

Your computer can operate on either battery power or external power. When the computer is running on battery power only and an AC power source is not available to charge the battery, it is important to monitor and conserve the battery charge. Your computer supports an optimal power plan to manage how your computer uses and conserves power so that computer performance is balanced with power conservation.

## Initiating Sleep and Hibernation

Windows has two power-saving states, Sleep and Hibernation.

- **Sleep**—The Sleep state is automatically initiated after a period of inactivity when the computer is running on battery power or on external power. Your work is saved to memory, allowing you to resume your work very quickly.
- **Hibernation**—The Hibernation state is automatically initiated if the battery reaches a critical level. In the Hibernation state, your work is saved to a hibernation file and the computer turns off.

 **NOTE:** You can also manually initiate Hibernation and Sleep. See [Manually initiating and exiting Sleep](#) and [Manually initiating and exiting Hibernation \(select models only\)](#).

 **CAUTION:** To reduce the risk of possible audio and video degradation, loss of audio or video playback functionality, or loss of information, do not initiate Sleep while reading from or writing to a disc or an external media card.

 **NOTE:** You cannot initiate any type of networking connection or perform any computer functions while the computer is in the Sleep state or in Hibernation.

## ~~Intel Rapid Start Technology (select models only)~~



## Manually initiating and exiting Sleep

You can initiate Sleep in any of the following ways:

- Close the display.
- From the Start screen, point to the upper-right or lower-right corner of the screen to reveal the charms. Select **Settings**, select the **Power** icon, and then select **Sleep**.

To exit Sleep:

- Briefly press the power button.
- If the display is closed, open the display.
- Press a key on the keyboard.
- Tap or swipe the TouchPad.

When the computer exits Sleep, the power lights turn on and your work returns to the screen.

 **NOTE:** If you have set a password to be required on wakeup, you must enter your Windows password before the computer will return to the screen.

## Manually initiating and exiting Hibernation (select models only)

You can enable user-initiated Hibernation and change other power settings and timeouts using Power Options.

1. From the Start screen, type `power options`, and then select **Power Options**.
2. In the left pane, click **Choose what the power button does**.
3. Click **Change Settings that are currently unavailable**.
4. In the **When I press the power button** area, select **Hibernate**.
5. Click **Save changes**.

When the computer exits Hibernation, the power lights turn on and your work returns to the screen.

 **NOTE:** If you have set a password to be required on wakeup, you must enter your Windows password before your work will return to the screen.

## Setting password protection on wakeup

To set the computer to prompt for a password when the computer exits Sleep or Hibernation, follow these steps:

1. From the Start screen, type `power options`, and then select **Power Options**.
2. In the left pane, click **Require a password on wakeup**.
3. Click **Change Settings that are currently unavailable**.
4. Click **Require a password (recommended)**.

 **NOTE:** If you need to create a user account password or change your current user account password, click **Create or change your user account password**, and then follow the on-screen instructions. If you do not need to create or change a user account password, go to step 5.

5. Click **Save changes**.

# Using the power meter and power settings

The power meter is located on the Windows desktop. The power meter allows you to quickly access power settings and view the remaining battery charge.

- To reveal the percentage of remaining battery charge and the current power plan, point to the power meter icon.
- To use Power Options, select the power meter icon and select an item from the list. From the Start screen, you can also type `power options`, and then select **Power Options**.

Different power meter icons indicate whether the computer is running on battery or external power. The icon also reveals a message if the battery has reached a low or critical battery level.

## Running on battery power

When a charged battery is in the computer and the computer is not plugged into external power, the computer runs on battery power. If the computer has a charged battery installed and the AC adapter is disconnected from the computer, the computer automatically switches to battery power and the display brightness decreases to conserve battery life. The battery in the computer slowly discharges when the computer is off and unplugged from external power.

Computer battery life varies, depending on power management settings, programs running on the computer, display brightness, external devices connected to the computer, and other factors.

## Factory-sealed battery

 **IMPORTANT:** Do not attempt to remove or replace the factory-sealed battery. Removing or replacing the battery could affect your warranty coverage. If the battery is no longer holding a charge, contact support.

Your computer has an internal, rechargeable battery that can be replaced only by an authorized service provider. For information about keeping your battery in good condition, see [Conserving battery power](#). To monitor the status of your battery, or if the battery is no longer holding a charge, run Battery Check in Help and Support. To access battery information, from the Start screen, type `support`, select the **HP Support Assistant** app, and then select **Battery and performance**. If Battery Check indicates that your battery should be replaced, contact support.

The battery in this product cannot be easily replaced by users themselves. HP recommends that you contact support to have the battery replaced.

## Finding battery information

To monitor the status of your battery, or if the battery is no longer holding a charge, run Battery Check in HP Support Assistant. To access battery information, from the Start screen, type `support`, select the **HP Support Assistant** app, and then select **Battery and performance**.

HP Support Assistant provides the following tools and information about the battery:

- Battery test
- Information on battery types, specifications, life cycles, and capacity

## Conserving battery power

Tips for conserving battery power and maximizing battery life:

- Lower the brightness on the display.
- Select the **Power saver** setting in Power Options.
- Turn off wireless devices when you are not using them.
- Disconnect unused external devices that are not plugged into an external power source, such as an external hard drive connected to a USB port.
- Stop, disable, or remove any external media cards that you are not using.
- Before you leave your work, initiate Sleep or shut down the computer.

## Identifying low battery levels

When a battery that is the sole power source for the computer reaches a low or critical battery level, the following behavior occurs:

- The battery light (select models only) indicates a low or critical battery level.
- or –
- The power meter icon on the Windows desktop shows a low or critical battery notification.

 **NOTE:** For additional information about the power meter, see [Using the power meter and power settings](#).

The computer performs the following actions when the battery reaches a critical level:

- If Hibernation is disabled and the computer is on or in the Sleep state, the computer remains briefly in the Sleep state, and then shuts down and loses any unsaved information.
- If Hibernation is enabled and the computer is on or in the Sleep state, the computer initiates Hibernation.

## Resolving a low battery level

### Resolving a low battery level when external power is available

- Connect an AC adapter.
- Connect an optional docking or expansion device.
- Connect an optional power adapter purchased as an accessory from HP.

### Resolving a low battery level when no power source is available

Save your work and shut down the computer.

### Resolving a low battery level when the computer cannot exit Hibernation

When the computer lacks sufficient power to exit Hibernation, follow these steps:

1. Connect the AC adapter to the computer and to power.
2. Exit Hibernation by pressing the power button.

# Running on external AC power

For information on connecting to AC power, refer to the *Setup Instructions* poster provided in the computer box.

The computer does not use battery power when the computer is connected to AC power with an approved AC adapter or an optional docking/expansion device.

**⚠️ WARNING!** To reduce potential safety issues, use only the AC adapter provided with the computer, a replacement AC adapter provided by HP, or a compatible AC adapter purchased from HP.

Connect the computer to AC power under any of the following conditions:

**⚠️ WARNING!** Do not charge the computer battery while you are aboard aircraft.

- When charging or calibrating a battery
- When installing or modifying system software
- When writing information to a disc (select models only)
- When running Disk Defragmenter on computers with internal hard drives
- When performing a backup or recovery

When you connect the computer to AC power:

- The battery begins to charge.
- The display brightness increases.
- The power meter icon on the Windows desktop changes appearance.

When you disconnect AC power, the following events occur:

- The computer switches to battery power.
- The display brightness automatically decreases to save battery life.
- The power meter icon on the Windows desktop changes appearance.

## Troubleshooting power problems

Test the AC adapter if the computer exhibits any of the following symptoms when it is connected to AC power:

- The computer does not turn on.
- The display does not turn on.
- The power lights are off.

To test the AC adapter:

1. Shut down the computer.
2. Connect the AC adapter to the computer, and then plug it into an AC outlet.
3. Turn on the computer.
  - If the power lights turn *on*, the AC adapter is working properly.
  - If the power lights remain *off*, check the connection from the AC adapter to the computer and the connection from the AC adapter to the AC outlet to be sure that the connections are secure.
  - If the connections are secure and the power lights remain *off*, the AC adapter is not functioning and should be replaced.

Contact support for information on obtaining a replacement AC power adapter.

## ~~HP CoolSense (select models only)~~

~~HP CoolSense automatically detects when the computer is not on a horizontal surface and~~

## ~~Refreshing your software content with Intel Smart Connect Technology (select models only)~~

# Shutting down (turning off) the computer

 **CAUTION:** Unsaved information is lost when the computer shuts down. Be sure to save your work before shutting down the computer.

The Shut down command closes all open programs, including the operating system, and then turns off the display and computer.

Shut down the computer under any of the following conditions:

- When you need to replace the battery or access components inside the computer
- When you are connecting an external hardware device that does not connect to a USB or video port
- When the computer will be unused and disconnected from AC power for an extended period

Although you can turn off the computer with the power button, the recommended procedure is to use the Windows Shut down command:

 **NOTE:** If the computer is in the Sleep state or in Hibernation, you must first briefly press the power button to exit Sleep or Hibernation before shutdown is possible.

1. Save your work and close all open programs.
2. From the Start screen, point to the upper-right or lower-right corner of the screen to reveal the charms.
3. Select **Settings**, select the **Power** icon, and then select **Shut down**.

– or –

Right-click the **Start** button in the lower-left corner of the screen, select **Shut down**, and then select **Shut down**.

If the computer is unresponsive and you are unable to use the preceding shutdown procedures, try the following emergency procedures in the sequence provided:

- Press **ctrl+alt+delete**, select the **Power** icon, and then select **Shut Down**.
- Press and hold the power button for at least 5 seconds.
- Disconnect the computer from external power.

# 7 Maintaining your computer

It is important to perform regular maintenance to keep your computer in optimal condition. This chapter provides information about updating your programs and drivers, instructions for cleaning your computer, and tips for traveling with your computer.

## Updating programs and drivers

HP recommends that you update your programs and drivers on a regular basis to the latest versions. Updates can resolve issues and bring new features and options to your computer. Technology is always changing, and updating programs and drivers allows your computer to run the latest technology available. For example, older graphics components might not work well with the most recent gaming software. Without the latest driver, you would not be getting the most out of your equipment.

Go to <http://www.hp.com/support> to download the latest versions of HP programs and drivers. In addition, register to receive automatic update notifications when they become available.

## Cleaning your computer

Use the following products to safely clean your computer:

- Dimethyl benzyl ammonium chloride 0.3 percent maximum concentration (For example: Disposable wipes, which come in a variety of brand names.)
- Alcohol-free glass cleaning fluid
- Water with mild soap solution
- Dry microfiber cleaning cloth or a chamois (static-free cloth without oil)
- Static-free cloth wipes

 **CAUTION:** Avoid strong cleaning solvents that can permanently damage your computer. If you are not sure that a cleaning product is safe for your computer, check the product contents to make sure that ingredients such as alcohol, acetone, ammonium chloride, methylene chloride, and hydrocarbons are not included in the product.

Fibrous materials, such as paper towels, can scratch the computer. Over time, dirt particles and cleaning agents can get trapped in the scratches.

## Cleaning procedures

Follow the procedures in this section to safely clean your computer.

 **WARNING!** To prevent electric shock or damage to components, do not attempt to clean your computer while it is turned on.

Turn off the computer.

Disconnect AC power.

Disconnect all powered external devices.

**⚠ CAUTION:** To prevent damage to internal components, do not spray cleaning agents or liquids directly on any computer surface. Liquids dripped on the surface can permanently damage internal components.

---

## Cleaning the display (All-in-Ones or Notebooks)

Gently wipe the display using a soft, lint-free cloth moistened with an *alcohol-free* glass cleaner. Be sure that the display is dry before closing the display.

## Cleaning the sides or cover

To clean the sides or cover, use a soft microfiber cloth or chamois moistened with one of the cleaning solutions listed previously or use an acceptable disposable wipe.

**⚠ NOTE:** When cleaning the cover of the computer, use a circular motion to aid in removing dirt and debris.

---

## Cleaning the TouchPad, keyboard, or mouse

**⚠ WARNING!** To reduce the risk of electric shock or damage to internal components, do not use a vacuum cleaner attachment to clean the keyboard. A vacuum cleaner can deposit household debris on the keyboard surface.

**⚠ CAUTION:** To prevent damage to internal components, do not allow liquids to drip between the keys.

- To clean the TouchPad, keyboard, or mouse, use a soft microfiber cloth or a chamois moistened with one of the cleaning solutions listed previously or use an acceptable disposable wipe.
- To prevent keys from sticking and to remove dust, lint, and particles from the keyboard, use a can of compressed air with a straw extension.

## Traveling with or shipping your computer

If you have to travel with or ship your computer, here are some tips to keep in mind to keep your equipment safe.

- Prepare the computer for traveling or shipping:
  - Back up your information to an external drive.
  - Remove all discs and all external media cards, such as memory cards, from the computer.
  - Turn off and then disconnect all external devices.
  - Shut down the computer.
- Take along a backup of your information. Keep the backup separate from the computer.
- When traveling by air, carry the computer as hand luggage; do not check it in with the rest of your luggage.

**⚠ CAUTION:** Avoid exposing a drive to magnetic fields. Security devices with magnetic fields include airport walk-through devices and security wands. Airport conveyer belts and similar security devices that check carry-on baggage use X-rays instead of magnetism and do not damage drives.

- If you plan to use the computer during a flight, listen for the in-flight announcement that tells you when you are allowed to use your computer. In-flight computer use is at the discretion of the airline.

- If you are shipping the computer or a drive, use suitable protective packaging and label the package “FRAGILE.”
- If the computer has a wireless device installed, the use of these devices may be restricted in some environments. Such restrictions may apply aboard aircraft, in hospitals, near explosives, and in hazardous locations. If you are uncertain of the policy that applies to the use of a particular device, ask for authorization to use your computer before you turn it on.
- If you are traveling internationally, follow these suggestions:
  - Check the computer-related customs regulations for each country or region on your itinerary.
  - Check the power cord and adapter requirements for each location in which you plan to use the computer. Voltage, frequency, and plug configurations vary.

 **WARNING!** To reduce the risk of electric shock, fire, or damage to the equipment, do not attempt to power the computer with a voltage converter kit sold for appliances.

DRAFT

# 8 Securing your computer and information

Computer security is essential for protecting the confidentiality, integrity, and availability of your information. Standard security solutions provided by the Windows operating system, HP applications, the non-Windows Setup Utility (BIOS), and other third-party software can help protect your computer from a variety of risks, such as viruses, worms, and other types of malicious code.

 **IMPORTANT:** Some security features listed in this chapter may not be available on your computer.

| Computer risk  | Security feature               |
|--|--------------------------------|
| Unauthorized use of the computer   | Power-on password              |
| Computer viruses   | Antivirus software             |
| Unauthorized access to data  | Firewall software              |
| Unauthorized access to Setup Utility (BIOS) settings and other system identification information | Administrator password         |
| Ongoing or future threats to the computer  | Software updates               |
| Unauthorized access to a Windows user account  | User password                  |
| <del>Unauthorized removal of the computer</del>  | <del>Security cable lock</del> |

## Using passwords

A password is a group of characters that you choose to secure your computer information and to protect online transactions. Several types of passwords can be set. For example, when you set up your computer for the first time, you were asked to create a user password to secure your computer. Additional passwords can be set in Windows or in the HP Setup Utility (BIOS) that is preinstalled on your computer.

You may find it helpful to use the same password for a Setup Utility (BIOS) feature and for a Windows security feature.

Use the following tips for creating and saving passwords:

- To reduce the risk of being locked out of the computer, record each password and store it in a secure place away from the computer. Do not store passwords in a file on the computer.
- When creating passwords, follow requirements set by the program.
- Change your passwords at least every three months.
- An ideal password is long and has letters, punctuation, symbols, and numbers.
- Before you send your computer for service, back up your files, delete confidential files, and then remove all password settings.

For additional information about Windows passwords, such as screen-saver passwords, from the Start screen, type **support**, and then select the **HP Support Assistant** app.

## Setting Windows passwords

| Password               | Function   |
|------------------------|--|
| User password          | Protects access to a Windows user account.   |
| Administrator password | Protects administrator-level access to computer contents.                          |
|                        | <b>NOTE:</b> This password cannot be used to access Setup Utility (BIOS) contents. |

## Setting Setup Utility (BIOS) passwords

| Password               | Function   |
|------------------------|--|
| Administrator password | <ul style="list-style-type: none"><li>Must be entered each time you access Setup Utility (BIOS).</li><li>If you forget your administrator password, you cannot access Setup Utility (BIOS).</li></ul> <p><b>NOTE:</b> The administrator password can be used in place of the power-on password.</p> <p><b>NOTE:</b> Your administrator password is not interchangeable with an administrator password set in Windows, nor is it revealed as it is set, entered, changed, or deleted.</p> <p><b>NOTE:</b> If you enter the power-on password at the first password check, you must enter the administrator password to access Setup Utility (BIOS).</p> |
| Power-on password      | <ul style="list-style-type: none"><li>Must be entered each time you turn on or restart the computer.</li><li>If you forget your power-on password, you cannot turn on or restart the computer.</li></ul> <p><b>NOTE:</b> The administrator password can be used in place of the power-on password.</p> <p><b>NOTE:</b> A power-on password is not revealed as it is set, entered, changed, or deleted.</p>   |

To set, change, or delete an administrator or power-on password in Setup Utility (BIOS):

1. To start Setup Utility (BIOS), turn on or restart the computer, quickly press **esc**, and then press **f10**.
2. Use the arrow keys to select **Security**, and then follow the on-screen instructions.

Your changes take effect when the computer restarts.

# TPM Embedded Security device (select models only)

TPM (Trusted Platform Module) provides additional security for your computer. You can modify the TPM settings in Setup Utility. For information on changing Setup Utility settings, see [Using Setup Utility \(BIOS\) and HP PC Hardware Diagnostics \(UEFI\)](#).

The following table describes the TPM settings in Setup Utility.

| Settings                     | Function   |
|------------------------------|--|
| TPM Embedded Security Device | Available/Hidden <ul style="list-style-type: none"><li>• If the administrator password is set, you can select <b>Available</b>.</li><li>• If you select <b>Hidden</b>, the TPM device is not visible in the operating system.</li></ul>  |
| TPM Status                   | Enabled/Disabled <ul style="list-style-type: none"><li>• If the administrator password is not set, or if <b>TPM Security Device</b> is set to <b>Hidden</b>, this entry is hidden.</li><li>• This value reflects the current physical state for the TPM. The state is enabled or disabled by the Embedded Security State setting.</li></ul>  |
| Embedded Security State      | No Operation/Disabled/Enabled <ul style="list-style-type: none"><li>• If the administrator password is not set, or if <b>TPM Security Device</b> is set to <b>Hidden</b>, this entry is hidden.</li><li>• You can enable or disable the TPM function.</li><li>• The next time the computer is restarted after the TPM function is set, this value is set to <b>No Operation</b>.</li></ul>   |
| TPM Set to Factory Defaults  | No/Yes <ul style="list-style-type: none"><li>• If the administrator password is not set, or if the <b>TPM Security Device</b> is set to <b>Hidden</b>, this entry is hidden.</li><li>• If the <b>Embedded Security State</b> is set to <b>Enabled</b>, select <b>Yes</b> to reset the TPM to factory settings, and then press <b>f10</b> to save and exit. A confirmation message is displayed to <b>Clear the TPM</b>. Press <b>f1</b> to reset the TPM, or press <b>f2</b> to cancel the action.</li></ul> |

# Using Internet security software

When you use your computer to access email, a network, or the Internet, you potentially expose your computer to computer viruses, spyware, and other online threats. To help protect your computer, Internet security software that includes antivirus and firewall features may be preinstalled on your computer as a trial offer. To provide ongoing protection against newly discovered viruses and other security risks, security software must be kept up to date. It is strongly recommended that you upgrade the security software trial offer or purchase the software of your choice in order to fully protect your computer.

## Using antivirus software

Computer viruses can disable programs, utilities, or the operating system, or cause them to function abnormally. Antivirus software can detect most viruses, destroy them, and in most cases, repair any damage they have caused.

To provide ongoing protection against newly discovered viruses, antivirus software must be kept up to date.

An antivirus program may be preinstalled on your computer. It is strongly recommended that you use the antivirus program of your choice in order to fully protect your computer.

For more information about computer viruses, from the Start screen, type support, and then select the **HP Support Assistant** app.

## Using firewall software

Firewalls are designed to prevent unauthorized access to a system or network. A firewall can be software you install on your computer and/or network, or it can be a combination of both hardware and software.

There are two types of firewalls to consider:

- Host-based firewalls—Software that protects only the computer it is installed on.
- Network-based firewalls—Installed between your DSL or cable modem and your home network to protect all the computers on the network.

When a firewall is installed on a system, all data sent to and from the system is monitored and compared with a set of user-defined security criteria. Any data that does not meet those criteria is blocked.

## Installing software updates

HP, Windows, and third-party software installed on your computer should be regularly updated to correct security problems and improve software performance. For more information, see [Updating programs and drivers](#).

### Installing critical security updates

HP recommends that you regularly update the software and drivers that were originally installed on your computer. To download the latest versions, go to <http://www.hp.com/go/contactHP>. At this location, you can also register to receive automatic update notifications when they become available.

If you have installed third-party software after you purchased your computer, regularly update the software. Software companies provide software updates to their products to correct security problems and improve functionality of the software.

### Installing HP and third-party software updates

HP recommends that you regularly update the software and drivers that were originally installed on your computer. To download the latest versions, go to <http://www.hp.com/go/contactHP>. At this location, you can also register to receive automatic update notifications when they become available.

If you have installed third-party software after you purchased your computer, regularly update the software. Software companies provide software updates to their products to correct security problems and improve functionality of the software.

## Securing your wireless network

When you set up your wireless network, always enable security features. For more information, see [Protecting your WLAN](#).

## Backing up your software applications and information

Regularly back up your software applications and information to protect them from being permanently lost or damaged through a virus attack or a software or hardware failure. For more information, see [Backing up, restoring, and recovering](#).

## Using an optional security cable lock

*A security cable lock, which is purchased separately, is designed to act as a deterrent, but it may not*

4. Remove the key and keep it in a safe place.

# 9 Using Setup Utility (BIOS) and HP PC Hardware Diagnostics (UEFI)

Setup Utility, or Basic Input/Output System (BIOS), controls communication between all the input and output devices on the system (such as disk drives, display, keyboard, mouse, and printer). Setup Utility (BIOS) includes settings for the types of devices installed, the startup sequence of the computer, and the amount of system and extended memory.

## Starting Setup Utility (BIOS)

To start Setup Utility (BIOS), turn on or restart the computer, quickly press **esc**, and then press **f10**.

 **NOTE:** Use extreme care when making changes in Setup Utility (BIOS). Errors can prevent the computer from operating properly.

## Updating the BIOS

Updated versions of the BIOS may be available on the HP website.

Most BIOS updates on the HP website are packaged in compressed files called *SoftPaqs*.

Some download packages contain a file named *Readme.txt*, which contains information regarding installing and troubleshooting the file.

## Determining the BIOS version

To determine whether available BIOS updates contain later BIOS versions than those currently installed on the computer, you need to know the version of the system BIOS currently installed.

BIOS version information (also known as *ROM date* and *System BIOS*) can be revealed by pressing **fn+esc** (if you are already in Windows) or by using Setup Utility (BIOS).

1. Start Setup Utility (BIOS) (see [Starting Setup Utility \(BIOS\)](#)).
2. Use the arrow keys to select **Main**. Be sure that you make note of the BIOS version.
3. To exit Setup Utility (BIOS) without saving your changes, use the arrow keys to select **Exit**, select **Exit Discarding Changes**, and then press **enter**.
4. Select **Yes**.

## Downloading a BIOS update

**CAUTION:** To reduce the risk of damage to the computer or an unsuccessful installation, download and install a BIOS update only when the computer is connected to reliable external power using the AC adapter. Do not download or install a BIOS update while the computer is running on battery power, docked in an optional docking device, or connected to an optional power source. During the download and installation, follow these instructions:

Do not disconnect power from the computer by unplugging the power cord from the AC outlet.

Do not shut down the computer or initiate Sleep.

Do not insert, remove, connect, or disconnect any device, cable, or cord.

1. From the Start screen, type `support`, and then select the **HP Support Assistant** app.
2. Click **Updates and tune-ups**, and then click **Check for HP updates now**.
3. Follow the on-screen instructions.
4. At the download area, follow these steps:

- a. Identify the most recent BIOS update and compare it to the BIOS version currently installed on your computer. If the update is more recent than your BIOS, make a note of the date, name, or other identifier. You may need this information to locate the update later, after it has been downloaded to your hard drive.
- b. Follow the on-screen instructions to download your selection to the hard drive.

If the update is more recent than your BIOS, make a note of the path to the location on your hard drive where the BIOS update is downloaded. You will need to access this path when you are ready to install the update.

**NOTE:** If you connect your computer to a network, consult the network administrator before installing any software updates, especially system BIOS updates.

BIOS installation procedures vary. Follow any instructions that are revealed on the screen after the download is complete. If no instructions are revealed, follow these steps:

1. From the Start screen, type `file`, and then select **File Explorer**.
  2. Click your hard drive designation. The hard drive designation is typically Local Disk (C:).
  3. Using the hard drive path you recorded earlier, open the folder on your hard drive that contains the update.
  4. Double-click the file that has an .exe extension (for example, `filename.exe`).
- The BIOS installation begins.
5. Complete the installation by following the on-screen instructions.

**NOTE:** After a message on the screen reports a successful installation, you can delete the downloaded file from your hard drive.

## Using HP PC Hardware Diagnostics (UEFI)

HP PC Hardware Diagnostics is a Unified Extensible Firmware Interface (UEFI) that allows you to run diagnostic tests to determine whether the computer hardware is functioning properly. The tool runs outside the operating system so that it can isolate hardware failures from issues that are caused by the operating system or other software components.

To start HP PC Hardware Diagnostics UEFI:

1. Turn on or restart the computer, quickly press **esc**, and then press **f2**.

The BIOS searches three places for the diagnostics tools in the following order:

- a. Connected USB drive

 **NOTE:** To download the HP PC Hardware Diagnostics (UEFI) tool to a USB drive, see [Downloading HP PC Hardware Diagnostics \(UEFI\) to a USB device](#).

- b. Hard drive

- c. BIOS

2. When the diagnostic tool opens, click the type of diagnostic test you want to run, and then follow the on-screen instructions.

 **NOTE:** If you need to stop a diagnostic test, press **esc**.

## Downloading HP PC Hardware Diagnostics (UEFI) to a USB device

 **NOTE:** Instructions for downloading HP PC Hardware Diagnostics (UEFI) are provided in English only.

1. Go to <http://www.hp.com>.
2. Click **Support & Drivers**, and then click the **Drivers & Downloads** tab.
3. Enter the product name in the text box, and then click **Go**.
4. Select your computer model, and then select your operating system.
5. In the **Diagnostic** section, click **HP UEFI Support Environment**.  
– or –  
Click **Download**, and then select **Run**.

# 10 Backing up, restoring, and recovering

This chapter provides information about the following processes:

- Creating recovery media and backups
- Restoring and recovering your system

## Creating recovery media and backups

1. After you successfully set up the computer, create HP Recovery media. This step creates a backup of the HP Recovery partition on the computer. The backup can be used to reinstall the original operating system in cases where the hard drive is corrupted or has been replaced.

HP Recovery media you create will provide the following recovery options:

- System Recovery—Reinstalls the original operating system and the programs that were installed at the factory.
- Minimized Image Recovery—Reinstalls the operating system and all hardware-related drivers and software, but not other software applications.
- Factory Reset—Restores the computer to its original factory state by deleting all information from the hard drive and re-creating the partitions. Then it reinstalls the operating system and the software that was installed at the factory.

See [Creating HP Recovery media](#).

2. Use the Windows tools to create system restore points and create backups of personal information. For more information and steps, see Help and Support. From the Start screen, type `help`, and then select **Help and Support**.

## Creating HP Recovery media

HP Recovery Manager is a software program that offers a way to create recovery media after you successfully set up the computer. HP Recovery media can be used to perform system recovery if the hard drive becomes corrupted. System recovery reinstalls the original operating system and the software programs installed at the factory, and then configures the settings for the programs. HP Recovery media can also be used to customize the system or restore the factory image if you replace the hard drive.

- Only one set of HP Recovery media can be created. Handle these recovery tools carefully, and keep them in a safe place.
- HP Recovery Manager examines the computer and determines the required storage capacity for the blank USB flash drive or the number of blank DVD discs that will be required.
- To create recovery discs, your computer must have an optical drive with DVD writer capability, and you must use only high-quality blank DVD-R, DVD+R, DVD-R DL, or DVD+R DL discs. Do not use rewritable discs such as CD±RW, DVD±RW, double-layer DVD±RW, or BD-RE (rewritable Blu-ray) discs; they are not compatible with HP Recovery Manager software. Or instead you can use a high-quality blank USB flash drive.
- If your computer does not include an integrated optical drive with DVD writer capability, but you would like to create DVD recovery media, you can use an external optical drive (purchased

separately) to create recovery discs, or you can obtain recovery discs from support. See the *Worldwide Telephone Numbers* booklet included with the computer. You can also find contact information from the HP website. Go to <http://www.hp.com/support>, select your country or region, and follow the on-screen instructions. If you use an external optical drive, it must be connected directly to a USB port on the computer; the drive cannot be connected to a USB port on an external device, such as a USB hub.

- Be sure that the computer is connected to AC power before you begin creating the recovery media.
- The creation process can take up to an hour or more. Do not interrupt the creation process.
- If necessary, you can exit the program before you have finished creating all of the recovery DVDs. HP Recovery Manager will finish burning the current DVD. The next time you start HP Recovery Manager, you will be prompted to continue, and the remaining discs will be burned.

To create HP Recovery media:

 **IMPORTANT:** For tablets, connect to the keyboard dock before beginning these steps (select models only).

1. From the Start screen, type `recovery`, and then select **HP Recovery Manager**.
2. Select **Recovery Media Creation**, and then follow the on-screen instructions.

If you ever need to recover the system, see [Recovering using HP Recovery Manager](#).

## Restore and recovery

There are several options for recovering your system. Choose the method that best matches your situation and level of expertise:

- Windows offers several options for restoring from backup, refreshing the computer, and resetting the computer to its original state. For more information and steps, see Help and Support. From the Start screen, type `help`, and then select **Help and Support**.
- If you need to correct a problem with a preinstalled application or driver, use the Drivers and Applications Reinstall option of HP Recovery Manager to reinstall the individual application or driver.

From the Start screen, type `recovery`, select **HP Recovery Manager**, select **Drivers and Applications Reinstall**, and then follow the on-screen instructions.

- If you want to reset your computer to its original state, Windows provides an easy way to remove all personal data, apps, and settings, and reinstall Windows.

If you want to reset your computer using a minimized image, you can choose the HP Minimized Image Recovery option from the HP Recovery partition (select models only) or HP Recovery media. Minimized Image Recovery installs only drivers and hardware-enabling applications. Other applications included in the image continue to be available for installation through the Drivers and Applications Reinstall option in HP Recovery Manager.

For more information, see [Recovering using HP Recovery Manager](#)

- If you want to recover the computer's original factory partitioning and content, you can choose the System Recovery option from the HP Recovery partition (select models only) or use the HP Recovery media that you have created. For more information, see [Recovering using HP Recovery Manager](#). If you have not already created recovery media, see [Creating HP Recovery media](#).

- If you have replaced the hard drive, you can use the Factory Reset option of HP Recovery media to restore the factory image to the replacement drive. For more information, see [Recovering using HP Recovery Manager](#).
- If you wish to remove the recovery partition to reclaim hard drive space, HP Recovery Manager offers the Remove Recovery Partition option.  
For more information, see [Removing the HP Recovery partition](#).

## Recovering using HP Recovery Manager

HP Recovery Manager software allows you to recover the computer to its original factory state by using the HP Recovery media that you created or by using the HP Recovery partition (select models only). If you have not already created recovery media, see [Creating HP Recovery media](#).

Using HP Recovery media, you can choose from one of the following recovery options:

- System Recovery—Reinstalls the original operating system, and then configures the settings for the programs that were installed at the factory.
- Minimized Image Recovery (select models only)—Reinstalls the operating system and all hardware-related drivers and software, but not other software applications.
- Factory Reset—Restores the computer to its original factory state by deleting all information from the hard drive and re-creating the partitions. Then it reinstalls the operating system and the software that was installed at the factory.

The HP Recovery partition (select models only) allows System Recovery and Minimized Image Recovery.

## What you need to know

- HP Recovery Manager recovers only software that was installed at the factory. For software not provided with this computer, you must either download the software from the manufacturer's website or reinstall the software from the media provided by the manufacturer.
- Recovery through HP Recovery Manager should be used as a final attempt to correct computer issues.
- HP Recovery media must be used if the computer hard drive fails. If you have not already created recovery media, see [Creating HP Recovery media](#).
- To use the Factory Reset option, you must use HP Recovery media. If you have not already created recovery media, see [Creating HP Recovery media](#).
- If the HP Recovery media does not work, you can obtain recovery media for your system from support. See the *Worldwide Telephone Numbers* booklet included with the computer. You can also find contact information from the HP website. Go to <http://www.hp.com/support>, select your country or region, and follow the on-screen instructions.



**IMPORTANT:** HP Recovery Manager does not automatically provide backups of your personal data. Before beginning recovery, back up any personal data you wish to retain.

## Using the HP Recovery partition (select models only)

The HP Recovery partition (select models only) allows you to perform a system recovery or minimized image recovery without the need for recovery discs or a recovery USB flash drive. This type of recovery can only be used if the hard drive is still working.

To start HP Recovery Manager from the HP Recovery partition:



**IMPORTANT:** For tablets, connect to the keyboard dock before beginning these steps (select models only).

1. Press **f11** while the computer boots.
  - or –
  - Press and hold **f11** as you press the power button.
2. Choose your keyboard layout.
3. Select **Troubleshoot** from the boot options menu.
4. Select **Recovery Manager**, and then follow the on-screen instructions.

## Using HP Recovery media to recover

You can use HP Recovery media to recover the original system. This method can be used if your system does not have an HP Recovery partition or if the hard drive is not working properly.

1. If possible, back up all personal files.
2. Insert the HP Recovery disc you created, and then restart the computer.

 **NOTE:** If the computer does not automatically restart in HP Recovery Manager, change the computer boot order. See [Changing the computer boot order](#).

3. Follow the on-screen instructions.

## Changing the computer boot order

If computer does not restart in HP Recovery Manager, you can change the computer boot order, which is the order of devices listed in BIOS where the computer looks for startup information. You can change the selection for an optical drive or a USB flash drive.

To change the boot order:

1. Insert the HP Recovery media you created.
2. Restart the computer, quickly press **esc**, and then press **f9** for boot options.
3. Select the optical drive or USB flash drive you want to boot from.
4. Follow the on-screen instructions.

## Removing the HP Recovery partition

HP Recovery Manager software allows you to remove the HP Recovery partition to free up hard drive space.



**IMPORTANT:** After you remove the HP Recovery partition, you can no longer use the Windows Refresh option, the Windows option to remove everything and reinstall Windows, or the HP Recovery Manager option. So before you remove the Recovery partition, create HP Recovery media; see [Creating HP Recovery media](#).

Follow these steps to remove the HP Recovery partition:

1. From the Start screen, type `recovery`, and then select **HP Recovery Manager**.
2. Select **Remove Recovery Partition**, and then follow the on-screen instructions.

# 11 Specifications

 
## Input power

The power information in this section may be helpful if you plan to travel internationally with the computer.

The computer operates on DC power, which can be supplied by an AC or a DC power source. The AC power source must be rated at 100–240 V, 50–60 Hz. Although the computer can be powered from a standalone DC power source, it should be powered only with an AC adapter or a DC power source supplied and approved by HP for use with this computer.

The computer can operate on DC power within the following specifications. Operating voltage and current varies by platform.

| Input power                         | Rating                    |
|-------------------------------------|---------------------------|
| Operating voltage and current       | 19.5 V dc @ 2.31 A – 45 W |
| DC plug of external HP power supply | 19.5 V dc @ 3.33 A – 65 W |



 **NOTE:** This product is designed for IT power systems in Norway with phase-to-phase voltage not exceeding 240 V rms.

 **NOTE:** The computer operating voltage and current can be found on the system regulatory label.

## Operating environment

| Factor                                   | Metric            | U.S.                |
|--|-------------------|---------------------|
| <b>Temperature</b>                       |                   |                     |
| Operating                                | 5°C to 35°C       | 41°F to 95°F        |
| Nonoperating                             | -20°C to 60°C     | -4°F to 140°F       |
| <b>Relative humidity (noncondensing)</b> |                   |                     |
| Operating                                | 10% to 90%        | 10% to 90%          |
| Nonoperating                             | 5% to 95%         | 5% to 95%           |
| <b>Maximum altitude (unpressurized)</b>  |                   |                     |
| Operating                                | -15 m to 3,048 m  | -50 ft to 10,000 ft |
| Nonoperating                             | -15 m to 12,192 m | -50 ft to 40,000 ft |


## 12 Electrostatic Discharge

Electrostatic discharge is the release of static electricity when two objects come into contact—for example, the shock you receive when you walk across the carpet and touch a metal door knob.

A discharge of static electricity from fingers or other electrostatic conductors may damage electronic components. To prevent damage to the computer, damage to a drive, or loss of information, observe these precautions:

- If removal or installation instructions direct you to unplug the computer, first be sure that it is properly grounded, and then remove the cover.
- Keep components in their electrostatic-safe containers until you are ready to install them.
- Avoid touching pins, leads, and circuitry. Handle electronic components as little as possible.
- Use nonmagnetic tools.
- Before handling components, discharge static electricity by touching an unpainted metal surface of the component.
- If you remove a component, place it in an electrostatic-safe container.

If you need more information about static electricity or assistance with component removal or installation, contact support.

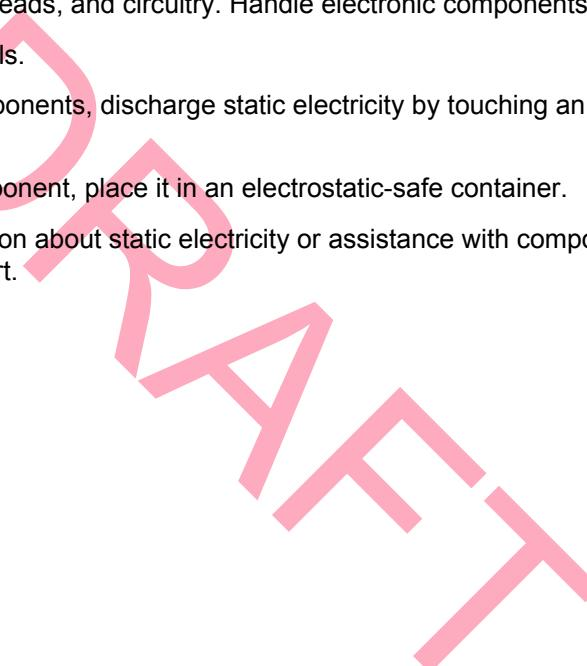

# Index

## A

AC adapter light, identifying 6  
AC adapter, testing 57  
action keys  
    decrease screen brightness 46  
    Help and Support 46  
    identifying 12  
    increase screen brightness 46  
    keyboard backlight 46  
    next track or section 46  
    play, pause, resume 46  
    previous track or section 46  
    switch screen image 46  
    volume down 46  
    volume mute 46  
    volume up 46  
    wireless 46  
Adobe Photoshop Lightroom 23  
ambient light sensor, identifying 8, 21  
antivirus software, using 65  
app group, creating 49  
apps  
    closing 48  
    create app group 49  
    display all 48  
    display open apps 48  
    downloading 50  
    moving 49  
    resizing 49  
    searching 49  
    switching 48  
    unpinning 49  
audio features, testing 24  
audio-in (microphone) jack, identifying 22  
audio-out (headphone) jack, identifying 22  
audio-out (headphone) jacks 7

## B

backing up software and information 67  
backups 71

## battery

    discharging 56  
    low battery levels 56  
battery information, finding 55  
battery power 55  
Beats Audio 24  
Beats Audio Control Panel 24  
Beats Audio hot key 24  
BIOS  
    determining version 68  
    downloading an update 69  
    updating 68  
Bluetooth device 16, 20  
Bluetooth label 15  
boot order, changing HP Recovery Manager 74  
bottom 15  
buttons  
    left TouchPad 9  
    power 11  
    right TouchPad 9

## C

caps lock light, identifying 10  
caring for your computer 60  
charms, displaying 49  
cleaning your computer 60  
close an app 48  
components  
    bottom 13  
    display 8  
    left side 7  
    right side 6  
    top 9  
configuring audio for HDMI 26  
connecting to a WLAN 19  
connector, power 6  
corporate WLAN connection 19  
critical battery level 56  
critical security updates, installing 66  
Customize icon 39, 45

## D

deleted files, restoring 72

## digital display device,

    connecting 27  
display all apps 48  
display, high-resolution 28  
downloading apps 50  
Dragon software 47

## E

edge swipe gestures 44  
    top-edge swipe 45  
editing media 23  
electrostatic discharge 76  
esc key, identifying 12  
external AC power, using 57

## F

firewall software 66  
fn key, identifying 12, 46  
fun things to do 2

## H

hard drive light 7  
HDMI port  
    connecting 25  
    identifying 6, 22  
HDMI, configuring audio 26  
headphones, connecting 24  
Hibernation  
    exiting 54  
    initiated during critical battery level 56  
    initiating 54  
high-definition devices, connecting 25  
high-resolution display 28  
hot keys  
    description 46  
    using 46  
HP and third-party software  
    updates, installing 66  
HP PC Hardware Diagnostics (UEFI), downloading 70  
HP Recovery Manager  
    correcting boot problems 74  
    starting 73

HP Recovery media

creating 71

recovery 74

HP Recovery partition

recovery 73

removing 74

## I

input power 75

installing

critical security updates 66

optional security cable lock 67

internal display switch,

identifying 8

internal microphones, identifying

8, 21

Internet connection setup 18

Internet security software, using

65

## J

jacks

audio-in (microphone) 22

audio-out (headphone) 7, 22

## K

keyboard backlight action key,  
identifying 46

keyboard hot keys, identifying 46

keys

action 12

esc 12

fn 12

Windows 12

Windows applications 12

## L

labels

Bluetooth 15

regulatory 15

serial number 14

service 14

wireless certification 15

WLAN 15

left control zone, identifying 9

left-edge swipe 44

lights

AC adapter 6

caps lock 10

hard drive 7

mute 10

power 10

wireless 10

locking the computer 50

low battery level 56

## M

memory card reader, identifying

7, 22

microphone, connecting 24

microphones, internal 8, 21

Mini DisplayPort

identifying 6

mini DisplayPort

connecting 27

Mini DisplayPort, identifying 22

minimized image

creating 73

recovery 73

mouse, external

setting preferences 29

moving an app 49

mute light, identifying 10

open apps

displaying 48

switching 48

operating environment 75

organize favorites 49

original system recovery 73

## P

passwords

Setup Utility (BIOS) 64

Windows 64

pinching touch screen gesture 43

pinching TouchPad gesture 32

ports

HDMI 6, 22, 25

USB 3.0 7, 22

power button, identifying 11

power connector, identifying 6

power lights, identifying 10

power, battery 55

print 49

product name and number,

computer 14

public WLAN connection 19

## R

recovery

discs 71, 74

HP Recovery Manager 73

media 74

options 71

starting 73

supported discs 71

system 73

USB flash drive 74

using HP Recovery media 72

recovery media

creating 71

creating using HP Recovery  
Manager 72

recovery partition

removing 74

recycle

computer 72

regulatory information

regulatory label 15

wireless certification labels 15

reset

computer 72

resize apps 49

restore, Windows File History 72

right control zone, identifying 9

right-edge swipe 44

rotating TouchPad gesture 34

## S

save favorites 49

scrolling TouchPad gesture 31

searching 49

security cable lock, installing 67

security cable slot, identifying 7

security, wireless 19

selecting TouchPad gesture 30

serial number 14

service labels, locating 14

setting password protection on  
wakeup 54

setup of WLAN 18

Setup Utility (BIOS) passwords

64

Setup Utility (BIOS), using 68

shipping the computer 61

shutdown 59

Sleep  
    exiting 54  
    initiating 54  
slots  
    memory card reader 7  
    security cable 7  
software updates, installing 66  
speakers  
    connecting 23  
    identifying 13, 22  
Start button 47  
Start menu 47  
supported discs, recovery 71  
system recovery 73  
system restore point  
    creating 71

## T

testing an AC adapter 57  
testing audio features 24  
touch screen gestures 44, 45  
    edge swipe gestures 44  
    one-finger slide 42  
    pinching 43  
    rotating 43  
    tapping 41  
touch screen, using 41  
TouchPad  
    buttons 9  
    left control zone 9  
    right control zone 9  
TouchPad gestures  
    pinching 32  
    rotating 34  
    scrolling 31  
    selecting 30  
    zooming 32  
TouchPad zone, identifying 9  
TPM Embedded Security 65  
traveling with the computer 15,  
    61  
turning off the computer 59

## U

unpinning apps 49  
unresponsive system 59  
USB 3.0 ports identifying 7, 22  
USB 3.0 ports, identifying 6  
using external AC power 57  
using passwords 63

## V

vents, identifying 13  
video 25  
voice navigation 47

## W

webcam  
    identifying 8, 21  
    using 22  
webcam light, identifying 8, 21  
Windows  
    File History 72  
    reinstall 72  
    restoring files 72  
    system restore point 71  
Windows applications key,  
    identifying 12  
Windows desktop, opening 48  
Windows key, identifying 12  
Windows passwords 64  
Windows shortcut keys 51  
Wireless Assistant software 16  
wireless button 16  
wireless certification label 15  
wireless controls  
    button 16  
    operating system 16  
Wireless Assistant software  
    16  
wireless light 10, 16  
wireless network (WLAN)  
    connecting 19  
    corporate WLAN connection  
        19  
    equipment needed 18  
    functional range 20  
    public WLAN connection 19  
    security 19  
    using 18  
wireless network, securing 66  
WLAN antennas, identifying 8  
WLAN device 15, 18  
WLAN label 15

## Z

zooming touch screen gesture 43  
zooming TouchPad gesture 32

# **Regulatory, Safety and Environmental Notices**

## **User Guide**

© Copyright 2008–2011 Hewlett-Packard  
Development Company, L.P.

Bluetooth is a trademark owned by its  
proprietor and used by Hewlett-Packard  
Company under license. ENERGY STAR is  
a registered mark owned by the U.S.  
government. Java is a trademark of Sun  
Microsystems. Microsoft, Windows, and  
Windows Vista are U.S. registered  
trademarks of Microsoft Corporation.

The information contained herein is subject  
to change without notice. The only  
warranties for HP products and services are  
set forth in the express warranty statements  
accompanying such products and services.  
Nothing herein should be construed as  
constituting an additional warranty. HP shall  
not be liable for technical or editorial errors  
or omissions contained herein.

Third Edition: August 2011

First Edition: February 2011

Document Part Number: 653267-003

---

# Table of contents

|  |          |
|--|----------|
| <b>1 Regulatory notices .....</b>  | <b>1</b> |
| Federal Communications Commission notice .....   | 2        |
| Modifications .....  | 2        |
| Cables .....   | 2        |
| Declaration of Conformity for products marked with the FCC logo (United States only) ..... | 3        |
| Products with wireless LAN devices or HP Mobile Broadband Modules .....                    | 3        |
| Brazil notice .....  | 4        |
| Canada notices .....   | 4        |
| Avis Canadien .....  | 4        |
| European Union Regulatory notices .....  | 4        |
| Products with HP Mobile Broadband Modules .....  | 5        |
| Ergonomics notice .....  | 6        |
| Germany .....  | 6        |
| Japan notices .....  | 7        |
| Wireless LAN 802.11b devices .....   | 7        |
| Wireless LAN 802.11g devices .....   | 7        |
| Bluetooth devices .....  | 7        |
| Wireless LAN, Wireless WAN, and Bluetooth certification markings .....                     | 8        |
| South Korea notice .....   | 8        |
| Mexico notice .....  | 8        |
| Singapore wireless notice .....  | 8        |
| Thailand WWAN wireless notice .....  | 9        |
| Taiwan notices .....   | 9        |
| Wireless LAN 802.11a devices .....   | 9        |
| Wireless LAN 802.11b devices .....   | 9        |
| Airline travel notice .....  | 9        |
| User-replaceable battery notices .....   | 10       |
| ENERGY STAR compliance .....   | 10       |
| Laser compliance .....   | 11       |
| Modem notices .....  | 11       |
| Telecommunications device approvals .....  | 11       |
| U.S. modem statements .....  | 12       |

|  |           |
|--|-----------|
| U.S. modem declarations .....  | 13        |
| Canada modem statements .....  | 15        |
| Japan modem statements .....   | 15        |
| New Zealand modem statements .....   | 15        |
| Voice support .....  | 16        |
| Power cord notice .....  | 16        |
| Japan power cord notice .....  | 16        |
| DC plug of external HP power supply .....  | 17        |
| Macrovision Corporation notice .....   | 17        |
| <b>2 Safety notices .....</b>  | <b>18</b> |
| Heat-related safety warning notice .....   | 18        |
| Potential safety conditions notice .....   | 18        |
| User-replaceable battery notices .....   | 18        |
| Headset and earphone volume level notice .....   | 19        |
| Power cord notices .....   | 19        |
| Cleaning the keyboard .....  | 19        |
| Travel notice .....  | 19        |
| Norway and Sweden: Cable grounding notice for products with a TV tuner .....           | 19        |
| <b>3 Environmental notices .....</b>   | <b>20</b> |
| Electronic hardware and battery recycling .....  | 20        |
| Disposal of waste equipment by users in private households in the European Union ..... | 20        |
| Chemical substances .....  | 21        |
| China material content declarations .....  | 21        |
| Japan material content declaration .....   | 23        |
| Mexico Sustainable Energy Use Law .....  | 24        |
| Turkey EEE regulation .....  | 24        |
| Ukraine Restriction of Hazardous Substances .....                                      | 24        |
| Perchlorate material—special handling may apply .....                                  | 24        |
| <b>Index .....</b>   | <b>25</b> |

---

# 1 Regulatory notices

This guide provides country- and region-specific non-wireless and wireless regulatory notices and compliance information for the computer product. Some of these notices may not apply to your product.

One or more integrated wireless devices may be installed. In some environments, the use of wireless devices may be restricted. Such restrictions may apply on-board airplanes, in hospitals, near explosives, in hazardous locations, and so on. If you are uncertain of the policy that applies to the use of this product, ask for authorization to use it before you turn it on.

To identify a hardware device such as a wireless LAN (WLAN) network device, choose the procedure below that corresponds to the operating system running on your computer.

**For Windows® XP Professional and Windows XP Home**, follow these steps:

1. Select **Start > My Computer**.
2. If the left pane, select **View System Information > Hardware tab > Device Manager**.

**For Windows Vista®**, follow these steps:

1. Select **Start > Computer > System properties**.
2. In the left pane, click **Device Manager**.

**For later Windows operating systems, such as Windows 7**, follow these steps:

- ▲ Select **Start > Control Panel > System and Security > Device Manager**.

**For non-Windows operating systems**, follow the instructions provided by your operating system to identify a hardware device such as a wireless LAN (WLAN) network device.

Regulatory markings for your country or region may be located on the bottom of the product, either under the battery, under a user-removable door (or some other user-accessible location), or on the wireless or modem module.

To view the FCC IDs for any radio modules in your notebook (Bluetooth®, WLAN, or WWAN), follow these steps:

1. Turn on or restart the computer, and then press **esc** while the "Press the ESC key for Startup Menu" message is displayed at the bottom of the screen.
2. Press **f10** to enter BIOS Setup.
3. Select the **System Configuration** menu.

The FCC IDs are displayed at the bottom of the screen.