

Color Side 1:
Black + PMS 2925; bleeds 3 sides

Color Side 2:
Black + PMS 2925; bleeds 3 sides

Flat size:
23.31 x 8.268 in

Folded size:
A5: 5.827 x 8.268 in

Fold 1:
4-panel
accordion



Navigating the Windows Start screen

The Windows® Start screen provides a central location where you can access your information and email, browse the Web, stream videos, view photos, and access your social media websites. Depending on your computer model, you can use a keyboard and mouse or a touch screen to navigate the Windows Start screen.

The features and appearance of the Windows screen may vary, depending on the version of the operating system and additional software installed on your computer.



Find Settings

Select the **Start** button , and then select the **Settings** icon .

Shut down your computer

Select the **Start** button , select the **Power** icon , and then select **Shut down**.

Display the Start menu

Select the **Start** button  in the lower-left corner of the taskbar.

Search

In the taskbar search box, begin typing the name of an app, setting, file, or Internet topic.

Switch between open apps

Select the **Task view** icon  in the taskbar.

Find more information

To learn more about Windows and to access help topics, select the **Start** button , and then select **Tips** or **Get Help** (requires a network connection).

To access the user guides, select the **Start** button , select **HP Help and Support**, and then select **HP Documentation**.

- OR -

To access the user guides, select the **Start** button , select **HP**, and then select **HP Documentation**.

You do not need to connect to the Internet to access the user guides. To view the user guides on the Web, go to <http://www.hp.com/support> and follow the instructions to find your product. Then select **User Guides**.

A *User Guides* disc is included with some products.

Contact support

To resolve a hardware or software problem, go to <http://www.hp.com/support>. Use this site to get more information about your product, including links to discussion forums and instructions on troubleshooting. You can also find information on how to contact HP and open a support case.

Locate system information

Depending on your product, a service label is either affixed to the bottom of the computer or is located inside the battery bay or beneath the service door.

Feedback on this document

To help us improve this document, please send any suggestions, comments, or errors to doc.feedback@hp.com. Include the document part number (located near the bar code) when submitting your feedback.

Go wireless

Select the network icon  in the lower-right corner of the taskbar, and then connect to one of the available networks.

To set up a WLAN and connect to the Internet, you need a broadband modem (either DSL or cable) (purchased separately), high-speed Internet service purchased from an Internet service provider, and a wireless router (purchased separately).

WARNING: To reduce the risk of electric shock or damage to the equipment:

- Plug the power cord into an AC outlet that is easily accessible at all times.
- Disconnect power from the computer by unplugging the power cord from the AC outlet.
- If provided with a 3-pin attachment plug on the power cord, plug the cord into a grounded (earthed) 3-pin outlet. Do not disable the power cord grounding pin, for example, by attaching a 2-pin adapter. The grounding pin is an important safety feature.

For more safety, regulatory, labeling and battery disposal information, refer to the *Regulatory, Safety and Environmental Notices* provided with your user guides. To locate the user guides for your computer, see the "Find more information" section of this poster.

WARNING: To reduce the risk of serious injury, read the *Safety & Comfort Guide* provided with your user guides. It describes proper workstation setup, and proper posture, health, and work habits for computer users. The *Safety & Comfort Guide* also provides important electrical and mechanical safety information. The *Safety & Comfort Guide* is also available on the Web at <http://www.hp.com/ergo>.

WARNING: To reduce the possibility of heat-related injuries or of overheating the computer, do not place the computer directly on your lap or obstruct the computer air vents. Use the computer only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The computer and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950).

REGULATORY MODEL NUMBER AND SIMPLIFIED DECLARATION OF CONFORMITY

The Regulatory Model Number (RMN) for this equipment is TPC-Q036-BP. This RMN is located on the bottom of the computer.

Hereby, HP declares that this equipment is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC (products shipping before 12 June 2017) and Directive 2014/53/EU (products shipping on or after 12 June 2017). To view the Declaration of Conformity for this equipment, go to www.hp.eu/certificates and search using this equipment's RMN.

SOFTWARE TERMS

By installing, copying, downloading, or otherwise using any software product preinstalled on this computer, you agree to be bound by the terms of the HP End User License Agreement (EULA). If you do not accept these license terms, your sole remedy is to return the entire unused product (hardware and software) within 14 days for a full refund subject to the refund policy of your seller. For any further information or to request a full refund of the price of the computer, please contact your seller.

LIMITED WARRANTY

You can find your HP Limited Warranty located with the user guides on your product and/or on the CD or DVD provided in the box. In some countries or regions, HP may provide a printed warranty in the box. For countries or regions where the warranty is not provided in printed format, you can request a copy from <http://www.hp.com/go/orderdocuments>. For products purchased in Asia Pacific, you can write to HP at P00, PO Box 161, Kitchener Road Post Office, Singapore 912006. Include your product name, and your name, phone number, and postal address.

PRODUCT DESCRIPTION

 
This product is an All-in-One desktop computer, desktop computer, thin client computer, or retail system. It might feature one or more of the following: a thin-panel display, TouchPad, processor, RAM, hard drive or solid-state drive, internal power supply, or external AC adapter. Depending on your computer model, the product has a rating of 100-240 V ac, 200-240 V ac, 220-240 V, or 100-127/200-240 V ac, 50-60 Hz or 50/60 Hz, 1.5 A, 1.8 A, 2 A, 2.5 A, 3 A, 3.6 A, 4 A, 5 A, 5.2 A, 5.5 A, 6 A, 8 A, 6 / 3 A, 8 / 4 A, 8 - 4 A, 12 - 8 A or 4.5 - 2.25 A. The AC adapter has a rating of 100-240 V ac, 50-60 Hz, 0.5 A, 0.6 A, 0.8 A, 1 A, 1.2 A, 1.4 A, 1.5 A, 1.6 A, 1.7 A, 1.9 A, 2 A, 2.2 A, 2.25 A, 2.31 A, 2.4 A, 2.5 A, 2.7 A, 2.9 A, 3.5 A, 3.6 A, or 4 A, or 4.2 A. If you have a wireless keyboard, mouse, and RF remote control, they have a rating of 1.5 V dc, 3 V dc, 3.2 V dc, or 5 V dc, 5 mA, 10 mA, 20 mA, 25 mA, 30 mA, 40 mA, 50 mA, 60 mA, 80 mA, 100 mA, or 300 mA.

To access the latest user guides, go to <http://www.hp.com/support>, and follow the instructions to find your product. Then select **User Guides**.




Setup instructions





Quick setup

 Additional accessories, such as a virtual reality headset, an external monitor, or an external keyboard and mouse, can be connected to your computer. For information on connecting an accessory, refer to the documentation that came with the accessory.

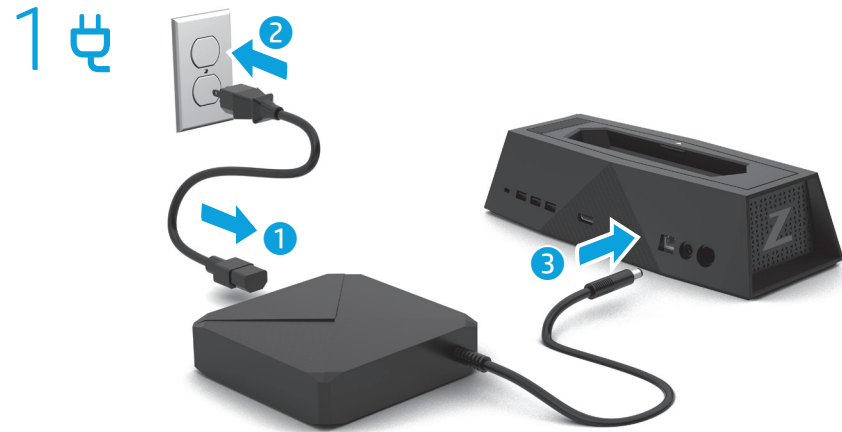

2

Press the computer firmly into the docking station until it clicks into place. When the light turns white, your computer is ready for use.

 
Before using your computer for the first time, be sure that it is fully charged.



3

Before turning on your computer, connect any external devices. For information on connecting external devices, refer to the documentation that came with your device.

Quick tour

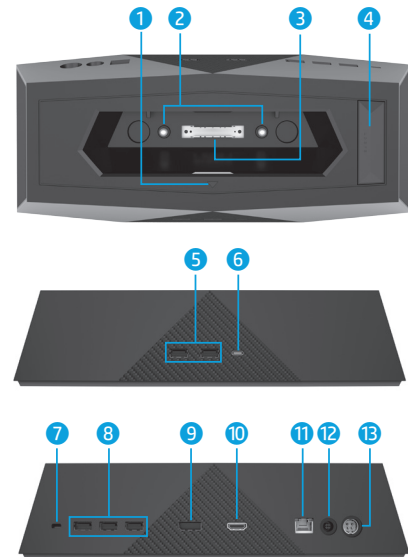

Docking station top

- 1 AC adapter & battery light
- 2 Alignment pins (2)
- 3 Docking connector
- 4 Eject button

Docking station front

- 5 USB ports (2)
- 6 USB Type-C port

Docking station rear

- 7 Security cable slot
- 8 USB ports (3)
- 9 DisplayPort
- 10 HDMI port
- 11 RJ-45 (network) jack

