

Lenovo YOGA 730

User Guide



Read the safety notices and important tips in the included manuals before using your computer.

Lenovo™

Notes

- Before using the product, be sure to read *Lenovo Safety and General Information Guide* first.
- The latest electronic compliance and environmental information are available from the Lenovo compliance information Web sites.
 - To view compliance information go to: <http://www.lenovo.com/compliance>
 - To download environmental information go to: <http://www.lenovo.com/ecodeclaration>
- Some instructions in this guide may assume that you are using Windows® 10. If you are using another Windows operating system, some operations may be slightly different. If you are using other operating systems, some operations may not apply to you.
- The features described in this guide are common to most models. Some features may not be available on your computer or your computer may include features that are not described in this user guide.
- The illustrations used in this manual are for Lenovo YOGA 730-15IWL unless otherwise stated.
- The illustrations in this manual may differ from the actual product. Please refer to the actual product.

Regulatory Notice

- For details, refer to **Guides & Manuals** at <http://support.lenovo.com>.

First Edition (May 2018)

© Copyright Lenovo 2018.

LIMITED AND RESTRICTED RIGHTS NOTICE: If data or software is delivered pursuant to a General Services Administration “GSA” contract, use, reproduction, or disclosure is subject to restrictions set forth in Contract No. GS-35F-05925.

Lenovo

User Guide

Instructions and technical information in this manual are applicable to the following Lenovo notebook computers unless otherwise stated.

Model name	MT
Lenovo YOGA 730-13IKB	81CT
Lenovo YOGA 730-15IKB	81CU
Lenovo YOGA 730-13IWL	81JR
Lenovo YOGA 730-15IWL	81JS


Contents

- Chapter 1. Getting to know your computer 1**
 - Top view..... 1
 - Left-side view 10
 - Right-side view..... 13
 - Rear view..... 14
 - Bottom view..... 15
 - To use the Lenovo Active Pen2 (on select models)..... 17
- Chapter 2. Starting to use Windows 10..... 19**
 - Configuring the operating system for the first time 19
 - Operating system interface..... 19
 - Putting the computer to sleep or shutting it down..... 21
 - Task and desktop management..... 23
 - Connecting to a wireless network 24
 - Touch screen operation..... 25
- Chapter 3. Recovery system 28**
 - Reset this PC 28
- Chapter 4. Troubleshooting..... 29**
 - Frequently asked questions..... 29
 - Troubleshooting..... 31
- Trademarks..... 34**

Chapter 1. Getting to know your computer


■ ■ Top view

 ■ Lenovo YOGA 730-13IKB/Lenovo YOGA 730-13IWL

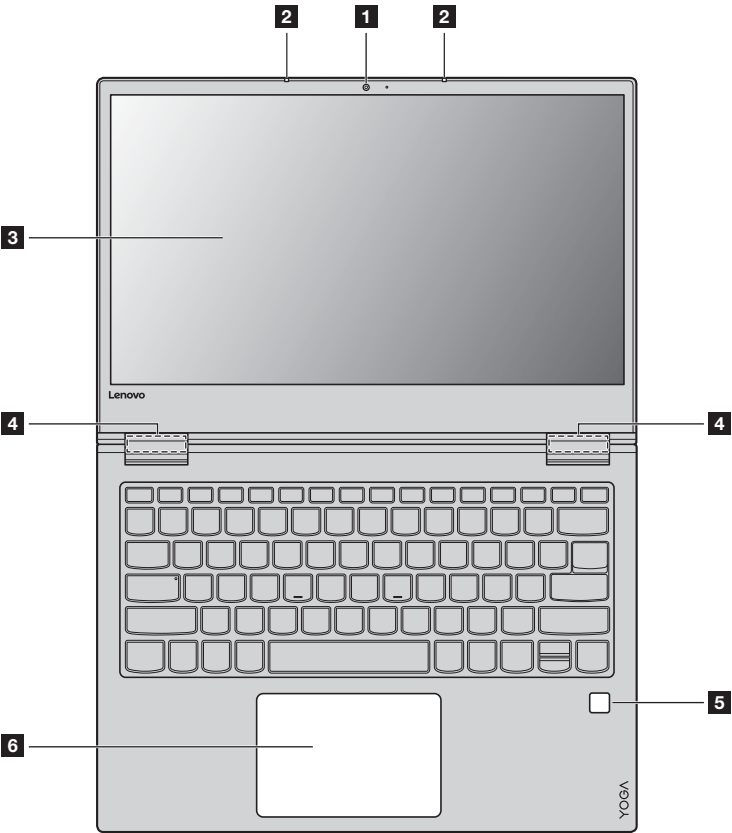

Chapter 1. Getting to know your computer

 ■ Lenovo YOGA 730-15IKB/Lenovo YOGA 730-15IWL

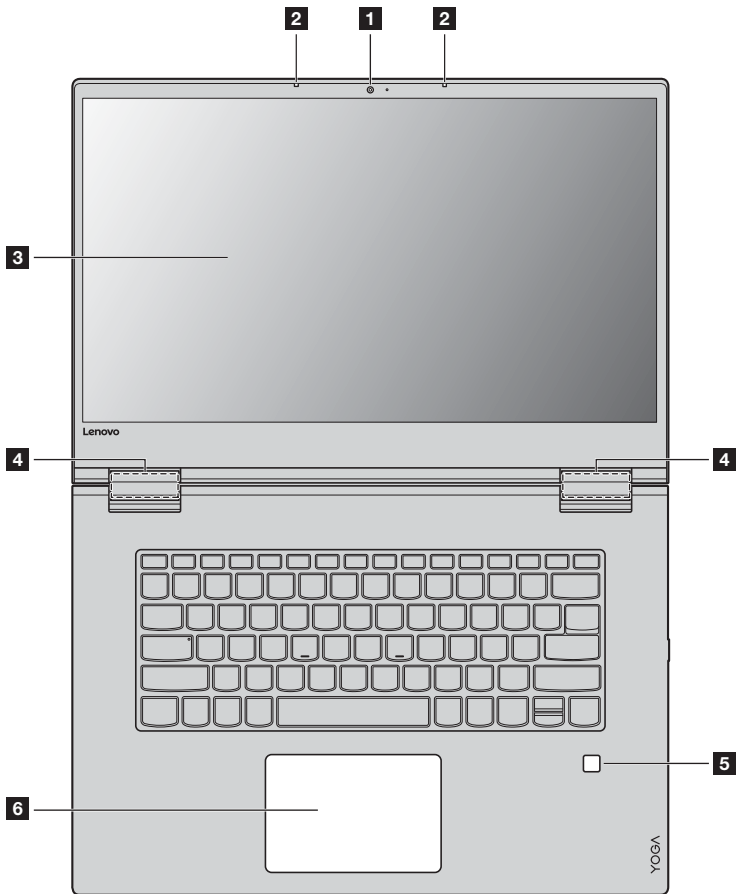

Note: The dashed areas indicate parts that are not visible externally.

- ⓘ **Attention:**
- When closing the display panel, be careful *not* to leave pens or any other objects in between the display panel and the keyboard. Otherwise, the display panel may be damaged.

- 1 Integrated camera** Use the camera for video communication or taking photos.
- 2 Built-in microphone** Captures sound which can be used for video conferencing, voice narration, or audio recording.
- 3 Multi-touch screen** The LCD display with LED backlight provides brilliant visual output. Multi-touch function is available on this display.
- 4 Wireless LAN antennas** Connect to a wireless LAN adapter to send and receive wireless radio signals.
- 5 Fingerprint reader** Registers fingerprints that can be used as passwords to secure your computer.
- 6 Touchpad**

The touchpad functions as a conventional mouse.

One piece multi-touch ClickPad: To move the pointer on the screen, slide your fingertip over the pad in the direction in which you want the pointer to move.

Left-click area: Clicking in this area corresponds to the functions of clicking the left button on a conventional mouse.

 
Right-click area: Clicking in this area corresponds to the functions of clicking the right button on a conventional mouse.

Note: You can enable/disable the touchpad by pressing F6 ().

■ Using the keyboard

Function key combinations

Through the use of the function keys, you can change operational features instantly. To use this function, press and hold **Fn** **1**; then press one of the function keys **2**.

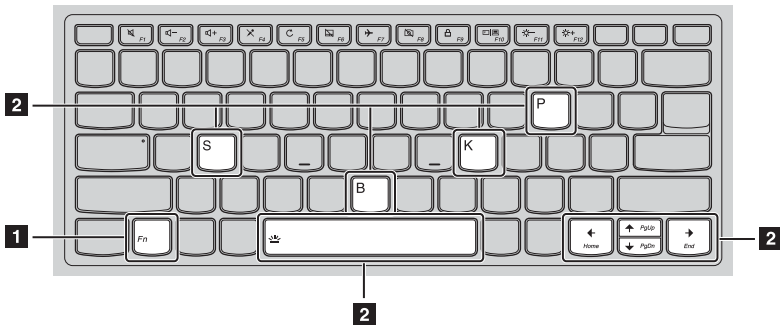


The following describes the features of each function key.

Fn + B:	Activates the break function.
Fn + P:	Activates the pause function.
Fn + K:	Enables/disables the scroll lock.
Fn + S:	Activates the system request.
Fn + ↑:	Activates the Pgup key function.
Fn + ↓:	Activates the Pgdn key function.
Fn + ←:	Activates the home key function.
Fn + →:	Activates the end key function.
Fn + Space:	Adjusts the keyboard backlight (off → dim → bright → off).

Hotkeys

 You can access certain system settings quickly by pressing the appropriate hotkeys.

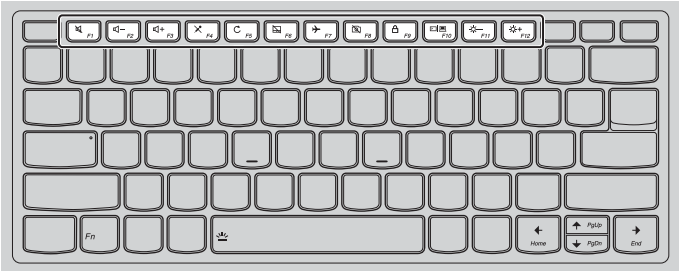


	: Mutes/unmutes the sound.		: Enables/disables Airplane mode.
	: Decreases the volume level.		: Enables/disables the integrated camera.
	: Increases the volume level.		: Locks the screen.
	: Enables/disables the microphone.		: Toggles the display between the computer and an external display device.
	: Refreshes the desktop or the currently active window.		: Decreases the display brightness.
	: Enables/disables the touchpad.		: Increases the display brightness.

Note: You can use the Lenovo Setting to enable/disable the hotkey function.


Chapter 1. Getting to know your computer

■ Positioning the display panel

 The display panel can be opened to any angle up to 360 degrees.

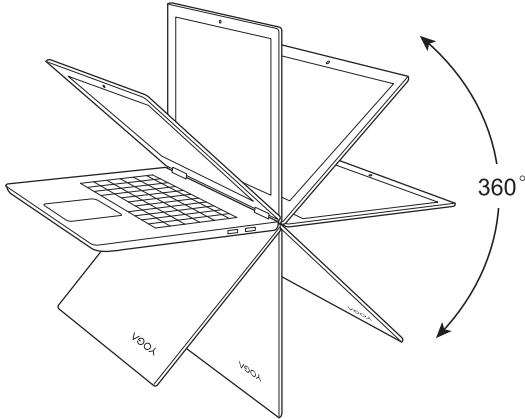


Notebook Mode

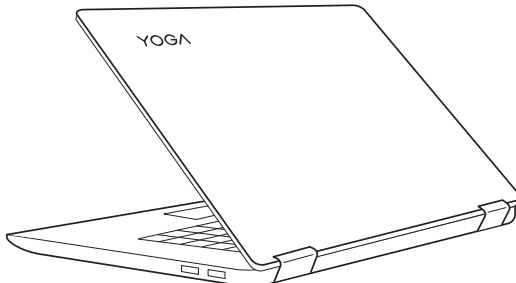 


Suitable for tasks that require a keyboard and mouse (such as creating documents, writing e-mails, and so on).

 Stand Mode (Theater Mode)

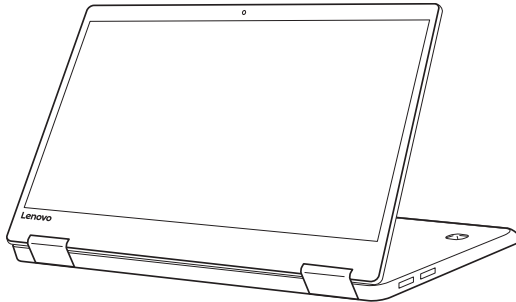

Suitable for tasks that require little or no touch (such as viewing photos or playing videos).

 
Tablet Mode

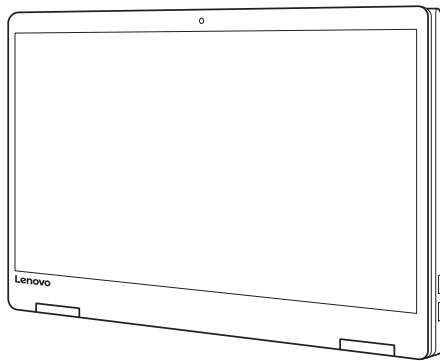

Suitable for tasks that require touching the screen often (such as surfing the Web, playing games, and so on).

Chapter 1. Getting to know your computer

 Tent Mode (Presentation Mode)

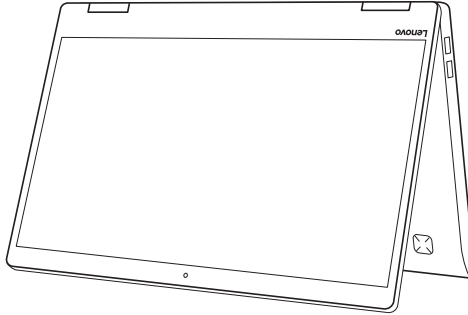

Suitable for tasks that require limited interaction with the touch screen (such as displaying graphs or PowerPoint presentations).

ⓘ **Attention:**

- Do *not* open the display with too much force, otherwise the panel or hinges may be damaged.

Note: The keyboard and touchpad are automatically locked when the screen is opened beyond 190 degrees (approximately).

■ Screen orientation

You can rotate the display panel to your preferred orientation.

The orientation of the display automatically changes (alternating between portrait and landscape modes) depending on how you hold it.



 
Portrait




Landscape

■ ■ Left-side view

■ Lenovo YOGA 730-13IKB/Lenovo YOGA 730-13IWL

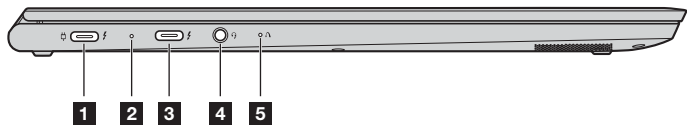

 ■ Lenovo YOGA 730-15IKB/Lenovo YOGA 730-15IWL

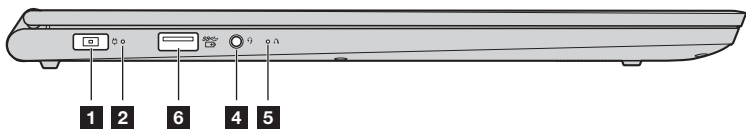

- 1 AC power adapter jack** Connects to the AC power adapter.

Note: For the Lenovo YOGA 730-13IKB/Lenovo YOGA 730-13IWL, the AC power adapter jack is compatible with Type-C (Thunderbolt output) devices.

- 2 Charging status indicator**

Indicator	Indicator status	Charge status	Meaning
Charging status indicator	On (solid white)	Charging	The battery has more than 91% charge.
	On (solid amber)	Charging	The battery has between 1% and 90% charge.
	Off	Discharging	Disconnect the AC power adapter from the computer.

3 Type-C port

The Type-C port is compatible with:

- Thunderbolt output

Note: For the Lenovo YOGA 730-13IKB/Lenovo YOGA 730-13IWL, the Type-C port may be used as an AC power adapter jack.

4 Combo audio jack

Connects to headsets.

Notes:

- The combo audio jack does not support conventional microphones.
- The recording function might not be supported if third-party headphones or headsets are connected, due to different industry standards.

5 Novo button

When the computer is off, press this button to start the recovery system or the BIOS setup utility, or to enter the boot menu.

Notes:

- You can use the tip of an unfolded paper clip (or similar object without a sharp tip) to gently press the Novo button.
- For details, see “Recovery system” on page 28.

6 USB 3.0 port

Connects to USB devices.

Notes:

- The USB 3.0 port supports the AOU (always on USB) function.
- For details, see “Connecting USB device” on page 12.