

# IdeaPad Flex 3 Chromebook (11", 6) User Guide



Lenovo

## **Read this first**

Before using this documentation and the product it supports, ensure that you read and understand the following:

- [Generic Safety and Compliance Notices](#)
- *Safety and Warranty Guide*
- *Setup Guide*

**First edition (March 2021)**

**© Copyright Lenovo 2021.**

LIMITED AND RESTRICTED RIGHTS NOTICE: If data or software is delivered pursuant to a General Services Administration "GSA" contract, use, reproduction, or disclosure is subject to restrictions set forth in Contract No. GS-35F-05925.

---

## About this documentation

- Illustrations in this documentation might look different from your product.
- Depending on the model, some features and software programs might not be available on your computer.
- Documentation content is subject to change without notice. Lenovo makes constant improvement on the documentation of your computer, including this *User Guide*. To get the latest documentation, go to <https://support.lenovo.com>.
- This documentation applies to the following product models:

| Model Name             | Machine Type (MT) |
|------------------------|-------------------|
| IP Flex 3 Chrome 11JL6 | 82N3              |



---

# Contents

About this documentation . . . . . ii

## Chapter 1. Meet your Chromebook . . . 1

Front . . . . . 1  
Base . . . . . 2  
Left . . . . . 3  
Right . . . . . 4  
Features and specifications . . . . . 5  
    Statement on USB transfer rate . . . . . 6  
Operating environment . . . . . 6

## Chapter 2. Get started with your Chromebook . . . . . 7

Charge your Chromebook . . . . . 7  
User interface . . . . . 8  
Connect to Wi-Fi . . . . . 8  
Get to know YOGA modes . . . . . 8  
Use the power button . . . . . 9  
Connect to Bluetooth devices . . . . . 10  
Set the power plan . . . . . 10  
Use the Nano security-lock slot . . . . . 10

## Chapter 3. Navigate the screen . . . . 11

Use the multi-touch screen . . . . . 11  
Use the special keys . . . . . 11  
Use the touchpad . . . . . 12

## Chapter 4. Use multimedia . . . . . 15

Use the camera . . . . . 15  
Use audio . . . . . 15  
Connect to an external display . . . . . 15

## Chapter 5. Account, login, and logout . . . . . 17

Types of user account for logging into Chrome . . . 17  
Become your Chromebook's owner . . . . . 17  
Sign in with a Google Account other than the owner's . . . . . 18  
Browse as a guest . . . . . 18  
Create a supervised account . . . . . 18  
Sign out . . . . . 18  
Control who can use your Chromebook . . . . . 19  
Check a Chromebook's owner . . . . . 19  
Disable guest login . . . . . 19  
Lock your Chromebook . . . . . 19  
Shut down your Chromebook . . . . . 19

Reset your Chromebook . . . . . 20

Get help from Google . . . . . 20

## Chapter 6. Manage files and folders . . . . . 21

What is Google Drive . . . . . 21  
Your local storage space . . . . . 21  
The Files app . . . . . 21  
Create folders using the Files app . . . . . 21  
Delete unused files . . . . . 21  
Check the amount of available storage . . . . . 21  
Expand the local storage . . . . . 22

## Chapter 7. Language settings. . . . . 23

Change display language . . . . . 23  
Add an input method . . . . . 23  
Switch among input methods . . . . . 23

## Chapter 8. Add and manage apps. . . . 25

What is Chrome Web Store . . . . . 25  
Add apps or extensions . . . . . 25  
Install Android apps . . . . . 25  
Pin apps to shelf . . . . . 26  
Pin Web pages to shelf . . . . . 26

## Chapter 9. Lenovo help and support . . . . . 27

Lenovo support Web site . . . . . 27  
Call Lenovo customer support center . . . . . 27  
    Before calling customer support . . . . . 27  
    Services supported by Lenovo customer support center . . . . . 27  
    Services not supported by Lenovo customer support center . . . . . 27  
    Support phone numbers . . . . . 27

## Appendix A. Important safety information. . . . . 29

## Appendix B. Compliance information. . . . . 31

## Appendix C. Accessibility, ergonomic, and maintenance information. . . . . 33

Notices and trademarks . . . . . xxxix



---

# Chapter 1. Meet your Chromebook

**Note:** Your computer might look different from the illustrations in this chapter.

---

## Front



|                 |                        |
|-----------------|------------------------|
| 1. Antennas     | 2. Microphones         |
| 3. Camera       | 4. Camera cover slider |
| 5. Camera light | 6. Multi-touch screen  |

Base



|             |             |
|-------------|-------------|
| 1. Speaker  | 2. Keyboard |
| 3. Touchpad |             |

**Left**



|                                     |                                     |
|-------------------------------------|-------------------------------------|
| 1. Charging LED                     | 2. Power connector/USB-C® connector |
| 3. USB (3.2 Gen 1) Type-A connector | 4. Combo audio jack                 |
| 5. MicroSD card slot                |                                     |

**Right**



|                                     |                        |
|-------------------------------------|------------------------|
| 1. Power button                     | 2. Volume buttons      |
| 3. USB (3.2 Gen 1) Type-A connector | 4. HDMI™ 1.4 connector |
| 5. Nano security-lock slot          |                        |

## Features and specifications

|                      |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|----------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Dimensions           | Approximately 285.5 mm x 205.2 mm x 18.45 mm (11.2 inches x 8.1 inches x 0.7 inches)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| Weight               | Approximately 1.25 kg (2.76 lb)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| Screen               | <ul style="list-style-type: none"> <li>• Color display with In-Plane Switching (IPS) technology</li> <li>• Multi-touch screen</li> <li>• Resolution: 1366 x 768 pixels HD</li> <li>• Size: 294.6 mm (11.6 inches)</li> </ul>                                                                                                                                                                                                                                                                                                                                                   |
| Memory               | <ul style="list-style-type: none"> <li>• Type: Low Power Double data rate 4 (LPDDR4x)</li> <li>• Capacity: 4 GB or 8 GB</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| Storage device       | <ul style="list-style-type: none"> <li>• Type: Embedded multi media card (eMMC)</li> <li>• Capacity: 32 GB or 64 GB or 128 GB</li> </ul> <p><b>Note:</b> The capacity of the storage device displayed in the operating system is typically lower than the nominal capacity.</p>                                                                                                                                                                                                                                                                                                |
| Connectors and slots | <ul style="list-style-type: none"> <li>• Combo audio jack</li> <li>• HDMI 1.4 connector</li> <li>• MicroSD card slot</li> <li>• USB-C connector <ul style="list-style-type: none"> <li>– Power input up to 45 W using the included power adapter</li> <li>– Power output up to 5 V and 3 A</li> <li>– USB data transfer rate up to 5 Gbps for USB 3.2 Gen 1</li> <li>– DisplayPort™ 1.4. Supports maximum output resolution of 4096 × 2160, at 60 Hz frame rate and color depth of 24 bpp (bits per pixel).</li> </ul> </li> <li>• USB (3.2 Gen 1) Type-A connector</li> </ul> |
| Wireless features    | <ul style="list-style-type: none"> <li>• Bluetooth</li> <li>• Wireless LAN</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| Security             | <ul style="list-style-type: none"> <li>• Nano security-lock slot</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| Others               | <ul style="list-style-type: none"> <li>• Camera</li> <li>• Microphone</li> <li>• Speaker</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |

|                  |                                                                                                                                                                                                                                                                                                                                                                                         |
|------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Battery pack     | <ul style="list-style-type: none"> <li>Type: Built-in Li-Polymer battery</li> <li>Number of cells: 3</li> <li>Capacity: 42 Wh</li> </ul> <p><b>Note:</b> The capacity listed here is the typical or average capacity as measured in a specific test environment. Capacities measured in other environments may differ but are no lower than the rated capacity (see product label).</p> |
| ac power adapter | <ul style="list-style-type: none"> <li>Input: 100 V to 240 V, 50 Hz to 60 Hz</li> <li>Output: 15 V</li> <li>Power: 45 W</li> </ul>                                                                                                                                                                                                                                                      |

**Note:** Specifications might change without notice. Some specifications are model-specific and might not apply to the computer model that you purchased.

## Statement on USB transfer rate

Depending on many factors such as the processing capability of the host and peripheral devices, file attributes, and other factors related to system configuration and operating environments, the actual transfer rate using the various USB connectors on this device will vary and will be slower than the data rate listed below for each corresponding device.

| USB device | Data rate (Gbit/s) |
|------------|--------------------|
| 3.2 Gen 1  | 5                  |

## Operating environment

### Maximum altitude

3048 m (10 000 ft) (without pressurization)

### Temperature

- Operating : 5 °C – 35 °C (41 °F – 95 °F)
- Storage: 5 °C – 43 °C (41 °F – 109 °F)

**Note:** When charging the battery pack, the environment temperature must be no lower than 10 °C (50 °F).

### Relative humidity

- Operating: 8% – 95% at wet-bulb temperature 23 °C (73 °F)
- Storage: 5% – 95% at wet-bulb temperature 27 °C (81 °F)

If possible, place your computer in a well-ventilated and dry area without direct exposure to sunshine.

---

## Chapter 2. Get started with your Chromebook

---

 
### Charge your Chromebook

The USB-C connector on your Chromebook works as the power connector. Plug in the ac power adapter to charge the built-in battery pack and provide power to the Chromebook.

#### Connect to ac power

##### CAUTION:

All plugs must be firmly and securely inserted into receptacles.

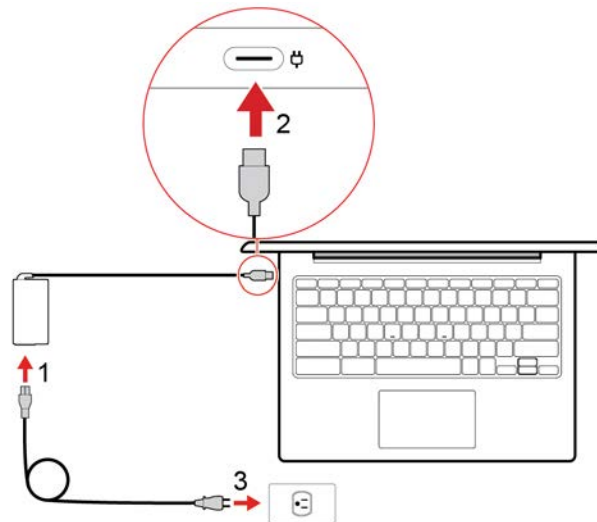

1. Connect the power cord to the ac power adapter.
2. Plug the power adapter into the USB-C connector of the Chromebook.
3. Plug the power cord into an electrical outlet.

#### AC power status indicator behavior

The ac power status indicator is next to the USB-C connector. The following table shows the indicator behaviors and the indicated power and battery status.

| AC power status indicator | Power status | Battery status                                       |
|---------------------------|--------------|------------------------------------------------------|
| on (red)                  | plugged in   | being charged, remaining power is less than 5%       |
| on (amber)                | plugged in   | being charged, remaining power is between 5% and 97% |
| on (green)                | plugged in   | fully charged (97% to 100%)                          |
| off                       | unplugged    | discharging                                          |

---

## User interface



|                                |                                                                                                                                                                      |
|--------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1. The Launcher button         | Open the search box and App Launcher.                                                                                                                                |
| 2. App shelf                   | Pin your frequently-used app or Web page to the app shelf for easy access.                                                                                           |
| 3. Search box and App Launcher | <ul style="list-style-type: none"><li>Type the name of your device, app, or Web page in the search box.</li><li>Open an app quickly from the App Launcher.</li></ul> |
| 4. Status tray                 | Manage connections, updates, and settings. By default, the time, network connection status, battery status, and your account picture are displayed.                  |
| 5. Wallpaper                   | Your wallpaper might look different. To change the wallpaper, right-click a blank area of your desktop and select <b>Set Wallpaper</b> .                             |

To discover more features and get help, click your account picture and select the question mark ?.

---

## Connect to Wi-Fi

To connect your Chromebook to Wi-Fi:

1. Click your account picture.
2. Click the network icon and turn on the wireless feature.
3. Select an available network to connect. Provide required information if needed.

---

## Get to know YOGA modes

Your computer display can be rotated to any angle up to 360 degrees.

### Attention:

- Do not rotate the computer display with too much force, or apply too much force to the upper-right or upper-left corner of the computer display. Otherwise, the computer display or hinges might get damaged.
- The keyboard and the pointing devices are automatically disabled in stand mode, tent mode, and tablet mode. Use the touch screen to control your computer instead.

Your Chromebook features the following four YOGA modes. You can switch among different modes according to your preference.



 
**Notebook mode**



**Stand mode**



**Tent mode**

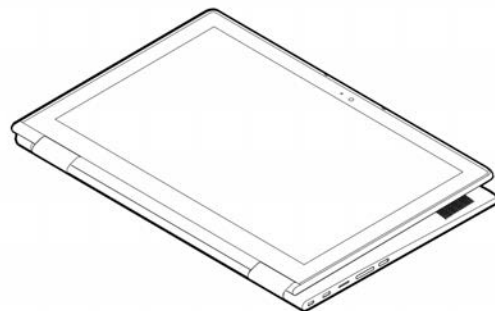

**Tablet mode**

---

## Use the power button

When you open the computer screen, the Chromebook automatically starts. If it doesn't, press the power button. You also can use the power button to put your Chromebook to sleep or wake your Chromebook.

The power button is on the right side of the computer. For details, see “Use the special keys” on page 11. The power button has an integrated LED to show the power status.

Table 1. Power button LED behavior

| LED status    | Power status  |
|---------------|---------------|
| on (white)    | powered on    |
| blink (white) | in sleep mode |
| off           | powered off   |

## Connect to Bluetooth devices

Your Chromebook supports Bluetooth feature. You can connect your Chromebook to a Bluetooth keyboard, mouse, speakers, or other Bluetooth devices.

**Note:** The Bluetooth devices must be within a short distance, usually 10 meters (33 feet), from the Chromebook.

1. Click your account picture, and then click the Bluetooth icon.
2. Turn on **Bluetooth**.
3. Select the device you want to pair and follow the on-screen instructions.

## Set the power plan

For ENERGY STAR® compliant computers, the following power plan takes effect when your computers have been idle for a specified duration:

Table 2. Default power plan (when plugged into ac power)

|                                                                                                                                                   |  |
|---------------------------------------------------------------------------------------------------------------------------------------------------|--|
| <ul style="list-style-type: none"> <li>• Turn off the display: After 7.5 minutes</li> <li>• Put Chromebook to sleep: After 8.5 minutes</li> </ul> |  |
|---------------------------------------------------------------------------------------------------------------------------------------------------|--|

To change the power plan settings:

1. Click your account picture, and then click the settings icon.
2. Click **Settings → Device → Power**.
3. Follow the on-screen instruction to change the settings as you desire.

To wake your Chromebook from sleep mode, press the power button or any key on the keyboard.

## Use the Nano security-lock slot

Lock your computer to a desk, table, or other fixtures through a compatible security cable lock.

The slot supports cable locks that conform to the Kensington NanoSaver® lock standards using Cleat™ locking technology. Do not attempt to use other types of cable locks that use a rotating T-bar™ locking mechanism. You are responsible for evaluating, selecting, and implementing the locking device and security feature. Lenovo makes no comments, judgments, or warranties about the function, quality, or performance of the locking device and security feature. Cable locks for your product are available from Lenovo at <https://www.lenovoquickpick.com/>.

 
---

## Chapter 3. Navigate the screen

---

### Use the multi-touch screen

**Note:** Some gestures might not be available depending on the app you use.

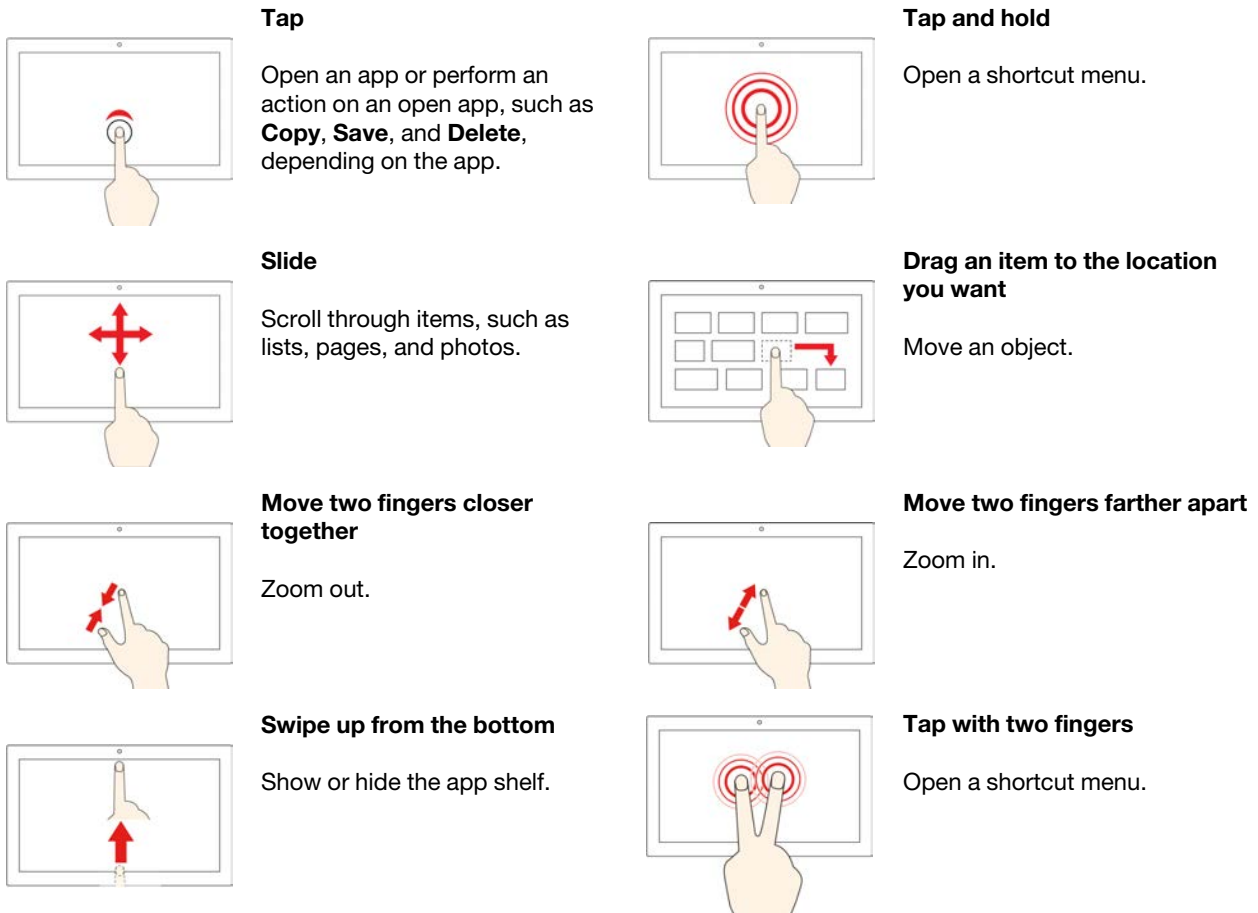

#### Tips

- Turn off the computer before cleaning the multi-touch screen.
- Use a dry, soft, and lint-free cloth or a piece of absorbent cotton to remove fingerprints or dust from the multi-touch screen. Do not apply solvents to the cloth.
- The multi-touch screen is a glass panel covered with a plastic film. Do not apply pressure or place any metallic object on the screen, which might damage the touch panel or cause it to malfunction.
- Do not use fingernails, gloved fingers, or inanimate objects for input on the screen.
- Regularly calibrate the accuracy of the finger input to avoid a discrepancy.

---

### Use the special keys

Your Chromebook keyboard works just like a conventional keyboard but with a few special keys.

|                                                                                   |                                                        |
|-----------------------------------------------------------------------------------|--------------------------------------------------------|
|  | Go to the previous page                                |
|  | Go to the next page                                    |
|  | Reload your current page                               |
|  | Hide the tabs and the App Launcher in full-screen mode |
|  | Show all windows in overview mode                      |
|  | Decrease the brightness of the computer screen         |
|  | Increase the brightness of the computer screen         |
|  | Mute the speakers                                      |
|  | Decrease the volume                                    |
|  | Increase the volume                                    |
|  | Lock the computer screen                               |

Your Chromebook also supports the following key combinations:

|                                                                                            |                                                             |
|--------------------------------------------------------------------------------------------|-------------------------------------------------------------|
| ctrl +    | Take a screenshot                                           |
| alt +     | Switch the Caps Lock function                               |
|  + L     | Lock your computer screen                                   |
| ctrl + alt + ?                                                                             | View all keyboard shortcuts                                 |
| *alt +  | Turn off the keyboard backlight and decrease the brightness |
| *alt +  | Turn on the keyboard backlight and increase the brightness  |

\* For selected models

To change the keyboard settings:

 
1. Click your account picture, and then click the settings icon.
2. Click **Settings → Device → Keyboard**.
3. Follow the on-screen instruction to change the settings as you desire.

## Use the touchpad

You can use the touchpad to perform various touch gestures. The following section introduces some frequently used touch gestures, such as tapping, dragging, and scrolling.

### Notes:

- When using two or more fingers, ensure that you position your fingers slightly apart.
- Some gestures are only available when you are using certain apps.
- If the touchpad surface is stained with oil, turn off the computer first. Then, gently wipe the touchpad surface with a soft and lint-free cloth moistened with lukewarm water or computer cleaner.

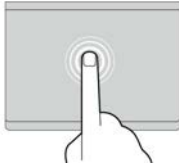


### Tap

Tap anywhere on the touchpad with one finger to select or open an item.




### Two-finger tap

 Tap anywhere on the touchpad with two fingers to display a shortcut menu.

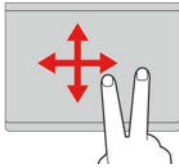

### Two-finger scroll

 Put two fingers on the touchpad and move them in the vertical or horizontal direction. This action enables you to scroll through the document, Website, or apps.

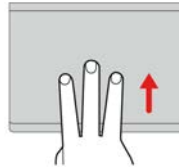

### Swipe three fingers up or down

Put three fingers on the touchpad and move them up or down to see all your open windows.

To change the settings:

1. Click your account picture, and then click the settings icon.
2. Click **Settings → Device → Touchpad**.
3. Follow the on-screen instruction to change the settings as you desire.



---

## Chapter 4. Use multimedia

---

### Use the camera

The built-in camera can be used for video calling or video conferencing. The indicator next to the camera turns on when the camera is activated.

To take photos with the camera:

1. Click the Launcher button, and then click **All apps**.
2. Click **Camera**.
3. Click the camera icon.

---

### Use audio

You can connect headphones or a headset with a 3.5-mm (0.14-inch), 4-pole plug to the audio connector to listen to the sound from your Chromebook.

To play a saved audio or video:

1. Click the Launch button, and then select **Files**.
2. Double-click a file to open it in the media player.

To adjust the volume, click the account picture, and then adjust the volume as you prefer.

---

### Connect to an external display

You can use the Chromebook's USB-C connectors to connect a projector or an external display.

1. Use a USB-C to USB-C cable (not supplied) to connect your Chromebook to an external display.

**Note:** If the external display does not support input through USB-C connector, you may need to purchase and use adapters. Lenovo provides various USB-C accessories at <https://www.lenovo.com/accessories>, to help you expand your computer functionality.

2. Connect the external display to an electrical outlet.
3. Turn on the external display.

To change display settings:

1. Click your account picture, and then click **Settings**.
2. In the **Device** section, click **Displays**.
3. Follow the on-screen instructions to change the display settings as you desire.



---

## Chapter 5. Account, login, and logout

---

### Types of user account for logging into Chrome

There are three types of user accounts you may use to log into the Chromebook.

| Types of user account | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|-----------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Google® Account       | <p>A user account that has access to a variety of Google Web services, including Gmail™, Google Drive, and Google Docs. Typically a Google Account is created when you apply for a Gmail account. A Google Account can be used to log into any Chrome-based device unless the account is restricted by the device's owner. For details, refer to "Control who can use your Chromebook" on page 19.</p> <p>The first Google Account logged into a Chrome-based device becomes the owner account. If you do not have a Google Account, you can create one at <a href="http://www.google.com/accounts/NewAccount">http://www.google.com/accounts/NewAccount</a>.</p> |
| Guest account         | <p>A special account for logging into Chrome. A Guest user has limited privilege and may only be used for temporary sharing of a Chrome-based device.</p> <p><b>Note:</b> Guest login may be disabled by a device's owner. For details, refer to "Disable guest login" on page 19.</p>                                                                                                                                                                                                                                                                                                                                                                            |
| Supervised account    | <p>A special account created by a Google Account (manager) logged into a Chrome-based device. A supervised account is device-specific and cannot be used to log into other Chrome-based device.</p> <p>The manager of a supervised user can review and control a supervised user's use of the Internet.</p>                                                                                                                                                                                                                                                                                                                                                       |

---

### Become your Chromebook's owner

When starting your Chromebook for the first time, you need to set the operating system language and keyboard, the Internet connection, and sign in with your Google Account. The user of the first Google Account signed into a Chromebook becomes the device's owner.

**Note:** The owner of a Chromebook has permissions to enable (or disable) Guest account login and restrict login of certain Google Accounts.

1. Start your Chromebook.
2. Select your local language and keyboard when prompted.
3. Set up connection to your wireless router (or a wireless LAN) that has the Internet access.

**Note:** This step cannot be skipped. You must be connected to the Internet when starting your Chromebook for the first time.

4. Sign in with your Google Account. If you do not have a Google Account, select **Create a Google Account** and follow the on-screen instructions to create one.

You're now your Chromebook's owner. To verify this, refer to "Check a Chromebook's owner" on page 19.

---

## Sign in with a Google Account other than the owner's

As the device owner, you may share your Chromebook with other people. They can use their Google Accounts to sign in and use your Chromebook.

1. Start the Chromebook.
2. On the login screen, click **Add person**.
3. Type the Google Account user name and password to sign in.

**Note:** An Internet connection is required when signing in for the first time.

If you cannot sign in with your Google Account, your account may be restricted by the Chromebook owner. For details, refer to "Control who can use your Chromebook" on page 19.

---

## Browse as a guest

You may share your Chromebook with people who do not have a Google Account. They can use your Chromebook with a special guest account.

**Note:** Some operations such as installing apps are disabled if you log in as a guest.

1. Start the Chromebook.
2. On the login screen, click **Browse as Guest**.

**Note:** If you cannot sign in, guest browsing may be disabled by the Chromebook owner.

---

## Create a supervised account

You may need to create a supervised account for your child to use your Chromebook. As the manager of a supervised account, you have the ability to review and control their use of the Internet.

1. Start the Chromebook.
2. On the login screen, click the ... icon and then click **Add supervised user**.

**Note:** You can only create a supervised account when your Chromebook is connected to the Internet.

3. Select the manager of the supervised user and provide your password.
4. Create the name and password for the supervised user.

To change restriction settings for the supervised user, go to [www.chrome.com/manage](http://www.chrome.com/manage).

---

## Sign out

If you or others need to sign in with another account, sign out of current login session.

1. Click the status tray.
2. Click **Sign out**.

---

## Control who can use your Chromebook

By default, anyone with a valid Google Account can sign in to a Chromebook. However, as a Chromebook owner, you can set up permissions to only allow people with certain accounts to sign in.

1. Start the Chromebook.
2. Sign in with the owner's Google Account.

**Note:** If you're not sure who is the Chromebook's owner, refer to "Check a Chromebook's owner" on page 19.

3. Click the status area in the lower-right corner and then click **Settings**.
4. Under **People**, click **Manage other people**.
5. Check **Restrict sign-in to the following users** and add the Google Accounts that you want to give permission.

---

## Check a Chromebook's owner

Typically, the user of the first Google Account signed in is set as a Chromebook's owner. However, if you're not sure whether you're the owner, you can follow the steps below to check a Chromebook's owner.

1. Sign in with your Google Account.
2. Click the status tray in the lower-right corner and then click the settings icon.
3. Under **People**, click **Manage other people**.

If you're not the owner of the Chromebook, you will get a warning message that the settings may only be modified by the device owner. The user name of the owner is also displayed.

---

## Disable guest login

As a Chromebook's owner, you can disable guest login for security concerns.

1. Start the Chromebook by lifting up the LCD cover.
2. Click the status area in the lower-right corner and then click **Settings**.
3. Under **People**, click **Manage other people**.
4. Clear **Enable Guest browsing**.

---

## Lock your Chromebook

If you need to leave your Chromebook temporarily, lock it so others cannot tamper with your settings or files.

1. Click the status tray.
2. Click the lock icon.

**Note:** As a shortcut, you can also press and hold the lock key on your keyboard to lock your Chromebook.

---

## Shut down your Chromebook

When you finish working with your Chromebook, shut it down to save power.

1. Click the status tray.
2. Click the shut down button.

---

## Reset your Chromebook

If you need to transfer ownership of your Chromebook or if you experience problems with the operating system, you might need to reset your Chromebook.

**Important:** After resetting your Chromebook, user data for all accounts stored locally will be deleted. Back up important data to Google Drive or external storage devices before resetting your Chromebook.

1. Click the status tray in the lower-right corner.
2. Click the settings icon and then click **Advanced**.
3. Under **Reset**, click **Powerwash** and then click **RESTART**.

---

## Get help from Google

After signing in to your Chromebook, click **Get Help** from the App Launcher. The **Get Help** app provides comprehensive instructions on using a Chromebook.

In addition, Google provides an online community for Chromebook users. If you are interested, go to <http://chromebook.com/community>.

---

## Chapter 6. Manage files and folders

---

### What is Google Drive

Google Drive is a server-based file storage and sharing service provided by Google. By creating a Google Account, you get an initial free storage space where you can save files of various formats. From your Chromebook, you can use the Google Drive app or the Files app to create and manage files on your online storage space.

**Note:** The Google Drive client software is available for Windows®, Android™, OSX and iOS. If you have devices running those operating systems, you can download and install Google Drive on these devices. Google Drive provides a convenient way of sharing files between devices. You can also find your files online by visiting: <http://drive.google.com>.

---

### Your local storage space

Each Google Account signed in to a Chromebook is assigned a local storage space, in a folder named Downloads. Each Google Account has its own Downloads. You can only view and edit files in your own Downloads folder.

---

### The Files app

Your Chromebook has a Files app for you to manage files and folders on your local storage device, a connected external storage device, or Google Drive. The Files app can be started from the App Launcher.

---

### Create folders using the Files app

You can create folders and subfolders for better management of files.

1. Start the Files app from the App Launcher.
2. On the left pane, select a storage space where you want to save files.

**Note:** A storage space may reside on your local storage device, a connected external storage device, or Google Drive.

3. Click the settings icon in the upper right corner, and then click **New folder**.

---

### Delete unused files

In some cases, you may need to delete unused files to free storage space.

1. Start the Files app from the App Launcher.
2. On the left pane, select the storage space and then navigate to the folder where unused files are stored.

3. Select unused files and then click the delete button  in the lower right corner.

---

### Check the amount of available storage

If you have failed saving a large-size file, you may need to check the amount of available storage and then decide if you need to delete unused files to free more storage.

1. Start the Files app from the App Launcher.

2. On the left pane, select a storage space.
3. Click the settings icon in the upper right corner. The amount of available storage is displayed.

---

## Expand the local storage

You can insert a microSD card into the microSD card slot to expand the Chromebook's local storage capacity.

### Insert a microSD card

1. Locate the card slot.
2. Ensure the metal contacts of the microSD card is facing downwards when inserting it into the slot.
3. Insert the card firmly into the card slot.

### Remove a microSD card

1. Ensure that the computer has finished writing data to the microSD card.
2. On the left pane of the File app, click the eject button (next to **SD Card**).
3. Press the card and remove it from your computer. Store the card safely for future use.

---

## Chapter 7. Language settings

---

### Change display language

When starting your Chromebook for the first time, you're prompted to select the display language. This setting can be changed at a later time if you need to use a different language.

1. Sign in to your Chromebook with your Google Account.
2. Click the status tray in the lower-right corner and then click the settings icon.
3. Click **Advanced**.
4. Under **Languages and input** click the button next to the language you want to use; select **Display Chrome OS in this language**.

**Note:** If the language you want to use isn't shown in the list, click **Add languages**.

You need to sign out and then sign in for the changes to take effect.

**Note:** Each signed-in user may set their own display language.

---

### Add an input method

You may need to add an input method to type text in a particular language.

1. Sign in to your Chromebook with your Google Account.
2. Click the status tray in the lower-right corner, and then click the settings icon.
3. Click **Advanced**.
4. Under **Languages and input**, select **Input method → Manage input methods**.
5. Select the check box preceding the input method you want to add.

---

### Switch among input methods

If you have added input methods, you may need to switch among them.

1. Click the status tray in the lower-right corner, and then click the name of the current input method. The list of available input methods is displayed. If you do not find your desired input method in the list, refer to "Add an input method" on page 23.
2. Click the name of your desired input method.

**Notes:** As a shortcut, use key combinations to switch among input methods.

- Alt + Shift to switch among available input methods.
- Ctrl + Space to switch to your previous input method.



---

## Chapter 8. Add and manage apps

You can add features and functions to your Chromebooks by downloading apps from the Web Store or the Play Store.

Table 3. Comparison of available resources between the Web Store and the Play Store

| Web Store  | Play Store |
|------------|------------|
| Apps       | Apps       |
| Extensions | Music      |
| Themes     | Movies     |
| Games      | Games      |

**Note:** You cannot download and install apps if you're signing in as Guest.

---

### What is Chrome Web Store

Chrome™ Web Store is a Web resource that provides apps and extensions dedicated for your Chromebook and the Chrome browser.

**Note:** Extensions are add-on features for the Chrome browser. Most of the apps and extension available on the Chrome Web Store are free but some may require payment.

You can access the Chrome Web Store by either of the following ways:

- Click the Web Store icon from the App Launcher.
- Visit <http://chrome.google.com/webstore> directly using the Chrome browser.

Apps and extensions downloaded from the Web Store run completely within the Chrome browser.

---

### Add apps or extensions

1. Click the App Launcher in the lower left corner, and then click **Web Store**.
2. Within the store, find your app or extension by typing keywords or searching the list by category.
3. Click the add icon and then click **Add**.

Most of the apps from the Web Store are Web-based and do not require installation. The added apps are pinned to the App Launcher and extensions to the right of the Chrome's address bar.

**Note:** If you sign in to different Chromebooks with the same Google Account, apps you added on one Chromebook are synchronized on other Chromebooks.

---

### Install Android apps

You can download and install Android apps on your Chromebook using the Google Play™ Store.

1. Start Play Store from the App Launcher.
2. Select the app that you want to install and then select **Install**.

**Note:** Not all apps in the Play Store are free of charge. Some apps require purchase for downloading or full-function using.

The installed Android apps are accessible from the App Launcher.

---

## Pin apps to shelf

Apps pinned to shelf are accessible from the lower-left corner of the Chrome desktop.

1. Locate the app icon in the App Launcher.
2. Pressing and holding the app icon, select **Pin to shelf** on the context menu.

To unpin an app, press and hold the app icon on the shelf, then select **Unpin** on the context menu.

---

## Pin Web pages to shelf

If you find yourself visiting a web page frequently, you may pin it to shelf for easy access.

1. Start the Chrome browser and go to your favorite Web page.
2. With the Web page open, select the exclamation mark to the right of the address bar.
3. Select **More tools → Add to shelf → Add**.

**Note:** You may choose to select the **Open as window** check box here. If you've selected this option, the Web page will start in a dedicated window, instead of in a tabbed window of the Chrome browser.

To unpin an app, press and hold the app icon on the shelf, then select **Unpin** on the context menu.

---

## Chapter 9. Lenovo help and support

---

### Lenovo support Web site

Technical support information is available on the Lenovo support Web site at <https://support.lenovo.com>.

---

### Call Lenovo customer support center

If you have tried to correct the problem yourself but still need help, during the warranty period, you can get help and information by telephone through the customer support center.

### Before calling customer support

Ensure that you have downloaded the most current drivers and system updates and recorded information about your computer before you call. When calling for technical assistance, have the following information available.

- Machine type and model
- Serial number of your computer
- Description of the problem
- Exact wording of any error messages
- Hardware and software configuration information

### Services supported by Lenovo customer support center

The following services are available during the warranty period.

- Problem determination - Trained personnel are available to assist you with determining if you have a hardware problem and deciding what action is necessary to fix the problem.
- Lenovo hardware repair - If the problem is determined to be caused by Lenovo hardware under warranty, trained service personnel are available to provide the applicable level of service.
- Engineering change management - Occasionally, there might be changes that are required after a product has been sold. Lenovo or your reseller, if authorized by Lenovo, will make selected Engineering Changes (ECs) that apply to your hardware available.

### Services not supported by Lenovo customer support center

- Replacement or use of parts not manufactured for or by Lenovo or non-warranted parts
- Identification of software problem sources
- Configuration of UEFI BIOS as part of an installation or upgrade
- Changes, modifications, or upgrades to device drivers
- Installation and maintenance of network operating systems (NOS)
- Installation and maintenance of programs

### Support phone numbers

For the Lenovo support phone number for your country or region, go to <https://pcsupport.lenovo.com/supportphonenumber>.

**Note:** Phone numbers are subject to change without notice. If the number for your country or region is not provided, contact your Lenovo reseller or Lenovo marketing representative.

---

## Appendix A. Important safety information

---

### Non-rechargeable coin-cell battery notice



If the coin-cell battery is incorrectly replaced, there is danger of an explosion. The battery contains a small amount of harmful substance.

Do not heat to more than 100 °C (212 °F).

The following statement applies to users in the state of California, U.S.A.

Products containing manganese dioxide lithium coin-cell batteries may contain perchlorate. Perchlorate Material - special handling may apply, see [www.dtsc.ca.gov/hazardouswaste/perchlorate](http://www.dtsc.ca.gov/hazardouswaste/perchlorate)



---

## Appendix B. Compliance information

---

### Lenovo compliance information Web sites

The latest electronic compliance and environmental information are available from the Lenovo compliance information Web sites.

- To view compliance information, go to <https://www.lenovo.com/compliance>
  - To download environmental declarations, go to <https://www.lenovo.com/ecodeclaration>
- 

### General recycling information

Lenovo encourages owners of information technology (IT) equipment to responsibly recycle their equipment when it is no longer needed. Lenovo offers a variety of programs and services to assist equipment owners in recycling their IT products. For information about recycling Lenovo products, go to <https://www.lenovo.com/recycling>.

---

### Electromagnetic emissions notices

#### Federal Communications Commission (FCC) Supplier's Declaration of Conformity

The following information applies to IP Flex 3 Chrome 11JL6, machine type: 82N3

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult an authorized dealer or service representative for help.

Lenovo is not responsible for any radio or television interference caused by using cables and connectors other than those recommended by Lenovo or by unauthorized changes or modifications to this equipment. Unauthorized changes or modifications could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Responsible Party:  
Lenovo (United States) Incorporated  
7001 Development Drive  
Morrisville, NC 27560  
Email: [FCC@lenovo.com](mailto:FCC@lenovo.com)



## Location for the FCC ID and IC ID

If you purchased your computer in the United States or Canada and the computer includes factory-preinstalled wireless modules, a piece of text containing identification strings for these modules (FCC ID and IC ID) is visible on the computer's bottom cover. The text may either be laser etched on the bottom cover or on a physical label affixed to it. To obtain the FCC ID or IC ID for the factory-preinstalled wireless module, check the bottom cover for strings directly after "FCC ID" or "IC ID".

## Korea radio frequency compliance statement

무선설비 전파 혼신 (사용주파수 **2400~2483.5** , **5725~5825** 무선제품해당)

해당 무선설비가 전파혼신 가능성이 있으므로 인명안전과 관련된 서비스는 할 수 없음

### SAR 정보

본 장치는 전파 노출에 대한 가이드라인을 충족합니다.

본 장치는 무선 송수신기입니다. 본 장치는 국제 가이드라인으로 권장되는 전파 노출에 대한 제한을 초과하지 않도록 설계되었습니다. 장치 액세서리 및 최신 부품을 사용할 경우 SAR 값이 달라질 수 있습니다. SAR 값은 국가 보고 및 테스트 요구 사항과 네트워크 대역에 따라 다를 수 있습니다. 본 장치는 사람의 신체에서 10mm 이상의 거리에서 사용할 수 있습니다.

---

## Appendix C. Accessibility, ergonomic, and maintenance information

---

### Accessibility information

Lenovo is committed to providing users who have hearing, vision, and mobility limitations with greater access to information and technology. This section provides information about the ways these users can get the most out of their computer experience. You also can get the most up-to-date accessibility information from the following Web site:

<https://www.lenovo.com/accessibility>

#### Keyboard shortcuts

The following list contains keyboard shortcuts that can help make your computer easier to use.

**Note:** Depending on your keyboard, some of the following keyboard shortcuts might not be available.

- **Windows logo key + U:** Open Ease of Access Center
- **Right Shift for eight seconds:** Turn on or turn off Filter Keys
- **Shift five times:** Turn on or turn off Sticky Keys
- **Num Lock for five seconds:** Turn on or turn off Toggle Keys
- **Left Alt+Left Shift+Num Lock:** Turn on or turn off Mouse Keys
- **Left Alt+Left Shift+PrtScn (or PrtSc):** Turn on or turn off High Contrast

For more information, go to <https://windows.microsoft.com/>, and then search using any of the following keywords: keyboard shortcuts, key combinations, shortcut keys.

#### Ease of Access Center

Ease of Access Center on the Windows operating system enables you to configure your computers to suit their physical and cognitive needs.

To access Ease of Access Center:

1. Go to Control Panel and view by Category.
2. Click **Ease of Access → Ease of Access Center**.
3. Choose the appropriate tool by following the on-screen instructions.

Ease of Access Center mainly includes the following tools:

- Magnifier

Magnifier is a useful utility that enlarges the entire screen or part of the screen so that you can see the items better.

- Narrator

Narrator is a screen reader that reads what is displayed on the screen aloud and describes events such as error messages.

- On-Screen Keyboard

If you prefer to type or enter data into your computer using a mouse, joystick, or other pointing device instead of a physical keyboard, you can use On-Screen Keyboard. On-Screen Keyboard displays a visual

keyboard with all the standard keys. You can select keys using the mouse or another pointing device, or you can tap to select the keys if your computer supports multi-touch screen.

- **High Contrast**

High Contrast is a feature that heightens the color contrast of some text and images on your screen. As a result, those items are more distinct and easier to identify.

- **Personalized keyboard**

Adjust keyboard settings to make your keyboard easier to use. For example, you can use your keyboard to control the pointer and make the keyboard easier to type certain key combinations.

- **Personalized mouse**

Adjust mouse settings to make your mouse easier to use. For example, you can change the pointer appearance and make your mouse easier to manage windows.

## **Speech Recognition**

Speech Recognition enables you to control your computer by voice.

You can use verbal instructions to control the keyboard and mouse. With verbal instructions, you can start programs, open menus, click objects on the screen, dictate text into documents, and write and send e-mails.

To use Speech Recognition:

1. Go to Control Panel and view by Category.
2. Click **Ease of Access → Speech Recognition**.
3. Follow the on-screen instructions.

## **Screen-reader technologies**

Screen-reader technologies are primarily focused on software program interfaces, help systems, and various online documents. For additional information about screen readers, see the following:

- Using PDFs with screen readers:  
<https://www.adobe.com/accessibility.html?promoid=DJGVE>
- Using the JAWS screen reader:  
<https://www.freedomscientific.com/Products/Blindness/JAWS>
- Using the NVDA screen reader:  
<https://www.nvaccess.org/>

## **Screen resolution**

You can make the text and images on your screen easier to read by adjusting the screen resolution of your computer.

To adjust the screen resolution:

1. Right-click a blank area on the desktop and then click **Display settings → Display**.
2. Follow the on-screen instructions.

**Note:** Setting a resolution too low might prevent some items from fitting on the screen.

## **Customizable item size**

You can make the items on your screen easier to read by changing the item size.

- To change the item size temporarily, use the Magnifier tool in Ease of Access Center.
- To change the item size permanently:

- Change the size of all the items on your screen.
  1. Right-click a blank area on the desktop and then click **Display settings → Display**.
  2. Change the item size by following the on-screen instructions. For some applications, your configuration might not take effect until you sign out and then sign in again.
- Change the size of the items on a Web page.  
Press and hold Ctrl, and then press the plus-sign key (+) to enlarge or the minus-sign key (–) to reduce the text size.
- Change the size of the items on the desktop or a window.

**Note:** This function might not work on some windows.

If your mouse has a wheel, press and hold Ctrl, and then scroll the wheel to change the item size.

### Industry-standard connectors

Your computer provides industry-standard connectors that enable you to connect assistive devices.

### Documentation in accessible formats

Lenovo provides electronic documentation in accessible formats, such as properly tagged PDF files or HyperText Markup Language (HTML) files. Lenovo electronic documentation is developed to ensure that visually impaired users can read the documentation through a screen reader. Each image in the documentation also includes adequate alternative text so that visually impaired users can understand the image when they use a screen reader.

---

## Ergonomic information

Good ergonomic practice is important to get the most from your personal computer and to avoid discomfort. Arrange your workplace and the equipment you use to suit your individual needs and the kind of work that you perform. In addition, use healthy work habits to maximize your performance and comfort when using your computer.

Working in the virtual office might mean adapting to frequent changes in your environment. Adapting to the surrounding light sources, active seating, and the placement of your computer hardware, can help you improve your performance and achieve greater comfort.

This example shows someone in a conventional setting. Even when not in such a setting, you can follow many of these tips. Develop good habits, and they will serve you well.



*Figure 1. Illustration of proper seating and computer positioning*

**General posture:** Make minor modifications in your working posture to deter the onset of discomfort caused by long periods of working in the same position. Frequent short breaks from your work also help to prevent minor discomfort associated with your working posture.

**Display:** Position the display to maintain a comfortable viewing distance of 510 mm to 760 mm (20 inches to 30 inches). Avoid glare or reflections on the display from overhead lighting or outside sources of light. Keep the display screen clean and set the brightness to levels that enable you to see the screen clearly. Press the brightness control keys to adjust display brightness.

**Head position:** Keep your head and neck in a comfortable and neutral (vertical, or upright) position.

**Chair:** Use a chair that gives you good back support and seat height adjustment. Use chair adjustments to best suit your comfort posture.

**Arm and hand position:** If available, use chair arm rests or an area on your working surface to provide weight support for your arms. Keep your forearms, wrists, and hands in a relaxed and neutral (horizontal) position. Type with a soft touch without pounding the keys.

**Leg position:** Keep your thighs parallel to the floor and your feet flat on the floor or on a footrest.

### **What if you are traveling?**

It might not be possible to observe the best ergonomic practices when you are using your computer while on the move or in a casual setting. Regardless of the setting, try to observe as many of the tips as possible. Sitting properly and using adequate lighting, for example, helps you maintain desirable levels of comfort and performance. If your work area is not in an office setting, ensure to take special note of employing active sitting and taking work breaks. Many product solutions are available to help you modify and expand your computer to best suit your needs. You can find some of these options at <https://www.lenovo.com/accessories>. Explore your options for docking solutions and external products that provide the adjustability and features that you want.

### **Questions about vision?**

The visual display screens of notebook computers are designed to meet the highest standards. These visual display screens provide you with clear, crisp images and large, bright displays that are easy to see, yet easy on the eyes. Any concentrated and sustained visual activity can be tiring. If you have questions on eye fatigue or visual discomfort, consult a vision-care specialist for advice.

---

## **Basic maintenance tips**

- Keep your computer away from magnets, activated cellular phones, electrical appliances, or speakers (more than 13 cm or 5 inches).
- Avoid subjecting your computer to extreme temperatures (below 5 °C/41 °F or above 35 °C/95 °F).
- Avoid placing any objects (including paper) between the display and the keyboard or the palm rest.
- Do not turn your computer over when the ac power adapter is plugged in, otherwise, it could break the adapter plug.
- Before moving your computer, be sure to remove any media, turn off attached devices, and disconnect cords and cables.
- When picking up your open notebook computer, hold it by the bottom. Do not pick up or hold your notebook computer by the display.
- Avoid directly exposing your computer and peripherals to the air from an appliance that can produce negative ions. Wherever possible, ground your computer to facilitate safe electrostatic discharge.

---

## **Cleaning your computer**

It is a good practice to clean your computer periodically to protect the surfaces and ensure trouble-free operation.

### **Cleaning the computer cover**

Wipe it with a lint-free cloth dampened in mild soap and water. Avoid applying liquids directly to the cover.

### **Cleaning the keyboard**

Wipe the keys one by one with a lint-free cloth dampened in mild soap and water. If you wipe several keys at a time, the cloth might hook onto an adjacent key and possibly damage it. Avoid spraying cleaner directly onto the keyboard. To remove any crumbs or dust from beneath the keys, you can use a camera blower with a brush or use cool air from a hair dryer.

### **Cleaning the computer screen**

Scratches, oil, dust, chemicals, and ultraviolet light can affect the performance of your computer screen. Use a dry, soft lint-free cloth to wipe the screen gently. If you see a scratch-like mark on your screen, it might be a stain. Wipe or dust the stain gently with a soft, dry cloth. If the stain remains, moisten a soft, lint-free cloth with water or eyeglass cleaner, but do not apply liquids directly to your computer screen. Ensure that the computer screen is dry before closing it.



---

## Notices and trademarks

### Notices

Lenovo may not offer the products, services, or features discussed in this document in all countries. Consult your local Lenovo representative for information on the products and services currently available in your area. Any reference to a Lenovo product, program, or service is not intended to state or imply that only that Lenovo product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any Lenovo intellectual property right may be used instead. However, it is the user's responsibility to evaluate and verify the operation of any other product, program, or service.

Lenovo may have patents or pending patent programs covering subject matter described in this document. The furnishing of this document does not give you any license to these patents. You can send license inquiries, in writing, to:

Lenovo (United States), Inc.  
8001 Development Drive  
Morrisville, NC 27560  
U.S.A.

Attention: Lenovo Director of Licensing

LENOVO PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some jurisdictions do not allow disclaimer of express or implied warranties in certain transactions, therefore, this statement may not apply to you.

Changes are made periodically to the information herein; these changes will be incorporated in new editions of the publication. To provide better service, Lenovo reserves the right to improve and/or modify the products and software programs described in the manuals included with your computer, and the content of the manual, at any time without additional notice.

The software interface and function and hardware configuration described in the manuals included with your computer might not match exactly the actual configuration of the computer that you purchase. For the configuration of the product, refer to the related contract (if any) or product packing list, or consult the distributor for the product sales. Lenovo may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you.

The products described in this document are not intended for use in implantation or other life support applications where malfunction may result in injury or death to persons. The information contained in this document does not affect or change Lenovo product specifications or warranties. Nothing in this document shall operate as an express or implied license or indemnity under the intellectual property rights of Lenovo or third parties. All information contained in this document was obtained in specific environments and is presented as an illustration. The result obtained in other operating environments may vary.

Lenovo may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you.

Any references in this publication to non-Lenovo Web sites are provided for convenience only and do not in any manner serve as an endorsement of those Web sites. The materials at those Web sites are not part of the materials for this Lenovo product, and use of those Web sites is at your own risk.

Any performance data contained herein was determined in a controlled environment. Therefore, the result obtained in other operating environments may vary significantly. Some measurements may have been made on development-level systems and there is no guarantee that these measurements will be the same on generally available systems. Furthermore, some measurements may have been estimated through extrapolation. Actual results may vary. Users of this document should verify the applicable data for their specific environment.

This document is copyrighted by Lenovo and is not covered by any open source license, including any Linux agreement(s) which may accompany software included with this product. Lenovo may update this document at any time without notice.

For the latest information or any questions or comments, contact or visit the Lenovo Web site:

<https://support.lenovo.com>

### **Trademarks**

LENOVO, the LENOVO logo, IdeaPad, and YOGA are trademarks of Lenovo. Google, Chrome, Chromebook, Gmail, Google Play, and Android are trademarks or registered trademarks of Google Inc. DisplayPort is a trademark of the Video Electronics Standards Association. The term HDMI and the HDMI logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries. USB-C is a trademark of USB Implementers Forum. Wi-Fi is a registered trademark of Wi-Fi Alliance. Other company, products, or service names may be trademarks or service marks of others. © 2021 Lenovo.



**Lenovo**