


Tablet PC

User Manual

BRAND NAME: 3Q

MODEL NAME: QS07XXX

FCC ID:PE4VOLGO72QTN

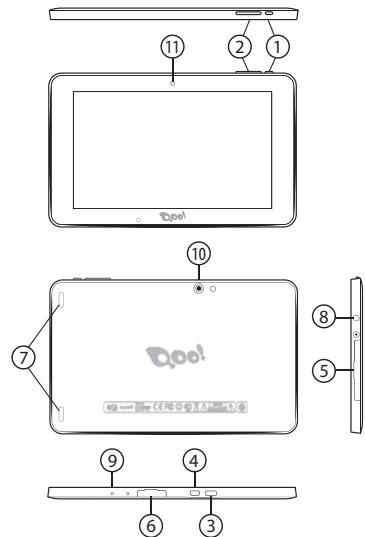

Picture 1



Picture 2



Picture 3



Quick Start Guide

Safety precautions

For safe and efficient operation of your Tablet PC, please observe the following rules:

- Keep the computer away from extreme heat, cold, moisture and dust.
- Do not spill any liquids on the Tablet PC as it may damage the device or cause a fire.
- Do not use liquids and chemical cleaners for cleaning the Tablet PC.
- Do not insert any objects in the computer's air vents or other slots.
- Do not keep the device near magnetic sources, heaters, microwave ovens, heating up kitchen appliances, or in high pressure containers, as it may cause the battery leaking, the device overheating and inflammation.
- Do not disassemble the Tablet PC, only a certified service technician should perform repairs on your computer.
- Use only the AC adapters, power cords and batteries that are approved for use with this device. Use of another type of battery or AC adapter may cause fire or explosion.

Note: The device pictures, as well as data on the device appearance, color and design features are given in the manual for reference only. 3Q company reserves the right to change the appearance and technical parameters of its products without prior notice.

About your device (picture 1)

1. Power button	6. Micro SD card slot
2. Volume Buttons	7. Speakers
3. Micro USB port – connecting your computer	8. Earphone port
4. Micro HDMI port	9. Reset port
5. SIM card slot	10. Rear camera
	11. Front camera

Switching on/of

To switch on the Tablet PC, press and hold the Power button. When startup window appears, release the button. The system initialization may take several minutes. Please wait patiently.

To switch off the tablet PC, press and hold the Power button. When "Power off" message appears, release the button. Touch the message, then press OK.

Recommendation: To save the battery charge, the device is set to sleep mode: the screen is locked and sensor functions become inactive (in accordance with the settings of screen lock time). To "wake up" the device, short press the power button.

Unlocking the screen (picture 2)

If you do not use the screen during certain period of time, the screen will be locked. To unlock the screen, press the power button once and drag "Lock" image right.

Main screen (picture3)

1. Voice search	7. Home
2. Application menu	8. Back
3. Battery charge indicator	9. Google search
4. Time	10. Clock
5. Connected to PC	11. Standard application
6. Recently used applications	button

Restarting the device

If the screen does not response to key press, press the reset button (located in the hole) using any thin object (paper clip, pin, etc.) to restart your Tablet PC.

Factory reset

To delete all data and restore your Tablet PC to factory defaults, touch Settings > Recovery and reset; touch menu item Reset > Reset to factory defaults.

Wireless networks

Prior to starting an Internet-application, activate Wi-Fi connection and set up Wi-Fi network.

1. Touch the icon "Applications" > "Settings" > "Wireless connections". Select Wi-Fi item and set the switch to On position.
2. The device will automatically start searching for available networks and will display them on the right panel.
3. Select any network from the list and press "Connect". If the network you selected is protected by WEP-protocol, type the security key, then press "Connect" button. When the connection is successfully created, "Connected to" (Network name) message will appear on the screen.
4. It supports the hotspot mode.

Bluetooth (Optional)

Tap "Settings" > Select "Wireless connections/Bluetooth" > Tap "On" to switch on the Bluetooth function. The device will automatically search for available Bluetooth device. Select the Bluetooth device and start data transmission

FCC statement

This device complies with Part 15 of the FCC Rules: Operation is subject to the following two conditions:

1. This device may not cause harmful interference and
2. This device must accept any interference that is received, including any interference that may cause undesired operation.

*RF warning for Portable device: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

This device is acting as host and operating in the 2.4 GHz (2412 ~2462 MHz) band.

Ad Hoc function is supported but not able to operate on non-US frequencies. Do not use the device with the environment which below minimum -10 °C or maximum over 50°C .

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help