



Language contents:

English.....	3
Russian.....	6
Arabic.....	9
Bulgarian.....	11
Chinese.....	14
Chinese (HK).....	16
Croatian.....	18
Czech Republic.....	21
Danish.....	24
French.....	27
German.....	30
Greek.....	33
Hebrew.....	36
Hindi.....	38
Hungarian.....	40
Indonesian.....	43
Italian.....	46
Japanese.....	49
Korean.....	51
Latvian.....	53
Lithuanian.....	56
Netherlands.....	59
Norwegian.....	62
Poland.....	65
Portuguese.....	68
Romanian.....	71
Serbian.....	74
Slovak.....	77
Slovenian.....	80
Spanish.....	83
Swedish.....	86
Tagalog, Philippines.....	89
Thai, Thailand.....	92
Turkish.....	94
Ukrainian.....	97
Vietnamese.....	100

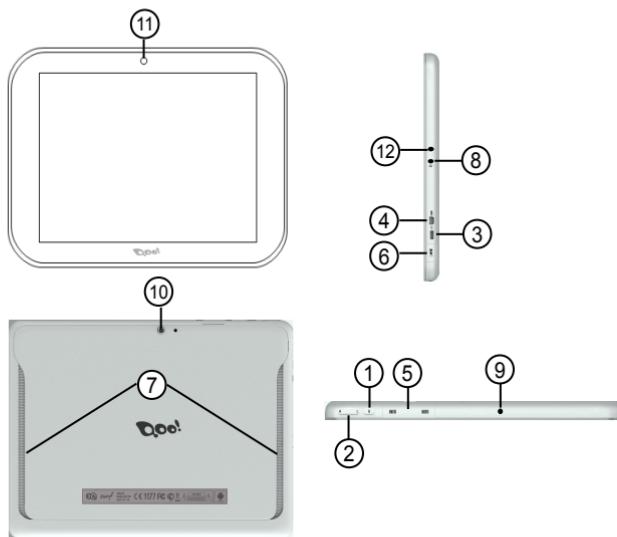

Picture 1

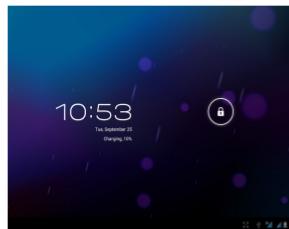

Picture 2



Picture 3



Quick Start Guide

Safety precautions

For safe and efficient operation of your Tablet PC, please observe the following rules:

- Keep the Tablet PC away from extreme heat, cold, moisture and dust.
- Do not spill any liquids on the Tablet PC as it may damage the device or cause a fire.
- Do not use liquids and chemical cleaners for cleaning the Tablet PC.
- Do not insert any objects in the Tablet PC's air vents or other slots.
- Do not keep the device near magnetic sources, heaters, microwave ovens, heating up kitchen appliances, or in high pressure containers, as it may cause the battery leaking, the device overheating and inflammation.
- Do not disassemble the Tablet PC, only a certified service technician should perform repairs on your computer.
- Use only the AC adapters, power cords and batteries that are approved for use with this device. Use of another type of battery or AC adapter may cause fire or explosion.

Note: The device pictures, as well as data on the device appearance, color and design features are given in the manual for reference only. 3Q company reserves the right to change the appearance and technical parameters of its products without prior notice.

About your device (Picture 1)

1. Power button	7. Speakers
2. Volume buttons	8. Earphone port
3. USB port – connecting your computer	9. Reset button
4. HDMI port	10. Rear camera
5. SIM card slot	11. Front camera
6. Micro SD card slot	12. DC-in

Switching on/of

To switch on the Tablet PC, press and hold the Power button. When startup window appears, release the button. The system initialization may take several minutes. Please wait patiently.

To switch off the tablet PC, press and hold the Power button. When "Power off" message appears, release the button. Touch the message, then press OK.

Recommendation: To save the battery charge, the device is set to sleep mode: the screen is locked and sensor functions become inactive (in accordance with the settings of screen lock time). To "wake up" the device, short press the power button.

Unlocking the screen (Picture 2)

If you do not use the screen during certain period of time, the screen will be locked. To unlock the screen, press the power button once and drag "Lock" image right.

Main screen (Picture 3)

1. Voice search
2. Application menu
3. Battery charge indicator
4. Time
5. Connected to PC
6. Recently used applications
7. Home
8. Back
9. Google search
10. Clock
11. Standard application button

Restarting the device

If the screen does not response to key press, press the reset button (located in the hole) using any thin object (paper clip, pin, etc.) to restart your Tablet PC.

Factory reset

To delete all data and restore your Tablet PC to factory defaults, touch Settings > > Recovery and reset; touch menu item Reset > Reset to factory defaults.

Wireless networks

Prior to starting an Internet-application, activate Wi-Fi connection and set up Wi-Fi network.

1. Touch the icon "Applications" > "Settings" > "Wireless connections". Select Wi-Fi item and set the switch to On position.
2. The device will automatically start searching for available networks and will display them on the right panel.
3. Select any network from the list and press "Connect". If the network you selected is protected by WEP-protocol, type the security key, then press "Connect" button.

When the connection is successfully created, "Connected to" (Network name) message will appear on the screen.

3G networks (Optional)

Note that your Tablet PC will only have signal if you are in an area covered by your 3G provider's 3G or EDGE network.

Before inserting a SIM card, you must turn off the device.

A Pin number may be requested. Enter the SIM card pin number.

Your device will attempt to connect to the 3G network of your provider.

NOTE: If your device does not connect to your 3G provider's network

1. Contact your 3G provider to obtain the connection parameters.
2. On your device, tap the Menu icon, then settings.
3. Select Wireless & networks > Mobile networks > Select your operator.

In Access Point Names, select the correct access point name and enter the exact connection parameters.

Bluetooth (Optional)

Tap "Settings" > Select "Wireless connections/Bluetooth" > Tap "On" to switch on the Bluetooth function. The device will automatically search for available Bluetooth device.

Select the Bluetooth device and start data transmission.

Federal Communications Commission (FCC) Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications made to this device not expressly approved by New Telecom Holdings Limited may void the FCC authorization to operate this device.

Note: The manufacturer is not responsible for any radio or tv interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

Certification Information (SAR)

This device meets guidelines for exposure to radio waves. Your device is a low-power radio transmitter and receiver. As recommended by international guidelines, the device is designed not to exceed the limits for exposure to radio waves. These guidelines were developed by the independent scientific organization International Commission on Non-Ionizing Radiation Protection (ICNIRP) and include safety measures designed to ensure safety for all users, regardless of age and health.

The Specific Absorption Rate (SAR) is the unit of measurement for the amount of radio frequency energy absorbed by the body when using a device. The SAR value is determined at the highest certified power level in laboratory conditions, but the actual SAR level of the device when being operated can be well below the value. This is because the device is designed to use the minimum power required to reach the network.

The SAR limit adopted by USA and Canada is 1.6 watts/kilogram (W/kg) averaged over one gram of tissue. The Highest SAR value reported to the FCC for this device type when properly worn on body is 1.29 W/kg, and when using Wi-Fi hotspot function is 0.156 W/Kg.