

Wireless Probe

Thermometer & Timer

32 to 482°F/0 to 250°C
Counts 100 hours by minutes

Get Professional Results Every Time!

Perfect for mobility during roasting or grilling. Choose the type of meat or poultry and the doneness desired. The WT1 has been pre-programmed with 15 meat/poultry choices and various doneness temperatures. The pre-programmed temperatures are based on USDA safe cooking temperatures.

MEAT MODE

The Meat Mode includes settings for: beef, pork, chicken, turkey, veal, lamb, ham, duck, ribs, ground beef, ground pork, ground chicken, ground turkey, ground veal, and ground lamb.

TASTE MODE

The Taste Mode includes settings for: rare, medium rare, medium, and well/done.

MEMORY MODE

Program any alert temperature from 145 to 418°F/63 to 214°C using the Memory Mode.

The actual cooking temperature is continuously displayed along with the target alert temperature, type of meat and taste preference. Press a button and choose between Fahrenheit and Celsius. Slide a switch and choose audio/visual alerts. Distinct alerts sound when food is approaching the target temperature, done and/or overcooked. Simply press the LIGHT button to backlight the display in low light conditions.

TIMER MODE

At any time, the time counting up or down is shown at the bottom of the base station. The timer counts down by minutes or up by seconds. The distinct timer alarm sounds for 60 seconds when the set time is reached while the timer counts up the overtime in seconds.

Note: Remove sticker from display before use. Clean the probe before each use.

Important: DO NOT LEAVE THERMOMETER CASE IN HOT OVEN. CASE IS NOT HEAT RESISTANT. DO NOT ATTACH TO HOT BARBECUE. DO NOT USE PROBE IN MICROWAVE.

PRE-PROGRAMMED MODE

Minuterie et Thermomètre de Sonde Sans Fil

32 à 482°F/0 à 250°C
Compte 100 heures par les minutes

Obtenir les Résultats Professionnel Chaque Fois !

Parfait pour la mobilité pendant la cuisson des rôtis ou de grillades. Choisir le type de viande ou de volaille et la cuisson désirée. Le WT1 a été préprogrammé avec 15 choix de viande/volaille et diverses températures de cuisson. Les températures préprogrammées sont basées sur USDA températures de cuisson sûres.

MODE DE VIANDE

Le Mode de Viande comprend les paramètres pour: bœuf, porc, poulet, dinde, veau, agneau, jambon, canard, côtes, bœuf haché, porc haché, poulet haché, dinde hachée, veau haché et agneau haché.

MODE DE GOÛT

Le Mode de Goût comprend les paramètres pour: saignant, à point, medium et bien cuit.

MODE MÉMOIRE

Utiliser le Mode Mémoire pour le programme de température d'alerte de 145 à 418°F/63 à 214°C.


La température actuelle de sonde est continuellement affichée avec la température d'alerte de cible, le type de viande et de goût préféré. Appuyer sur le bouton et choisir entre Celsius et Fahrenheit. Glisser le commutateur et choisir les alertes audio/visuel. Les alertes distinctes sonores lorsque la nourriture s'approche de la température de cible, cuit et/ou trop cuit. Simplement appuyer sur le bouton LUMIERE pour rétro-éclairer l'affichage dans les conditions de faibles éclairages.

MODE DE MINUTERIE

À tout moment, le temps progressif ou régressif est affiché en bas de la station de base. La minuterie compte régressivement par minutes ou progressivement par secondes. Le son distinct de l'alarme de la minuterie sonore pour 60 secondes lorsque le temps réglé est atteint alors que la minuterie est entrain de compter les heures supplémentaires en secondes.

Note : Retirer l'étiquette de l'affichage avant utilisation. Bien laver la sonde du thermomètre avant chaque utilisation.

Important : NE PAS LAISSER LE BOITIER DU THERMOMETRE DANS UN FOUR CHAUD. LE BOITIER N'EST PAS RESISTANT A LA CHALEUR. NE PAS FIXER A UN BARBECUE CHAUD. NE PAS UTILISER LA SONDE DANS UN FOUR A MICRO-ONDES.

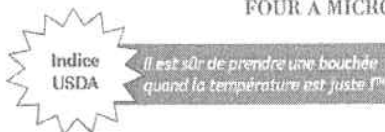

5-Year Limited Warranty: Any instrument that proves to be defective in material or workmanship within five years of original purchase will be repaired or replaced without charge upon receipt of the unit prepaid at: CDN, PO Box 10947, Portland, OR 97296-0947. This warranty does not cover damage in shipment or failure caused by tampering, obvious carelessness or abuse.



Garantie Limitée de 5 Années: N'importe quel instrument qui se révèle défectueux dans le matériel ou la confection au cours de cinq années d'achat original sera réparé ou remplacé sans charge sur le reçu de l'unité payée d'avance à: CDN, PO Box 10947, Portland, OR 97296-0947 USA. Cette garantie ne couvre pas les dommages causés durant transport ou l'échec causé par altération, négligence évidente ou abus.

Model/Modèle WT1 + 6722

Made in China/Fabrique en Chine
© 2008 Component Design Northwest, Inc.

*USDA does not endorse any product, service or organization.
* USDA n'endosse pas de produit, le service ou l'organisation.



Component Design Northwest, Inc.
PO Box 10947
Portland, OR 97296-0947
Tel 800 338-5594
Fax 800 879-2364
info@cdn-timeandtemp.com
www.cdn-timeandtemp.com



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.