


QUICK REFERENCE GUIDE

The Quick Reference guide is given to provide basic operation of the unit. Please completely read the user's guide to take advantage of all the features this unit has to offer.

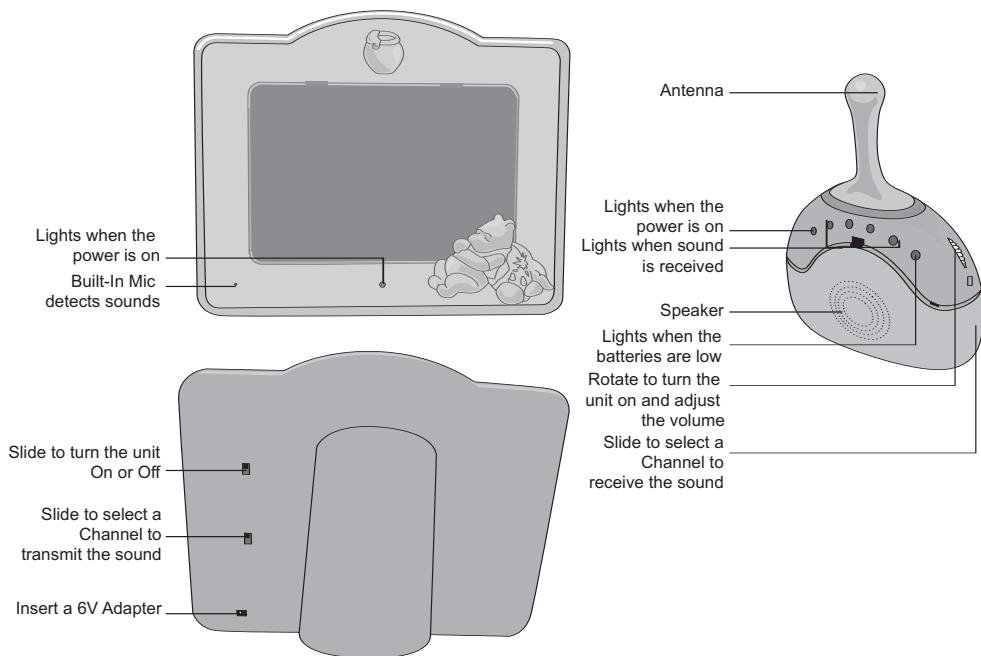

SIMPLIFIED OPERATION

1. For the Monitor (Transmitter), connect the AC adapter (included) to the DC 6V IN jack. For the Receivers, connect the AC adapter (included) to the DC 6V IN jack or insert batteries. Place the transmitter in the same room as the child. Point the microphone toward the crib or play area. Place the receiver(s) in the room where you will be or if using batteries, connect to your belt using the belt clip.
2. Slide the POWER switch on the transmitter to the ON position; the POWER indicator will light.
3. Slide the CHANNEL switch on the transmitter to the 1 or 2 position.
4. Slide the CHANNEL switch on one or both of the receivers to the 1 or 2 position to match the transmitter's setting made in step 3.
5. Rotate the Power/VOLUME control on one or both receivers counterclockwise until a click is heard; the POWER indicator will light. Then, adjust the volume as desired. When a sound is heard, the SOUND LEVEL indicators will light (the more lights, the louder the sound) and the sound will be heard through the speaker(s). Rotate the Power/VOLUME control clockwise until a click is heard to turn the unit off; the POWER indicator will turn off.

Dear Customer,

Please read this manual thoroughly before operating the unit to become more familiar with it and obtain the performance that will bring you continued enjoyment for many years. Keep these instructions handy for future reference.

PLEASE KEEP ALL PACKAGING MATERIAL FOR AT LEAST 90 DAYS IN CASE YOU NEED TO RETURN THIS PRODUCT TO YOUR PLACE OF PURCHASE OR MEMOREX.

For future reference, record the serial number of the unit printed on the rear of the cabinet.

Serial Number _____

FCC INFORMATION

Warning: Modifying, tampering and/or adjusting this unit or replacement of any transmitter component (crystal, semiconductor, etc.) in this unit could result in a violation of the rules.

RF EXPOSURE

This Baby Monitor contains a low power transmitter. When the power is on, it send out radio frequency (RF) signals. In August 1996, the Federal Communications Commissions (FCC) adopted RF exposure compliance guidelines with safety levels for wireless devices.

IMPORTANT NOTE: To adhere to the FCC RF exposure compliance requirements, no change to the antenna or the unit is permitted. Any change to the antenna or the unit could result in the system exceeding the RF exposure requirements.

IMPORTANT

To maintain compliance with the FCC's RF exposure guidelines hold the transmitter and antenna at least 1 inch (2.5 centimeters) away from your face, with antenna pointed up and away from your face. Ensure that the antenna is at least 1 inch (2.5 centimeters) from your body when using your Baby Monitor's transmitter. Use only the supplied antenna. Unauthorized antennas, modifications or attachments could damage the transmitter and may violate FCC regulations.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IMPORTANT SAFETY INSTRUCTIONS

INFORMATION:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

ADDITIONAL PRECAUTIONS

- **Non-Use Periods:** When the units are not in use, unplug the AC adapters from the wall outlets and remove the batteries from the units until they are ready to be used again.
- **Adapters:** Make sure cords are free of any entanglements and are not in areas where people might come in contact with them. Please use only those AC adapters that are included with the product. Do not use AC adapters which are damaged or which have frayed or worn cords.
- **Positioning:** Do not place the unit in cribs, playpens or anywhere within the child's reach. Keep adapter cords out of child's reach. Do not place the units or adapters where a child could use them as a step.
- **Safety:** Please be careful when locating the monitor and camera that the cord is situated in an area that will eliminate the chance of tripping over the cord. Also, make sure the antenna is in an area that will eliminate the possibility of poking your eye, etc.



WARNING

Choking Hazard—Small Parts and Packaging Materials. Not for children under 8 years.



- All materials for fastening or packing purposes are not part of the unit and should be discarded for children's safety.
- Please keep all information for future reference.
- This is not a toy.



CAUTION! ELECTRONICALLY OPERATED PRODUCT: Not recommended for children under 8 years old. As with all electric products, precautions should be observed during handling and use to prevent electric shock.

LOCATION OF CONTROLS


TRANSMITTER

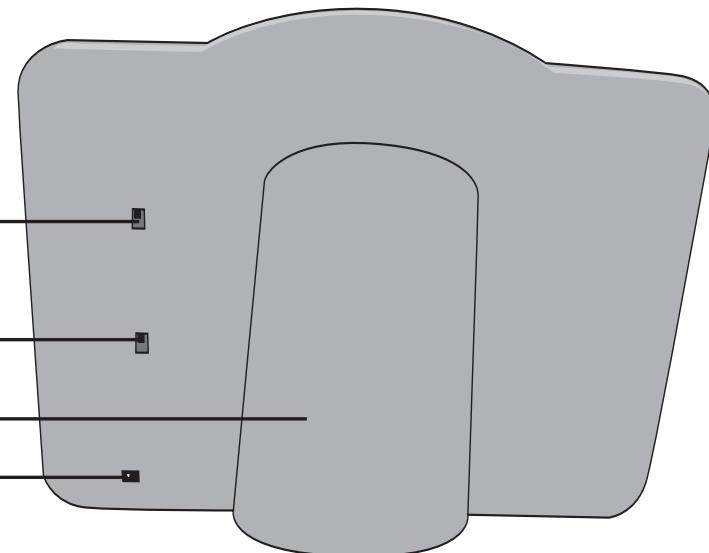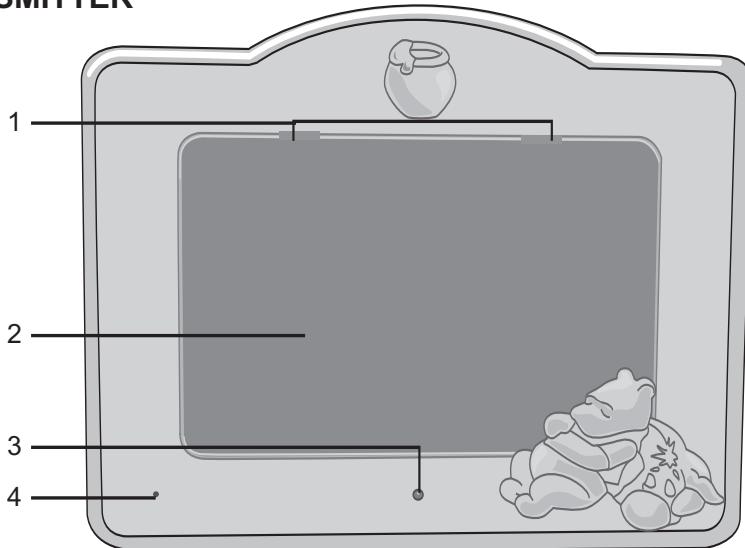

1. Photo Frame Tabs	5. POWER Switch
2. Photo Frame	6. CHANNEL Switch
3. POWER Indicator	7. Stand
4. MIC	8. DC 6V IN Jack

LOCATION OF CONTROLS (CONTINUED)

RECEIVERS

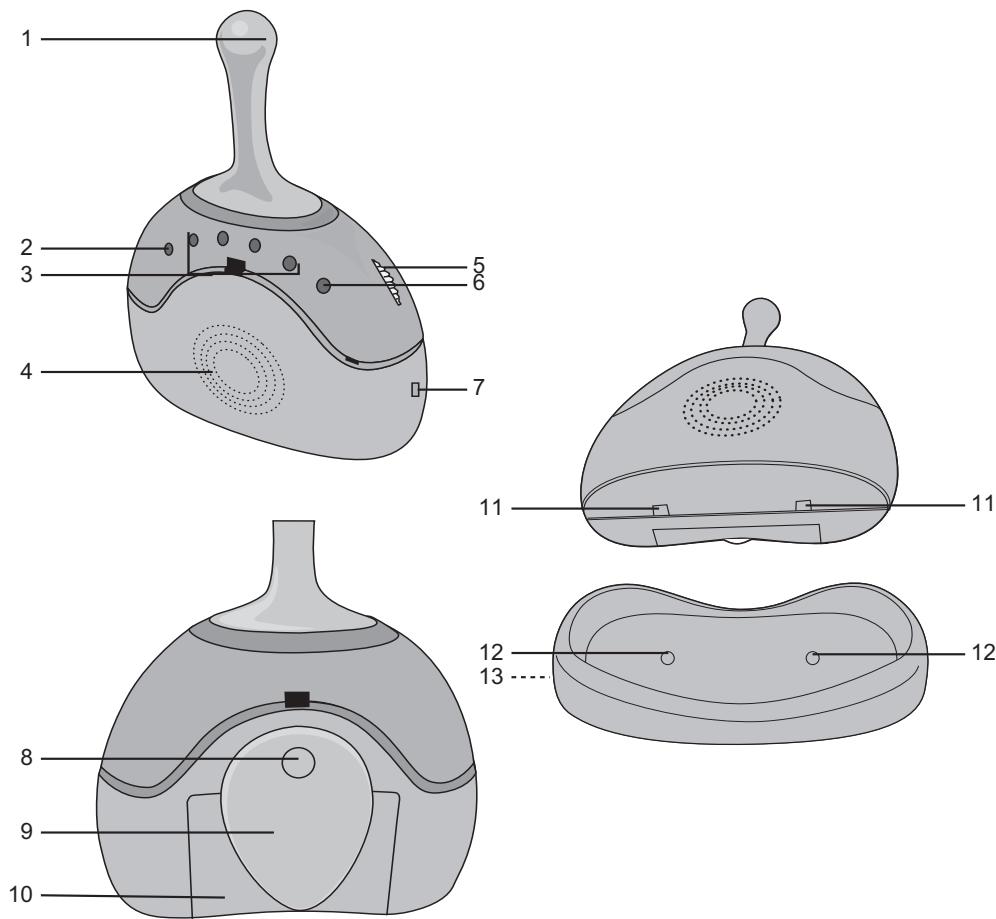


1. Antenna	9. Belt Clip
2. POWER Indicator	10. Battery Compartment
3. SOUND LEVEL Indicators	11. Metal Contact Plates
4. Speaker	12. Metal Contact Pins
5. Power/VOLUME Control	13. DC 6V IN Jack 
6. BATT LOW Indicator	(Side of Cradle)
7. CHANNEL Switch	
8. Release Button	

PREPARATION


INSERTING A PICTURE

1

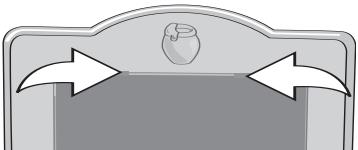

Press in on the two Frame Tabs and slightly lift the transparent frame out.

2

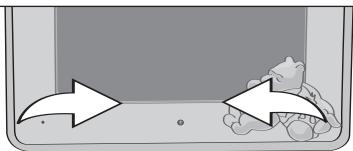

Insert a picture, then replace the transparent frame, by positioning the two tabs at the bottom of the frame, and insert properly into the unit.


NOTE: If the photo/picture size does not fit the frame, you can use the transparent frame to trace the frame size and cut the photo/picture with scissors.

The transmitter is designed to operate on AC household current only. The receivers are designed to operate on AC household current or DC (batteries).

AC OPERATION

TRANSMITTER

To operate the unit using AC power, connect an AC adapter (included) to an AC outlet having 120V, 60Hz AC only. Plug the small end into the DC 6V jack on the rear of the unit and connect the other end into the AC outlet.

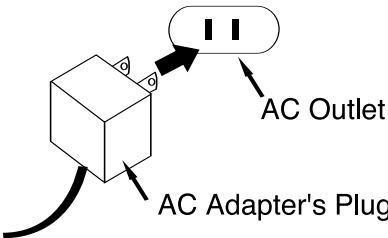

RECEIVER

To operate the unit using AC power, connect an AC adapter (included) to an AC outlet having 120V, 60Hz AC only. Plug the small end into the DC 6V jack ON THE SIDE OF THE CRADLE and connect the other end into the AC outlet. Place the Receiver onto the Receiver's cradle and make sure the metal contact plates on the Receiver are properly in contact with the metal contact pins on the Receiver's cradle. The batteries are automatically disconnected when the AC adapter is used.


CAUTION: Use only the supplied AC adapter(s) for AC operation. When not using AC power, disconnect the AC adapter from the wall outlet by pulling the plug (not the cord). Do not touch the AC adapter with wet hands. Fully insert the plug without exposing any part of the blade. SPECS: DC6V

IMPORTANT: If the unit is has no power, or if the monitor is on a different channel than the transmitter, the red SOUND LEVEL indicators will not light up. Please ensure at least one red light is lit to indicate the unit is operating properly.

PREPARATION (CONTINUED)


INSTALLING BATTERIES (FOR RECEIVERS)

1

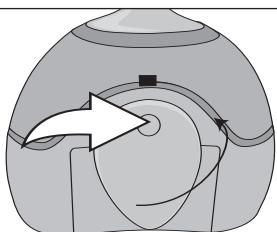


Press and hold the Release button, then rotate the belt clip counterclockwise.

2

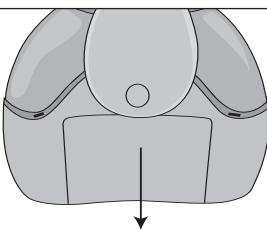

Slide out the battery compartment in the direction of the arrow.

3

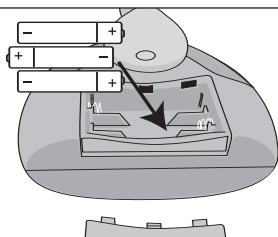

Insert three (3) AAA size batteries, following the diagram.

Replace the battery compartment and rotate the belt clip until it locks in place.

NOTES:

The BATT LOW indicator will light when batteries are low and need replacing.


BATTERY PRECAUTIONS

Follow these precautions when using batteries in this device:

1. Use only the size and type of batteries specified.
2. Be sure to follow the correct polarity when installing the batteries as indicated in the battery compartment. Reversed batteries may cause damage to the device.
3. Do not mix different types of batteries together (e.g. Alkaline, Rechargeable and Carbon-zinc) or old batteries with fresh ones.
4. If the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
5. Do not try to recharge batteries not intended to be recharged; they can overheat and rupture. (Follow battery manufacturer's directions.)


OPERATION

1

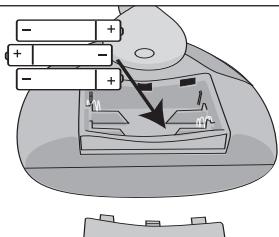


Connect the unit with the AC adapter and/or insert batteries as shown on pages 6 & 7. Place the transmitter in the same room as the child. Point the microphone toward the crib or play area. Place the receiver(s) in the room where you will be or if using batteries, connect to your belt using the belt clip.

2

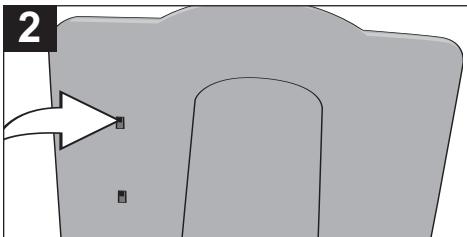


Slide the POWER switch on the transmitter to the ON position; the POWER indicator will light.

3

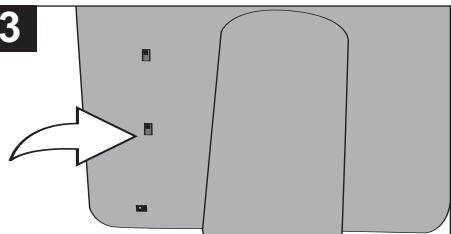


Slide the CHANNEL switch on the transmitter to the 1 or 2 position.

4

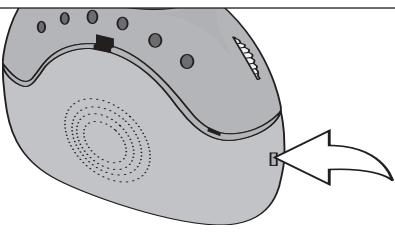

Slide the CHANNEL switch on one or both of the receivers to the 1 or 2 position to match the transmitter's setting made in step 3.

5

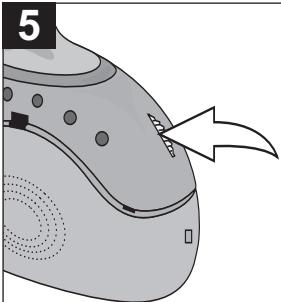

Rotate the Power/VOLUME control on one or both receivers counterclockwise until a click is heard; the POWER indicator will light. Then, adjust the volume as desired. When a sound is heard, the SOUND LEVEL indicators will light (the more lights, the louder the sound) and the sound will be heard through the speaker(s). Rotate the Power/VOLUME control clockwise until a click is heard to turn the unit off; the POWER indicator will turn off.

NOTES:

- To turn off the Transmitter, slide the POWER switch to the OFF position; the Power indicator on the Transmitter will turn off.
- See note on the bottom of page 6 if the SOUND LEVEL indicators do not light.

TROUBLESHOOTING GUIDE

If you experience a problem with this unit, check the chart below before calling for service.

PROBLEM	SOLUTION
Static or buzzing is heard through the receiver.	Make sure the CHANNEL switch on the transmitter and the receivers are set to the same channel.
	Receiver is out of range of the transmitter. Move closer.
Transmitter's POWER indicator is not lit.	Make sure the POWER switch is set to the ON position.
	Make sure the unit is connected to the AC adapter.
Receiver's POWER indicator is not lit.	Make sure the Power/Volume control is set to ON.
	Make sure the unit is connected to the AC adapter.
	If using battery power, make sure batteries are inserted correctly.
You hear sounds other than the ones from your baby's room.	Change channels as you may be hearing the sounds from another baby monitor close by or from a cordless phone using the same frequency.
High-pitch squeal coming from receiver.	The transmitter and receiver are too close; move away from each other.

SPECIFICATIONS

Power Requirements:

TransmitterDC 6V IN
ReceiverDC 6V IN, (DC 4.5V 3 x "AAA" Batteries)
Receiver Power Output.150mW
Frequency CH 149.830 MHz
Frequency CH 249.860 MHz
Transmitting Distance95 meters (Open area)

Specifications are subject to change without notice.