

WIRELESS  
WORLD

WT-021 (EUROPEAN STANDARD)  
 WT-022 (US STANDARD)

AGE 5+

# WALKIE PDA TALKIE

## TO OPERATE :

1. To turn on the PDA-walkie talkie, turn the ON/OFF power switch to the ON position.
2. To send a message, press and hold the TALK button with the speaker/microphone about 1" from your mouth. Speak directly into the speaker/microphone in a normal voice. Release the TALK button when finish talking.
3. To receive a message, release the TALK button after sending message.
4. To turn off the PDA-walkie talkie, turn the ON/OFF power switch to the OFF position.
5. To write on the screen, pick out the stylus from the back, open the screen cover, remove the protection sheet and directly write on the transparent plastic sheet with the stylus.
6. To delete the hand-writing, gently turn up the transparent plastic sheet, then the writing will disappear.

## CAUTIONS :


1. If your PDA-walkie talkie does not operate properly, try a new set of batteries.
2. If not in use, always turn off the PDA-walkie talkie.
3. Do not touch antenna with your fingers or hand while you are using PDA-walkie talkie. It will cause weak transmission.
4. Your PDA-walkie talkie set has been fully adjusted prior to shipment from the factory. Do not touch the internal parts other than to replace the battery.
5. Avoid using it in hostile environment, such as dusty, humid and high temperature environment.
6. To clean the PDA-walkie talkie, wipe with a soft cloth dampened with water, do not use corrosive chemical solvents.
7. Remove the batteries when PDA-walkie talkie is not used for a long period, that can prevent the PDA-walkie talkie from destroyed by corrosive chemical.
8. Do not use any sharp material other than the provided stylus to write on the screen.
9. Do not peel off the transparent plastic sheet from the PDA-walkie talkie.
10. The screen will be damaged if protection sheet is not replaced after use.

## BATTERIES INSTALLATION :

Open the battery compartment door on the back by pushing in the direction of the arrow and lift. Insert one 9V (6LR61) battery, making sure to correctly connect the positive and negative terminals. Replace the battery compartment door and slide until you feel it locked into place.

Each unit requires its own battery.

	WT-021	WT-022
Communication Range	100 feet	100 feet
No. of Channel	1	1
Operation Frequency	27 MHz	49 MHz

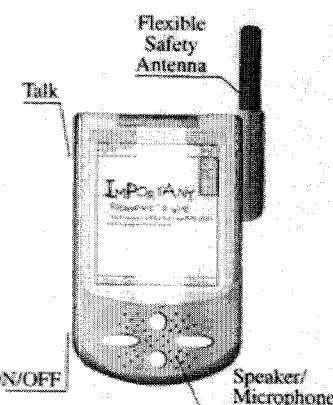


## To ensure proper function :

- Battery installation should be done by an adult.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged (if removable).
- Rechargeable batteries are only to be charged under adult supervision.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity, and follow the toy and battery manufacturer's instructions. Exhausted batteries are to be removed from the toy.

## FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

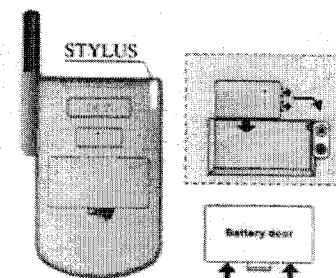

**Warning :** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE :** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio-frequency energy and, if not installed and used in accordance with the instructions,

may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Color :  Silver  Metallic Blue  Purple  Blue



TSUEN SHING ENTERPRISES LTD.

19/F. BILLION PLAZA, N6.8 CHEUNG YUE STREET, CHEUNG SHA WAN, KOWLOON, H.K.

TEL. (852) 2474 0130

Email: [tsuenshing@tsuenshing.com.hk](mailto:tsuenshing@tsuenshing.com.hk)

FAX: (852) 2473 1801

Website: [www.tsuenshing.com.hk](http://www.tsuenshing.com.hk)

FC CE

RECEIVED 24 APR 2003