

## **Operational Description**

### **Test operation.**

The EUT was connected as user's guide. And during the test executed test program for make a Comparison PC Image file and USB DRIVE Image file. And during test EUT is PC communication mode.

The test executed EUT is max capacity 1024MB

### **Installing USB DRIVE**

1. Insert USB DRIVE Mini-CD
2. You select "Install.exe" in the CD software
3. Click next to proceed for Installation
4. Click finish when the install complete screen appears.
5. If the installation is completed, you can use USB DRIVE

### **USB DRIVE Connection**

1. Insert USB DRIVE to USB CABLE to on your computer.
2. Look out "New hardware discover" message Windows in screen. Then click enter.
3. Click next to proceed for USB DRIVE Installation.
4. Click finish when the install when the installation was completed.
5. If the installation is completed, you can use USB DRIVE.

You see the USB DRIVE Connection photo.

