

BATTERY INSTALLATION

The truck requires 5 "AA" 1.5V batteries (not included). The controller requires 1 9V battery (included). When changing batteries, adult supervision is required. Use alkaline batteries for the best performance.

- Carefully remove items from the package.
- Locate the battery door on the bottom of the truck. Using a Phillips screwdriver, remove the screw.
- Pull the latch on the door to the left and lift up to access the battery compartment. Insert 5 "AA" batteries while observing the correct polarity (Fig.1).
- Replace the battery compartment door.
- Slide the battery door on the back of the controller down to open.
- Insert 1 9V battery while observing the correct polarity (Fig.2).
- Replace the battery compartment door.
- Switch both the truck and controller power switches to the "ON" position.
- Adjust the steering alignment lever located on the bottom of the truck (between front wheels) if the truck does not run straight when moving forward.

SAFETY PRECAUTIONS

- Do not operate during thunderstorms or rain.
- Avoid water, sand and snow when operating your truck.
- Do not submerge truck or controller in water.
- Never operate your truck on the street or highway.
- Adult supervision is recommended when operating this truck.
- Remove all batteries when not in use to avoid accidental operation.
- Never operate your truck in a confined or crowded area, and do not use people or animals as obstacles.
- Do not run your truck into furniture, objects or hard surfaces, as this will cause damage to both the objects and the truck.
- Keep fingers, hair and loose clothing away from the tires, gears and motor while the truck is switched to "ON".
- Do not leave truck or controller near sources of heat or under direct sunlight for long periods of time.
- Do not leave truck or controller outside overnight. Dampness is harmful to interior components.

BATTERY WARNING:

- Do not mix alkaline, standard (carbon-zinc) and rechargeable batteries (Nickel Metal Hydride).
- Do not mix old and new batteries.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the item before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Exhausted batteries should be removed immediately and must be recycled or disposed of properly according to state or local government ordinances and regulations.
- The supply terminals are not to be short-circuited.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity (see Fig.1 and Fig.2 above).
- Do not dispose of batteries in a fire - batteries may leak or explode.

KEEP THIS PACKAGE FOR REFERENCE AS IT CONTAINS IMPORTANT INFORMATION.

NOTE: For best operation, use the truck on a hard surface.

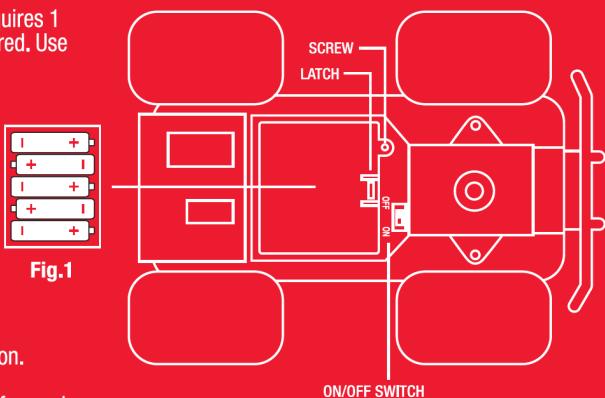


Fig.1


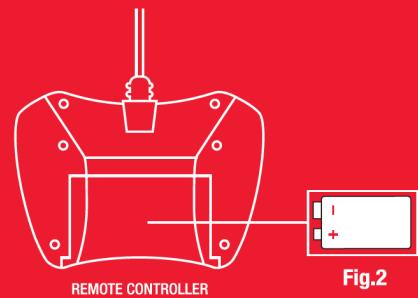


Fig.2

OPERATING CONTROLS

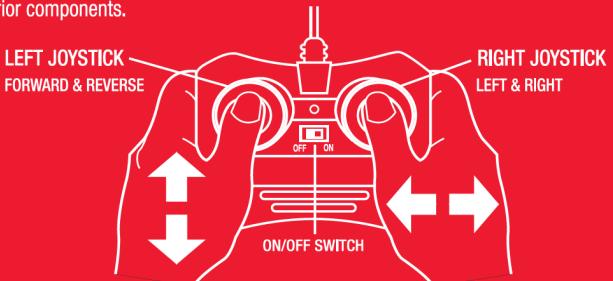

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

Merchsource LLC
19517 Pauling Foothill Ranch, CA 92610
Phone: 949-900-0900