

# User manual

## 一、Pay attention to:

In order to correct use player and ensure the player with good performance, please read carefully

- Do not impact main part.
- Do not contact benzene, thinner and other chemicals.
- Please don't near a strong magnetic field, electric field.
- Please avoid direct light or heating appliances.
- Do not disassemble, repair, reconstruction.
- Do not use the player and Headset when by bike, driving the car and motorcycle so as to avoid danger.
- Do not listen to in a larger volume, so as to avoid the adverse effect on hearing.
- please classification of properly about waste packaging, batteries, old electronic products..

## 二、Music playback operation

The machine automatically default to Bluetooth mode, the automatic recognition of broadcast after insert TF card, the latter priority principle, also can be switched automatically play mode, laying by PLAY key to switch to AUX mode, with the function operation please read Fourth "product key, Jack function definition".

## 三、Key of product、Jack function definitions (in order to prevail in kind)

1.[ The power button]: Short press: Answer the phone / hang up the phone;  
Short press pick up when calling, short press hang up when the phone.

Long press: Turn on/turn off

Press twice continuous: Call back recent calls.

2.[ The play button]: Play / pause / mode conversion / automatic station search.

Short press: TF、Bluetooth mode to play / pause, FM model for the automatic station search.

Long press: Long press 3 seconds, undo for mode switching, the switching sequence is TF >Bluetooth- > AUX - > FM -

Adjust the volume of small / A / the last station.

Short press: TF, Bluetooth mode to a song; a FM mode selection station;

Long press: adjust the volume decrease.

4.[+]: Adjust the volume of large / the next song / the next station.

Short press: TF, Bluetooth mode to the next song, FM mode select the next station

Long press: adjust the volume.

5. [Lighting key] lamp: short press: turn on / off

Long press: brightness slowly darken / brightness slowly brighten

6.[USB]: The charging interface /FM antenna.

The power charging jack, special USB power line can use native distribution, USB interface connected to the computer for charging。FM radio mode, special USB power line can use this machine distribution do external antenna, receiving station (if there are antenna built-in machine, don't need to use USB as the


external antenna

[AUX]: With the AUX line can be connected to a stereo audio input interface, digital music player, mobile phone and other audio equipment

[USB female: connect the USB cable can be to charge a mobile phone and other electronic equipment

7.[TF]: Insert TF card playing MP3 music.

8.[MIC]: Call a microphone head; the call is a microphone can enhance the communication effect.

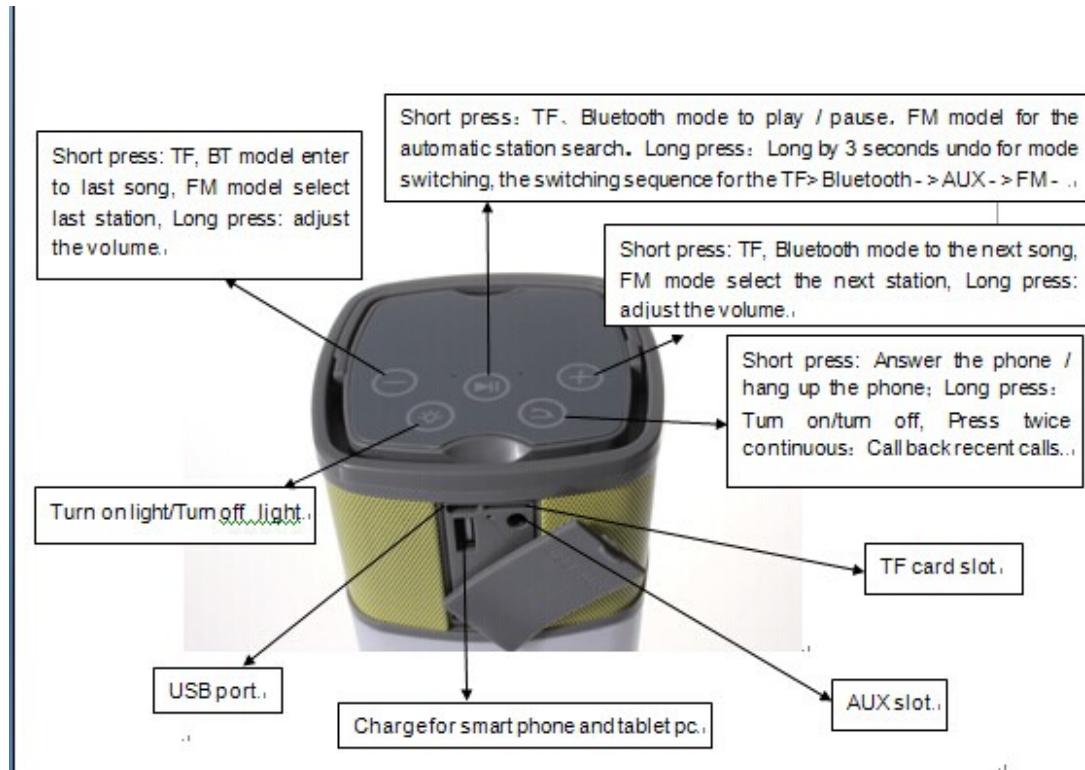

#### 四、Introduction of indicator light

Red: charging indicator light (light flash said charging / light on the battery is full)

The blue indicator light: TF, AUX, Bluetooth, FM playback mode indicator (work lights flash); low power light.

The green indicator: indicator lamp charging for electronic equipment (charging lights flash / no charging lamp does not light)

#### 五、Bluetooth connection method (optional models, in order to prevail in kind):

1、Boot or press the mode button to switch into the Bluetooth mode, will be issued to wait for a Bluetooth connection to a sound, LED lights flash.

2、Open mobile devices (mobile phone, computer and so on) the Bluetooth function, search for Bluetooth devices "SP001".

3、Manual click, paired devices, automatic connection, the connection is successful will be issued a "Bluetooth is connected" sound. (In general do not have to enter a password, special type password prompt, enter "0000")

4、The equipment has the pairing is successful, the next boot will automatically connect.

Remarks: Enter the Bluetooth mode for 10 seconds, Bluetooth will automatically find the equipment and paired connection, 10 seconds after going through the manual connection.

#### 六、Radio functions using the method:

- 1、Long press [O/PLAY] button to switch mode, enter FM mode.
- 2、Search: Short press [O/PLAY] key to start the automatic station search, search indicating lamp twinkle, search after the completion of the automatic memory storage station.
- 3、Memory channel selection: Automatic channel searching is finished, short press the [-] or [+] key to select the last radio or a radio;
- 4、Volume adjustment: Long press the [-] keys to reduce the volume, long press the [+] key to increase volume.

## 七、Charging method

The power line end is inserted into the machine USB socket, the other end is inserted into the USB interface of USB computer, or connected with the standard 5V 500mA charging interface, a charging the red light flashing, filled with a long red light. The built-in overcharge protection circuit, can be connected to the computer or charger using a long time, about 4 hours can be filled with a battery; battery every life time will use time volume size and different.

## 八、Low battery

When the charge appears the low power, the system will automatically shut down, this time please charge it in time; if you don't use the machine long time, at least one charge per month, can protect the battery to extend battery life.

## 九、Troubleshooting

Q: Boot automatically shutdown?

A: Low battery, please charge, suggest after use after charge two hours.

1、Q: Blue light has been playing in a flash after the automatic shutdown or restart?

A: Low battery, please charge, suggest after use after charge two hours.

2、Q: Can not charge?

A: Please use this machine delivery charge line, and determined by USB interface voltage access normal.

Q: Speaker don't have voice?

A: Identified in the TF/ Bluetooth /FM/AUX mode, at the state of play, and adjust it to the proper volume.

3、Q: AUX no sound?

A: 1、Please use this machine distribution audio line, and choose the correct audio output interface.

2、External audio equipment volume is open.

4、Q: Bluetooth can't automatically connect?

A: 1、Only the paired devices, will automatically connect

2、If open the Bluetooth equipment after the speaker enter the Bluetooth 10 seconds, speakers will not automatically connected.

3、With the use of method of Bluetooth refer to the manual "sixth"

5、Q: Bluetooth no voice?

A: 1、Please confirm the Bluetooth connection has been successful.

2、Bluetooth device volume if is already open.

Q: Key has no function or function wrong?

A: Please shutdown and then boot.

## 十、Spec:

Output power: 5W (speaker)

Working voltage: 3.7V

Frequency response: 100Hz-18KHz  
Signal to noise ratio: ≥80dBA  
Distortion: <1%  
Audio input: Bluetooth、TF card、AUX、FM  
Support MP3: Bit rate, 32Kbps-320Kbps  
The speaker unit: 50mm, double magnetic, 13 core, 4 ohm  
Input power: built-in polymer rechargeable battery 4600mAh 3.7V or external DC5V  
Regulation: key adjustment form  
Input sensitivity: 450±50mV  
Weight: about 170g  
Size: 75D×42Hmm

#### 十一、Accessory

Usb cable 1PCS

Manual 1PCS

#### FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for Compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital Device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide Reasonable protection against harmful interference in a residential installation. This Equipment generates uses and can radiate radio frequency energy and, if not installed And used in accordance with the instructions, may cause harmful interference to radio Communications. However, there is no guarantee that interference will not occur in a Particular installation. If this equipment does cause harmful interference to radio or Television reception, which can be determined by turning the equipment off and on, the User is encouraged to try to correct the interference by one or more of the following Measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.