

T-703 Tablet PC

Users' Manual

Contents

| | |
|-------------------------------------|----|
| 1. Attention..... | 3 |
| 2. Appearance and Buttons..... | 4 |
| 3. Battery..... | 5 |
| 4. Home screen and Application..... | 8 |
| 5. Language & keyboard Set..... | 10 |
| 6. Music..... | 11 |
| 7. Gallary..... | 11 |
| 8. WiFi Connection..... | 11 |
| 9. Browser..... | 12 |
| 10. E-mail..... | 13 |
| 11. Camera..... | 15 |
| 12. FCC Statement..... | 15 |

Attention:

This handbook contains important security measures and the correct way of use the product, in order to avoid accidents. Please read the users' manual carefully before using the device.

Please don't put the device in high temperature, moisture or dusty place. Especially in summer, don't put the device in the car with Windows closed.

Avoid fall or violent collision of the device, don't tremor the TFT screen violently, which could cause TFT display screen abnormal or damage.

Please adjust an appropriate volume. If your ears feel pain when using earphone, lower the volume or stop using it

Please charge in the following condition:

- A The battery power ICON shows no power
- B The system automatically shut off, startup after power off soon
- C Operation buttons has no response

When the device in the format or ongoing upload and download file, please don't suddenly disconnect; this could cause application error.

For those who because of damage to the product, repair, or other causes of erased the memory.

The company shall not be liable for any responsibility, please follow the user manual for the standardized operation to use the device.

Don't disassemble the product, don't use alcohol, thinner or benzene to scrubbing the products
USB be used for data transmission only.

(This tablet is no waterproof function)

Remark all pictures in this manual is just for your reference. The company reserves the right to improve product, products specification and design have some change. The information is subject to changes without prior notice.

1. Buttons

 
| | |
|---------------|--|
| Power key | Long press the power on/off to turn on/off the device; Short press to put the device into sleep mode when it works or wake it when it is in sleep mode. |
| Home key | Press to return to the Home screen |
| Menu key | Press to open a list of actions available on the current screen. |
| Back key | Press and hold to see the menu shortcuts for that screen. |
| Reset Jack | Press to go back to the previous screen or exit the present page Use the small objects to short press RESET button, the tablet will be forced to shutdown or restart. |
| Mini USB Port | you can use it to connect the computer for data transmission, charging and external connection USB flash drive |
| Remark : | Unless unable to shutdown, otherwise don't use the reset, suggest you to shutdown by normal, if no will easy to damage the machine system. |

2. Battery

2.1 Battery management and charge

Before first use, please set the device's battery is fully charged. When charging for the first two times charging, please keep about 6 hours. Usually, the Tablet just needs to be charged for 4 hours. When finished charging, battery icon will become green and stop rolling. In order to prolong the service life of the device, we suggest using up power before charge it

Two way of charging the device



This device can be charged via adaptor or USB cable. When charging, there will be corner of in the right the device. The Tablet should be charged much longer when operating at same time.

Remark : 1. This tablet is of Built-in type polymer battery, please charge it with standard adaptor (Input: AC110~240V 50/60Hz. Output: DC Output 5V/2A),

2. If you long time don't use this Tablet, in order to avoid power consumption causing damage to the device, please charge or play the Tablet once a month.

3. Home screen and Applications

The Home screen is the starting point of using the device. The Home screen can be customized by changing the location of applications, wallpaper, add or delete applications and so on. Drag the screen lock to unlock the tablet, then you will see the home screen as below.



Notification Area

On the right corner of the Home screen is the notification area. When pull that area up, it shows the status of some applications downloading process, USB status, internet connection status, time, date and so on. When you don't want to use it, pull it down.




Icons of Status Bar:


| | | | |
|--|---------------------------|--|---------------------------|
| | E-mail message | | Downloading |
| | Upcoming event | | Content downloaded |
| | Playing music | | Alarm is set |
| | SD card is full | | Data is syncing |
| | Battery charge indicators | | Wi-Fi service connected |
| | No SD card | | Battery is charging |
| | USB connected | | Wireless services are off |
| | Warning | | Silent mode |
| | Volume reduction | | Volume increase |

Applications After installing the application, if you do not like it or no it any more, please operate as following steps:

1. Enter “Setting” and go “Apps”
2. Choose the application in “DOWNLOAD” or “ALL”
3. Click the application which you want to install, force stop, disable, clear data, move to SD card or uninstall.

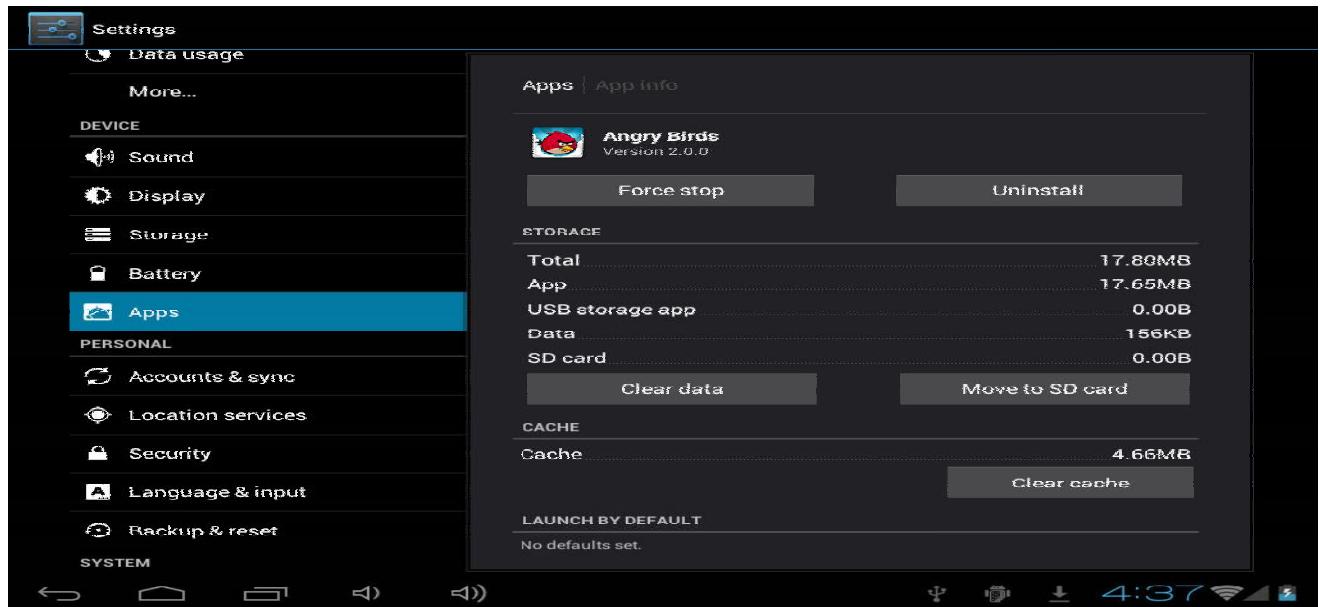

4. Install the application when it is downloading. Pull the “Notification Area” and choose the finished downloading application, click it and install. (Refer to the picture below)

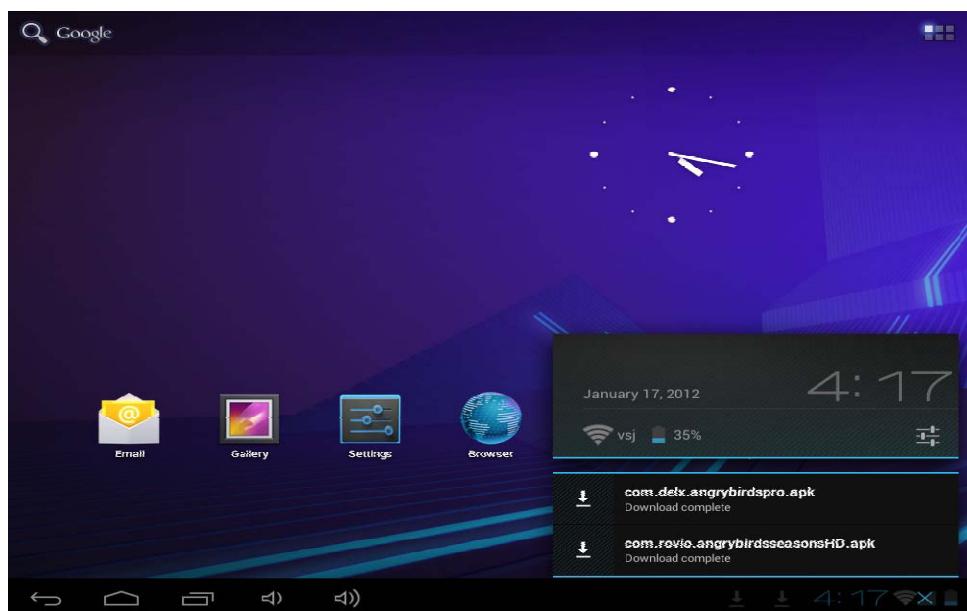


4. Connection with PC

The device has a removable micro SD memory card where you can store multimedia files, such as video clips, music tracks, sound files, and images.

A. Copy files to the memory card

Files like music and pictures can be transferred between the Tablet and PC. Please try the following steps

Connect the Tablet to your PC with a USB cable

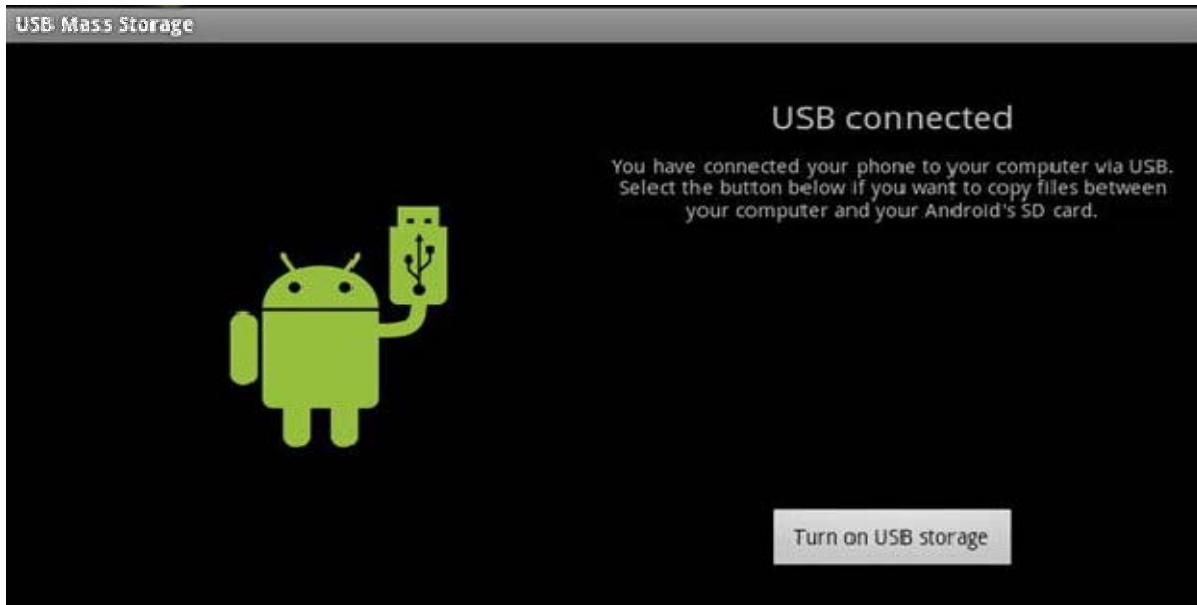


1. Touch "Turn on USB storage".
2. Turn to the "Removable Disk" in PC
3. Copy and paste files between the Tablet and PC

Click "Turn off USB Storage" on the Tablet, go to "File Manager" > "sdcard" (mnt /sdcard), you can view the content which are copied from PC to MID.




If you want to view your files in your TF card, please go to “File Manager” > “SD” (mnt/extsd). When you want to install application from your TF card, please click the APK which you want. Please refer to the picture below.

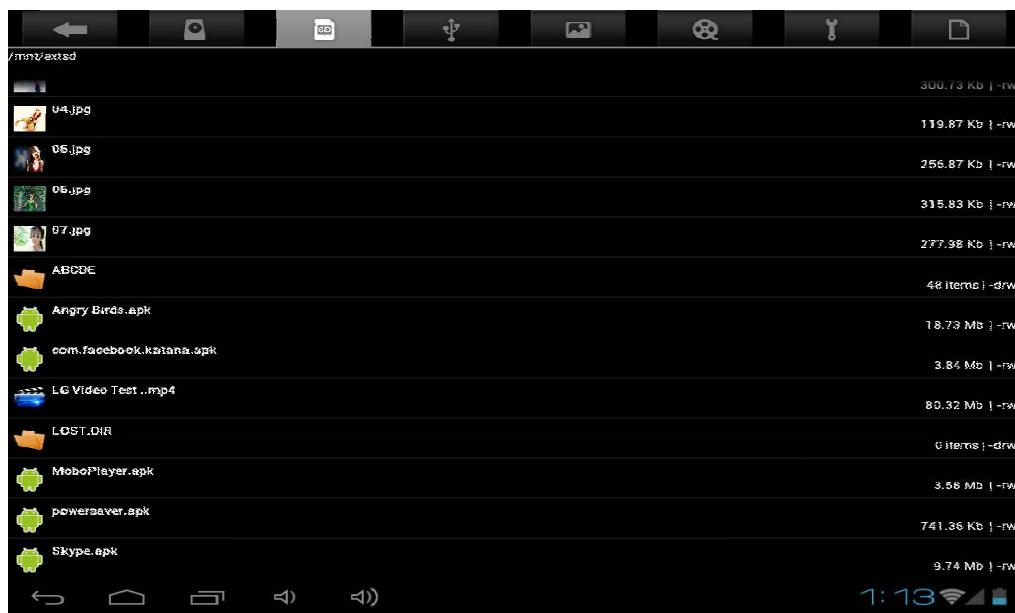

B.Delete files on TF card


1. Choose file that you want to delete.
2. Long touch that file, then “File Operations” appears.
3. Click “Delete File”.

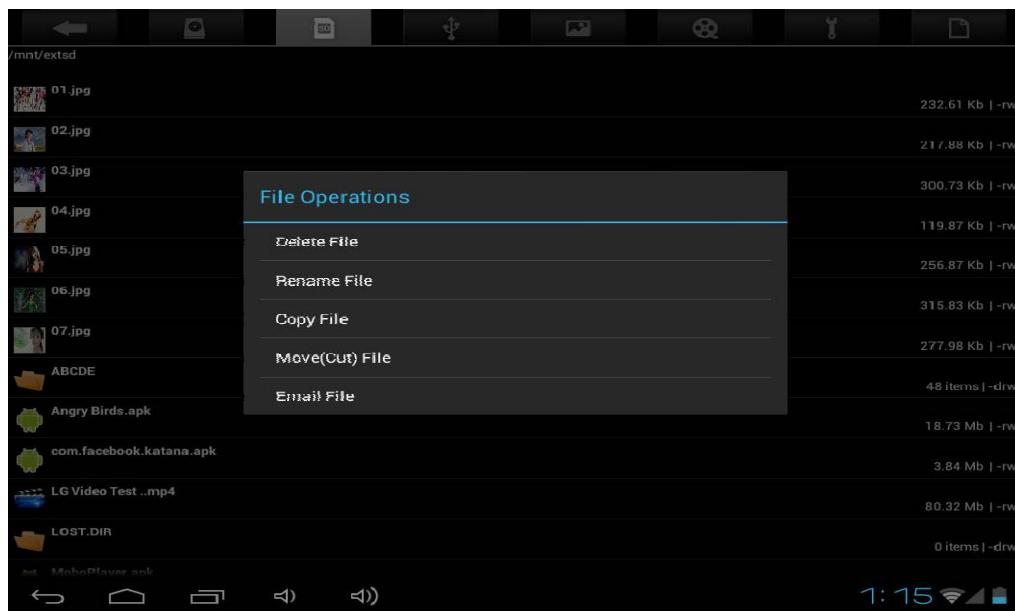

Besides delete files, you also can rename, copy, move file and email files as shown on the picture above.


C. View Storage

Click “Settings” > “Storage” to view internal storage, external storage and SD card storage.

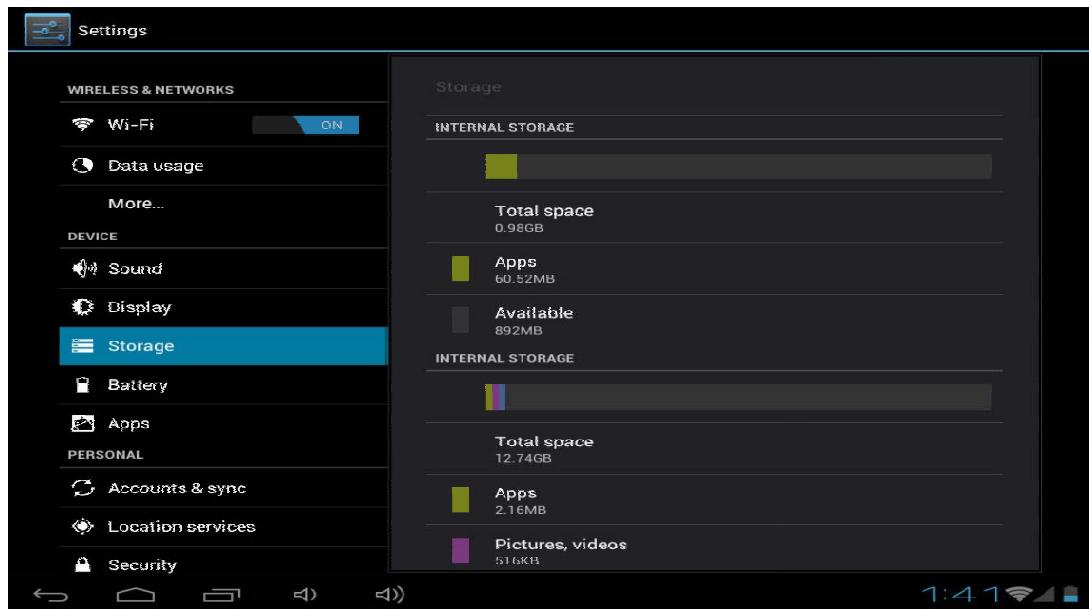

5. Language & keyboard Set

1. Go to “Settings” > “Language & Input” or “Keyboard & Input Methods”
2. Touch “Language” or choose the keyboard you like
3. Choose the language as you like

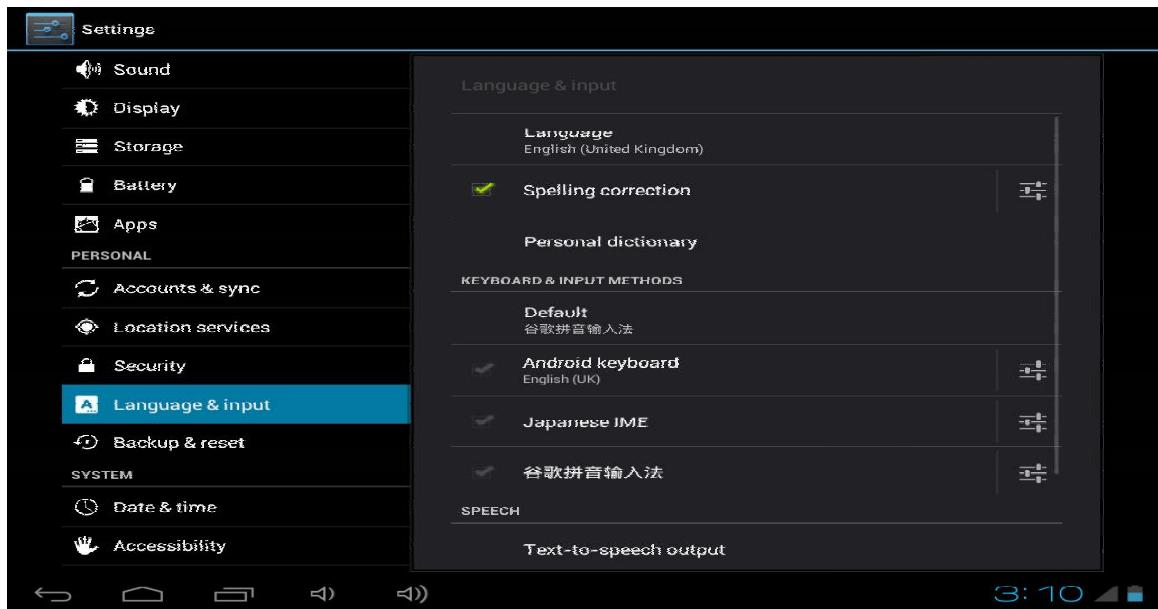

Remark: Japanese IME and other keyboard can be installed, and then these will be listed in the “Keyboard & Input Methods”. After that you can choose the proper input method when you want to input the

website in Browser or typing.

6. Music

Access and play music

1. On the home screen touch the icon “Music”
2. Touch “Songs” and play it

Delete play lists


1. Touch “Playlists” and choose the song which is going to be deleted
2. Touch “Delete”

7. Gallery

The Tablet can play the photo file formats as follows: JPG, BMP, PNG and GIF. “Gallery” can play all the pictures or videos in internal sdcard and TF card.

View photos and play a video, pleased do as follows:

1. On the home screen touch “Gallery”
2. Touch the folder of photos or video folder
3. Touch “Slideshow” or view the photos or video slide by yourself

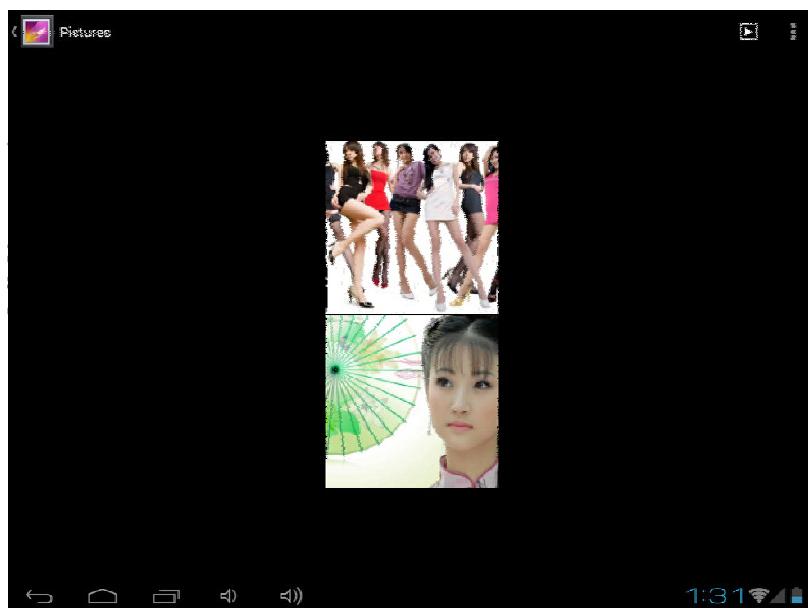




If you want to delete some pictures or video, long touch the target picture or video and delete it or drag it into the “Trash Bin”



8. WIFI Connection

1. “Settings”> “Wireless & Networks”.
2. Turn on “Wi-Fi”, the Tablet scans for available Wi-Fi networks.
3. Touch the Wi-Fi network that you want to connect with.
4. Touch “Connect” after input the password.


On the Wi-Fi settings screen, touch the “Menu” > “Advanced”, you will get more settings of Wi-Fi.

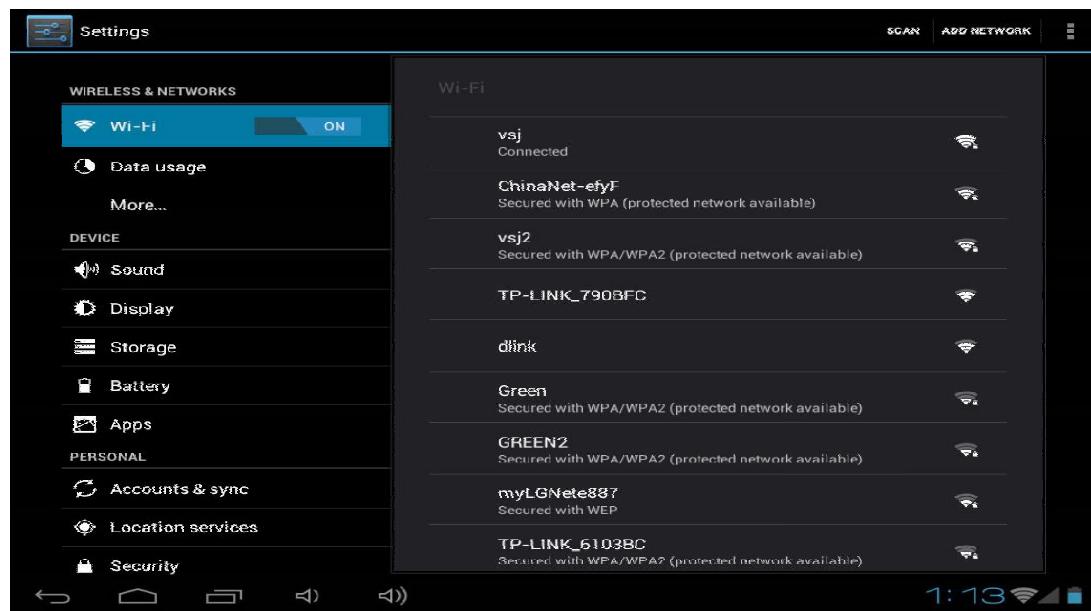


9. Browser

The first time you enter the Browser, the home page is the website “www.google.com.hk” automatically. Visit webpage and change home page

1. Enter “Browser”.
2. The first way to visit the webpage: touch “Bookmark” key in the Browser Bar, you can change the website as you like by input different address.
3. The other way: touch the “input bar” and input the website.

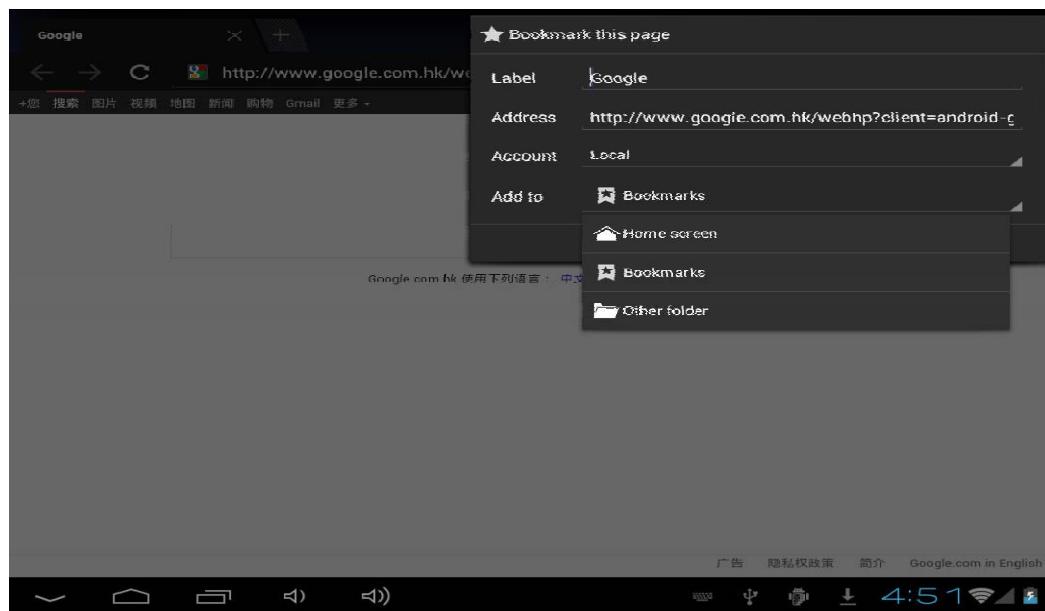


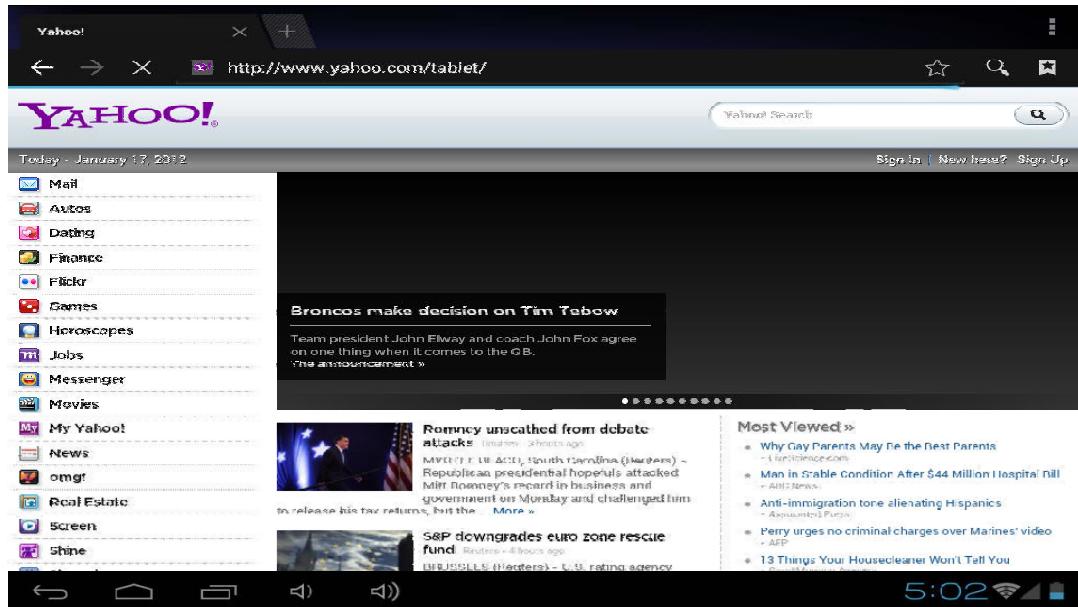

10. Email

A. Read new messages


1. Enter "Gmail", and input the account and password.
2. Do what you like as you check your email on PC.

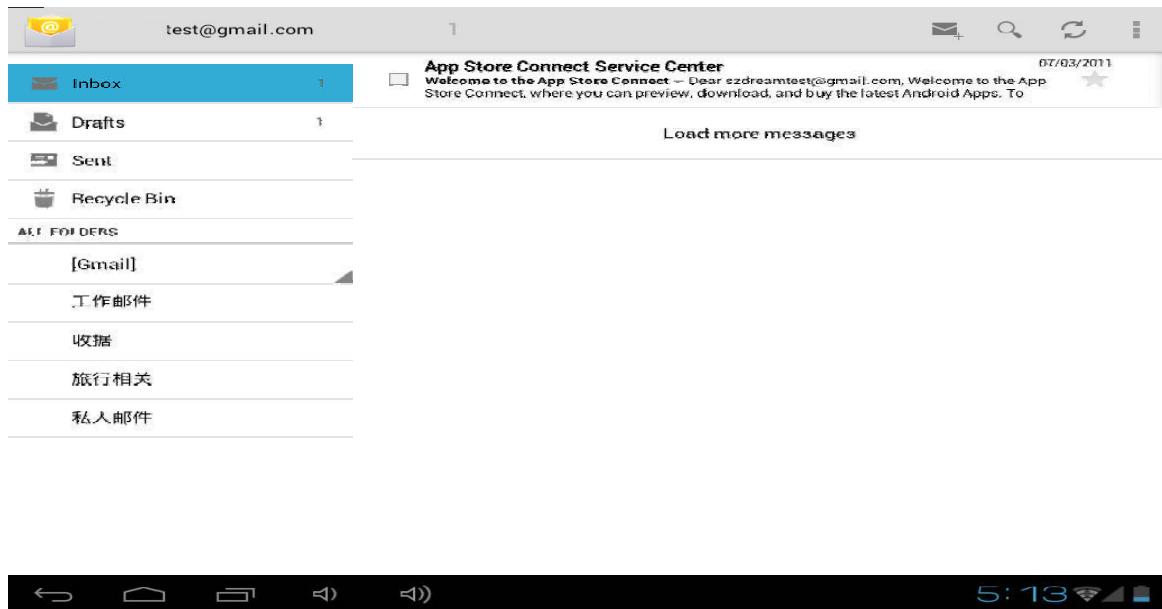

B. Write new messages

1. Touch "Writing email Mark"
2. Fill e-mail address in "To". Matching contacts will appear, and then select the contact or continue typing.

3. Type the subject and message.
4. Touch “Send”.

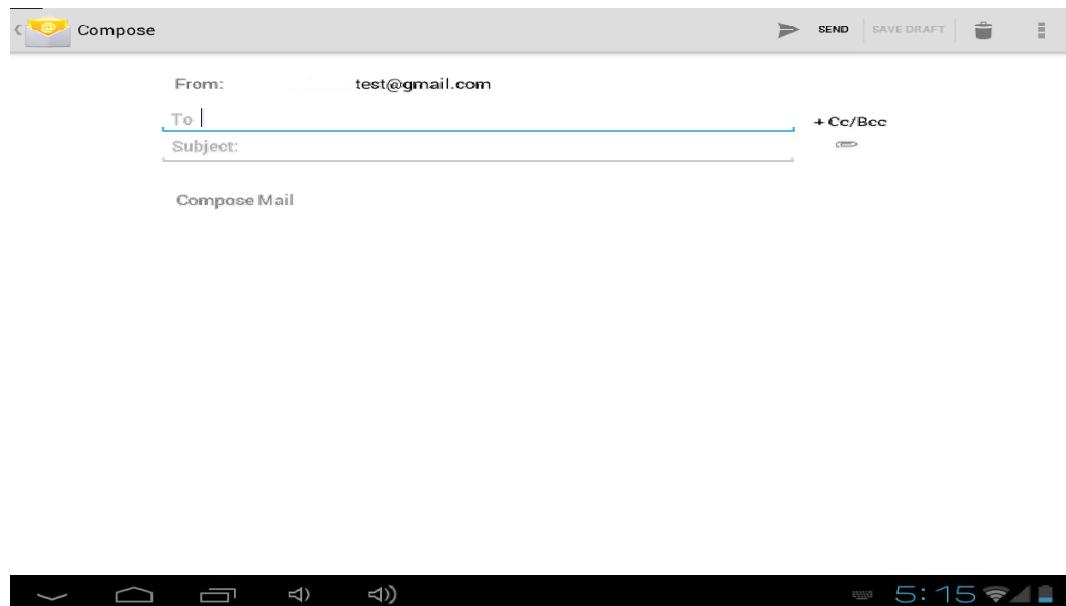

11. Camera

Shooting and playback a video

1. Touch the icon of “Camera”.
2. Choose “shooting mode”
3. Touch “blue dot” after finishing recording.
4. Back to home screen and enter “Gallery”; and then find the video which is shot before.

Photo shoot

1. Touch the icon of “Camera”.
2. Choose “photo mode”.
3. Touch the “blue dot” on the right side.

FCC Statement:

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for class B digital, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measurements:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help

Use of shielded cable is required to comply with Class B limits in Subpart B of Part 15 of the FCC rules.

Do not make any change or modifications to the equipment unless otherwise specified in the manual. If such changes or modifications should be made, you could be required to stop operation of the equipment.

FCC Radiated Exposure Statement:

This equipment complies with FCC radiation exposure limits set for an uncontrolled environment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.