



OUTDOOR TECH.

TURTLE SHELL 3.0

RUGGED WIRELESS

BOOM BOX



Hi.




Good call on picking up the Outdoor Tech. Turtle Shell. 3.0 wireless boom box. Your experience of the universe will soon be enhanced wirelessly and powerfully. This manual exists to help make sure that you use it correctly, so you're definitely going to want to relax for a hot second and look through this.

Kisses,


 OUTDOOR TECH.

ANATOMY

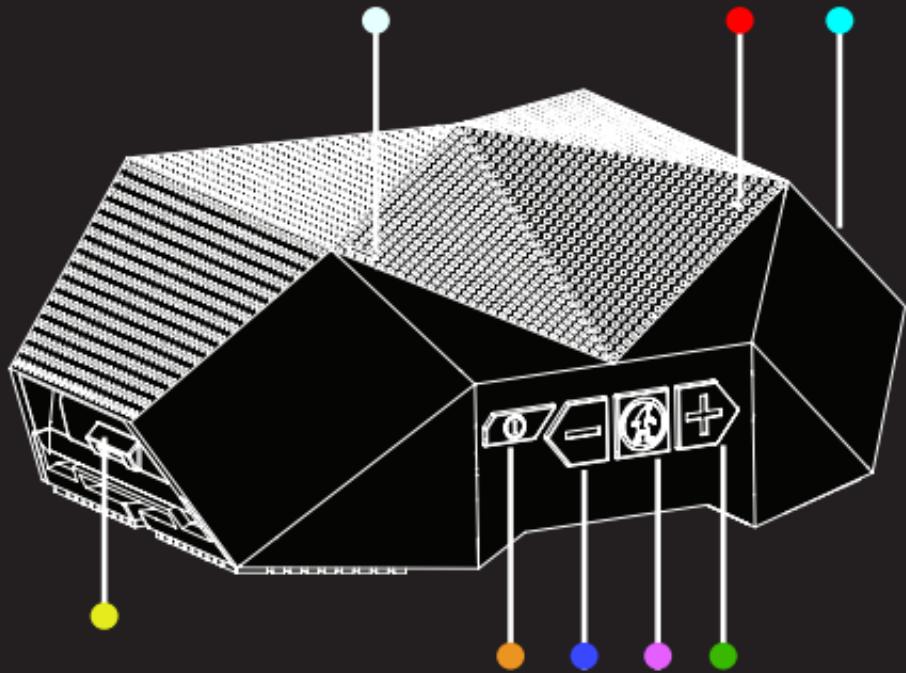

- Power On / Power Off
- Multi Function Button
- Skip Backward / Volume Down
- Skip Forward / Volume Up
- Micro USB Charge Port / 3.5 mm Aux Port
- USB Output Charge Port
- Microphone
- Light Indicator

POWER UP

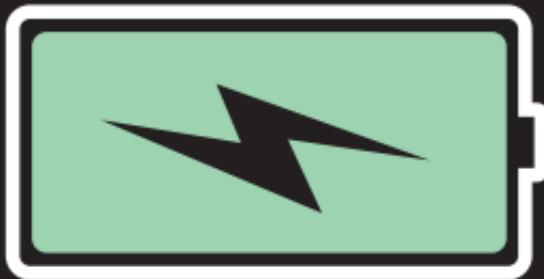

TO CHARGE

For best results, fully charge your Turtle Shell® 3.0 before use!

1. Connect the included Micro USB cord to a power source and the charging port on the Turtle Shell® 3.0. When charging, the red LED light will stay activated. ***Full charge time is about 4-5 hours.
2. When the Turtle Shell® 3.0 is fully charged, the RED light will turn off.

The displayed battery meter is supported for Apple products.

*The Turtle Shell® 3.0's Bluetooth and music functions can still operate while charging.

MUSIC FUNCTIONS

Music / Device Controls



Skip backward
Volume down



MFB



Skip forward
Volume up

FUNCTION	BUTTON	ACTION
Power on		Press 3 sec
Power off		Press 2 sec
Pairing mode		Hold 3 sec
Manual pairing mode		Hold for 3 sec
Play / Pause		Short press once
Volume up		Short press once
Volume down		Short press once
Skip forward		Press & hold for 2 sec
Skip backward		Press & hold for 2 sec

IPHONE FUNCTIONS



Device Controls



Skip backward
Volume down




MFB



Skip forward
Volume up

FUNCTION	BUTTON	ACTION
Answer an incoming call	Ⓐ	Short press once
Reject an incoming call	Ⓑ	Press & hold for 2 sec
End call	Ⓐ	Short press once
Siri/Voice activation	Ⓑ	Press & hold for 2 sec & release

PAIRING TO DEVICE

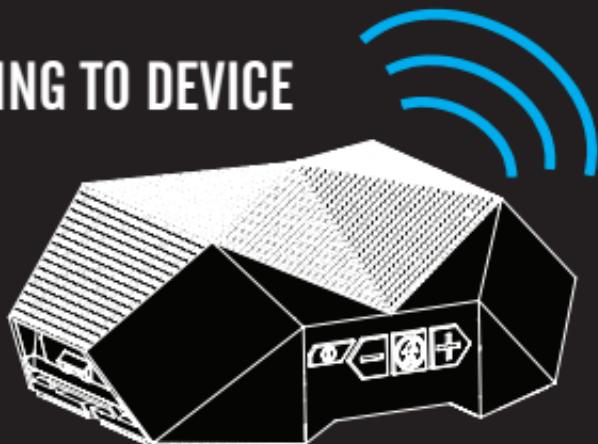

Power On / Off

ON: Hold the Power Button for 2-3 seconds or until the LED light flashes blue and the voice prompt states "Power on"

OFF: Hold the Power Button for 3-4 seconds or until the LED light flashes red and the voice prompt states "Power off"


Enter Pairing Mode

When powered on hold the "+" and "-" at the simultaneously for 2-3 seconds or until you see the LED light flash blue 3 times and the voice prompt states "Pairing."

Pairing Turtle Shell 3.0 to Device

Open the Bluetooth settings on your device. If you have put your Turtle Shell, 3.0 into pairing mode, it should be listed as "ODT Turtle Shell, 3.0" as an available device to pair. Connect with the Turtle Shell, 3.0 and enter "0000" if prompted. The voice prompt will state "Successful" if the Turtle Shell 3.0 and your device connect.

SPEAKER TO SPEAKER PAIRING

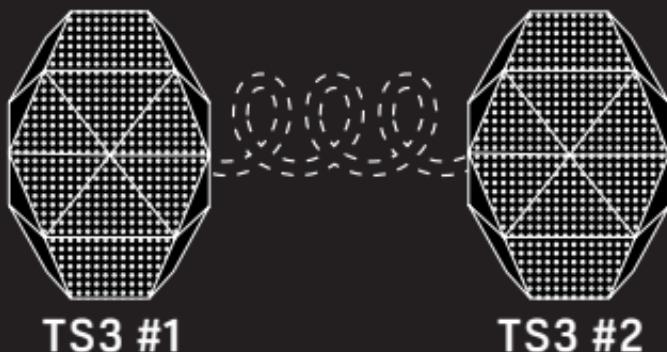

STEP ONE

Turn on TS3 #1 and wait till the voice prompt states that the speaker is on. Then press & hold simultaneously the MFB button and the "+" button. TS3 #1 will then state that it is in pairing mode.

STEP TWO

Turn on TS3 #2 and wait till the voice prompt states that the speaker is on. Then press & hold simultaneously the MFB button and the "-" button. TS3 #2 will then state that it is in pairing mode.

STEP THREE

Once TS3 #1 and TS3 #2 are connected, the voice prompt will state "Successful."

For more functions, go to outdoortech.com/apps/ to download the Outdoor Tech app.

I LISTEN CONTINUED



The built-in microphone means that the Turtle Shell 3.0 can be used as a wireless headset.

***NOTE:** The built-in microphone only works when connected via Bluetooth.

The following are tips on how to use your Turtle Shell 3.0 to speak on the telephone:

Answer a call.....	Press the multifunction button.
End a call.....	Press the multifunction button.
Decline a call.....	Press and hold the multifunction button for two seconds.
Make a call.....	Use your phone to dial as usual. Listen and talk through the Turtle Shell® 3.0.
Mute.....	Hold the >> and << buttons for 2 seconds, or until you hear a beep.

FAQ



Hearing Distortion

- A. Lower the volume on your Turtle Shell. 3.0, and / or phone /device.
- B. Make sure it's charged up. Check for low battery, then charge if necessary.

Not Loud Enough

- A. Turn up the volume on your phone / device or your Turtle Shell. 3.0.
- B. Make sure it's charged up.
- C. Plug the Turtle Shell in to your phone / device via 3.5mm stereo cable.

Unable to Pair

- A. Confirm your phone / device is Bluetooth compatible.
- B. Re-Pair: Follow pairing instructions in this guide.

Signal Loss or Dropouts via Bluetooth

- A. Move Turtle Shell closer to your phone / device.
- B. Make sure it's charged up.
- C. Turn off your Turtle Shell. 3.0 and phone / device, then power up and reconnect.

SPECS



Rating: IPX7

Bluetooth v 4.2

Bluetooth Profiles: HSP, HFP, A2DP, AVRCP

Capatability: Bluetooth v 1.1 and above

Operating range: 32 ft

Operating range between speakers: 15 ft

Device name: ODT TURTLE SHELL 3.0

**Power source: Lithium ion rechargeable
battery cell**

Battery capacity: 3600mAh / 13.32 Wh

Charge Output: 5V / 1A

Charge Input: 5V / 2.1A

Playing Time: Up to 20 hrs

Charge Time: ~4.5 hrs

Operating Temperature: 0~45° C

Storage Temperature: -20~60° C

RoHS: Fully RoHS compliant

K, bye.

DON'T BE SO ANTISOCIAL



Facebook.com/outdoortech
Twitter & Instagram: @outdoortech

Questions, comments, complaints, secret desires,
or just to say what's up: email info@outdoortech.com

K bye.



outdoortech.com

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Radiation Exposure Statement:

This equipment complies with FCC/IC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be **co-located or operating** in conjunction with any other antenna or transmitter.

Canada Statement

This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions:

- (1) This device may not cause interference; and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil ne doit pas produire de brouillage;
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

The device meets the exemption from the routine evaluation limits in section 2.5 of RSS 102 and compliance with RSS-102 RF exposure, users can obtain Canadian information on RF exposure and compliance.

Le dispositif rencontre l'exemption des limites courantes d'évaluation dans la section 2.5 de RSS 102 et la conformité à l'exposition de RSS-102 rf, utilisateurs peuvent obtenir l'information canadienne sur l'exposition et la conformité de rf.

Important Safety instructions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Only use attachments/accessories specified by the manufacturer.
10. Unplug this apparatus during lightning storms or when unused for long periods of time.
11. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
12. The apparatus shall be used at maximum 45°C ambient temperature.
13. The maximum height above sea level is 2000m
14. The use of apparatus in moderate climates and indoor only
15. The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.
16. No naked flame sources, such as lighted candles, should be placed on the apparatus.
17. Use only power supplies provided by KICKER
18. Battery pack shall not be exposed to excessive heat such as sunshine, fire or the like.

CAUTION

Danger of explosion if battery is incorrectly replaced, Replace only with the same or equivalent type.

Symbol



The appliance shall not be disposed together with the normal waste. It must be recycled.

1. Lisez ces instructions.
2. Conservez ces instructions.
3. Observez tous les avertissements.
4. Suivez toutes les instructions.
5. N'utilisez pas cet appareil à proximité de l'eau.
6. Utilisez uniquement un chiffon sec pour le nettoyer.
7. Ne bloquez pas les ouvertures de ventilation. Installez conformément aux instructions du fabricant.
8. Ne l'installez pas à proximité de sources de chaleur telles que des radiateurs, des bouches de chaleur, des poêles ou d'autres appareils (amplificateurs compris) produisant de la chaleur.
9. Utilisez uniquement les accessoires spécifiés par le fabricant.
10. Débranchez cet appareil lors d'orage avec foudre ou lorsque vous ne l'utilisez pas pendant des périodes prolongées.
Faites-le réparer et entretenir par un personnel de service qualifié. Il est nécessaire de faire réparer l'appareil lorsqu'il a subi des dommages quelconques du type suivant : cordon ou fiche d'alimentation abîmés, liquide renversé ou objets tombés dans l'appareil, exposition de l'appareil à la pluie ou à l'humidité, mauvais fonctionnement ou chute.
11. **l'appareil doit être utilisé au maximum de 45 °C la température ambiante.**
12. **la hauteur maximale au - dessus du niveau de la mer est de 2 000**
si l'appareil est destiné à être utilisé sous un climat tempéré
13. il convient que l'aération ne soit pas gênée par l'obstruction des ouvertures d'aération par des objets tels que journaux, nappes, rideaux, etc.;
14. no naked flame sources, such as lighted candles, should be placed on the apparatus
15. **utiliser uniquement des fournitures fournies par le pouvoir**
Un avertissement selon lequel les batteries (bloc de batteries ou batteries installées) ne doivent pas être exposées à une chaleur excessive telle que celle du soleil, d'un feu ou d'origine similaire.

ATTENTION

Danger d'explosion si la pile n'est pas remplacée correctement.
Ne remplacer que par le même type ou un type équivalent.