


HID LAMP

Remote Control Transmitter:

1. Press left button once to turn the lamps on.
2. Press right button once to turn the lamps off.
3. Small red light indicates the power. When you press the button (left/right), small red light on means that the transmitter has power and signal is given out, HID lamps will be turned on/off.
4. If small red light does not get on when you press the button, it indicates that the remote control transmitter has no power and no signal is given out. You have to change the battery (alkaline battery 23A 3LR50 12V).
5. If small red light gets on but HID lamps does not turn on/off. Please check with the "Wiring Diagram" if the wires connected appropriately.

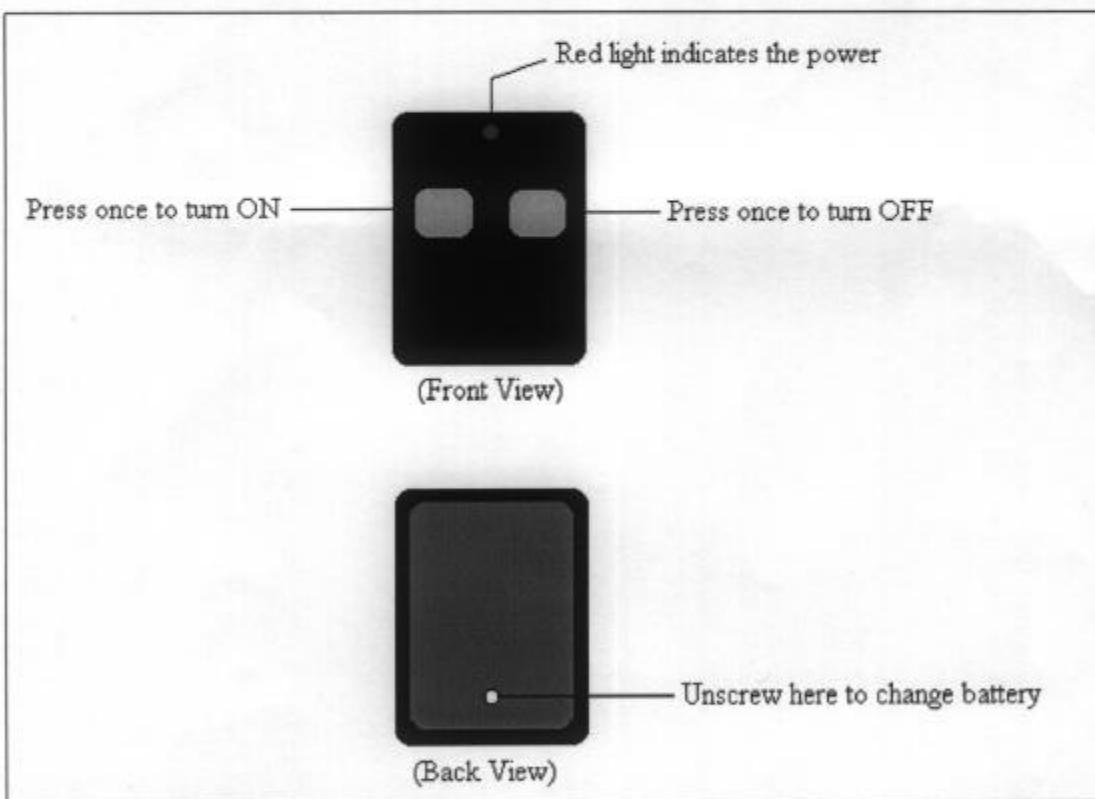

Warning!!!

These lamps become **VERY HOT** while operating, **NEVER** touch a lit lamp and wait at least ten minutes after shut off before handling.