

Introduction

Welcome to the Audioengine family and congratulations on your purchase of the Audioengine B2 Premium Bluetooth Speaker!

The Audioengine team is dedicated to bringing you the highest-quality listening experience possible and the Audioengine B2 was designed with the same attention to detail and operational simplicity as all other Audioengine products. Our goal is to get you to your music as simply as possible without all the “gadget tinkering” many other products require. As with our other past efforts we thank our customers, distributors and resellers for the inspiration to create another great product.

What’s in the box

B2 Bluetooth Speaker
Power cable
Microfiber bag
Quickstart guide

Features

Easy setup, connects in seconds
Plug-n-play, no software to install
Superior sound and extended range
Streams audio from any Bluetooth®-enabled media player

Overview

The B2 streams high-quality audio from your Bluetooth®-enabled smartphone, computer, or tablet. Experience stunning audio quality with aptX® and built-in 24-bit upsampling DAC.

Quick Setup

Setup and pairing is really easy. The following instructions will help you connect B2 with your tablet, computer, or smartphone.

- Step 1:** Connect the power cable to B2 and plug the power cable into an AC outlet.
- Step 2:** Turn on the B2 power switch, which is located on the rear panel. B2 will automatically go into pair mode and the Pair button on the B2 rear panel should be flashing.
- Step 3:** On your device, turn on Bluetooth and go to Bluetooth preferences.
- Step 4:** Select “Audioengine B2” to pair and connect. The Pair indicator on the B2 rear panel should be solid.
- Step 5:** Play your music and adjust volume levels.

Repeat Steps 3 thru 5 to add additional devices. B2 can connect to only one device at a time, however it will remember up to six devices.

To disconnect B2 from a paired device and put B2 back into pair mode, press and hold the Pair button on the B2 rear panel until the indicator begins flashing.

Troubleshooting Tips

B2 is connected but the Pair button does not light up.
Verify that the B2 is plugged into a functioning AC outlet.

My device will not pair with B2.
Verify that Bluetooth on the device is turned on.
Confirm that the B2 Pair button is blinking (in pair/discovery mode).
Make sure your device is within range of B2.

The B2 Pair light is solid, but I cannot connect my device.
Make sure no other devices are connected. If so, either disconnect or turn off Bluetooth on the other devices or press and hold the B2 Pair button until it flashes, then try connecting.
Try unpairing and re-pairing your device to the B2.
Cycle power by turning the B2 off and back on again.

B2 pair light is solid and my device is connected but no audio output.
Check the volume levels on your computer OS and player app.
Try unpairing and re-pairing your device to the B2.
Cycle B2 power by disconnecting and reconnecting the power cable.

The volume output level from B2 seems low.
Check the volume levels on your computer OS and player app.
Also check the volume level on the rear panel your B2.

Troubleshooting Tips (cont’d)

The sound quality is poor and/or audio is cutting out.
Move B2 or your device away from cordless phones, routers, microwave ovens, or other Bluetooth devices.
Try moving your device closer to B2.
Try another location.
Turn off your device’s Wi-Fi.
Try unpairing and re-pairing your device to the B2.
Unplug power from B2 and power back on.
Check that your device’s OS is updated to the latest version.

Only one side of the B2 plays music.
Check your music player app and/or OS audio controls to ensure that the audio balance is centered.

More product information and setup tips can be found on our website: audioengineusa.com

If you have any questions or feel you may need service, contact us via email: support@audioengineusa.com or call toll-free in the United States: **(877) 853-4447**

Break-In Period

B2 will sound great out of the box and will get better over time. However, give it 40 to 50 hours break-in time before doing any critical listening.

Tech Stuff

High-fidelity Bluetooth® with aptX® transmission and extended range
Supports all Bluetooth-enabled devices
Includes built-in AKM AK4396 DAC for 24-bit upsampled playback
High-quality wood cabinet with magnetic speaker grills
Analog input

Specifications

Inputs	Bluetooth
Frequency response	10Hz - 20kHz (+/-0.5dB)
SNR (DC to 20 kHz)	>100dB
THD+N	(1 kHz FS 96 kS/s) <0.02%
Crosstalk	>-86dB
Supported Bluetooth profiles	aptX, A2DP and AVRCP
Main voltages	110-240V 50/60Hz auto-switching
Inputs	3.5mm stereo mini-jack
D/A converter	AKM AK4396
Operation range	up to 100ft (30m) typical
Product dimensions	6”(H) x 8”(W) x 5.25”(D)
Shipping weight	4.6kg/10lbs

For additional specifications go to: audioengineusa.com

Environmental Requirements

Operating temperature: 32° to 105°F (0°C to 40°C)
Storage temperature: -4° to 115°F (-20°C to 46°C)
Relative humidity: 5% to 95% non-condensing

Warranty Information

All Audioengine products have a 3-year Limited Warranty on parts and labor from date of purchase. The Limited Warranty applies only to Audioengine products purchased in the United States. Your warranty is automatic, so there is no need to register. For Limited Warranty coverage elsewhere, please contact your Audioengine dealer, reseller, or distributor.

What is covered

All defective parts or faulty workmanship.

What is not covered

The Audioengine Limited Warranty does not cover damage caused by accident, misuse, abuse, neglect, excessive moisture, lightning, power surges, other acts of nature, unauthorized product modification or repairs, or failure to follow the instructions outlined in this guide.

What we will do

We will repair or replace any defective parts, at our option, within a reasonable amount of time and free of charge any time during the warranty period. After service, we will be responsible for shipping the product back to you at our expense.

What we ask from you

You will be responsible for shipping charges to Audioengine or to an authorized dealer. We recommend you keep the original shipping materials to prevent shipping damage if service is needed. Audioengine cannot be responsible for any damages incurred during shipping due to poor packing, so please pack well and make sure to insure your shipment.

How to obtain Audioengine Warranty service

If you have any questions about your warranty coverage or you feel you may need service, email the Audioengine US Service Center: support@audioengineusa.com or call toll-free in the US: (877) 853-4447

We will do everything we can to answer your questions and resolve any issues as quickly as possible.

Exclusive Remedy

This Limited Warranty is fully transferable provided the current owner furnishes the proof of purchase and that the serial number on the product is intact. THE MAXIMUM LIABILITY OF AUDIOENGINE SHALL NOT EXCEED THE ACTUAL PURCHASE PRICE PAID BY YOU FOR THE PRODUCT. IN NO EVENT SHALL AUDIOENGINE BE LIABLE FOR SPECIAL, INCIDENTAL, CONSEQUENTIAL OR INDIRECT DAMAGES.

Product Returns and Refunds


We sincerely hope you get as much enjoyment from our products as we've had creating them. However, should you have an issue or are not satisfied with any Audioengine product for any reason contact the reseller where you purchased your product or email us directly: support@audioengineusa.com or call toll-free if in the US: (877) 853-4447

About Audioengine

Audioengine designs and builds innovative audio products with all your music in mind. Great sound, simple but elegant designs, high quality materials, and truly useful features are what Audioengine is about. We sincerely hope you get as much enjoyment from our products as we've had creating them!

Information for Users on Disposal of Old Equipment

[European Union]

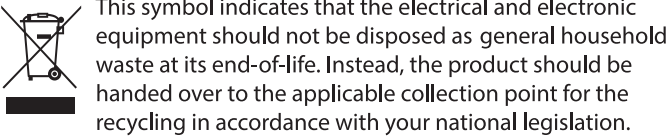

This symbol indicates that the electrical and electronic equipment should not be disposed as general household waste at its end-of-life. Instead, the product should be handed over to the applicable collection point for the recycling in accordance with your national legislation.

By disposing of this product correctly, you will help to conserve the environment and human health that could otherwise be caused by inappropriate waste handling of this product. For more information about collection point and recycling of this product, please contact your household waste disposal service or the shop where you purchased the product. Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

[Other Countries outside the European Union]

If you wish to dispose of this product, please do so in accordance with applicable national legislation or other rules in your country for the treatment of old electrical and electronic equipment.

FCC Part 15 Notice

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference.
- 2) This device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Part 15 Notice (cont'd)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

© 2014 Audioengine. All Rights Reserved.

Audioengine and Audioengine B2 are trademarks of Audioengine.

The Bluetooth name and the Bluetooth trademarks are owned by Bluetooth SIG, Inc. and are used by Audioengine under license.

The aptX® mark and logos are registered trademarks of CSR plc.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc.