

IMJ-100F TEST v0.5

PROJECT: IMJ-100F
January 19, 2001

How to use for mp3 file down and play.

VISOR SIDE (FORMAT)

1. Launch the “IMJ-100F Test” program.
2. Click the 0x18 button : This means that It format the Flash Memory.
3. Place the VISOR on Cradle and Launch the “IMJ-100F Down Load” Program.

PC SIDE

4. Launch the “IMJ-100F Loader” Program in PC.
5. Click “OPEN” Button
6. Select Song Position (1st, 2nd, 3rd, 4th)
7. Click “DownLoad” Button. And select a mp3 or a aac file.
8. It see the physical address.
9. You will see the duration time.
10. Click “Close” Button.

VISOR SIDE (MP3 File Play)

11. Launch the “IMJ-100F Test” program.
12. Click the “play1” for 1st song.
13. Click the “play2” for 2nd song.
14. Click the “play3” for 3rd song.
15. Click the “play4” for 4th song.

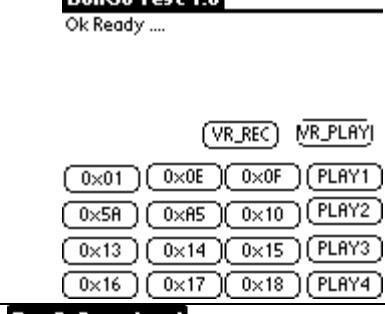
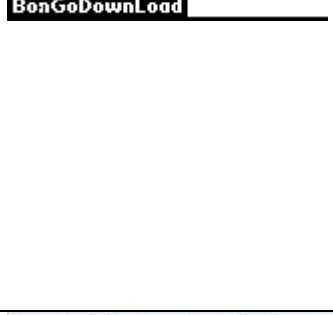
How to test the command protocol .

1. Launch the “IMJ-100F Test” program
2. Select Command and you will see the result.

CF) “VR_PLAY “ and “VR_REC” do not operate.
CF) IMJ-100F Firmware Specification REV1.00

IMJ-100F TEST v0.5

PROJECT: IMJ-100F
January 19, 2001

PICTURE	CONTENT
	IMJ-100F DownLoad : download mp3 file PC to IMJ-100F. IMJ-100F Test : It is a testing Program which included Command Protocol.
	IMJ-100F TEST Command protocol test. And you will see the result. CF) "VR_REC" and "VR_PLAY" DO NOT OPERATE CF) IMJ-100F Firmware Specification REV1.00
	IMJ-100F Download Program.
	IMJ-100F Loader Select Song position and Click the "Download mp3" button. You will see the physical address.