

POWER SYSTEMS

 
ur vehicle requires a 96V NiCd battery pack and charger. For detailed information regarding battery charging and safety, please follow the specific instructions in this manual.

VEHICLE BATTERY INSTALLATION

Rotate battery latch to open position. Open battery door. Insert battery pack into battery compartment as shown. Plug wire connector securely into battery compartment as shown. Close battery door. Rotate battery latch to locked position. To remove battery pack: turn latch, open battery door, unplug wire connector and lift battery out.





The battery door is designed to be removable. If it comes off the hinges, simply reattach it.

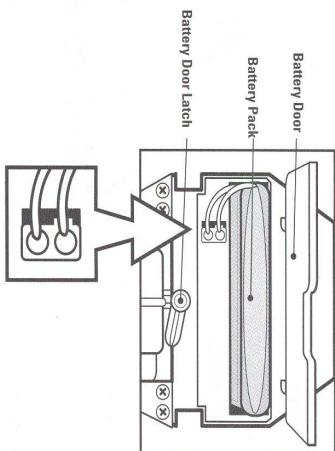

TRANSMITTER BATTERY INSTALLATION

  To install transmitter battery, open battery door as shown. Install one 9V battery with polarity (+/-) as shown inside battery compartment. Push the battery door forward and snap shut.

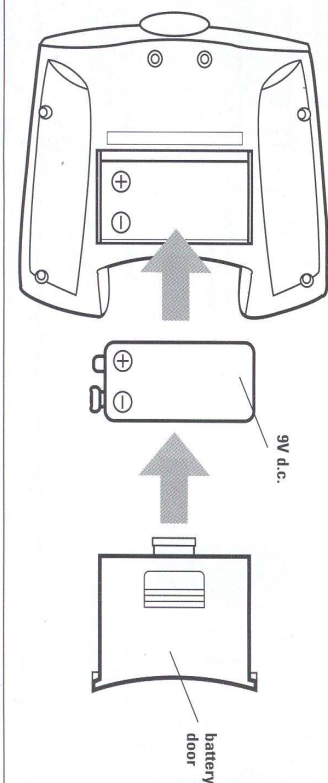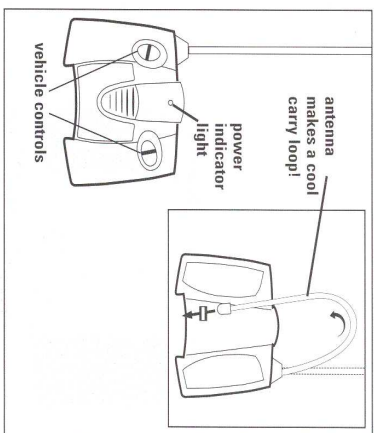

CONSUMER INFORMATION:

IMPORTANT: Please read before operating your vehicle.

SAFETY INFORMATION

Note to Adults: To ensure that the child's play is both safe and fun, please review all operating instructions and safety rules with your child.

Safety Tips

- NEVER drive your vehicle on streets! They're for real cars!
- DO NOT pick up vehicle while in motion.
- Keep fingers, hair and loose clothing away from the tires and the wheel hubs while the vehicle is switched ON.
- Adult supervision is recommended when this vehicle is being operated.

QUICK TIPS

- 1 When your vehicle starts to lose power, it may lose functions or performance. It's time for fresh batteries (or a recharge). Your vehicle's running time may change depending on your driving style.
- 2 Radio interference can make your vehicle run badly. Interference can be caused by other RC vehicles running on the same frequency, electrical wiring, electrical wires, or CB radios. Try to stay away from these!
- 3 Part your transmitter antenna up - not down toward your vehicle. If your vehicle gets too far away, it won't work properly. If your transmitter has a carry-loop feature, make sure the antenna tips removed from the carry-loop holder and straightened before operating.
- 4 Don't drive your vehicle in sand or through water or snow.
- 5 Don't store your vehicle near heat or in direct sunlight. Always turn switch-off and remove all batteries for storage.

- To avoid accidental operation, remove all batteries when not in use.

BATTERY SAFETY INFORMATION

- Insure that battery polarity is correct.
- Use only batteries of the type recommended (or equivalent).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Remove used-up batteries immediately.
- Remove batteries if vehicle will not be used for a long period.
- Do not recharge non-rechargeable batteries.
- Do not short-circuit terminals.
- Remove rechargeable batteries before recharging (if the batteries are designed to be removable).
- Recharge batteries only under adult supervision (if the batteries are designed to be removable).
- Dispose of batteries safely. Do not dispose of batteries (or products containing non-replaceable batteries) in fire, as batteries may explode or leak.

Battery Performance Note:

For best performance use alkaline batteries (where disposable batteries are called for). If your vehicle is supplied with standard (carbon-zinc) batteries for initial use and/or demonstration purposes, we recommend replacing them with alkaline batteries when necessary. Battery life may vary depending on battery brand.

TROUBLESHOOTING - PROBLEM? - SOLUTIONS

SYMPTOM	PROBABLE CAUSE	CORRECTION
Vehicle runs slowly or will not run.	• Loose battery connection or vehicle switch not ON. • Weak or uncharged rechargeable NiCd battery. • Weak transmitter battery.	• Check battery connector and vehicle switch. • Charge battery or replace. • Replace with fresh alkaline battery.
Power indicator light on transmitter does not light.	• Transmitter battery weak or not connected.	• Check connections and replace battery if required.
Erratic operation or only short range possible.	• Radio interference likely. • Antenna snapped into carry-loop holder (if equipped).	• Change location - see Point 2, "Quick Tips." • Remove antenna tip from carry-loop holder and straighten.
Vehicle doesn't work after going through water or snow.	• Water in the electronics area.	• Vehicle will take several hours to dry. Allow to dry thoroughly overnight before trying again. • Avoid driving in water or snow.

90-DAY LIMITED WARRANTY - TYCO® R/C PRODUCTS

Mattel, Inc. warrants to the original consumer purchaser that this product will be free of defects in material and workmanship for ninety (90) days (unless specified in alternate warranties) from the date of purchase. Mattel will replace the product in the event of such a defect within the warranty period. Many problems can be solved in this manner. If necessary, you will be instructed to return the product, postage prepaid and insured, to the address below. Enclose your name, address, dated sales receipt, and a brief explanation of the defect. Replacement and return shipment will be free of charge.

This warranty does not cover damage resulting from unauthorized modification, accident, misuse or abuse. If the product is returned without a dated sales receipt the product may be excluded from coverage under this warranty.

Mattel's liability for defects in material and workmanship under this warranty shall be limited to replacement, and in no event shall we be responsible for incidental, consequential or contingent damages (except in those states that do not allow this exclusion or limitation). This warranty is exclusive and shall not allow any express or implied warranty. **Mattel U.S.A.** The exclusions or limitations may not apply to you.

TOLL-FREE NUMBER: 1-888-527-TYCO (8926) **(valid only in U.S.A.)**
Hours: 8:00 A.M. - 5:00 P.M. Eastern time, Monday - Friday. Expect some delay in January following the holiday season. Please be patient and keep trying the toll-free number.

ADDRESS FOR RETURNS: CONSUMER RELATIONS, 636 GIRARD AVENUE, EAST AURORA, NY 14052

© 2002 Mattel, Inc., Mt. Laurel, NJ 08054 U.S.A.

PRINTED IN CHINA. All Rights Reserved. ® and ™ designate U.S. Trademarks of Mattel, Inc.

Remain this address for future reference: Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB, Maidenhead, Australia Pty. Ltd., Richmond, Victoria 3121, Consumer Advisory Service: 1800 800 812, Tel: 1800 800 812, Fax: 1800 800 812, Tel: 1800 800 812, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui HK, China.

COMPLIANCE WITH FCC REGULATIONS

THIS DEVICE COMPLIES WITH PART 15 OF FCC RULES. OPERATION OF THIS DEVICE IS SUBJECT TO THE FOLLOWING CONDITIONS:

- (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE.
- (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE FROM RADIO, TELEVISION, AND OTHER ELECTRONIC DEVICES. This device generates and uses radio frequency energy and if not used properly may cause interference to the equipment.



CAUTION: FCC Regulations state that changes or modifications to this product not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

ase follow these instructions regarding id vehicle battery charging and safety. 1 charger only under adult supervision.

BATTERY CHARGING/CARE — BY TURBO® BATTERY

Plug wall pack charger into standard 10/120 volt outlet. Connect the wires leading from the battery pack to the wall pack charger connector. Make certain the two connectors are tightly snapped together. To disconnect wires, push down on the connector clip and pull apart. Our battery pack consists of new parts and materials; therefore, you should charge the battery pack for 51/2 hours the first two times you charge the battery. Subsequent charges will require only 4 hours.

After charging for 4 hours, the battery will feel warm. This condition is normal for fully charged batteries.

Charging the battery pack for more than 4 hours will not give you a longer running time. 4 hours is all that is required for a fully charged battery pack.

Unlike alkaline batteries, where the power loss is gradual, a NiCd (nickel-cadmium) battery will run for its normal running time, depending on your particular vehicle, and then lose most of its power at once. It is time to recharge the battery pack. Running time will vary, depending upon which R/C vehicle you have.

 
After use, the battery pack will be hot! Wait at least 20 minutes until the battery pack cools before recharging. Recharging a warm or hot battery pack will greatly reduce the number of times our battery pack can be recharged.

RECHARGEABLE BATTERY INFORMATION:


- ✓ DO NOT RECHARGE BATTERY PACK IF IT'S HOT. ALLOW IT TO COOL BEFORE RECHARGING.
- ✓ DO NOT RECHARGE A BATTERY PACK THAT SHOWS LEAKAGE OR CORROSION.
- ✓ DO NOT DISASSEMBLE THE BATTERY PACK. THE BATTERY PACK IS A SEALED RECHARGEABLE NICKEL-CADMIMUM BATTERY.
- ✓ DO NOT DISPOSE OF THE BATTERY PACK IN FIRE.
- ✓ EXERCISE CAUTION IN HANDLING A HOT BATTERY PACK.
- ✓ IF BATTERY PACK AND/OR CHARGER ARE WET, THOROUGHLY DRY BEFORE RECHARGING.
- ✓ DO NOT RECHARGE NON-RECHARGEABLE BATTERIES.

Note to Adults:

- Remove rechargeable batteries before recharging. Recharge batteries only under adult supervision.
- Regularly examine for damage to the plug, enclosure and other parts. In the event of any damage, the toy must not be used with the transformer until the damage has been repaired.
- This toy is not intended for children under 6 years old. The transformer is not a toy.

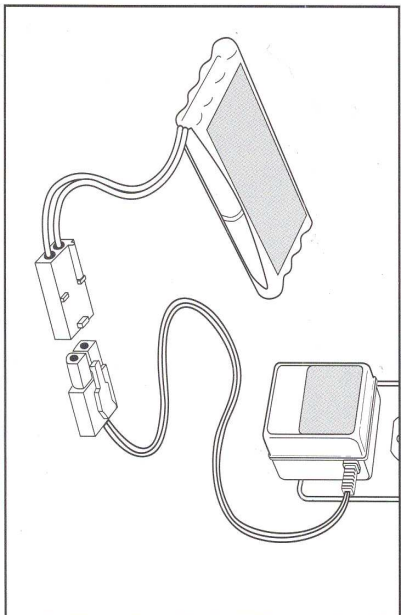

  THIS PRODUCT USES A NICKEL-CADMIUM RECHARGEABLE BATTERY PACK. BATTERY MUST BE RECYCLED OR DISPOSED OF PROPERLY. FOR FURTHER INFORMATION REGARDING BATTERIES OR THEIR DISPOSAL PLEASE CALL 1-888-557-71CO.

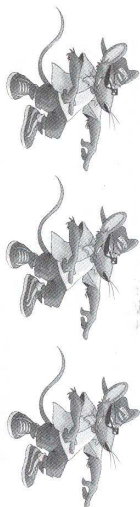


2.6V R/C

CONTENTS

- Vehicle
- Transmitter
- 9.6V NiCd Battery Pack, 9.6V NiCd Charger
- 9V Battery

BOTTOM VIEW

 Steering Adjuster
(adjust, if necessary, to keep vehicle running straight)

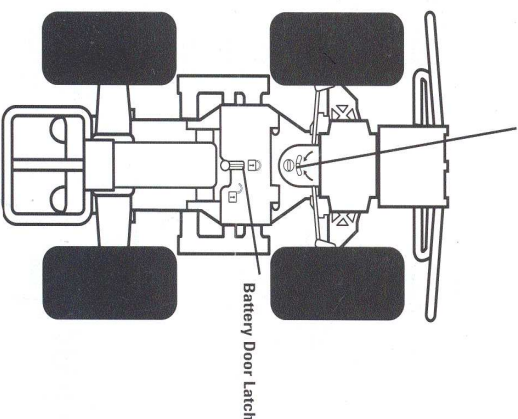

CAUTION-ELECTRIC TOY - NOT RECOMMENDED FOR CHILDREN UNDER 6 YEARS OF AGE. AS WITH ALL ELECTRIC PRODUCTS, PREPARATIONS SHOULD BE OBSERVED DURING HANDLING AND USE TO PREVENT ELECTRICAL SHOCK. INPUT: 120VAC, 0.10A, 60Hz. OUTPUT: 1.1.500V, 1.05A.

TYCO R/C SUPPORT REGISTER YOUR VEHICLE 2 WAYS! Online...or toll-free!

1-888-557-71CO (8926)
If you have questions or problems with your vehicle, DON'T RETURN IT TO THE STORE... get help from the EXPERTS. Just click or call.

Keep these instructions for future reference; they contain important information. **IMPORTANT:** Please read all "Consumer Information" (last page) before operating your vehicle.

 
CAUTION: Surfaces may become hot and cause burns if electronics get wet. Do not operate vehicle through water or snow.

VEHICLE OPERATION

- FORWARD
- REVERSE
- LEFT
- RIGHT

TOP VIEW

On/Off Switch

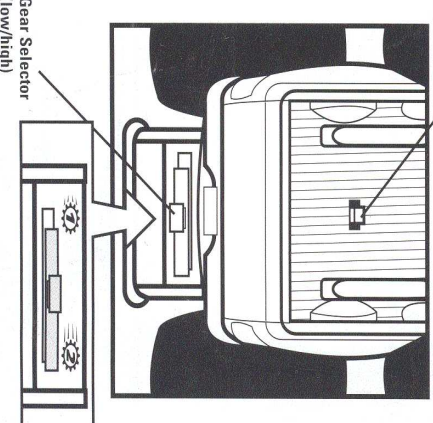

Refer to label on transmitter and vehicle for frequency. Do not race vehicles with the same frequency.

MATTEL WHEELS®